

**SONY®**

---

DIGITAL VIDEOCASSETTE RECORDER

**DSR-1500**  
**DSR-1500P**

DIGITAL INPUT/OUTPUT BOARD

**DSBK-1501**

i.LINK/DV INPUT/OUTPUT BOARD

**DSBK-1503**

ANALOG INPUT BOARD

**DSBK-1504**  
**DSBK-1504P**

---

**SERVICE MANUAL**

Volume 1 1st Edition

---

**DVCAM™**

---

## **⚠ 警告**

このマニュアルは、サービス専用です。

お客様が、このマニュアルに記載された設置や保守、点検、修理などを行うと感電や火災、人身事故につながる可能性があります。

危険をさけるため、サービストレーニングを受けた技術者のみご使用ください。

## **⚠ WARNING**

This manual is intended for qualified service personnel only.

To reduce the risk of electric shock, fire or injury, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.

## **⚠ WARNUNG**

Die Anleitung ist nur für qualifiziertes Fachpersonal bestimmt.

Alle Wartungsarbeiten dürfen nur von qualifiziertem Fachpersonal ausgeführt werden. Um die Gefahr eines elektrischen Schlages, Feuergefahr und Verletzungen zu vermeiden, sind bei Wartungsarbeiten strikt die Angaben in der Anleitung zu befolgen. Andere als die angegebenen Wartungsarbeiten dürfen nur von Personen ausgeführt werden, die eine spezielle Befähigung dazu besitzen.

## **⚠ AVERTISSEMENT**

Ce manuel est destiné uniquement aux personnes compétentes en charge de l'entretien. Afin de réduire les risques de décharge électrique, d'incendie ou de blessure n'effectuer que les réparations indiquées dans le mode d'emploi à moins d'être qualifié pour en effectuer d'autres. Pour toute réparation faire appel à une personne compétente uniquement.

### **Für Kunden in Deutschland**

Entsorgungshinweis: Bitte werfen Sie nur entladene Batterien in die Sammelboxen beim Handel oder den Kommunen. Entladen sind Batterien in der Regel dann, wenn das Gerät abschaltet und signalisiert "Batterie leer" oder nach längerer Gebrauchsdauer der Batterien "nicht mehr einwandfrei funktioniert". Um sicherzugehen, kleben Sie die Batteriepole z.B. mit einem Klebestreifen ab oder geben Sie die Batterien einzeln in einen Plastikbeutel.

### **For the customers in the Netherlands Voor de klanten in Nederland**

Dit apparaat bevat een MnO<sub>2</sub>-Li batterij voor memory back-up.

Raadpleeg uw leverancier over de verwijdering van de batterij op het moment dat u het apparaat bij einde levensduur afdankt.

Gooi de batterij niet weg. maar lever hem in als KCA.



Bij dit produkt zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet weggooien maar inleveren als KCA.

### CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.

### ADVARSEL

Lithiumbatteri - Eksplosjonsfare.  
Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten.  
Brukt batteri returneres apparatleverandøren.

### Vorsicht!

Explosionsgefahr bei unsachgemäßem Austausch der Batterie.

Ersatz nur durch denselben oder einen vom Hersteller empfohlenen ähnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

### VARNING

Explosionsfara vid felaktigt batteribyte.  
Använd samma batterityp eller en likvärdig typ som rekommenderas av apparattillverkaren.  
Kassera använt batteri enligt gällande föreskrifter.

### ATTENTION

Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.

Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur.

Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

### VAROITUS

Paristo voi räjähtää jos se on virheellisesti asennettu.

Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin.

Hävittä käytetty paristo valmistajan ohjeiden mukaisesti.

### ADVARSEL!

Lithiumbatteri-Eksplosionsfare ved fejlagtig håndtering.

Udskiftning må kun ske med batteri af samme fabrikat og type.

Levér det brugte batteri tilbage til leverandøren.



# Table of Contents

## Manual Structure

Purpose of this manual .....	7
Related manuals .....	7
Contents .....	8
Trademark .....	8

## 1. Operating Instructions

## 2. Installation

2-1. Operational Environment .....	2-1
2-2. Operating Voltage .....	2-1
2-3. Supplied Accessories .....	2-1
2-4. Optional Accessories .....	2-1
2-5. Matching Connectors .....	2-2
2-5-1. Matching Connectors/Cables .....	2-2
2-5-2. Input/Output Signals of the Connectors .....	2-3
2-6. Installation Setup and Adjustment .....	2-4
2-6-1. Front Panel Setting .....	2-4
2-6-2. Switch Setting on Boards .....	2-5
2-6-3. System Adjustment After Installation .....	2-6

## 3. Service Overview

3-1. Location of Main Parts .....	3-1
3-1-1. Location of Printed Circuit Boards .....	3-1
3-1-2. Location of Main Mechanical Parts .....	3-4
3-1-3. Location of Sensors .....	3-5
3-2. Functions of Record Proof Hole and Record Proof Plug of Cassette .....	3-7
3-3. Removing/Installing the Cabinets .....	3-8
3-4. Removing/Installing the Cassette Compartment .....	3-10
3-5. Removing/Installing the MD Assembly .....	3-12
3-6. Removing/Installing the Switching Regulator .....	3-13
3-7. How to Remove/Install the Boards .....	3-14
3-7-1. Removing/Installing the Boards .....	3-14
3-7-2. Extension Board .....	3-20
3-7-3. Installing the Extension Board .....	3-21
3-7-4. Installing/Removing the Option Boards .....	3-23

3-8.	Notes on Repair Parts .....	3-25
3-8-1.	Flexible Card Wire Replacement .....	3-25
3-9.	Replacement of Lithium Battery .....	3-28
3-10.	Fixtures and Tools list .....	3-29
3-11.	Upgrading the System/Servo CPU Program Version .....	3-31
3-11-1.	Upgrading the Version Using the Fixture Board .....	3-31
3-11-2.	Version Upgrade from a PC through RS-422 .....	3-33
3-12.	Upgrading the FPGA Program Version .....	3-35
3-12-1.	Setting of DJ-499 .....	3-35
3-12-2.	Upgrading the Version .....	3-36

## 4. Error Messages

4-1.	Alarm Display .....	4-1
4-1-1.	Alarm Display when the Main Power is Turned On .....	4-1
4-2.	Error Codes .....	4-3
4-2-1.	Display of Previously Detected Error Codes .....	4-5
4-2-2.	Main Codes and Sub Codes .....	4-6
4-2-3.	Error Codes .....	4-8
4-2-4.	Possible Causes of Errors .....	4-14
4-3.	Countermeasure in an Emergency .....	4-16
4-3-1.	How to Take Out the Cassette Whose Tape is Slacked (MANUAL EJECT) .....	4-16
4-3-2.	Head Cleaning when Head Clogging Occurs .....	4-17
4-3-3.	Operating the VTR without A Cassette Tape .....	4-17

## 5. Maintenance Menu

5-1.	Menu Structure .....	5-1
5-2.	How to Operate Maintenance Menu .....	5-3
5-2-1.	Location and Function of Switches .....	5-3
5-2-2.	How to Enter the Maintenance Menu .....	5-3
5-2-3.	How to Exit the Maintenance Menu .....	5-3
5-3.	Contents of Maintenance Menu .....	5-4
5-3-1.	Menu Data Control .....	5-4
5-3-2.	EDIT CHECK .....	5-7
5-3-3.	Servo Check .....	5-9
5-3-4.	Servo Adjust .....	5-23
5-3-5.	Tape Path Adjust .....	5-30
5-3-6.	Electrical Adjust .....	5-31
5-3-7.	Service Support .....	5-40
5-3-8.	Others .....	5-42

## **6. Periodic Inspection and Maintenance**

6-1.	Periodic Inspection List .....	6-1
6-2.	Hours Meter .....	6-2
6-2-1.	Displaying Hours Meter Information .....	6-3
6-2-2.	How to Reset Hours Meter .....	6-4
6-3.	Maintenance upon Completion of Repair .....	6-5
6-3-1.	Video Head Cleaning Procedure .....	6-5
6-3-2.	Tape Running Path Cleaning .....	6-5
6-3-3.	Cassette Compartment Entrance Cleaning .....	6-6
6-3-4.	Cassette Compartment Shaft Cleaning .....	6-6
6-3-5.	Cassette Guide Assembly Cleaning .....	6-6

## **7. Replacement of Mechanical Parts**

7-1.	General Information on Parts Replacement and Adjustment .....	7-1
7-1-1.	Preparation Before Starting Parts Replacement .....	7-1
7-1-2.	Drum Assembly .....	7-1
7-1-3.	Grease .....	7-1
7-1-4.	Tightening Torque and Handling of Washers .....	7-2
7-2.	Drum Replacement .....	7-3
7-3.	S/T Brake Assembly Replacement .....	7-8
7-4.	Brake Solenoid Replacement .....	7-12
7-5.	Pinch Roller Replacement .....	7-16
7-6.	Elevator Cam Replacement .....	7-18
7-7.	Pinch Solenoid Assembly Replacement .....	7-20
7-8.	Reel Motor (T) Assembly Replacement .....	7-22
7-9.	Reel Motor (S) Assembly Replacement .....	7-26
7-10.	M Stop Solenoid Assembly Replacement .....	7-30
7-11.	S Tension Regulator Assembly Replacement .....	7-34
7-12.	T Drawer Arm Assembly Replacement .....	7-37
7-13.	TG1 Arm Assembly Replacement .....	7-39
7-14.	TG8 Arm Assembly Replacement .....	7-41
7-15.	Rail Assembly Replacement .....	7-43
7-16.	Capstan Motor Replacement .....	7-49
7-17.	Loading Motor Replacement .....	7-51
7-18.	Reel Shift Motor Assembly Replacement .....	7-52
7-19.	MIC Assembly Replacement .....	7-54
7-20.	MIC Holder Assembly Replacement .....	7-58
7-21.	HC Roller Assembly Replacement .....	7-60
7-22.	Head Cleaner Solenoid Replacement .....	7-63
7-23.	Cassette Compartment Motor Replacement .....	7-65

## 8. Tape Path Alignment

8-1.	General Information for Tape Path Adjustment .....	8-1
8-2.	Tape Path Adjustment .....	8-7
8-3.	RF Switching Position Adjustment .....	8-10
8-4.	Tape Path Adjustment Confirmation .....	8-13
8-5.	Search Forward (×5) Waveform Check .....	8-14
8-6.	Search Reverse (×5) Waveform Check .....	8-15
8-7.	RF Waveform Raiseup Check .....	8-16
8-8.	Tape Curl Check at Tape Guide .....	8-17

## 9. Adjustment When Replacing Board

9-1.	Adjustment/Check Items When Replacing Board .....	9-1
------	---	-----

## 10. Electrical Alignment

10-1.	Electrical Alignment Overview .....	10-1
10-1-1.	List of Adjustment Parts .....	10-1
10-1-2.	Measuring Equipment and Tools .....	10-2
10-1-3.	Reference Tape for Alignment .....	10-2
10-2.	Audio Adjustment .....	10-4
10-2-1.	Audio OUTPUT Level Adjustment .....	10-4
10-2-2.	Audio EE Level Adjustment .....	10-4
10-3.	Video Adjustment .....	10-5
10-3-1.	INT SC Frequency Adjustment .....	10-6
10-3-2.	HCK Frequency Adjustment .....	10-6
10-3-3.	COMPONENT Y OUT Level Adjustment .....	10-7
10-3-4.	COMPONENT B-Y OUT Level Adjustment .....	10-7
10-3-5.	COMPONENT R-Y OUT Level Adjustment .....	10-8
10-3-6.	SETUP OFF Chroma Level Check (NTSC only) .....	10-8
10-3-7.	S VIDEO OUT Y Level Check .....	10-9
10-3-8.	ENC SC Leak Adjustment .....	10-10
10-3-9.	VIDEO OUT 1 Video/Sync Level Adjustment .....	10-11
10-3-10.	VIDEO OUT 2 Video Level Check .....	10-11
10-3-11.	VIDEO OUT 3 Y Level Adjustment .....	10-12
10-3-12.	U-V Axis (B-Y, R-Y) Phase Adjustment .....	10-13
10-3-13.	PB VIDEO OUT 1 Chroma/Burst Level Adjustment .....	10-14
10-3-14.	PB S VIDEO Chroma Level Adjustment .....	10-16
10-3-15.	PB COMPOSITE C/C Delay Adjustment .....	10-16
10-3-16.	PB COMPOSITE Y/C Delay Adjustment .....	10-17
10-3-17.	PB COMPONENT Y/C Delay Adjustment .....	10-18

10-3-18. PB INT SCH Phase Adjustment .....	10-19
10-3-19. SPCK Error Adjustment .....	10-20
10-3-20. COMPOSITE 4Fsc PLL DC Check/Adjustment .....	10-21
10-3-21. REC Y Clamp Level Adjustment .....	10-22
10-3-22. REC Y Level Adjustment .....	10-22
10-3-23. REC COMPONENT R-Y Level Adjustment .....	10-23
10-3-24. REC COMPONENT B-Y Level Adjustment .....	10-23
10-3-25. REC A/D Y Level Adjustment .....	10-24
10-3-26. REC COMPOSITE Y Level Adjustment .....	10-25
10-3-27. REC COMPOSITE Chroma Level Adjustment .....	10-26
10-3-28. REC S VIDEO Chroma Level Check .....	10-27
10-3-29. REC COMPOSITE Y/C Delay Adjustment .....	10-28
10-3-30. REC COMPONENT Y/C Delay Adjustment .....	10-29
10-3-31. REC S VIDEO Y/C Delay Adjustment .....	10-30
10-4. SDI/SDTI .....	10-31
10-4-1. Free Run Adjustment .....	10-31
10-5. Adjustment Related Parts Layout Diagram .....	10-32



## Manual Structure

---

### Purpose of this manual

This manual is the Service Manual Volume 1 for the digital videocassette recorder DSR-1500/1500P, the option boards Digital Input/Output Board DSBK-1501, i.LINK/DV Input/Output Board DSBK-1503 and Analog Input Board DSBK-1504/1504P.

This manual contains the maintenance information of this equipment, and servicing information necessary for parts replacement and adjustments.

---

### Related manuals

In addition to this Service Manual Volume 1, the following manuals are provided.

- **Operation Instructions**

DSR-1500/1500P (Supplied with equipment)

Part number : 3-204-974-11 (English; for UC, CE)

3-204-974-21 (French; for UC, CE)

3-204-974-31 (German; for CE)

3-204-974-41 (Italian; for CE)

DSBK-1501 (Supplied with Model DSBK-1501)

Part number : 3-205-071-01

DSBK-1503 (Supplied with Model DSBK-1503)

Part number : 3-205-073-01

DSBK-1504/1504P (Supplied with Model DSBK-1504/1504P)

Part number : 3-205-072-01

- **Servive Manual Volume 2 (Not Supplied with equipment)**

Contains the semiconductor pin assignments, parts lists, block diagrams, board layouts and schematic diagrams.

Part number : 9-955-245-21

- **“Semiconductor Pin Assignments” CD-ROM (Available on request)**

This “Semiconductor Pin Assignments” CD-ROM allows you to search for semiconductors used in Communication System Solutions Network Company equipment.

Semiconductors that cannot be searched for on this CD-ROM are listed in the service manual for the corresponding unit. The service manual contains a complete list of all semiconductors and their ID Nos., and thus should be used together with the CD-ROM.

Part number : 9-968-546-XX

---

## Contents

The following is a summary of all the sections for understanding the contents of this manual.

### **Section 1 Operating Instructions**

Describes the contents of the operating instructions that is extracted from the DSR-1500/1500P Operation Manual.

### **Section 2 Installation**

Describes the switch setting, menu setting and connection with the external equipment that are required when installing the equipment as a system.

### **Section 3 Service Overview**

Describes the replacement of the parts, the locations of the main parts and boards, notes and so on.

### **Section 4 Error Messages**

Describes the alarms and countermeasures to be displayed when the unit detects abnormality.

### **Section 5 Maintenance Menu**

Describes the maintenance menu.

### **Section 6 Periodic Inspection and Maintenance**

Describes the periodic inspection and cleaning procedure.

### **Section 7 Replacement of Mechanical Parts**

Describes the replacement procedures and adjustment after replacement.

### **Section 8 Tape Path Alignment**

Describes the adjustment procedures of tape path system.

### **Section 9 Adjustment When Replacing Board**

Describes the electrical adjustments after replacement boards.

### **Section 10 Electrical Alignment**

Describes the electrical adjustment of each board.

---

## Trademark

Trademarks and registered trademarks used in this manual are follows.

- Windows is a registered trademark of Microsoft Corporation.



**SONY®**

3-204-974-11(1)

# ***Digital Videocassette Recorder***

---

## **Operating Instructions**

Before operating the unit, please read this manual thoroughly and retain it for future reference.

## **Section 1 Operating Instructions**

This section is extracted  
from operation manual.



**DSR-1500/1500P**

© 2000 Sony Corporation

## Owner's Record

The model and serial numbers are located at the bottom. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.


Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

### WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

THIS APPARATUS MUST BE EARTHED.

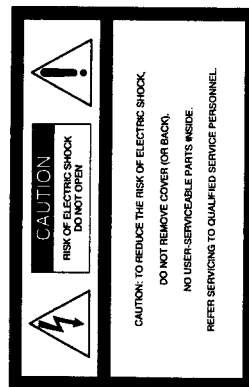

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**WARNING: THIS WARNING IS APPLICABLE FOR USA ONLY.**  
Using this unit at a voltage other than 120 V may require the use of a different line cord or attachment plug, or both. To reduce the risk of fire or electric shock, refer servicing to qualified service personnel.

### For customers in the USA

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

### Caution

Television programs, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws.

### For customers in Europe (DSR-1500P only)

This product with the CE marking complies with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European standards:

- EN60065: Product Safety
- EN55103-1: Electromagnetic Interference (Emission)
- EN55103-2: Electromagnetic Susceptibility (Immunity)

This product is intended for use in the following Electromagnetic Environment(s):

E1 (residential), E2 (commercial and light industrial), E3 (urban outdoors) and E4 (controlled EMC environment, ex. TV studio).

## Table of Contents

### Chapter 1 Overview

<b>Features</b> .....	5
DVCAM Format.....	5
Variety of Interfaces.....	6
Compact Size.....	6
Menu System for Functionality and Operation Settings.....	6
Facilities for High-Efficiency Editing.....	6
Easy Maintenance Functions.....	7
Other Features.....	7
Optional Accessories.....	7
<b>Location and Function of Parts</b> .....	8
Front Panel.....	8
Rear Panel.....	18

### Chapter 2 Recording and Playback

<b>Usable Cassettes</b> .....	23
Inserting and Ejecting Cassettes.....	25
<b>Recording</b> .....	27
Settings for Recording.....	27
Recording Procedure.....	30
<b>Playback</b> .....	33
Settings for Playback.....	33
Playback Procedure.....	34
Repeat Playback—Automatic Cyclical Playback.....	36
Setting Points A and B for Repeat Playback.....	36
Cuing Up to Any Desired Position Set as Point A or B.....	42

### Chapter 3 Convenient Functions for Editing Operation

<b>Setting the Time Data</b> .....	43
Displaying Time Data and Operation Mode Indications.....	43
Using the Internal Time Code Generator.....	45
Synchronizing Internal and External Time Codes.....	46
Rerecording the Time Code—TC Insert Function.....	47
<b>High-Speed and Low-Speed Search—Quickly and Accurately Determining Editing Points</b> .....	50
Search Operations via External Equipment.....	50
<b>Digitally Dubbing Signals in DVCAM Format</b> .....	51

## Chapter 4 Menu Settings

Menu Organization .....	55
Menu Contents .....	58
Setup Menu .....	58
Auto Mode (AUTO FUNCTION) Execution Menu .....	71
Changing Menu Settings .....	72
Buttons Used to Change Settings .....	72
Changing the Settings of Basic Items .....	74
Displaying Enhanced Items .....	74
Changing the Settings of Enhanced Items .....	74
Returning Menu Settings to Their Factory Default Settings .....	75
Displaying Supplementary Status Information .....	76

## Chapter 5 Connections and Settings

Connections for a Digital Non-Linear Editing System .....	79
Connections for a Cut Editing System .....	81
Connections for an A/B Roll Editing System .....	83
Connections for SDTI (QSDI) Dubbing .....	89
Connections for Analog Recording .....	90
Adjusting the Sync and Subcarrier Phases .....	91

## Chapter 6 Maintenance and Troubleshooting

Maintenance .....	93
Condensation .....	93
Regular Checks .....	93
Head Cleaning .....	95
Troubleshooting .....	96
Error Messages .....	98
Alarm Messages .....	98

## Appendixes

Precautions .....	101
Specifications .....	102
ClipLink Guide .....	105
What Is ClipLink? .....	105
Example System Configuration and Operation Flow .....	106
Data Generated When Shooting .....	107
Glossary .....	110
Index .....	113

# 1

## Overview Chapter

### Features

The DSR-1500/1500P is a  $\frac{1}{4}$ -inch digital videocassette recorder using the DVCAM™ digital recording format. The unit is equipped with a full range of output interfaces, so that it can be used as a low-cost, compact feeder/viewer in a non-linear editing system\* without requiring any optional boards.

When using the unit as a recorder, the optional boards available for the unit allow you to select required input signal formats.

The unit is playback-compatible with tapes recorded in DV format (excluding tapes recorded in LP mode) as well as DVCPRO (25 Mbps) format. Playing back such tapes on the unit does not require any adapter.

These and other features of the unit make it suitable for use under diversified conditions. It can be used, for example, for desk-top editing or for such applications as electronic news gathering (ENG) and non-linear editing aboard outside broadcast vans, at production houses or at broadcasting stations.

\* Non-linear editing: This is an editing method that uses video and audio signals digitally encoded and recorded on a hard disk as digital data. When compared with conventional (linear) editing methods, non-linear editing offers vastly improved efficiency in editing operations, for example, by eliminating tape transport time.

The following are the principal features of the unit.

#### DVCAM Format

DVCAM is a professional  $\frac{1}{4}$  inch digital recording format developed by Sony from the consumer DV component digital format.

#### High picture quality and high stability

Video signals are separated into color difference signals and luminance signals, which are encoded and compressed to one-fifth size before being recorded to ensure stable and superb picture quality.

Because the recording is digital, multi-generation dubbing can be performed with virtually no deterioration of quality.

#### Wide track

The recording track width is 15  $\mu$ m, 50% wider than the 10  $\mu$ m of the DV format. This ensures adequate reliability for professional use.

#### High-quality PCM digital audio

PCM recording makes for a wide dynamic range and a high signal-to-noise ratio, thereby enhancing sound quality.

There are two recording modes: 2-channel mode (48-kHz sampling and 16-bit quantization), which offers sound quality equivalent to the DAT (Digital Audio Tape) format, or 4-channel mode (32-kHz sampling and 12-bit quantization).

#### Superior playback compatibility with DV and DVCPRO (25 Mbps) formats

Tapes recorded in DV format (excluding the tapes recorded in LP mode) as well as DVCPRO (25 Mbps) format can be played back on this unit without requiring a cassette adapter. You can use the recordings on such tapes as source material for editing, applying such functions as the jog audio and digital slow-motion playback as required. Using the material, editing can be carried out to single-frame precision.

#### Note

When playing back a tape recorded in DVCPRO (25 Mbps) format, the outputs in SDTI and DV (i.LINK)

formats of this unit are muted. Furthermore, it is not possible to playback the cue-audio track of the tape.

## Variety of Interfaces

### Digital interfaces

The following optional digital interfaces are available for use with the unit.

- **SDTI (QSDI)\* (optional DSBK-1501 Digital Input/Output Board):** When the unit is fitted with the optional DSBK-1501 board, SDTI (QSDI)-format video, audio and time code signals can be transferred between the unit and the Sony EditStation at normal speed. When this unit is connected to another DVCAM VCR, it is possible to copy compressed signals between the two VCRs. (You cannot use the SDTI (QSDI) and SDI (see next paragraph) interfaces at the same time. You can select either of the two using front panel buttons for input or with a menu item for output.)

- **SDI (serial digital interface)/AES/EBU (optional DSBK-1501 Digital Input/Output Board):** When the unit is fitted with the optional DSBK-1501 board, it can input and output D1 (component) format digital video and audio signals and also AES/EBU-format digital audio signals.

- **LINK (DV)\*\* (optional DSBK-1503 LINK/DV Input/Output Board):** When the unit is fitted with the optional DSBK-1503 board, it can input and output digital video and audio signals in DV format.

\* SDTI is the name of a standard interface established as SMPTE 305M. QSDI is a type of SDTI. This unit uses SDTI to transmit DV data, and the input/output connectors are labeled "SDTI (QSDI)".

\*\* LINK and DV are trademarks and indicate that this product is in agreement with IEEE1394-1995 specifications and their revisions.

### Analog interfaces

The unit can also use the following analog interfaces.

- **Analog video:** These interfaces include a component interface, composite interface, and S-video interface. The same BNC type input and output connectors are used to input and output signals in different formats selected with front panel buttons for input and menu items for output.

- **Analog audio:** The unit has two audio channels. When in 4-channel mode, you can input two channels of audio either as channels 1 and 2 or as channels 3 and 4. The two audio channels can be output also either as channels 1 and 2 or as channels 3 and 4.

The analog output interfaces are provided as standard so that the unit can readily be used as a viewer, for example, at broadcasting stations and aboard outside broadcast vans without requiring any optional boards.

Inputting analog video and audio signals requires the optional DSBK-1504/1504P Analog Input Board.

## Compact Size

The compact size of the unit makes the unit suitable for use as a desk-top editor or feeder machine for non-linear editing or as a viewer compatible with a full range of digital and analog signal formats aboard an outside broadcast van.

## Menu System for Functionality and Operation Settings

The unit provides a menu system to make its various functions easier to use and set up its operation conditions.

## Facilities for High-Efficiency Editing

### Digital slow motion playback

Using the frame memory function, noiseless slow motion playback is possible at any speed in the range  $\pm 0.5$  times\* normal speed.

\* The positive direction refers to forward movement of the tape, and the negative direction to reverse movement.

### Digital jog sound function

When searching at speeds in the range  $\pm 0.5$  times normal speed, the digital jog sound function is enabled. The audio signal is saved in temporary memory, and replayed according to the search speed. This allows searching on the sound track.

### Remote control

The unit can be operated by remote control from an editing control unit that supports the RS-422A interface or an optional SIRCS\*-compatible remote control unit such as the DSRM-10.

\* SIRCS (Sony Integrated Remote Control System): A command protocol to remote control Sony professional videocassette recorders/players.

### High-speed search function

The unit has a picture search function that allows you to view color picture at playback speeds up to 85 times normal speed in forward and reverse directions.

When remote-controlling this unit in shuttle mode from an editing control unit or a remote control unit, you can search at any speed in the range 0 (still) to 60 times normal speed in both directions. You can also search frame-by-frame in jog mode.

At search speeds up to 10 times normal speed in both directions, you can also hear playback audio.

## Quick mechanical response

When you use the tape transport buttons of the unit, the tape inserted in the unit responds quickly.

## Superimposition function

Time code values, operation mode indications, error messages, and other text data can be superimposed and output in analog composite video signals.

## Easy Maintenance Functions

**Self-diagnostic/alarm function:** This function automatically detects setup and connection errors, operation faults, and other problems. It also displays a description of the problem, its cause, and the recommended response on the video monitor screen or time counter display.

**Digital hours meter:** The digital hours meter functions include four kinds of tally operations for operating hours, head drum usage hours, tape transport hours, and tape threading/unthreading times. The tally results can be viewed on the video monitor or the time counter display.

## Other Features

### AC operations

The unit operates with an AC power source in the range 100 to 240 V, 50/60 Hz.

### Internal and external time codes

An internal time code generator and reader enables time code compliant with SMPTE (for DSR-1500)/EBU (DSR-1500P) format to be recorded and played back. This allows editing to single frame precision.

Outputting or inputting time code (LTC) to or from an external device is also possible using the TC IN/OUT connectors.

The unit is also compatible with VTTC.

### Internal test signal generator

The unit has built-in video and audio test signal generators. The video test signal generator can produce either a color bar signal or a black burst signal. The audio test signal generator can generate either a silent signal or a 1-kHz sine wave signal. Menu items are provided for selecting the test signals to be generated.

### Support for ClipLink function

In response to commands sent from the EditStation, index pictures recorded on tape or ClipLink log data recorded in the cassette memory can be transferred to the EditStation.

The EditStation operator can then efficiently use these pictures and data in a preliminary editing session.

For an overview of the ClipLink function, see the appendix "ClipLink Guide" (page 105).

## Video process control

For analog video output and SDI-format video output, you can use menu items to adjust the video output level, chroma signal output level, setup level (for DSR-1500), black level (for DSR-1500P), and chroma phase.

## Reference signal connection

The reference video input connector of the unit is provided with a loop-through connector which can be used to connect the input reference video signal to other equipment. When there is no loop-through connection, the reference video input connector is automatically provided with a 75-ohm termination.

## Closed caption compatibility

Whether or not to include closed captions in a recording can be determined with menu items (for DSR-1500 only).

## Optional Accessories

### DSBK-1501 Digital Input/Output Board

This interface enables digital video and audio signals in the SDI or SDTI (QSDI) format (either format to be selected with front panel buttons for input or with a menu item for output) and also AES/EBU-format digital audio signals to be transferred between this unit and digital Betacam VCRs or other digital equipment.

### DSBK-1503 LINK/DV Input/Output Board

This interface allows you to connect the unit to other equipment provided with a Sony DV connector to carry out editing or dubbing of digital video and audio signals.

### DSBK-1504/1504P Analog Input Board


When this interface is installed, the unit can input analog video and audio signals. The same BNC type input connectors are used to input analog video signals in different formats selected with front panel buttons. The analog video signals that can be input are as follows.

- Composite video signals
- S-video signals
- Component video signals (Y, R-Y and B-Y)



## Location and Function of Parts

### Front Panel

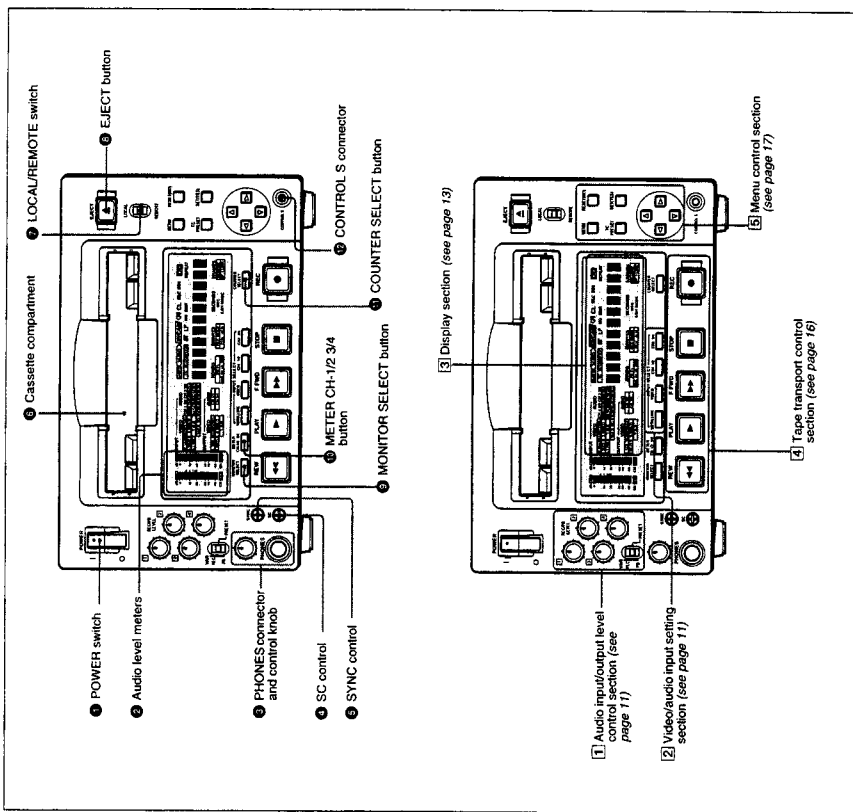

**1 SC (subcarrier phase) control**  
Turn this control to accurately adjust the subcarrier phase of the composite video output signal of the unit with respect to the reference video signal. Use a cross-point (Phillips) screwdriver to turn it.

**2 SYNC (synchronization phase) control**  
Turn this control to accurately adjust the synchronization phase of the output video signal of the unit with respect to the reference video signal. Use a cross-point (Phillips) screwdriver to turn it.

**3 Cassette compartment**  
Accepts DVCAM, DV and DVCPRO (25 Mbps) videocassettes.

For details of usable cassettes, see page 23.

**4 LOCAL/REMOTE switch**  
Selects whether the unit is operated from its front panel or from external equipment.

**REMOTE:** The unit is operated from external equipment connected to the REMOTE connector or DV IN/OUT connector (when the optional DSBK-1503 i.LINK/DV Input/Output Board is installed) on the rear panel.

**LOCAL:** The unit is operated from its front panel or from a SIRCS-compatible remote control unit connected to the CONTROL S connector on the front panel.

**5 EJECT button**  
When you press this button, the cassette is automatically ejected after a few seconds.

**6 POWER switch**  
Press the "I" side to power on the unit. This causes the audio level meters and the display section to light. To power off the unit, press the "O" side of the switch.

**7 Audio level meters**  
These two meters indicate the recording audio levels during recording or EE mode\* and the playback audio levels during playback. When the audio level indicated on a meter exceeds 0 dB, the OVER indicator for the meter lights.  
The short bars to the right of level indication bars indicate that those levels are reference audio recording levels. The settings made with the METER CH-1/2 3/4 button and MONITOR SELECT button select the audio channels for level indications on these meters as follows.

When CH-1/2 mode is selected with the METER CH-1/2 3/4 button:

Every time the MONITOR SELECT button is pressed, the audio channel selection for level indications on the two meters cycles through the following options.

- CH-1 (channel 1) only  
Only the left audio level meter lights.
- CH-2 (channel 2) only  
Only the right audio level meter lights.
- CH-1 and CH-2 (channels 1 and 2)  
Both the left and right audio level meters light.

When CH-3/4 mode is selected with the METER CH-1/2 3/4 button:

Every time the MONITOR SELECT button is pressed, the audio channel selection for level indications on the two meters cycles through the following options.

- CH-3 (channel 3) only  
Only the left audio level meter lights.
- CH-4 (channel 4) only  
Only the right audio level meter lights.
- CH-3 and CH-4 (channels 3 and 4)  
Both the left and right audio level meters light.

\* E-E mode: Abbreviation of "Electric-to-Electric mode." In this mode, video and audio signals input to the VCR are output after passing through internal electric circuits, but not through magnetic conversion circuits such as heads and tapes. This can be used to check input signals and for adjusting input signal levels.

**8 PHONES connector (stereo phone jack) and control knob**

Connect stereo headphones to the connector for audio monitoring during recording or playback. The control knob controls the volume of the headphones. It also controls the level of the audio signal output from the MONITOR connector on the rear panel.

The settings made with the METER CH-1/2 3/4 button and MONITOR SELECT button select the audio channels for audio output via this connector. The same channel selection as for the audio level meters applies to this connector.

### MONITOR SELECT button

Use this button and the **METER CH-1/2 3/4** button to select the audio channels:

- for level indications on the audio level meters
- for audio output via the PHONES connector on the front panel
- for audio output via the MONITOR connector on the rear panel

Depending on the setting made with the **METER CH-1/2 3/4** button, the channels for output to the above meters and connectors are selected as follows.

When **CH-1/2** mode is selected with the **METER CH-1/2 3/4** button:

Audio level meters	PHONES connector	MONITOR connector
CH-1 (channel 1) only. Only the left meter lights.	Channel 1 only (monaural)	Channel 1 only
CH-2 (channel 2) only. Only the right meter lights.	Channel 2 only (monaural)	Channel 2 only
CH-1 and CH-2 (channels 1 and 2). Both the left and right meters light.	Channels 1 and 2 (stereo)	Channels 1 and 2 (mixed)

When **CH-3/4** mode is selected with the **METER CH-1/2 3/4** button:

Audio level meters	PHONES connector	MONITOR connector
CH-3 (channel 3) only. Only the left meter lights.	Channel 3 only (monaural)	Channel 3 only
CH-4 (channel 4) only. Only the right meter lights.	Channel 4 only (monaural)	Channel 4 only
CH-3 and CH-4 (channels 3 and 4). Both the left and right meters light.	Channels 3 and 4 (stereo)	Channels 3 and 4 (mixed)

### METER CH-1/2 3/4 button

Pressing this button toggles the audio level meter mode between **CH-1/2** (channels 1 and 2) and **CH-3/4** (channels 3 and 4).

The settings made with this button and the **MONITOR SELECT** button select the channels for level indications and audio output.

For more details, see "MONITOR SELECT button."

### COUNTER SELECT button

Selects the type of time data to be shown in the time counter display. Each press of this button cycles through the following three indicator display options:

- **COUNTER (CNT)**: count value of the time counter
- **TC** (time code)
- **U-BIT** (user bits)


### Note

If the **LOCAL/REMOTE** switch is set to **REMOTE**, the **COUNTER SELECT** button does not operate while the tape is moving. In this case, make the time data selection via the external equipment connected to the **REMOTE** connector on the rear panel.

### CONTROL S connector (stereo minijack)

Connect a SIRCS-compatible remote control unit such as the **DSRM-10** to this connector.

## 1 Audio input/output level control section

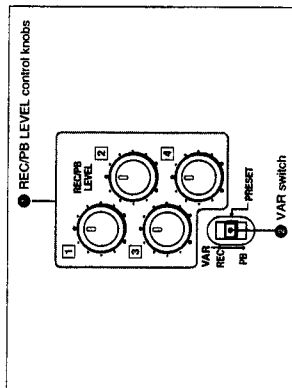

### REC/PB LEVEL control knobs


These knobs used to control audio levels function differently depending on the setting of the **VAR** switch as follows.

VAR switch setting	Functions of control knobs
PRESET	Control knobs are not effective. The analog audio input/output levels are set to the reference level set with the <b>LEVEL SELECT</b> menu item (see page 66).
REC	Control the analog/digital audio input levels on channels 1 to 4 during recording.
PB	Control the analog/digital audio output levels on channels 1 to 4 during playback.

### VAR switch

Use to switch the way in which the **REC/PB LEVEL** control knobs function.

## 2 Video/audio input setting section

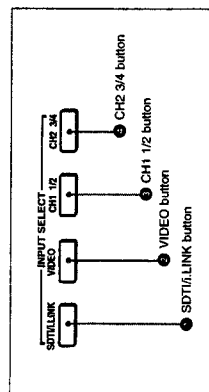

### SDTi/LINK (SDTi (QSDi) interface/i.LINK selection) button

Each press of this button cycles through the following input signal selection options.

- **Digital video signal in SDTi (QSDi) format** input to the **SDi/SDTi (QSDi) IN** connector (optional **DSBK-1501** board required)
- When this is selected, use the **CH1 1/2** button and **CH2 3/4** button to select the required input audio signals.
- **Digital video and audio signals in SDTi (QSDi) format** input to the **SDi/SDTi (QSDi) IN** connector (optional **DSBK-1501** board required)
- **Digital video and audio signals in i.LINK-compatible DV format** input to the **DV IN/OUT** connector (optional **DSBK-1503** board required)

The selection made with this button is indicated in the **INPUT** signal display section (see page 14).

### VIDEO button

Each press of this button cycles through the following input video signal selection options.

- Composite video signal input to the **VIDEO IN** connector (optional **DSBK-1504/1504P** board required)
- S-video (separated Y and C) signals input to the **VIDEO IN** connectors (optional **DSBK-1504/1504P** board required)
- Y, R-Y and B-Y component video signals input to the **VIDEO IN** connectors (optional **DSBK-1504/1504P** board required)
- SDi video signal input to the **SDi/SDTi (QSDi) IN** connector (optional **DSBK-1501** board required)
- Video test signal (selected with the **INT VIDEO SG** menu item (see page 64) generated by the internal signal generator

The selection made with this button is indicated by the **VIDEO** indicators in the **INPUT** signal display section (see page 13).

**● CH1 1/2 (audio channel 1 or 1/2) button**

Each press of this button cycles through the following input audio signal selection options for audio channel 1 (when in 2-channel mode) or for audio channels 1 and 2 (when in 4-channel mode).

- Analog audio signal input to the AUDIO IN 1/3 connector (optional DSBK-1504/1504P board required)
- Digital audio signal in AES/EBU format input to the AUDIO (AES/EBU) IN 1/2 connector (optional DSBK-1501 board required)
- SDI audio signal input to the SDI/SDTI (QSDI) IN connector (optional DSBK-1501 board required)
- Audio test signal (selected with the INT AUDIO SG menu item (see page 66) generated by the internal signal generator

The selection made with this button is indicated by the AUDIO CH-1 1/2 indicators in the INPUT signal display section (see page 13).

When analog audio is selected (optional DSBK-1504/1504P board required), the signal input to the AUDIO IN 1/3 connector is recorded either on channel 1 (when in 2-channel mode) or on channels 1 and 3 (when in 4-channel mode). That is, in 4-channel mode, the same analog audio signal is recorded on channels 1 and 3. Using the REC/PB LEVEL control knobs with the VAR switch set to REC, it is possible to adjust the audio levels on the two channels separately.

You can switch the audio recording mode with the REC MODE menu item (see page 65). The selection is indicated by the REC MODE display on the front panel.

**● CH2 3/4 (audio channel 2 or 3/4) button**


Each press of this button cycles through the following input audio signal selection options for audio channel 2 (when in 2-channel mode) or for audio channels 3 and 4 (when in 4-channel mode).

- Analog audio signal input to the AUDIO IN 2/4 connector (optional DSBK-1504/1504P board required)
- Digital audio signal in AES/EBU format input to the AUDIO (AES/EBU) IN 3/4 connector (optional DSBK-1501 board required)
- SDI audio signal input to the SDI/SDTI (QSDI) IN connector (optional DSBK-1501 board required)
- Audio test signal (selected with the INT AUDIO SG menu item (see page 66) generated by the internal signal generator

The selection made with this button is indicated by the AUDIO CH-2 3/4 indicators in the INPUT signal display section (see page 13).

When analog audio is selected (optional DSBK-1504/1504P board required), the signal input to the AUDIO IN 2/4 connector is recorded either on channel 2 (when in 2-channel mode) or on channels 2 and 4 (when in 4-channel mode). That is, in 4-channel mode, the same analog audio signal is recorded on channels 2 and 4. Using the REC/PB LEVEL control knobs with the VAR switch set to REC, it is possible to adjust the audio levels on the two channels separately.

You can switch the audio recording mode with the REC MODE menu item (see page 65). The selection is indicated by the REC MODE display on the front panel.

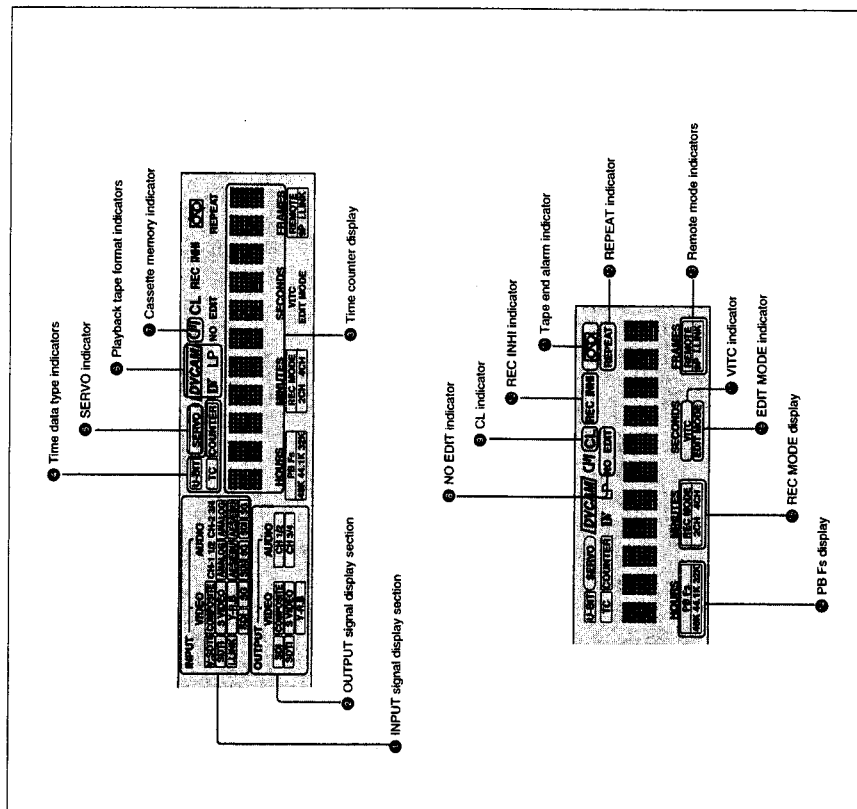**3 Display section****● INPUT signal display section**

Indicates the input video and audio signal formats selected with the INPUT SELECT buttons (SDTI/i.LINK, VIDEO, CH1 1/2, and CH2 3/4 buttons).

**Note**

The indicators without the corresponding optional boards installed in the unit do not light.

**V:SDTI indicator:** Lights when the digital video signal only in SDTI (QSDI) format is selected (optional DSBK-1501 board required).

**SDTI indicator:** Lights when the digital video and audio signals in SDTI (QSDI) format are selected (optional DSBK-1501 board required).

**i.LINK indicator:** Lights when the digital video and audio signals in i.LINK-compatible DV format are selected (optional DSBK-1503 board required).

**VIDEO indicators:** The indicator (COMPOSITE, S VIDEO, Y-R-B, SDI, or SG) corresponding to the selected input video signal format lights.

Indicators	Meanings
COMPOSITE	Composite video signal (optional DSBK-1504/1504P board required)
S VIDEO	S-video (separated Y and C) signals (optional DSBK-1504/1504P board required)
Y-R-B	Y, R-Y and B-Y component video signals (optional DSBK-1504/1504P board required)
SDI	SDI video signal (optional DSBK-1501 board required)
SG	Video test signal (factory default setting)

**AUDIO indicators:** Comprise the CH-1/2 indicator and CH-2/3/4 indicator, under each of which there are four more indicators (ANALOG, AES/EBU, SDI, and SG). They indicate the selected input audio signal formats.

Indicators	Functions
CH-1/2 (ANALOG, AES/EBU, SDI, SG)	The indicator corresponding to the signal format selected for audio input to channel 1 (when in 2-channel mode) or to channels 1 and 2 (when in 4-channel mode) lights. ANALOG: Analog audio signal (optional DSBK-1504/1504P board required) AES/EBU: Digital audio signal in AES/EBU format (optional DSBK-1501 board required) SDI: SDI audio signal (optional DSBK-1501 board required) SG: Audio test signal (factory default setting)
CH-2/3/4 (ANALOG, AES/EBU, SDI, SG)	The indicator corresponding to the signal format selected for audio input to channel 2 (when in 2-channel mode) or to channels 3 and 4 (when in 4-channel mode) lights. ANALOG: Analog audio signal (optional DSBK-1504/1504P board required) AES/EBU: Digital audio signal in AES/EBU format (optional DSBK-1501 board required) SDI: SDI audio signal (optional DSBK-1501 board required) SG: Audio test signal (factory default setting)

## 2 OUTPUT signal display section

Indicates the output video and audio signal format selected with the INTERFACE SELECT menu items (see page 67).

### Note

The indicators without the corresponding optional boards installed in the unit do not light.

**SDI indicator:** Lights when the digital video and audio signals in SDI format are selected (optional DSBK-1501 board required).

The SDI video and audio signals are output to the SDI/SDTI (QSDI) OUT1 and OUT2 connectors.

**SDTI indicator:** Lights when the digital video and audio signals in SDTI (QSDI) format are selected (optional DSBK-1501 board required).

The video and audio signals in SDTI (QSDI) format are output to the SDI/SDTI (QSDI) OUT1 and OUT2 connectors.

**VIDEO indicators:** The indicator (COMPOSITE, S VIDEO, or Y-R-B) corresponding to the selected output analog video signal format lights.

Indicators	Meanings
COMPOSITE	Composite video signal
S VIDEO	S-video (separated Y and C) signals
Y-R-B	Y, R-Y and B-Y component video signals

This selection determines the signals output from the Y/CPST, R-Y/CPST, and B-Y/CPST (SUPER) connectors as follows.

- When **S VIDEO** is selected:

Connectors	Output signals
Y/CPST	Composite signal
R-Y/CPST	Composite signal
B-Y/CPST (SUPER)	Composite signal

- When **S VIDEO** is selected:

Connectors	Output signals
Y/CPST	Y signal
R-Y/CPST	C signal (3.58 MHz for DSR-1500/4.43 MHz for DSR-1500P)
B-Y/CPST (SUPER)	Composite signal

- When **Y-R-B** is selected:

Connectors	Output signals
Y/CPST	Y signal
R-Y/CPST	R-Y signal
B-Y/CPST (SUPER)	B-Y signal

**AUDIO indicators:** Comprise the CH-1/2 indicator and CH-2/3/4 indicator to indicate the channel selection for analog audio output from the AUDIO OUT 1/3 and AUDIO OUT 2/4 connectors.

Indicators	Functions
CH-1/2	Lights when channels 1 and 2 are selected for analog audio output from the AUDIO OUT 1/3 and AUDIO OUT 2/4 connectors.
CH-3/4	Lights when channels 3 and 4 are selected for analog audio output from the AUDIO OUT 1/3 and AUDIO OUT 2/4 connectors.

You can change the channel selection with the AUDIO OUTPUT menu item (see page 67).

## 3 Time counter display

Indicates the count value of the time counter, time code, VITC, or user bit data depending on the settings of the COUNTER SELECT button and the TC SELECT menu item (see page 62).

Also used to display error messages, edit data, setup menu data, etc.

## 4 Time data type indicators

One of the three indicators (COUNTER, U-BIT, or TC) lights to indicate the type of time data currently shown in the time counter display.

**COUNTER:** Count value of the time counter

**U-BIT:** User bit data

**TC:** SMPTE time code (for DSR-1500) or EBU time code (for DSR-1500P)

## 5 SERVO (servolock) indicator

Lights when the drum servo and capstan servo are locked.\*

\* Servolock: Synchronizing the drum rotation phase and tape transport phase with a reference signal during playback, and the video heads scan the tape in the same pattern during playback and recording.

## 6 Playback tape format indicators

**DVCAM:** This lights when a tape recorded in DVCAM format is played back.

**DV:** This lights when a tape recorded in consumer DV format is played back.

**LP:** This flashes along with "DV" when a tape recorded in LP mode is played back.

Video recorded in LP mode cannot be played back correctly and audio is muted.

When a tape recorded in DVCPRO (25 Mbps) format or any other format than those mentioned above is played back, none of the above indicators lights.

## 7 Cassette memory indicator

Lights when a cassette provided with a memory chip ("cassette memory") is loaded.

## 8 NO EDIT (not editable) indicator

Lights during playback of a tape that contains a recording in other than the DVCAM format. When this indicator is lit, the recordings contained in the tape can be used as source material for editing, but editing operations such as insert editing and assemble editing cannot be performed. This indicator also lights when the audio recording mode selected on this unit does not coincide with that of the loaded tape during editing operation.

## 9 CL (ClipLink) indicator

Lights when a cassette is loaded on which ClipLink log data is stored in the cassette memory.

For details of ClipLink log data, see the appendix "ClipLink Guide" (page 105).

## 10 REC INHI (recording inhibit) indicator

Lights when the REC/SAVE switch on the loaded cassette is in the SAVE position (recording inhibited).

## 11 Tape end alarm indicator

Starts flashing when the remaining capacity of the tape is for about 2 minutes.

## 12 REPEAT (repeat playback) indicator

Lights when the REPEAT MODE menu item (see page 58) is set to ON to enable the repeat playback function.

## 13 Remote mode indicators

**REMOTE:** Lights when the LOCAL/REMOTE switch is set to REMOTE to remote control the unit from either an editing control unit connected to the REMOTE connector or equipment connected to the DV IN/OUT connector (when the optional DSBK-1503 board is installed).

**9P:** Lights when the REMOTE I/F menu item (see page 67) is set to 9PIN.

**iLINK:** Lights when the REMOTE I/F menu item (see page 67) is set to iLINK (optional DSBK-1503 board required).

**PB Fx (playback audio sampling frequency) display**  
During playback, this indicates the playback audio mode in which the tape being played back was recorded.

**48K indicator:** Lights during playback of a tape recorded in 2-channel mode (48 kHz).

**44.1K indicator:** Lights during playback of a tape recorded in 2-channel mode (44.1 kHz).

**32K indicator:** Lights during playback of a tape recorded in 4-channel mode (32 kHz).






- **REC MODE (audio recording mode) display**  
This indicates the audio recording mode currently selected with the REC MODE menu item (see page 65).
- **2CH indicator:** Lights in 2-channel mode (48 kHz).
- **4CH indicator:** Lights in 4-channel mode (32 kHz).

- **EDIT MODE indicator**  
Lights when this unit is selected as the recorder VCR under the control of either an editing control unit connected to the REMOTE connector or equipment connected to the DV IN/OUT connector (when the optional DSBK-1503 board is installed).
- **VITC indicator**  
Lights when VITC is being read or recorded regardless of the data shown in the time counter display.

4 Tape transport control section

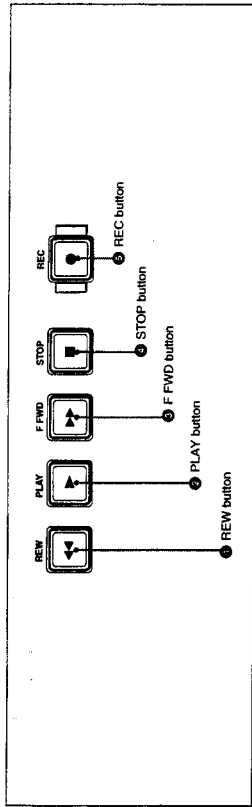


- **REW (rewind) button**  
When you press this button, it lights and the tape starts rewinding.  
When the F. FWD/REW menu item under the AUTO EE SELECT menu item (see page 59) is set to PB, the picture appears on the monitor during rewind (maximum 85 times normal speed).
- **PLAY button**  
When you press this button, it lights and playback begins. If you press this button during recording or editing, the recording or editing operation is stopped and this unit enters playback mode.
- **F FWD (fast forward) button**  
When you press this button, it lights and the tape is fast forwarded.  
When the F. FWD/REW menu item under the AUTO EE SELECT menu item (see page 59) is set to PB, the picture appears on the monitor during fast forward (maximum 85 times normal speed).
- **STOP button**  
Press this button to stop the current tape transport operation.
- **REC (record) button**  
When you press this button while holding down the PLAY button, it lights and recording begins.

Note

When the LOCAL/REMOTE switch is set to REMOTE (the REMOTE indicator is lit), no tape transport control buttons other than the EJECT and STOP buttons will work. This can be changed with the LOCAL ENABLE menu item (see page 59).

5 Menu control section

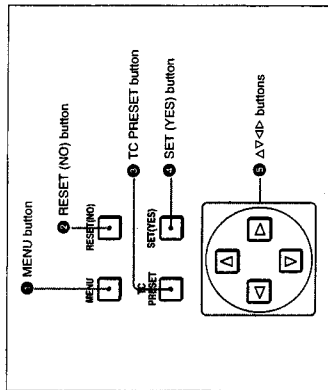

- **MENU button**  
Press this button to display the menu on the monitor screen and the time counter display. Press it again to exit the menu display.

On how to use the menu, see Chapter 4 "Menu Settings."

- **RESET (NO) button**  
Press this button to:
  - reset menu settings;
  - reset the time data shown in the time counter display to zero, or
  - send a negative response to the prompts issued by the unit.

- **TC (time code) PRESET button**  
Use this button to set the initial value of the time code produced by the internal time code generator and user bit data.

For details on setting an initial time code value and user bit data, see "To set the initial time code value and user bit data" on page 45.


- **SET (YES) button**  
Press this button to:
  - save new settings, such as selected menu items and time code settings, to memory, or
  - send a positive response to the prompts issued by the unit.

- **$\Delta$ V<math>\Delta  
Use these buttons to move around the menu items, and also to modify the initial time code value and user bit data. When the SEARCH ENABLE menu item (see page 59) is set to ENABLE, you can also use these buttons to carry out the following playback operations.**

Playback type	Direction	Operation to carry out
High-speed playback in shuttle mode	Forward	Press the $\Delta$ button.
	Reverse	Press the $\nabla$ button.
Frame-by-frame playback	Forward	Press the $\Delta$ button.
	Reverse	Press the $\nabla$ button.
Continuous playback in jog mode	Forward	Hold down the $\Delta$ button.
	Reverse	Hold down the $\nabla$ button.

For details on modifying the time code value, see "To set the initial time code value and user bit data" on page 45.

## Rear Panel

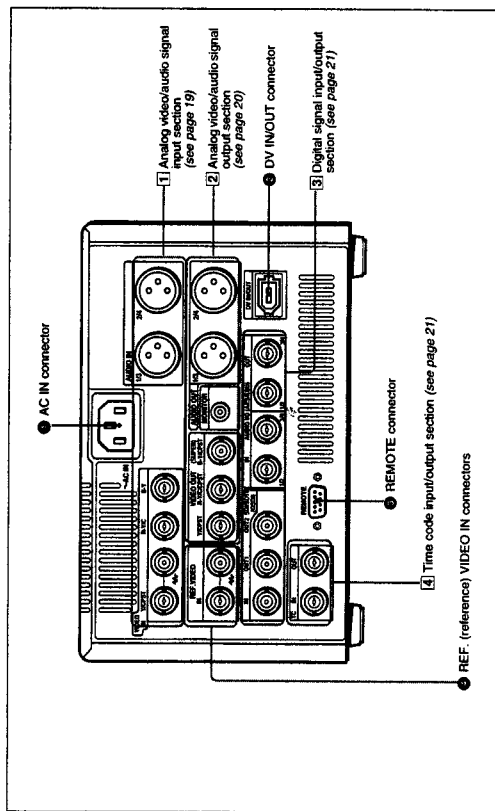

### AC IN connector

Use the supplied power cord to connect this to an AC outlet.

### DV IN/OUT connector (6-pin IEEE-1394) (optional DSBK-1503 LINK/DV Input/Output Board)

This connector is available when the optional DSBK-1503 board is installed. It inputs and outputs digital video and audio signals in DV format.

### Note

When searching at speeds in the range  $+1/2$  to  $+1/30$  or  $-1/30$  to  $-1/2$  times normal speed, the audio signal output from this connector and monitored on external equipment may sound differently from the audio signal played back on this unit.

### REMOTE connector (D-sub 9-pin)


When controlling this unit from an editing control unit such as the ES-7, PVE-500, BVE-600/800/910, or RM-450/450CE, connect the editing control unit to this connector using the optional 9-pin remote control cable.

### REF. (reference) VIDEO IN connectors (BNC type)

Input a reference video signal. The two connectors are loop-through connectors. You can connect the reference video signal input to the left connector to other equipment via the right connector (marked  $\star$ ). When no connection is made to the right connector, the left connector is terminated with an impedance of 75  $\Omega$  automatically.

## 1 Analog video/audio signal input section (optional DSBK-1504/1504P Analog Input Board)

The connectors in this section are available when the optional DSBK-1504/1504P board is installed.

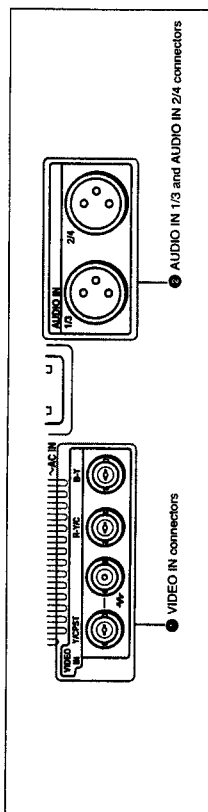

### VIDEO IN connectors (BNC type)

There are the following VIDEO IN connectors for inputting analog video signals:

- Y/CPST (loop-through connectors)
- R-Y/C
- B-Y

The signals you can connect to these connectors depend on the selection made with the VIDEO button in the video/audio input selection section. The selection is indicated by the VIDEO indicators in the INPUT signal display section. The analog video signals that can be input to these connectors are as follows.

### When COMPOSITE is selected:

Connectors	Input signals
Y/CPST	Composite signal
R-Y/C	— (not usable)
B-Y	— (not usable)

The two Y/CPST connectors are loop-through connectors. When using the signal input to the left Y/CPST connector as a reference video signal, for example, you can bridge-connect the signal to other equipment via the right Y/CPST connector (marked  $\star$ ). When no connection is made to the right Y/CPST connector, the left Y/CPST connector is terminated with an impedance of 75  $\Omega$  automatically.

### When S VIDEO is selected:

Connectors	Input signals
Y/CPST	Y signal
R-Y/C	C signal (3.58 MHz for DSR-1500/ 4.43 MHz for DSR-1500P)
B-Y	— (not usable)

### When Y-R-B is selected:

Connectors	Input signals
Y/CPST	Y signal
R-Y/C	R-Y signal
B-Y	B-Y signal

### AUDIO IN 1/3 and AUDIO IN 2/4 connectors (XLR-3 pin, female)

Use these connectors to input analog audio signals from an external video cassette player or other audio equipment. The signals input to these connectors are recorded on the audio channels determined by the current audio recording mode, as follows.

### When in 2 CH (48 kHz) mode:


Input connectors	Audio channels on which input signals are recorded
AUDIO IN 1/3	Audio channel 1
AUDIO IN 2/4	Audio channel 2

### When in 4 CH (32 kHz) mode:

Input connectors	Audio channels on which input signals are recorded
AUDIO IN 1/3	Audio channels 1 and 3
AUDIO IN 2/4	Audio channels 2 and 4

You can switch the audio recording mode with the REC MODE menu item (see page 65). The selection is indicated by the REC MODE display on the front panel.

## 2 Analog video/audio signal output section

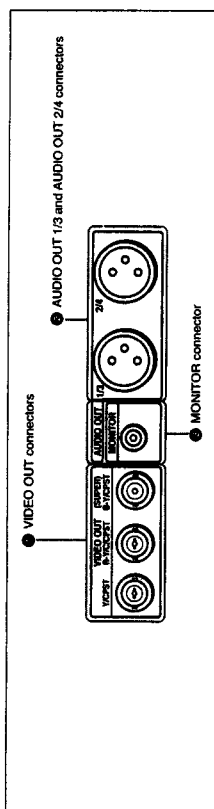

### VIDEO OUT connectors (BNC type)

There are the following VIDEO OUT connectors for outputting analog video signals:

- Y/CPST
- R-Y/CPST
- B-Y/CPST (SUPER)

The signals output from these connectors depend on the setting of the VIDEO OUTPUT menu item (see page 67). The setting is indicated by the VIDEO indicators in the OUTPUT signal display section on the front panel. The analog video signals that can be output from these connectors are as follows.

When COMPOSITE is selected:

Connectors	Output signals
Y/CPST	Composite signal
R-Y/CPST	Composite signal
B-Y/CPST (SUPER)	Composite signal

When the CHARA. DISPLAY menu item (see page 60) is set to ON (factory default setting), the B-Y/CPST (SUPER) connector outputs a composite video signal with superimposed text information.

When S-VIDEO is selected:

Connectors	Output signals
Y/CPST	Y signal
R-Y/CPST	C signal (3.58 MHz for DSR-1500/4.43 MHz for DSR-1500P)
B-Y/CPST (SUPER)	Composite signal

When the CHARA. DISPLAY menu item (see page 60) is set to ON (factory default setting), the B-Y/CPST (SUPER) connector outputs a composite video signal with superimposed text information.

When Y-R, B is selected:

Connectors	Output signals
Y/CPST	Y signal
R-Y/CPST	R-Y signal
B-Y/CPST (SUPER)	B-Y signal

### AUDIO OUT 1/3 and AUDIO OUT 2/4 connectors (XLR-3 pin, male)

These connectors output analog audio signals. The output audio channels are determined by the playback audio mode and the setting (1/2 CH or 3/4 CH) of the AUDIO OUTPUT menu item (see page 67) as follows.

When in 2 CH (48 kHz or 44.1 kHz) mode:

Output connectors	Output audio channels
AUDIO OUT 1/3	Audio channel 1 (when 1/2 CH is selected) or silent (when 3/4 CH is selected)
AUDIO OUT 2/4	Audio channel 2 (when 1/2 CH is selected) or silent (when 3/4 CH is selected)

When in 4 CH (32 kHz) mode:

Output connectors	Output audio channels
AUDIO OUT 1/3	Audio channel 1 (when 1/2 CH is selected) or audio channel 3 (when 3/4 CH is selected)
AUDIO OUT 2/4	Audio channel 2 (when 1/2 CH is selected) or audio channel 4 (when 3/4 CH is selected)


The current playback audio mode is indicated by the PB Fs display on the front panel.

### MONITOR connector (RCA phono jack)

This connector outputs audio signals for monitoring. The audio signals to be output from this connector can be selected with the MONITOR SELECT button and METER CH-1/2 3/4 button on the front panel.

## 3 Digital signal input/output section (optional DSBK-1501 Digital Input/Output Board)

The connectors in this section are available when the optional DSBK-1501 board is installed.

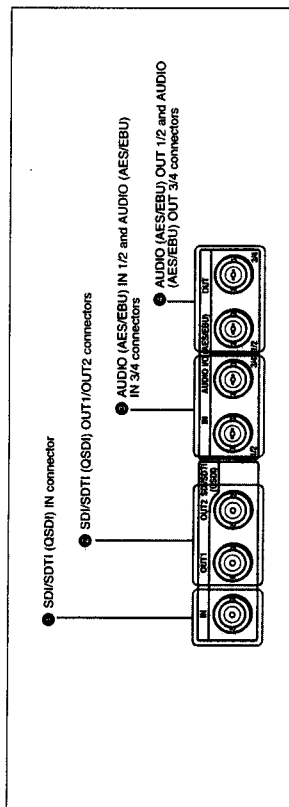

### SD/SDTI (QSDI) IN (Serial Digital Interface/Serial Data Transport Interface (QSDI) input) connector (BNC type)

This connector inputs digital video and audio signals in SDTI (QSDI) or SDI format. To select the required input signal formats, use the SDTI/LINK button or VIDEO button on the front panel. The current input signal selections are indicated in the INPUT signal display section on the front panel.

### SD/SDTI (QSDI) OUT1/OUT2 (Serial Digital Interface/Serial Data Transport Interface (QSDI) output 1/output 2) connectors (BNC type)

These connectors output digital video and audio signals in SDTI (QSDI) or SDI format. To select these output signal formats, use the DIGITAL OUTPUT menu item (see page 67). The current output signal selections are indicated in the OUTPUT signal display section on the front panel.

### Note

When searching at speeds in the range  $+1/2$  to  $+1/30$  or  $-1/2$  to  $-1/30$  times normal speed, the audio signal output from these connectors in SDTI (QSDI) format and monitored on external equipment may sound differently from the audio signal played back on this unit.


### AUDIO (AES/EBU) IN 1/2 and AUDIO (AES/EBU) IN 3/4 connectors (BNC type)

This connector inputs digital audio signals in AES/EBU format to these connectors. The left connector (1/2) is for audio channels 1 and 2, and the right connector (3/4) is for audio channels 3 and 4.

### AUDIO (AES/EBU) OUT 1/2 and AUDIO (AES/EBU) OUT 3/4 connectors (BNC type)

These connectors output digital audio signals in AES/EBU format. The left connector (1/2) is for audio channels 1 and 2, and the right connector (3/4) is for audio channels 3 and 4.

### 4 Time code input/output section

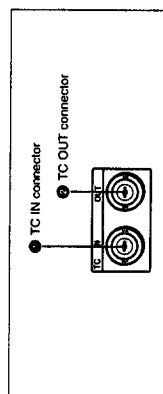

### TC IN (time code input) connector (BNC type)

Input externally generated SMPTE time code (for DSR-1500) or EBU time code (for DSR-1500P) to this connector.

### TC OUT (time code output) connector (BNC type)

This connector outputs a time code according to the operating state of the unit, as follows:

During playback: the playback time code

During recording: the time code generated by the internal time code generator or the time code input to the TC IN connector. When the EE OUT PHASE menu item (see page 63) is set to MUTE, no time code is output.



Recording and Playback

Chapter 2

Usable Cassettes

This unit can use the DVCAM cassettes listed below.

Model name	Size
PDV-64ME/94ME/124ME/184ME	Standard size
PDVM-12ME/22ME/32ME/40ME	Mini size

The numbers in each model name indicate the maximum recording/playback time (in minutes) for each model. For example, the PDV-184ME has a maximum recording/playback time of 184 minutes.

Cassettes usable for playback only


All consumer DV cassettes and large- and medium-size DVCPRO (25 Mbps) cassettes are usable for playback only.

Notes

- If you insert an incorrect type of cassette, it will be automatically ejected.
- When operating this unit as a player, you can also use DV cassettes on the unit. However, it is the best choice to always use DVCAM cassettes because they are more reliable than DV cassettes whatever your purpose may be: playback, editing, or long-period storage of recordings.
- Cassettes that have been recorded by a DV-format recorder can be played back on this unit but cannot be used for recording at editing operation. When you insert such a cassette into this unit, the NO EDIT indicator lights up in the display section on the front panel of this unit.

## DVCAM cassettes

The following figure illustrates the DVCAM cassettes.

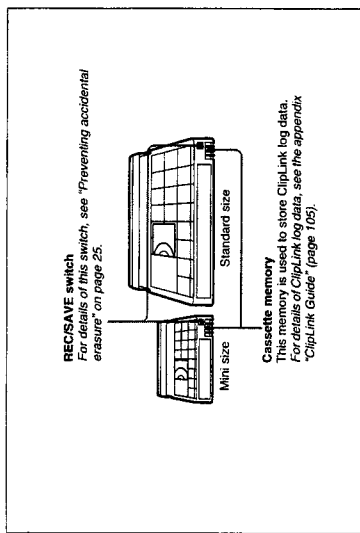


## Notes on using cassettes

- Before storing the cassette for a long period of time, rewind the tape to the beginning and be sure to put the cassette in its storage case, preferably on end instead of flat on its side.
- Storing a cassette in any other condition (not rewound, out of its case, etc.) may cause the video and audio contents to become damaged over time.
- If the cassette memory connector (contact point) becomes dirty, connection problems may occur, causing a loss of functions. Remove away any dust or dirt from this area before using the cassette.
- If the cassette is dropped on the floor or otherwise receives a hard impact, the tape may become slackened and may not record and/or play back correctly.

For information about how to check the tape for slack, see the next section.


## Checking the tape for slack

Using a paper clip or a similar object, turn the reel gently in the direction shown by the arrow. If the reel does not move, there is no slack. Insert the cassette into the cassette compartment, and after about 10 seconds take it out.

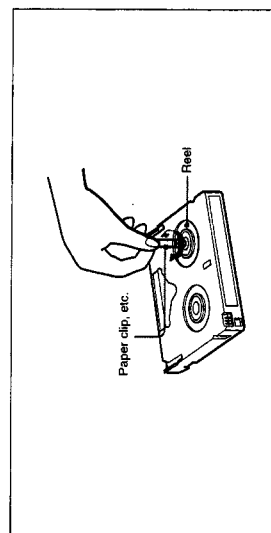

## Preventing accidental erasure

Set the REC/SAVE switch on the cassette to SAVE to prevent accidental erasure of recorded contents.

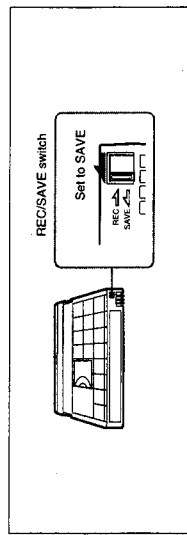


## To enable re-recording

Set the REC/SAVE switch to REC.  
When this switch is set to SAVE, the unit cannot record on the tape.

## Inserting and Ejecting Cassettes

### Inserting a cassette

This unit accepts three sizes of cassette: L (standard size), M (medium size: DVCPRO) and S (mini size). When inserting a cassette in the unit, make sure its tape window faces upward as shown in the following figure.

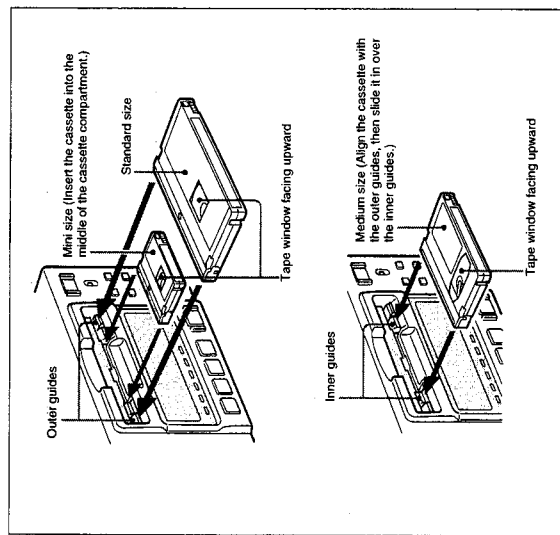


### No double insertion of cassettes

When you insert a cassette, the orange lock-out plate appears in the cassette compartment to prevent double insertion.

### Ejecting a cassette

Press the EJECT button.

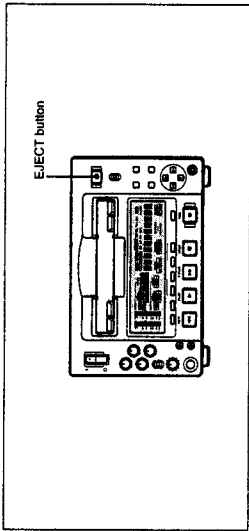

## Recording

This section describes the necessary settings and operations to perform recording on this unit. The same settings and operations apply whether you are using the unit as part of an editing system, for dubbing, or as a stand-alone recorder.

For the necessary connections for recording and the settings not covered in this section, see Chapter 5 "Connections and Settings."


For dubbing of SDTI (QSDI) format signals, use the AUTO FUNCTION menu item SDTI DUBBING (see page 71). For details, see "Digitally Dubbing Signals in DVCAM Format" on page 51.

#### NOTE

When using the unit as a recorder, the optional boards corresponding to the input signal formats to be used are required.

For details about the optional boards, see "Optional Accessories" (page 7).

## Settings for Recording

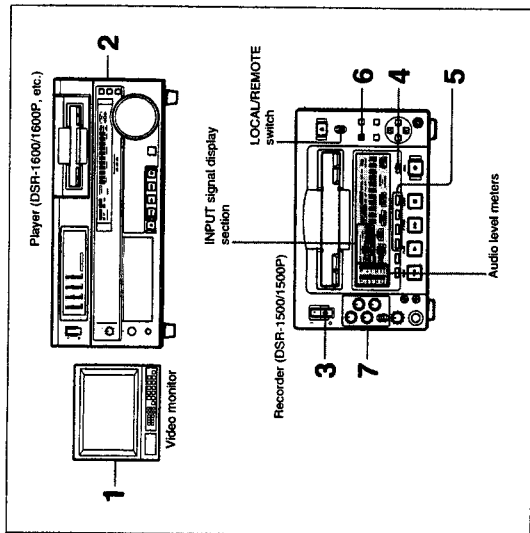

When controlling this unit from an editing control unit connected to the REMOTE connector, see "LOCAL/REMOTE switch" on page 9 and the description of the REMOTE I/F menu item on page 67.



- 1 Power on the video monitor, then set its input switches according to the signals input from this unit.
- 2 Set up the player to play back a tape.
- 3 For details, refer to the operating instructions for the player.
- 4 Power on this unit by pressing on the I side of the POWER switch.
- 5 When the REMOTE indicator is off (the external editing control unit is not used), use the COUNTER SELECT button to select the type of time data to be used.

Each press of this button cycles through three options: COUNTER (CNT value), TC (time code), and U-BIT (user bit data). The time data type indicator for each option lights as it is selected.

Selected time data	Time data type indicator
Count value of the time counter	COUNTER
Time code	TC
User bit data	U-BIT

When the REMOTE indicator is lit, selection of the time data type is carried out at the editing control unit.

- 5 Select the formats of video and audio input signal to be recorded. Use the INPUT SELECT buttons in the video/audio input setting section to select the desired signal formats. Each selection is shown by a lit indicator in the INPUT signal display section.

Video input signal (input connector)	Corresponding INPUT SELECT button	Lit indicator in the INPUT signal display section a)
Composite signal (VIDEO IN: Y/CPST)	VIDEO	COMPOSITE in VIDEO group
Separated Y/C signal (VIDEO IN: Y/CPST and R-Y/C)	VIDEO	S VIDEO in VIDEO group
Component signal (VIDEO IN: Y/CPST, R-Y/C, and B-Y)	VIDEO	Y-R,B in VIDEO group
SDI signal (SDI/SDTI (QSDD) IN)	VIDEO	SDI in VIDEO group
SDTI (QSDD) signal (SDI/SDTI (QSDD) IN)	SDTI/LINK	SDTI: both SDTI video and audio input signals are recorded. V/SDTI: only SDTI video input signal is recorded.
i.LINK-compatible digital video signal in DV format (DV IN/OUT)	SDTI/LINK	i.LINK
Internal test video signal	VIDEO	SG in VIDEO group

a) The indicators without the corresponding optional boards (DSBK-1501/1503/1504/1504P) installed in the unit do not light.



Audio input signal (input connector)	Corresponding INPUT SELECT button	Lit indicator in the INPUT signal display section a)
Analog signal (AUDIO IN 1/3 and AUDIO IN 2/4)	CH1 1/2 and CH2 3/4	ANALOG in AUDIO group
AES/EBU signal (AUDIO (AES/EBU) IN)	CH1 1/2 and CH2 3/4	AES/EBU in AUDIO group
SDI signal (SDI/SDTI (QSDD) IN)	CH1 1/2 and CH2 3/4	SDI in AUDIO group
SDTI (QSDD) signal (SDI/SDTI (QSDD) IN)	SDTI/LINK	SDTI
i.LINK-compatible digital audio signal in DV format (DV IN/OUT)	SDTI/LINK	i.LINK
Internal test audio signal	CH1 1/2 and CH2 3/4	SG in AUDIO group

a) The indicators without the corresponding optional boards (DSBK-1501/1503/1504/1504P) installed in the unit do not light.

#### Caution

Once you have started recording, you cannot change the input signal selection.

## 6

Select the audio mode.

Select either two-channel mode (2 CHANNEL) or four-channel mode (4 CHANNEL) with the REC MODE menu item (see page 65). The corresponding indicator lights in the REC MODE display.

Audio mode	Lit indicator in the REC MODE display
2-channel mode	2CH
4-channel mode	4CH


#### Cautions

- In the DVCAM format, there are two audio recording modes, with either two channels at 48 kHz or four channels at 32 kHz. It is not possible to select other modes (for example with four channels at 48 kHz).
- During audio editing, if a signal used in assemble or insert editing is in a different mode from the base tape, the signals will be discontinuous at the edit points, and correct editing will not be obtained. For this reason, audio editing between different modes is inhibited on this unit.
- For smooth editing operations, check the audio recording mode of the base tape beforehand.
- Once you have started recording, you cannot change the audio mode selection.
- If on a tape there is a point where the audio mode is switched, it is not possible to carry out insert editing over a section including that point.
- When, in 4-channel mode, analog audio is selected for all four channels (channels 1/2 and 3/4), the same analog audio signals are recorded on channels 1 and 3 and on channels 2 and 4, respectively.

- 7** With the VAR switch on the front panel set to REC, use the REC/PB LEVEL control knobs to adjust audio input levels. Watching the audio level meter, adjust the level so that the meter does not indicate higher values than 0 dB when the audio signal is at its maximum. When the level exceeds 0 dB, the OVER indicator lights.
- The factory-preset audio recording level is -20 dB (DSR-1500) or -18 dB (DSR-1500P). This setting can be changed using the LEVEL SELECT menu item (see page 66).

Recording Procedure

This section describes the procedure to perform recording on this unit, showing an example session in which playback signals coming from a player VCR will be recorded on the tape loaded in the unit.

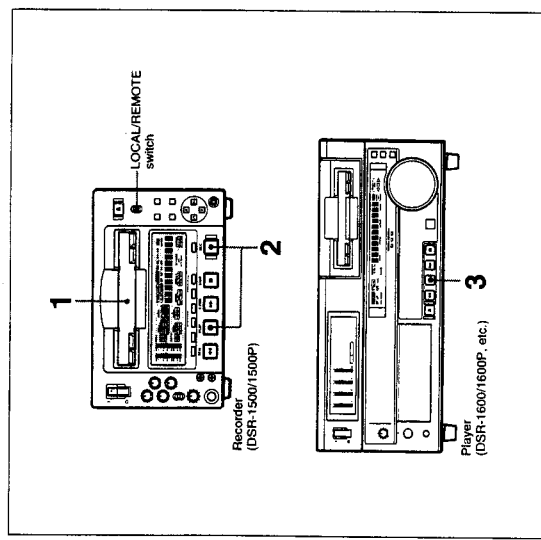

Notes

- When controlling this unit from an editing control unit connected to the REMOTE connector of this unit, set the LOCAL/REMOTE switch to REMOTE, turning the REMOTE indicator on. When not, set the switch to LOCAL, turning the indicator off.
- If you intend to use a tape recorded on this unit in a system comprising a DSR-85/85P and an ES-7 EditStation, it is recommended to record color bars on at least the first 40 seconds of the tape.
- When transferring digital signals from the DSR-85/85P to the ES-7 EditStation at four times normal speed, there must be recording for approximately 40 seconds before the IN point.

- 1** After checking the following items, hold the cassette with the tape window facing upward, then insert it into the recorder (this unit) as illustrated on page 25.

Item to check	See section
Make sure that the REC/SAVE switch of the cassette is set to REC.	"Preventing accidental erasure" on page 25
Check for tape slack.	"Checking the tape for slack" on page 24
Make sure that the "HUMID" alarm is not shown in the time counter display.	"Condensation" on page 93

The cassette is automatically drawn into the unit and the tape is wound round the head drum. The tape is stationary while the head drum rotates, and the STOP button lights.

If the REC INHI indicator lights:

It indicates that the REC/SAVE switch of the loaded cassette has been set to SAVE. Press the EJECT button in the tape transport control section to remove the cassette, then set the REC/SAVE switch to REC and reload the cassette.

Note

When ejecting and loading cassettes, make sure that the unit has been powered on.

- 2** Hold down the REC button and press the PLAY button.
- This puts the unit into recording mode, and the tape starts moving.

- 3** Press the PLAY button on the player.

The player starts the playback operation, at which point this unit starts recording the input playback signals.

Cautions

- Once you have started recording, you cannot change the audio mode selection.
- If on a tape there is a point where the audio mode is switched, it is not possible to carry out insert editing over a section including that point.





If the following indicators light when a cassette is loaded

Indicator	It means:
Cassette memory indicator	The loaded cassette contains a cassette memory.
CL indicator	There is ClipLink log data stored in the cassette memory on the loaded cassette. <b>Caution</b> With such a cassette, carrying out recording destroys the ClipLink log data.
NO EDIT indicator	The recording format of the tape is "DV," or a DVCPR0 tape is inserted. Replace the tape with one that has been recorded in DVCAM format. <b>During editing operation</b> The audio recording mode selected on this unit does not coincide with that of the tape. In this case, set the unit for the same audio recording mode as with the tape. However, if your current purpose is recording only, you can use the tape as it is. <i>For more details, see "Troubleshooting" on page 96.</i>


To perform the following operations

Operation	Do this:
Stop recording.	Press the STOP button. The unit enters stop mode, and will automatically switch to standby or mode after the time period set with the STOP TIMER menu item (see page 63) for tape protection.
Remove the cassette.	Press the EJECT button. After a few seconds, the tape is unwound from the head drum and the cassette is automatically ejected. If a CNT value is shown on the time counter display (the time data type indicator "COUNTER" is lit), the CNT value is reset.
Inhibit the unit from outputting text information (time data, operation mode indications, etc.) to the video monitor.	Set the CHARA. DISPLAY menu item (see page 60) to OFF.
Change the time period before the unit switches from stop mode to standby off mode.	Change the setting of the STOP TIMER menu item (see page 63).

## Playback

This section describes the settings and operations necessary to perform playback on this unit. The same settings and operations apply whether you are using the unit as part of an editing system, for dubbing, or as a stand-alone player VCR. For the necessary connections for playback and the settings not covered in this section, see Chapter 5 "Connections and Settings" (page 70).


### Settings for Playback

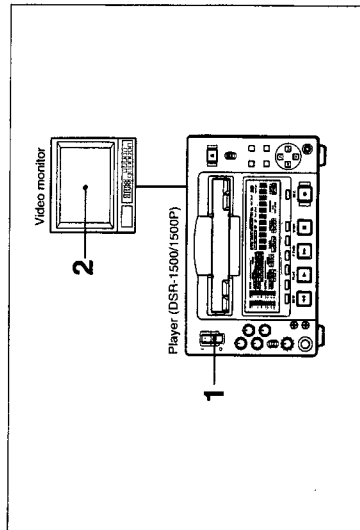

- 1 Power on this unit by pressing on the 1 side of the POWER switch.
- 2 Power on the video monitor and set its switches as shown below.

Switch	Setting
75 $\Omega$ termination switch	ON (or attach a 75 $\Omega$ terminator.)
Input switch	Set according to the type of input signal from this unit.

## Playback Procedure

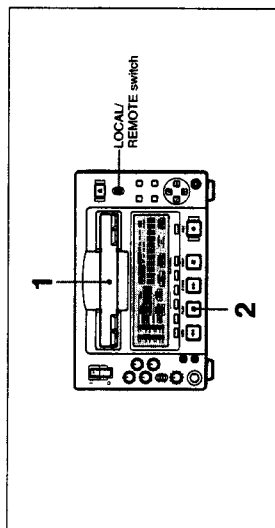

### Note

When controlling this unit from an editing control unit connected to the REMOTE connector of this unit, set the LOCAL/REMOTE switch of this unit to REMOTE, turning the REMOTE indicator on. When not, set the switch to LOCAL, turning the indicator off.

### 1 Insert a cassette.

For details of cassette insertion see page 25, and for usable cassette types see page 23.

The cassette is automatically drawn into the unit and the STOP button lights. A few seconds later, if the STOP menu item under the AUTO EE SELECT menu item (see page 59) is set to PB, a still image will appear on the monitor screen.

### 2 Press the PLAY button.

This starts the playback operation. When the tape is played back all the way to the end, the unit automatically rewinds it and then stops.

### If the following indicators light when a cassette is loaded

Indicator	It means:
Cassette memory indicator	The loaded cassette contains a cassette memory.
CL indicator	There is ClipLink log data stored in the cassette memory on the loaded cassette.
NO EDIT indicator	The tape was recorded in the DV format, or a DVCPRO tape is inserted. You cannot use it as a recording tape for editing.



## To perform the following operations

Operation	Do this:
Stop playback.	Press the STOP button. The unit enters stop mode, and will automatically switch to standby off mode after the time set with the STOP TIMER menu item (see page 63) for tape protection.
Adjust the audio playback level.	Use the PHONES control knob on the front panel (outputs from the PHONES connector on the front panel and the MONITOR connector on the rear panel are adjusted).
Play back in shuttle mode while monitoring the video. <sup>a)</sup>	To carry out a high-speed search (10 times normal speed) in forward or reverse direction, press the ▷ or ◁ button. To return to normal-speed playback, press the PLAY button.
Play back in jog mode while monitoring the video. <sup>a)</sup>	To carry out frame-by-frame playback in forward or reverse direction, press the Δ or ▽ button. When you hold down the Δ or ▽ button, playback is continued in jog mode (1/2 times normal speed) in forward or reverse direction.
Inhibit the unit from outputting text information (time data, operation mode indications, etc.) to the video monitor.	Set the CHARA. DISPLAY menu item (see page 60) to OFF.
Remove the cassette.	Press the EJECT button. If a CNT value is shown in the time counter display, the CNT value is reset.
Disable the automatic rewind function.	Set the AUTO REW menu item (see page 60) to DISABLE.
Change the time period before the unit switches from stop mode to standby off mode.	Change the setting of the STOP TIMER menu item (see page 63).

<sup>a)</sup> When the SEARCH ENABLE menu item (see page 59) is set to ENABLE.

## Repeat Playback—Automatic Cyclical Playback

Proceed as follows to perform automatic cyclical playback of recording (repeat playback) between selected start and end points.

- 1** Set the desired repeat start and end points with the REPEAT FUNCTION menu item (see page 58).  
You can set points A and B as start and end points by following the procedure described in the next section.
- 2** Set the REPEAT MODE menu item (see page 58) to ON.  
The REPEAT indicator lights.
- 3** Press the SET (YES) button to save the new setting and close the menu.
- 4** Press the PLAY button.

The unit repeats playback between the repeat start and end points set in step 1.

## Setting Points A and B for Repeat Playback

You can set the repeat playback start point (point A) and end point (point B) by using the current tape position or inputting time code values.


To perform repeat playback after setting points A and B, press the PLAY button when the REMOTE indicator is off. When the DSRM-10 Remote Control Unit is connected to the CONTROL S connector on the front panel, you can also start repeat playback by pressing its PLAY button with the REMOTE indicator of this unit off.

### Note

When performing repeat playback using points A and B as the playback start and end points, make sure that the REPEAT TOP and REPEAT END menu items (see page 58) are set to A POINT and B POINT, respectively.

## Setting the current tape position as point A or B

Proceed as follows to set the current tape position as point A or B for repeat playback.

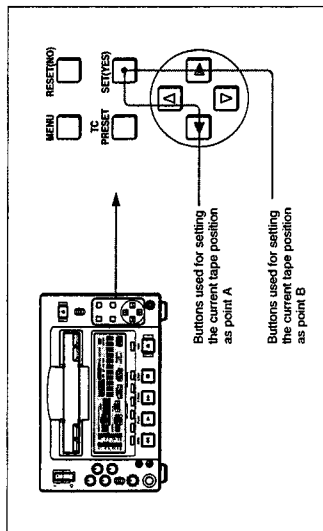

While holding down the SET (YES) button in the menu control section, press the ◀ or ▶ button. The time code value of the current tape position is set as point A or B, and a message "A set" or "B set" is displayed for 0.5 second in the time counter display.

Once set, the point A or B time code value is held in the non-volatile memory of the unit until changed. It is not lost when the unit is powered off.

### Note

When setting point A or B, you can only use a time code value. Even when COUNTER is selected with the COUNTER SELECT button, you cannot use a CNT value to set point A or B.


### To check the point A or B time code value

Press the ◀ or ▶ button in the menu control section. While the button is held down, the point A or B time code value is displayed on the monitor and in the time counter display.

If you hold down the ◀ and ▶ buttons simultaneously, the value shown is the point B time code value minus the point A time code value. If the point A time code value is greater than the point B time code value, a minus sign (-) is shown before the value.


### Inputting time code values for points A and B

Using the following procedure, you can modify the time code value for point A or B.

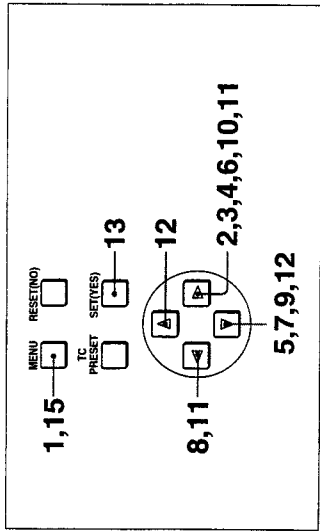


1 Press the MENU button.

The following menu display appears.

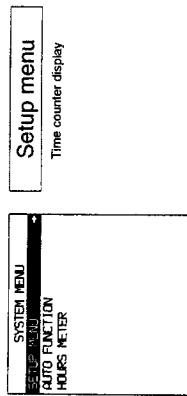


2 With "SETUP MENU" selected, press the ▸ button.

The display changes as follows.

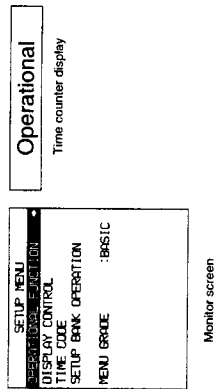


3 With "OPERATIONAL FUNCTION" selected, press the ▸ button. The display changes as follows.

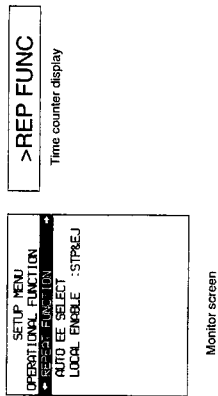


4 With "REPEAT FUNCTION" selected, press the ▸ button.

The contents of the REPEAT FUNCTION menu item are displayed.

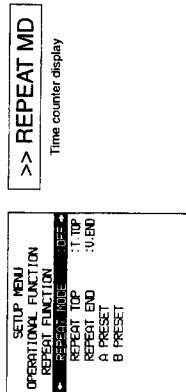


5 Press the V button to select "REPEAT TOP."

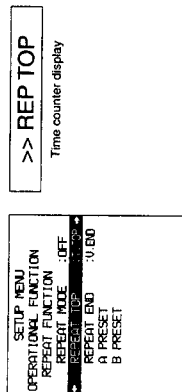




6 Press the  $\Delta$  button.

The display changes as follows.

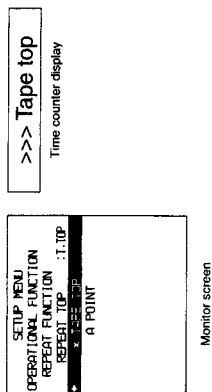


7 Press the  $\nabla$  button to select "A POINT."

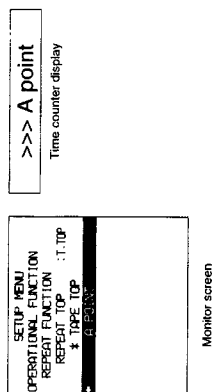


8 Press the  $\triangleleft$  button.

The display changes as follows.

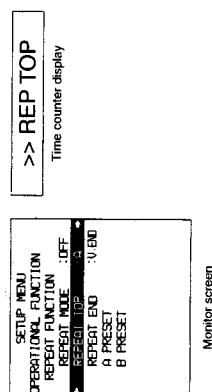


9 Press the  $\nabla$  button to select "A PRESET."

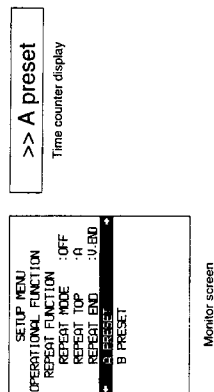

10 Press the  $\triangleright$  button.

The A PRESET MODE screen appears. The time code value of the current point A is displayed below the screen title.

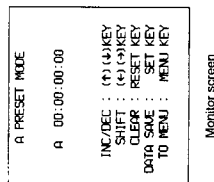

11 Use the  $\triangleleft$  or  $\triangleright$  button to select the digit in the time code value display that you want to change.

Each press of the button causes the digit to the left or right to begin flashing. Holding the button down moves the flashing digit continuously. If you want to clear the time code value, press the RESET (NO) button. The value is cleared to 00:00:00:00, and the leftmost digit begins flashing.

12 Press the  $\Delta$  or  $\nabla$  button to increment or decrement the value of the flashing digit.

Each press of the button increments or decrements the value. Holding the button down increments or decrements the value continuously. To change other digits, return to step 11.



### 13 Press the SET (YES) button to confirm the defined value.

The message "NOW SAVING..." is displayed on the monitor screen and "Saving..." is shown in the time counter display while the new setting is being saved in memory.

#### Caution

The new setting may be lost if you power off the unit during the saving operation. Wait until the saving operation is completed before powering the unit off.

#### If you want to discard the changed value

Press the MENU button instead of pressing the SET (YES) button to return to the menu display, then press the MENU button again to end the menu operation without saving the changed value into memory.

After the saving operation is completed, the monitor screen and time counter display return to the REPEAT FUNCTION setting display as shown in step 9.

### 14 To set point B, refer to steps 5 to 13. (Select "REPEAT END" in step 5, "B POINT" in step 7, and "B PRESET" in step 9.)

### 15 Press the MENU button to close the menu.

## Cuing Up to Any Desired Position Set as Point A or B

You can set any desired tape position as point A or B and cue up to the set point when required. To cue up to point A or B, holding down the ◀ or ▶ button in the menu control section, press the REW button in the tape transport control section.

For the methods of setting points A and B, see the previous section.

## Convenient Functions for Editing Operation

# 3

## Chapter

## Setting the Time Data

This unit is provided with the following functions related to time data.

- Display and reset CNT value
- Set, display, record, and play back SMPTE/EBU time code and user bit data
- Set, display, record, and play back VITC

The unit can output the time code read from the tape as an analog (LTC) signal while in normal-speed playback mode, and receive an external analog time code (LTC) signal.

#### NOTE

The unit outputs no signal from the TC OUT connector unless it is in normal-speed playback mode.

The following explains how to use these functions.

## Displaying Time Data and Operation Mode Indications

Time data and operation mode indications can be displayed on the monitor screen.

Time data can also be displayed in the time counter display on this unit.

## To view time data and operation mode indications on the monitor screen

Set the CHARA. DISPLAY menu item (see page 60) to ON (factory default setting).


The time data and the indication of the current operation mode are superimposed on the video signal that is being output from the B-Y/CPST (SUPER) connector, and can be viewed on the monitor screen.

Use the DISPLAY CONTROL menu items (see page 60) to select the information displayed and the character type and position of the indications.

When you set the SUB STATUS menu item (see page 61) to other than OFF, you can also display supplementary status information on the monitor screen such as editing mode settings and the operating mode of the internal time code generator.

For details of supplementary status information, see "Displaying Supplementary Status Information" on page 76.

The contents of the monitor screen are shown below.

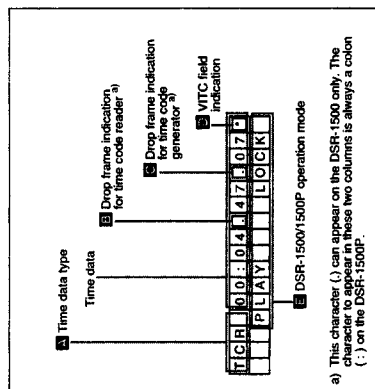

a) This character (.) can appear on the DSR-1500 only. The character to appear in these two columns is always a colon (:) on the DSR-1500P.

### A Time data type

The following time data type indications are displayed.

Indication	Description
CNT	Count value of the time counter
TOR	Time code data from time code reader (factory default setting)
UBR	User bit data from time code reader
TOR <sup>a)</sup>	Time code data from VITC reader <sup>a)</sup>
UBR <sup>a)</sup>	User bit data from VITC reader <sup>a)</sup>
TCG	Time code data from time code generator
UBG	User bit data from time code generator
T-R <sup>b)</sup>	Time code data from time code reader. The asterisk indicates an interpolation by the time code reader to make up for the time code data not correctly read from the tape.
U-R <sup>b)</sup>	User bit data from the time code reader. The asterisk indicates that last data is retained by the time code reader, as the new data has not been read correctly from the tape.

)) You can switch between TC and VTTC using the TC SELECT menu item (see page 62).

(see page 62).

“a” is displayed when data cannot be read in correctly.  
(see page 62).

**B Drop frame indication for time code reader (on PSR-1500 only)**

	Drop frame mode (factory default setting)
	Non-drop frame mode

**Drop frame indication for time code generator (for DSR-1500 only)**

..	Drop frame mode (factory default setting)
..	Non-drop frame mode


**VRTC field indication**

(blank)	Display fields 1 and 3.
*	Display fields 2 and 4.

### E DSR-1500/1500P operation mode

Display	Operation mode
CASSETTE OUT	Cassette is not loaded.
THREADING	Tape loading
UNT-READING	Tape unloading
STANDBY OFF	Standby off mode
T. RELEASE	Tape tension released
STOP	Stop mode
F. F. FWD	Fast forward mode
REW	Rewind mode
PREROLL	Preroll mode
PLAY	Playback mode (servo unlocked)
PLAY LOCK	Playback mode (servo locked)
PLAY-PAUSE	Temporary stop of playback
REC	Record mode (servo unlocked)
REC LOCK	Record mode (servo locked)
REC-PAUSE	Temporary stop of recording
EDIT	Edit mode (servo unlocked)
EDIT LOCK	Edit mode (servo locked)
Jog STILL	Still picture in Jog mode
Jog FWD	Jog mode in forward direction
Jog REV	Jog mode in reverse direction
SHUTTLE (Speed)	Shuttle mode
AUTO EDIT	Automatic editing mode
PREVIEW	Preview mode
REVIEW	Review mode

**To display the desired time data in the time counter display**

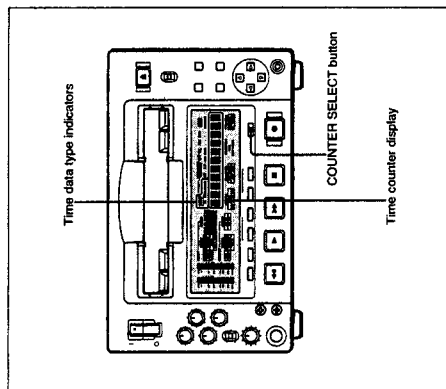

Press the COUNTER SELECT button on the front panel. Each press of this button cycles through three options: CNT value, time code, and user bit data. The time data type indicator for each option lights as it is selected.

Time data type indicator	Time data shown in the time counter display
COUNTER	CNT (count value of the time counter)
TC	Time code (when recording, the time code is generated by the internal time code generator; when playing back, the time code is read from the tape.)
U-BIT	User bit data (when recording, the user bit data is according to the most recent settings; when playing back, the user bit data is read from the tape.)

**Note**


When the REMOTE indicator in the front panel display section is lit, the COUNTER SELECT button does not operate while the tape is moving. In such cases, use the external equipment connected to the REMOTE connector on the rear panel to select the time data.

## Using the Internal Time Code Generator

You can set the initial time code value before recording the time code generated by the internal time code generator onto a tape. In addition, you can use the user bits to record such data as the date, time, scene number, reel number, or other useful information.

When an external time code generator is connected to the TTC IN connector, the internal time code generator can be locked to (synchronized with) an external time code.

**To set the initial time code value and user bit data**

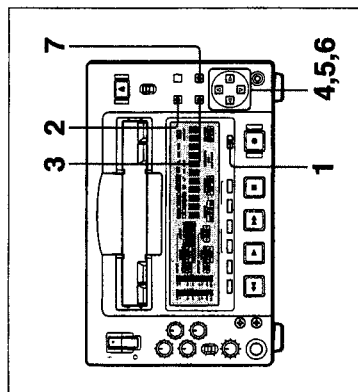

**1** Press the COUNTER SELECT button to light the time data type indicator "TC" or "U-BIT."  
**TC:** To set the initial time code value  
**U-BIT:** To set user bit data

The current time code value or user bit data is shown in the time counter display.

2 Set the TIME CODE menu items (see page 62) as shown below.

Menu Item	Setting
TC MODE	"INT PRESET"
RUN MODE	"FREE RUN" or "REC RUN"
DF MODE	Normally "ON (DF)" (for DSR-1500 only)

3 Press the TC PRESET button in the menu control section.

The current setting is shown on the monitor screen and in the time counter display on the front panel. The leftmost digit keeps flashing.  
One of the following menu screens is displayed on the monitor depending on the setting made in step 1.

TC PRESET MODE  
TCB 00:00:00:00

INC/DEC : (↑) (↓) KEY  
SHIFT : (⇐) (⇒) KEY  
CLEAR : RESET KEY  
DATA SAVE : SET KEY  
ABORT : TC PRESET KEY

LB PRESET MODE  
LBS 00:00:00:00

INC/DEC : (↑) (↓) KEY  
SHIFT : (⇐) (⇒) KEY  
CLEAR : RESET KEY  
DATA SAVE : SET KEY  
ABORT : TC PRESET KEY

Initial time code value setting screen

**Note**

If you press the TC PRESET button while CNT value is being displayed, the message "COUNTER MODE IS SELECTED" will appear on the monitor screen and "CNT mode" will appear in the time counter display on the front panel. If this happens, press the COUNTER SELECT button to light the time data type indicator "TC" or "U-BIT."

4 Use the ◀ and ▶ buttons to move the flashing digit to the value to be changed.

5 Use the Δ and ▽ buttons to change the value of the flashing digit.

Enter hexadecimal values (0 to 9, A to F) when setting user bit data.

6 Repeat steps 4 and 5 until you have set the desired values for all digits.  
To set a value of 00:00:00:00, simply press the RESET (NO) button.

7 Press the SET (YES) button.

The message "NOW SAVING..." appears on the monitor screen. "Saving..." appears in the time counter display, and the new settings are stored in memory. After this saving operation is completed, the monitor screen and the time counter display return to their usual status.

**Note**

The set data may be lost if you power off the unit while the above saving operation is in progress. Wait until the saving operation is completed before powering off.

### Advancement of internal time code generator

The internal time code generator can advance in either of two modes, which can be set with the RUN MODE menu item (see page 62).

**FREE RUN:** Advancement starts when the data saving operation is completed.

**REC RUN:** Advancement starts when recording starts and stops when recording stops.

### To set the current time as the initial time code value

In step 2 above, set the RUN MODE menu item to FREE RUN; then set the current time (format: HH:MM:SS:FF = hours: minutes:seconds:frame number) in step 3 and subsequent steps.

### Synchronizing Internal and External Time Codes

The internal time code generator can be synchronized with an external time code (LTC) input to this unit.

### To synchronize the internal time code to external time code

Input an external time code (LTC) signal to the TC IN connector, then set the TC MODE menu item (see page 62) to EXT REGEN.

The internal time code generator locks onto the external time code and starts advancing. Once the internal time code generator has been synchronized in this way, you can disconnect the external time code input and this unit will maintain the synchronized time code.

**Note**

When the selected input mode is "SDTI" or "i.LINK" (the SDTI or i.LINK indicator is lit in the INPUT signal display section), setting the TC MODE menu item to EXT REGEN causes the internal time code generator to

automatically synchronize with the external time code input to the unit via the SDTI or i.LINK interface.

Once an external time code signal has been input, the internal time code advancement mode and frame count mode are automatically set as follows:

**Advancement mode:** FREE RUN

**Frame count mode:** Same as external time code (drop frame or non-drop frame)

### To confirm external synchronization

Press the STOP button to put the unit into stop mode, then press the REC button.


Look at the time counter display and check that the time code value displayed there matches the external time code value.

### Rerecording the Time Code—TC Insert Function

The TC insert function makes it possible to use the internal time code generator to rewrite time code or user bits when the time code recorded on a tape is discontinuous. You can start recording time code from an initial value which can be set freely (see page 45).

**Notes**

- Use a tape which is recorded in the DVCAM format. (You cannot use the TC insert function with a tape recorded in DV format.)
- The time code recording starts from the current tape position. Cue the tape up beforehand to the required start position.
- If you use a tape on which ClipLink log data is recorded, the ClipLink log data will be lost.

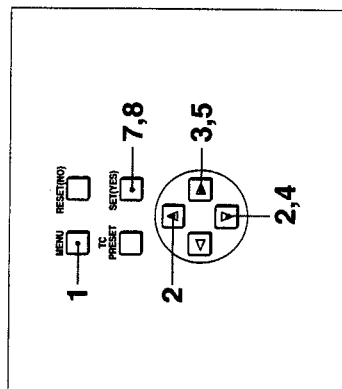

1 Press the MENU button in the menu control section.


SYSTEM MENU  
SETUP MENU  
AUTO FUNCTION  
HOURS METER

Monitor screen

Setup menu  
Time counter display




2 Press the Δ or ▽ button to select "AUTO FUNCTION."

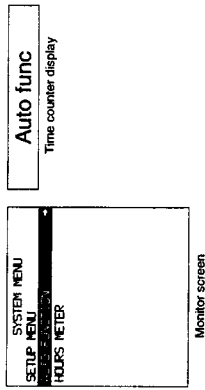


3 Press the ▷ button.

This displays the items in the level 1 of the auto mode execution menu.

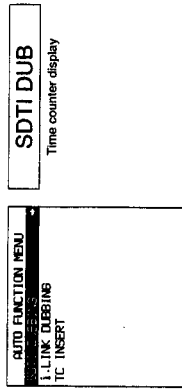


4 Press the ▽ button to select "TC INSERT."

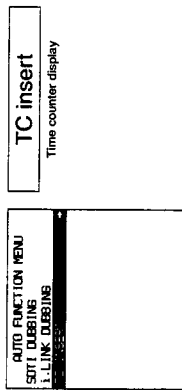


5 Press the ▷ button.

The following message appears.

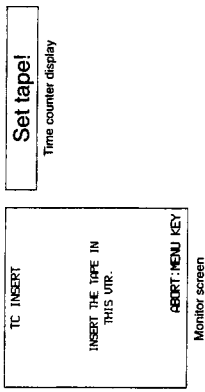

6 Insert the cassette.


A message to confirm the TC insert operation appears.

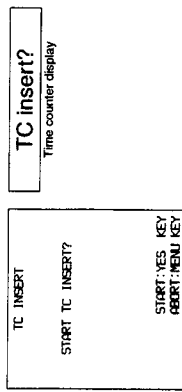

To cancel the TC insert operation Press the MENU button.

7 Press the SET (YES) button.

Time code recording starts from the current tape position.

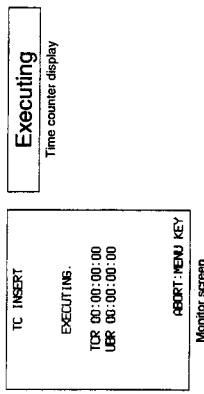

When the recording ends, the message "TC INSERT COMPLETED, PUSH THE YES BUTTON." appears on the monitor screen and "Completed" appears in the time counter display.

8 Press the SET (YES) button to exit the menu.



## High-Speed and Low-Speed Search—Quickly and Accurately Determining Editing Points

Use the search function to easily locate the desired scene and to quickly and accurately determine edit points.

When F. FWD/REW under the AUTO EE SELECT menu item (see page 59) is set to PB (factory default setting), you can use the F FWD and REW buttons on this unit or external equipment for high-speed search.

### Search Operations via External Equipment

You can control the unit in the following operation modes from an editing control unit (ES-7, PVE-500, etc.):

- connected to the REMOTE connector on the rear panel, a SIRCS-compatible remote control unit such as the DSRM-10 connected to the CONTROL S connector (on the front panel), or control equipment connected to the DV IN/OUT connector.

**Shuttle:** Use this mode to view color video playback at speeds ranging from 0 to 60 times normal speed in both directions.

#### Note

When controlling the unit from the DSRM-10 for shuttle-mode search, the maximum search speed is 16 times normal speed in both directions.

**Jog:** Use this mode for low-speed search and frame-by-frame search.

**Digital slow:** Use this mode for noise-free color video playback at speeds ranging from 0 to  $1/2$  times normal speed in both directions.

**Still:** Use this mode to view a still picture of any field.

**Jog audio:** Use this mode to monitor the audio at speeds ranging from 1 to  $1/30$  times normal speed in both directions.

#### Note

When controlling this unit from external equipment, set the REMOTE I/F menu item (see page 67) and the LOCAL/REMOTE switch so that the remote mode indicators in the display section are on or off as follows.

- When using an editing control unit connected to the REMOTE connector:

Switch/menu item	Setting
LOCAL/REMOTE switch	REMOTE (REMOTE indicator lights.)
REMOTE I/F menu item	9PIN (9P indicator lights.)

- When using a SIRCS-compatible remote control unit connected to the CONTROL S connector:

Switch/menu item	Setting
LOCAL/REMOTE switch	LOCAL
REMOTE I/F menu item	—

- When using equipment connected to the DV IN/OUT connector:

Switch/menu item	Setting
LOCAL/REMOTE switch	REMOTE (REMOTE indicator lights.)
REMOTE I/F menu item	iLINK (iLINK indicator lights.)

For description on how to carry out search operations via external equipment, see the operating instructions for the equipment.

## Digitally Dubbing Signals in DVCAM Format

In addition to straightforward tape dubbing, you can also use this unit to dub automatically from the beginning of the tape to the end through the SDTI (QSDI) or iLINK interface.

- To use the SDTI (QSDI) interface, the optional DSBK-1501 board is required.
- To use the iLINK interface, the optional DSBK-1503 board is required.

When a tape recorded on a DSR-1/1P Digital Videocassette Recorder or DSR-130/130P Digital Camcorder is dubbed, the ClipLink log data held in the cassette memory is also copied.

#### Notes

- Use a tape recorded in the DVCAM format. A tape recorded in DV format cannot be used as a source tape for dubbing through the SDTI (QSDI) or iLINK interface.
- Regardless of the audio recording mode setting of this unit, dubbing is performed with the original audio recording mode unchanged (two-channel/48 kHz mode or four-channel/32 kHz mode).
- Approximately the last 2 minutes of the tape may not be copied because of differences in tape lengths. (If an index picture is recorded in this portion, it may also not be copied.)
- A continuous recorded section of approximately 5 seconds is required before the recording start point. It is recommended to record beforehand color bars or a similar signal at the start point of the source tape to be dubbed on this unit.

### Connections for dubbing via SDTI (QSDI) interface


To carry out dubbing through the SDTI (QSDI) interface, connect the REMOTE and SDTI (QSDI) IN/OUT connectors on this unit to those on the DSR-85/83P/80/80P/60/60P/70/70P/2000/2000P/1800P/1800P/1600P/1600P/1500/1500P.

For details of the connections and switch settings, see "Connections for SDTI (QSDI) Dubbing" on page 89.


### Connections for dubbing via iLINK interface

To carry out dubbing through the iLINK interface, connect the DV IN/OUT connectors on this unit and the player.

Use the following procedure.

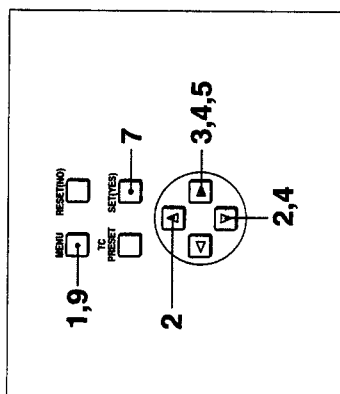


- Press the MENU button in the menu control section.

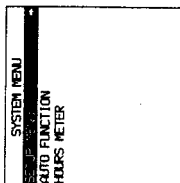

Setup menu  
Time counter display

- Press the  $\Delta$  or  $\nabla$  button to select "AUTO FUNCTION."

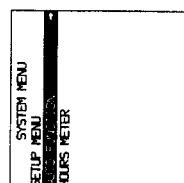

Auto func  
Time counter display

Monitor screen




3 Press the  $\triangleright$  button.

This displays the items on level 1 of the auto mode execution menu.




4 Press the  $\triangleright$  button to display the menu level 2 for the item "SDTI DUBBING," and select the data to be dubbed with the  $\nabla$  button.

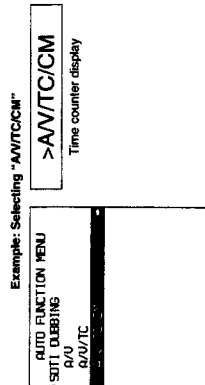

5 Press the  $\triangleright$  button.

The following message appears.

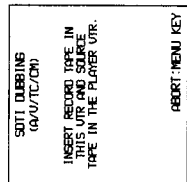


Set tape!

Time counter display

6 Insert the source tape in the player, and the recording tape in this unit.

A message to confirm the dubbing operation appears.

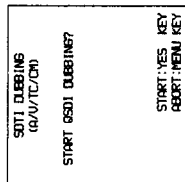

Start dub?


Time counter display

To cancel the dubbing operation

Press the MENU button.

7 Press the SET (YES) button.

The tape is automatically wound back to the beginning, and dubbing starts.

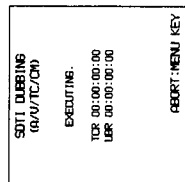

Executing

Time counter display

To end the dubbing operation while it is in progress


Press the STOP button.

When the dubbing is completed, message "COMPLETED" appears on the monitor screen and "COMPLETED" in the time counter display. The source tape and recording tape are both automatically rewound to the beginning, and the cassettes ejected. When the cassette is ejected, this unit returns to the state in step 5.

8 To continue by dubbing another tape, repeat steps 6 and 7.

9 When the dubbing is completed, press the MENU button to exit the menu.

If the following message appears in step 6 for an AV/TC/CM dubbing operation

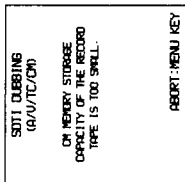


CM capacity!

Time counter display

When carrying out AV/TC/CM dubbing, if you insert the cassettes in step 6, the cassette memory capacity of the cassettes inserted in both this unit and the player are checked automatically. If the cassette memory capacity of the source tape is larger than that of the recording tape, the above message appears. In this case, replace the recording tape by a tape with a larger cassette memory capacity.

If the following message appears in step 7 for an AV/TC/CM dubbing operation

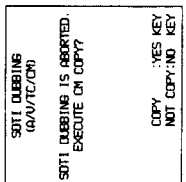

Copy CM?

Time counter display

When carrying out AV/TC/CM dubbing, if you press the STOP button to stop dubbing in step 7, or if dubbing stops because the source tape is longer than the recording tape, the above message appears to confirm whether or not to copy the contents of the cassette memory.

To copy the contents of the cassette memory, press the SET (YES) button. If you do not wish to copy the contents of the cassette memory, press the RESET (NO) button. If you press the RESET (NO) button, however, the contents of the cassette memory may not agree with the material recorded on the tape.



# 4

## Menu Settings | Chapter

### Menu Organization

As shown in the following figure, the menu system consists of four levels and is functionally divided into three subsystems: the setup menu, the auto mode (AUTO FUNCTION) execution menu and the digital hours meter display menu.

This chapter mainly describes the setup menu, showing its contents and how to operate it.

*For details of the AUTO FUNCTION menu, see "Digitally Dubbing Signals in DVCAM Format" on page 51 and "Rerecording the Time Code—TC Insert Function" on page 47.*

*For details of the digital hours meter display, see "Regular Checks" on page 93.*



The items of the setup menu are divided into several functional groups on level 1, and except for the MENU GRADE item the settings themselves are made on level 2 or level 3.

Also, the menu items are divided into two categories according to how frequently they are accessed: the "basic" items, to which frequent access is normally required, and the "enhanced" items, which are less frequently used. In the following figure, the items shown in boldface are basic items, and the other items are enhanced items.

The menu settings are saved in non-volatile memory, which means they are not erased when you power off the unit after executing the setting operation.



Menu organization

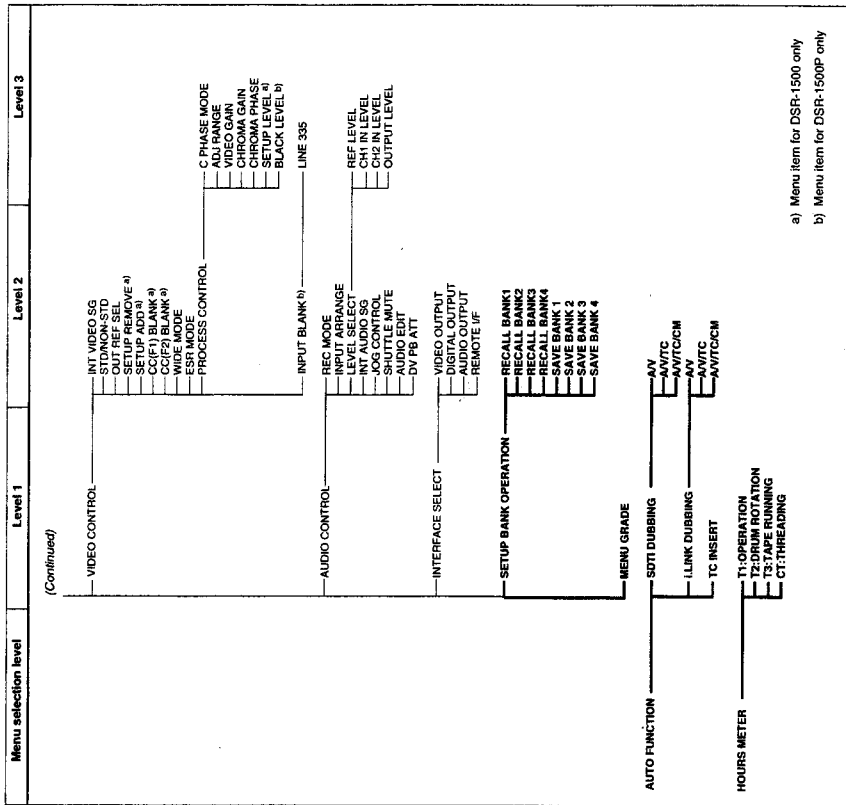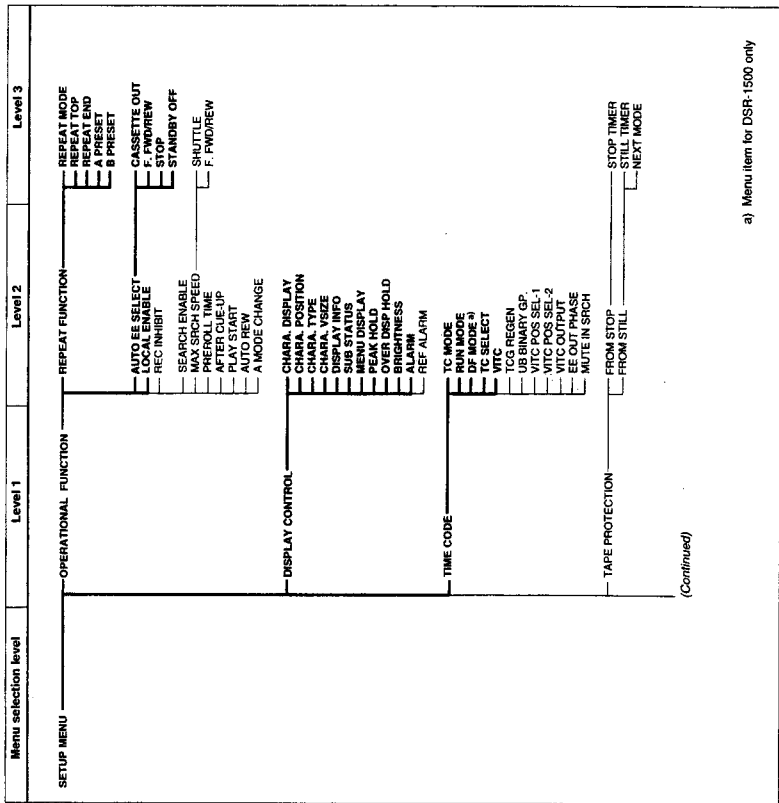

## Menu Contents

### Setup Menu

The purpose and settings of the setup menu items are described below.

#### Indications of menu items and settings

- In the table below entitled "Menu contents," the indication of each menu item or setting on the monitor screen is shown first, then the indication of the same item or setting in the time counter display of this unit is shown in square brackets ( ).

#### Examples:

Indication on monitor screen	Indication in time counter display
OPERATIONAL FUNCTION [Operational]	[Operational]
CASSETTE OUT	[>> Cass. out]
*EE	[>>> EE]

- Settings preceded by an asterisk (such as \*EE) are factory default settings.
- In the time counter display, one to three ">" symbols may precede item or setting indications depending on the current menu level. Larger numbers of ">" symbols indicate lower menu levels.

### Menu contents

OPERATIONAL FUNCTION [Operational]: Operation settings		Description of settings
REPEAT FUNCTION [> REP FUNC]: Make settings for repeat playback mode.	REPEAT MODE [>> REPEAT MD]	*OFF [>>> OFF]: Do not put the unit into repeat playback mode. ON [ON]: Put the unit into repeat playback mode. ON [FREEZE] [>>> FREEZE]: Put the unit into freeze playback mode. In this case, while the unit is cueing up to the repeat start point, the freeze picture of the repeat end point is displayed.
	REPEAT TOP [>> REP TOP]: Determine whether the repeat start point is the beginning of tape or point A.	*TAPE TOP [>>> Tape top]: The repeat start point is the beginning of tape. A POINT [>>> A point]: The repeat start point is point A as set by the user.
	REPEAT END [>> REP END]: Determine whether the repeat end point is the end of the video recorded portion, the end of the tape, or point B.	*VIDEO END [>>> VD end]: The repeat end point is the end of the video recorded portion. TAPE END [>>> Tape end]: The repeat end point is the end of the tape. B POINT [>>> B point]: The repeat end point is point B as set by the user.
	A PRESET [>> A preset]: Specify a time code value to be used as the setting of point A. B PRESET [>> B preset]: Specify a time code value to be used as the setting of point B.	For details, see "Setting Points A and B for Repeat Playback" on page 36. For details, see "Setting Points A and B for Repeat Playback" on page 36.



OPERATIONAL FUNCTION [Operational]: Operation settings		Description of settings
AUTO EE SELECT [> Auto EE]: Determine whether the unit enters EE mode or PB mode when the cassette has signals from other equipment input. When this unit is used as the recorder for cut editing, it is possible to output the input audio and video signals to the monitor. This enables editing operation to be carried out using a single monitor.	CASSETTE OUT [>> Cass. out]: Operations when the cassette has been ejected	*EE [>>> EE]: Output video and audio signals received from other equipment. PB [>>> PB]: Mute video and audio signals.
	F. FWD/REW [>> F. FWD/REW]: Operations when in fast forward or rewind mode	EE [>>> EE]: Output video and audio signals received from other equipment. *PB [>>> PB]: The unit enters playback mode and outputs a playback video signal. Audio signals are muted.
	STOP [>> STOP]: Operations when in stop mode	EE [>>> EE]: Output video and audio signals received from other equipment. *PB [>>> PB]: The unit enters playback mode and outputs a still picture.
	STANDBY OFF [>> STBY OFF]: Operations when in standby off mode	EE [>>> EE]: Output video and audio signals received from other equipment. *PB [>>> PB]: The unit enters playback mode and outputs a still picture.
LOCAL ENABLE [> Local ENA]: Select which of the tape transport control buttons (EJECT, REW, PLAY, F. FWD, STOP, and REC) operate when the LOCAL/REMOTE switch is set to "REMOTE."		ALL DISABLE [>> All Dis]: All of the tape transport control buttons are disabled. *STOP & EJECT [>> STOP&EJ]: Only the STOP and EJECT buttons are enabled. ALL ENABLE [>> All ENA]: All of the tape transport control buttons are enabled, and settings such as preroll time change or time data display selection are effective.
REC INHIBIT [> REC INH]: Determine whether to prohibit recording on tape.		*OFF [>>> OFF]: Do not prohibit recording on tape. ON [>>> ON]: Prohibit recording on tape. (The REC INH indicator in the display section lights.) *DISABLE [>> DISABLE]: Do not enable. ENABLE [>> ENABLE]: Enable.
SEARCH ENABLE [> Search ENA]: Select whether to enable playback in shuttle/fog mode by the use of the arrow (Δ▽◀▶) buttons.		X60 [>>> X60]: Maximum 60 times normal speed *X32 [>>> X32]: Maximum 32 times normal speed X16 [>>> X16]: Maximum 16 times normal speed MAX [>>> MAX]: No maximum tape speed is specified. *X85 [>>> X85]: Maximum 85 times normal speed X60 [>>> X60]: Maximum 60 times normal speed X32 [>>> X32]: Maximum 32 times normal speed <b>Note</b> When this item is set to MAX, the playback video signal is muted.
PREROLL TIME [> Preroll]: Set the preroll time.		15 SEC [>> 15 sec] to 0 SEC [>> 0 sec]: The preroll time can be set in one-second increments to between 0 and 15 seconds. A preroll time of at least 5 seconds is recommended when using this unit for editing. When an editing control unit such as the PVE-500 has been connected, this setting is disabled and the setting on the editing control unit is in effect. Operations such as the preroll time setting and the time data switching operation are also performed on the editing control unit. Factory default setting: 5 SEC [>> 5 sec]
AFTER CUE-UP [> After CUE]: Select the operating mode following cue-up.		*STOP [>> STOP]: Stop mode STILL [>> STILL]: Output still pictures in search mode.





OPERATIONAL FUNCTION [Operational]: Operation settings		Description of settings
PLAY START [▶ PLAY start]: Set the timing for switching from stop mode to playback mode. In an editing system including an editing control unit such as the PVE-500, you can adjust this setting so that the delay before switching to playback mode is the same on all the decks of the editing system. It is then no longer necessary to synchronize the decks for editing, and the pre-roll time can be shortened.	16 FRAME DELAY [▶ 16 delay] to 4 FRAME DELAY [▶ 4 delay]: The larger the numerical value, the longer the delay. Factory default setting: 5 FRAME DELAY [▶ 5 delay] (for DSR-1500) or 4 FRAME DELAY [▶ 4 delay] (for DSR-1500P)	
	AUTO REW [▶ Auto REW]: Select whether to rewind the tape automatically when recording or playback reaches the end of a tape.	DISABLE [▶ DISABLE]: Do not rewind the tape automatically. *ENABLE [▶ ENABLE]: Rewind the tape automatically.
	A MODE CHANGE [▶ Aud change]: Determine whether or not to permit audio insert editing that uses a different audio recording mode (2- or 4-channel mode) from that which was used for the tape loaded in the recorder.	*OFF [▶ OFF]: Do not permit. *ON [▶ ON]: Permit.
DISPLAY CONTROL [Display]: Settings related to indications on the monitor and the unit		Description of settings
CHARA. DISPLAY [▶ Chara disp]: Determine whether or not to output text (such as time code values) from the B-Y/CPST (SUPER) connector.	CHARA. POSITION [▶ Chara pos]: Set the position of text superimposed on output from the B-Y/CPST (SUPER) connector to the monitor.	OFF [▶ OFF]: Do not output text. (In spite of this setting, pressing the MENU button causes menu text to be output.) *ON [▶ ON]: Output text. Use the $\Delta$ and $\nabla$ buttons in the menu control section to adjust the text position while watching the monitor screen. To return to level 1 of the setup menu, press the MENU button.
CHARA. TYPE [▶ Chara type]: Set the type of characters in text superimposed on output from the B-Y/CPST (SUPER) connector to the monitor.	CHARA. VSIZE [▶ Chara size]: Determine the vertical size of characters such as time code output from the B-Y/CPST (SUPER) connector for superimposed display on the monitor.	Make the following settings while watching the monitor screen. *WHITE (WITH BKGD) [▶ White]: White characters on black background BLACK (WITH BKGD) [▶ Black]: Black characters on white background WHITE/OUTLINE [▶ White/outline]: White characters with black outline BLACK/OUTLINE [▶ Black/outline]: Black characters with white outline Make the selection while watching the monitor screen. *x1 [▶ x1]: Standard size *x2 [▶ x2]: 2 times standard size
DISPLAY INFO [▶ DISP info]: Select information superimposed on output from the B-Y/CPST (SUPER) connector to the monitor.		*TIME DATA & STATUS [▶ Time&STA]: Time data and operating mode indications TIME DATA & UB [▶ Time&UB]: Time data selected using the COUNTER SELECT button, and user bit data (When user bit data is selected using the COUNTER SELECT button, user bit data and time code are shown.) TIME DATA & CNT [▶ Time&CNT]: Time data selected using the COUNTER SELECT button, and CNT value (When CNT is selected using the COUNTER SELECT button, CNT value and time code are shown.) TIME DATA & TIME [▶ Time]: Time data only REC DATE & TIME [▶ REC Date]: The time data selected with the COUNTER SELECT button is shown in the time counter display, and the date and time of recording are shown on the monitor screen.



DISPLAY CONTROL [Display]: Settings related to indications on the monitor and the unit		Description of settings
SUB STATUS [▶ Sub status]: Select supplementary status information superimposed on output from the B-Y/CPST (SUPER) connector to the monitor.		*OFF [▶ OFF]: Nothing of supplementary status information EDIT PRESET [▶ Edit pre]: Indications of the editing mode settings made from the connected editing control unit TC MODE [▶ TC mode]: Indications of the operating mode of internal time code generator REMAIN [▶ Remain]: Remaining capacity of the tape AUDIO MIXING [▶ Aud Mix]: Indications of input audio mixing ALL [▶ ALL]: All of the above-mentioned items of supplementary status information For details of supplementary status information displayed on the monitor when a setting other than OFF is selected, see "Displaying Supplementary Status Information" on page 76.
MENU DISPLAY [▶ Menu DISP]: Set the type of characters in menu text superimposed on output from the B-Y/CPST (SUPER) connector to the monitor.		Make the following settings while watching the monitor screen. *WHITE (WITH BKGD) [▶ White]: White characters on black background BLACK (WITH BKGD) [▶ Black]: Black characters on white background WHITE/OUTLINE [▶ White/outline]: White characters with black outline BLACK/OUTLINE [▶ Black/outline]: Black characters with white outline 1.5 SEC [1.5 sec] to OFF [▶ OFF]: Set the peak hold time in the range of OFF (no peak hold) to 1.5 seconds in 0.1 second steps. Factory default setting: OFF [▶ OFF]
PEAK HOLD [▶ Peak hold]: Set the peak hold time for the audio level meters.		*OFF [▶ OFF]: Do not hold the OVER indication display. ON (HOLD) [▶ ON]: Hold the OVER indication display.
OVER DISP HOLD [▶ Hold OVER]: Determine whether or not to hold the OVER indication display on the audio level meters once the indications light.		<b>Notes</b> With ON selected, once the display is held it will remain held unless you change the setting to OFF.
BRIGHTNESS [▶ Brightness]: Set the brightness of front panel indicators.		Set brightness as a percentage of the maximum. 100 % [▶ 100%] *75 % [▶ 75%] 50 % [▶ 50%]
ALARM [▶ ALARM]: Determine whether alarm messages are issued or not.		OFF [▶ OFF]: Alarm messages are not issued. *ON [▶ ON]: Alarm messages are issued.
REF ALARM [▶ REF ALARM]: Determine whether alarm messages related to reference video signal are issued or not.		*OFF [▶ OFF]: Alarm messages are not issued. *ON (LIMIT) [▶ ON (Limit)]: Alarm messages are issued only during recording mode, EE mode, and while editing. ON [▶ ON]: Alarm messages are issued.

TIME CODE [Time code]: Settings related to the time code generator	Description of settings
<b>TC MODE</b> [ > TC mode]: Determine the time code to use: internal time code using a preset initial value, regenerated internal time code (locked to time code read from tape), or external time code.	<p><b>*INT PRESET</b> [ &gt; PRESET]: Use internal time code with a preset initial value.</p> <p><b>INT REGEN</b> [ &gt; REGEN]: Use internal time code locked to time code read from tape.</p> <p><b>EXT REGEN</b> [ &gt; EXT]: Use external time code selected as follows:</p> <ul style="list-style-type: none"> <li>When TC is selected</li> <li>External time code input to the TC IN connector</li> <li>When VITC is selected</li> <li>The VITC time code present in the input video signal</li> </ul> <p><b>Note</b> When the selected input mode is SDTI or LINK (the VSDTI, SDTI, or LINK indicator is lit in the INPUT signal display section), setting this item to EXT REGEN causes the internal time code generator to automatically synchronize with the external time code input to the unit via the SDTI or LINK interface.</p>
<b>RUN MODE</b> [ > RUN mode]: Select the advancement (RUN) mode of the time code generator.	<p><b>*FREE RUN</b> [ &gt; FREE RUN]: Time code generator keeps running.</p> <p><b>REC RUN</b> [ &gt; REC RUN]: Time code generator only runs while recording.</p> <p><b>Note</b> Set to FREE RUN when carrying out editing with an editing control unit. With the REC RUN setting, editing will not be carried out correctly.</p>
(For DSR-1500 only) <b>DF MODE</b> [ > DF mode]: Select whether the time code generator and time counter operate in drop frame mode or non-drop frame mode. Normally select drop frame mode to keep in synchronization with real time. The non-drop frame mode is useful for example when using computer graphics, and working on a frame count basis.	<p><b>*ON (DF)</b> [ &gt; ON (DF)]: Drop frame mode</p> <p><b>OFF (NDF)</b> [ &gt; OFF (NDF)]: Non-drop frame mode</p>
<b>TC SELECT</b> [ > TC select]: Determine which to display in the time counter display, TC or VITC.	<b>VITC</b> [ > VITC]: Display VITC.
<b>VITC</b> [ > VITC]: Determine whether to record the internally generated time code as VITC.	<p><b>OFF</b> [ &gt; OFF]: Do not record the internally generated time code as VITC. (VITC present in the input video signal is recorded unchanged.)</p> <p><b>*ON</b> [ &gt; ON]: Record the internally generated time code as VITC.</p>
<b>TCG REGEN</b> [ > TCG regen]: Select the signal to be regenerated when the time code generator is in the regeneration mode (i.e., when the TC MODE menu item is set to INT REGEN or EXT REGEN).	<p><b>*TC &amp; UB</b> [ &gt; TC &amp; UB]: Both the time code and user bits are regenerated.</p> <p><b>TC</b> [ &gt; TC]: Only the time code is regenerated.</p> <p><b>UB</b> [ &gt; UB]: Only the user bits are regenerated.</p>
<b>UB BINARY GP</b> [ > Binary Gp.]: Select the user bit binary group flag of the time code generator.	<p><b>*000: NOT SPECIFIED</b> [ &gt; 000]: Character set not specified to ISO 646 and ISO 2022</p> <p><b>010: UNASSIGNED-1</b> [ &gt; 010]: Undefined</p> <p><b>011: UNASSIGNED-2</b> [ &gt; 011]: Undefined</p> <p><b>100: UNASSIGNED-3</b> [ &gt; 100]: Undefined</p> <p><b>101: PAGELINE</b> [ &gt; 101]: Multiplex</p> <p><b>110: UNASSIGNED-4</b> [ &gt; 110]: Undefined</p> <p><b>111: UNASSIGNED-5</b> [ &gt; 111]: Undefined</p>



TIME CODE [Time code]: Settings related to the time code generator	Description of settings
<b>VITC POS SEL-1</b> [ > VITC pos-1]: Select a line to insert the VITC in.	<p>(For DSR-1500) 20 LINE [ &gt; 20 line] to 12 LINE [ &gt; 12 line]: Select any line from 12 to 20.</p> <p>Factory default setting: 16 LINE [ &gt; 16 line]</p>
<b>Note</b> You can insert the VITC signal in two places. To insert it in two places, set both this item and also VITC POS SEL-2.	<p>(For DSR-1500P) 22 LINE [ &gt; 22 line] to 9 LINE [ &gt; 9 line]: Select any line from 9 to 22.</p> <p>Factory default setting: 19 LINE [ &gt; 19 line]</p>
<b>VITC POS SEL-2</b> [ > VITC pos-2]: Select a line to insert the VITC in.	<p>(For DSR-1500) 20 LINE [ &gt; 20 line] to 12 LINE [ &gt; 12 line]: Select any line from 12 to 20.</p> <p>Factory default setting: 18 LINE [ &gt; 18 line]</p>
<b>Note</b> You can insert the VITC signal in two places. To insert it in two places, set both this item and also VITC POS SEL-1.	<p>(For DSR-1500P) 22 LINE [ &gt; 22 line] to 9 LINE [ &gt; 9 line]: Select any line from 9 to 22.</p> <p>Factory default setting: 21 LINE [ &gt; 21 line]</p>
<b>VITC OUTPUT</b> [ > VITC out]: Select the time code to be output as VITC.	<p><b>OFF</b> [ &gt; OFF]: Do not output VITC.</p> <p><b>TC</b> [ &gt; TC]: Output TC after converting it into VITC.</p> <p><b>*VITC</b> [ &gt; VITC]: Output VITC.</p>
<b>EE OUT PHASE</b> [ > EE out]: Determine the output phase for the LTC signal output from the TC OUT connector when recording time code and in STOP REC mode (forced EE mode).	<p><b>*MUTE</b> [ &gt; mute]: Mute the output.</p> <p><b>THROUGH</b> [ &gt; through]: Output the time code input to the TC IN connector as it is. (See example configuration on page 69.)</p> <p><b>VIDEO INPUT PHASE</b> [ &gt; V input]: Output the time code with the same phase as the input video signal phase. (See example configuration on page 69.)</p> <p><b>VIDEO OUTPUT PHASE</b> [ &gt; V output]: Output the time code with the same phase as the output video signal phase. (See example configuration on page 70.)</p>
<b>MUTE IN SRCH</b> [ > Mute in SRI]: Select whether to mute the output from the TC OUT connector in search (jog/shuttle) mode.	<p><b>OFF</b> [ &gt; OFF]: Do not mute.</p> <p><b>*ON</b> [ &gt; ON]: Mute.</p>
TAPE PROTECTION [Tape protect]: Settings related to tape and video head protection	Description of settings
<b>FROM STOP</b> [ > From STOP]: Set the time to switch from stop mode to tape protection mode.	<p><b>STOP TIMER</b> [ &gt; STP timer]: Set the time to switch from stop mode to tape protection mode.</p> <p>0.5 SEC [ &gt; 0.5 sec] to 5 MIN [ &gt; 5 min]: Select time from 12 settings ranging from 0.5 second to 5 minutes in steps of 0.1 second.</p> <p>Factory default setting: 1 MIN [ &gt; 1 min]</p>
<b>FROM STILL</b> [ > From STILL]: Set the time to switch from still search mode to tape protection mode. Also select the type of tape protection mode.	<p><b>STILL TIMER</b> [ &gt; STL timer]: Set the time to switch from still search mode to tape protection mode.</p> <p>0.5 SEC [ &gt; 0.5 sec] to 5 MIN [ &gt; 5 min]: Select time from 12 settings ranging from 0.5 second to 5 minutes in steps of 0.1 second.</p> <p>Factory default setting: 1 MIN [ &gt; 1 min]</p>
<b>NEXT MODE</b> [ > Next mode]: Select the type of tape protection mode to follow still search mode when the time set with the STILL TIMER menu item elapses.	<p><b>*STEP FWD</b> [ &gt; Step]: The tape is advanced at 1/30 times normal speed for about 2 seconds.</p> <p><b>STANDBY OFF</b> [ &gt; STANDBY]: Standby off mode</p>







VIDEO CONTROL [Video]: Settings related to video control	
<b>INT VIDEO SG (&gt; Video SG):</b> Select the test signal to be output from the internal test signal generator. When SG is selected using the VIDEO button in the video/audio input setting section, the internal test signal generator outputs the selected test signal. This signal can be recorded.	<b>Description of settings</b> (For DSR-1500) *75% COLOR BARS (> 75% bars): 75% color bar signal *BLACK BURST (> BB): Black burst signal (For DSR-1500P) *100% COLOR BARS (> 100% bars): 100% color bar signal *75% COLOR BARS (> 75% bars): 75% color bar signal *BLACK BURST (> BB): Black burst signal
<b>STD/NON-STD (&gt; STD/N-STD):</b> Select the STD or NON-STD mode in accordance with the composite video or S-video input.	*FORCED STD (> STD): The STD mode is always used (forced STD mode). *FORCED NON-STD (> NON-STD): Use this setting when the input video signal is unstable (forced NON-STD mode).
<b>OUT REF SEL (&gt; Out Ref):</b> Select the reference video signal to use.	*REF VIDEO (> REF): Use the signal input to a REF VIDEO IN connector as the reference video signal. The input video signal to be edited is required to be in synchronization with the reference video signal. *INPUT VIDEO (> INPUT): Use the input video signal selected with the VIDEO button in the video/audio input setting section.
(For DSR-1500 only) <b>SETUP REMOVE (&gt; Setup rmv):</b> Determine whether or not to remove black setup (7.5 IRE) from input analog video signals when converting them into digital signals.	*OFF (> OFF): Do not remove black setup. *ON (REMOVE) (> ON): Remove black setup.
(For DSR-1500 only) <b>SETUP ADD (&gt; Setup add):</b> Determine whether or not to add black setup to analog video output signals.	*OFF (> OFF): Do not add black setup. *ON (ADD) (> ON): Add black setup.
(For DSR-1500 only) <b>CCF1) BLANK (&gt; CC1 blank):</b> Select whether to mute the closed caption signal to be superimposed on the 1st field of the output video signal.	*OFF (> OFF): Do not mute. *ON (> ON): Mute.
(For DSR-1500 only) <b>CCF2) BLANK (&gt; CC2 blank):</b> Select whether to mute the closed caption signal to be superimposed on the 2nd field of the output video signal.	*OFF (> OFF): Do not mute. *ON (> ON): Mute.
<b>WIDE MODE (&gt; Wide mode):</b> Determine whether to retain wide-screen aspect ratio information accompanying video being recorded or played back.	*AUTO (> Auto): When video being recorded or played back is accompanied by wide-screen aspect ratio information, retain the information. *OFF (> OFF): Ignore wide-screen aspect ratio information. *ON (> ON): Whenever recording or playing back video, retain wide-screen aspect ratio information.
<b>ESR MODE (&gt; ESR mode):</b> Select whether to enable the edge subcarrier reducer (ESR).	*OFF (> OFF): Do not enable. *ON (> ON): Enable. When playing back a composite signal, set this to ON.



VIDEO CONTROL [Video]: Settings related to video control	
<b>PROCESS CONTROL (&gt; Proc ctrl)</b>	<b>Description of settings</b> *UV (COMPOSITE) (>>>> Cmpst): Select this setting when observing the composite video output level using a composite vectorscope. *PB/PR (COMPONENT) (>>>> Cmpnt): Select this setting when observing the component video output level using a component vectorscope.
<b>C PHASE MODE (&gt; C Phas MD):</b> Select the phase rotation mode for chroma phase control. The effect of this setting applies to the output levels of all of the composite video, S-video, SDI and component video signals.	*ADJ RANGE (> Adj range): Select the variable range of the VIDEO and CHROMA gains. *3 to +3 (dB) (>>> -3/+3): -3 dB to +3 dB *WIDE (>>> wide): -∞ to +3 dB
<b>VIDEO GAIN (&gt; V gain):</b> Adjust the video output level.	000 (>>> 000) to 3FF (>>> 3FF) Factory default setting: 200H
<b>CHROMA GAIN (&gt; C gain):</b> Adjust the chroma output level.	000 (>>> 000) to 3FF (>>> 3FF) Factory default setting: 200H
<b>CHROMA PHASE (&gt; C Phas):</b> Adjust the chroma phase.	00 (>>> 00) to FF (>>> FF) Factory default setting: 80H
(For DSR-1500 only) <b>SETUP LEVEL (&gt; Setup lev):</b> Adjust the black setup level.	000 (>>> 000) to 3FF (>>> 3FF) Factory default setting: 200H
(For DSR-1500P only) <b>BLACK LEVEL (&gt; Black lev):</b> Adjust the black level.	000 (>>> 000) to 3FF (>>> 3FF) Factory default setting: 200H
(For DSR-1500P only) <b>INPUT BLANK (&gt; Input blk)</b>	*LINE 335 (>> Line 335): Switch blanking on or off for the 335th line of the input video signal. *BLANK (>>> blank): Blank. *THROUGH (>>> through): Do not blank.
AUDIO CONTROL [Audio]: Settings related to audio control	
<b>REC MODE (&gt; REC mode):</b> Select the audio recording mode.	<b>Description of settings</b> *2 CHANNEL (48kHz) (>> 2 ch): 2-channel, 48-kHz mode *4 CHANNEL (32kHz) (>> 4 ch): 4-channel, 32-kHz mode

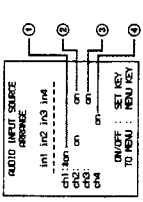AUDIO CONTROL [Audio]: Settings related to audio control	
<b>INPUT ARRANGE</b> [> Input arrg]: Make settings for input audio mixing.	<p><b>NOISE</b></p> <p>When, in 4-channel mode, analog audio is selected for all four channels (channels 1/2 and 3/4), the same analog audio signals are recorded on channels 1 and 3 and on channels 2 and 4, respectively. That is, the analog signal recorded on channel 1 is also recorded on channel 3 and the analog signal recorded on channel 2 is also recorded on channel 4. You can adjust the audio level on each of the four channels separately using the REC/PB LEVEL control knobs with the VAR switch set to REC.</p>  <p>① Input audio channel 1 ("in1") is recorded on audio channel 1 ("ch1") on tape.</p> <p>② Input audio channels 2 and 4 ("in2" and "in4") are recorded mixed on audio channel 2 ("ch2") on tape.</p> <p>③ Input audio channel 3 ("in3") is recorded on audio channel 3 ("ch3") on tape.</p> <p>④ Input audio channel 4 ("in4") is recorded on audio channel 4 ("ch4") on tape.</p>
<b>LEVEL SELECT</b> [> Level Sel]	
<b>REF LEVEL</b> [> REF Level]: Select the audio reference level (headroom) for recording on tape.	
<b>CH1 IN LEVEL</b> [> CH1 Input]: Select the audio level setting according to the audio level of the signal input to the AUDIO IN 1/3 connector.	
<b>CH2 IN LEVEL</b> [> CH2 Input]: Select the audio level setting according to the audio level of the signal input to the AUDIO IN 2/4 connector.	
<b>OUTPUT LEVEL</b> [> Out Level]: Select the analog audio output reference level.	
<b>INT AUDIO SG</b> [> Audio SG]: Select the operation of the internal audio test signal generator.	<p><b>SILENCE</b> [&gt;&gt; silence]: Silent signal</p> <p>*1kHz SINE [&gt;&gt; 1kHz]: 1-kHz, -20 dB FS (for DSR-1500) or -18 dB FS (for DSR-1500P) sine wave signal</p> <p>When you select SG (audio test signal) as the audio input in the video/audio input setting section on the front panel, the audio test signal generated by the internal audio test signal generator is input.</p> <p><b>OFF</b> [&gt;&gt; OFF]: Do not adjust the audio playback speed.</p> <p>*ON [&gt;&gt; ON]: Adjust the audio playback speed.</p> <p>*OFF [&gt;&gt; OFF]: Not muted.</p> <p><b>CUEUP or PREROLL</b> [&gt;&gt; CUEUP]: Muted during cue-up or pre-roll operations.</p> <p><b>FULL</b> [&gt;&gt; FULL]: Muted in shuttle mode.</p>
<b>JOG CONTROL</b> [> Jog ctrl]: Select whether to adjust the audio playback speed during slow playback.	
<b>SHUTTLE MUTE</b> [> Shuttle mute]: Set the audio muting conditions during shuttle playback.	

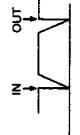AUDIO CONTROL [Audio]: Settings related to audio control	Description of settings
<b>AUDIO EDIT</b> [> Audio edit]: Specify the type of editing for audio signals.	<p>*CUT EDIT [&gt;&gt; Cut edit]: Cut editing (Discontinuity in audio signal may result at the editing point, causing noise during playback.)</p> <p>*FADE IN/OUT [&gt;&gt; Fade]: Fade in and fade out</p> 
<b>DV PB ATT</b> [> DV PB ATT]: When playing back a tape recorded in consumer DV format, select whether to attenuate the audio output level.	<p><b>OFF</b> [&gt;&gt; OFF]: Do not attenuate.</p> <p>*ON [&gt;&gt; ON]: Attenuate.</p>
INTERFACE SELECT [Interface]: Settings related to external interfaces	Description of settings
<b>VIDEO OUTPUT</b> [> Video Out]: Select the format of analog video signals to be output from the three VIDEO OUT connectors (Y/CPST, R-Y/CPST, and B-Y/CPST (SUPER)).	<p>*COMPOSITE [&gt;&gt; Composite]: Composite video signals</p> <p>S-VIDEO [&gt;&gt; S-Video]: S-video (separated Y and C) and composite video signals</p> <p>Y-R, B [&gt;&gt; Y-R, B]: Y, R-Y and B-Y component video signals</p>
<b>Note</b> When this menu item is set to Y-R, B, the B-Y/CPST (SUPER) connector outputs the B-Y signal. In this case, changing the setting of an internal switch allows the text data for superimposition on the monitor screen to be output from the right-hand REF VIDEO IN connector (marked 4*). For more information about this, consult your Sony dealer.	
<b>DIGITAL OUTPUT</b> [> Digit Out]: Select the format of signals to be output from the SDI/SDTI (QSDI) OUT1/OUT2 connectors (optional DSBK-1501 board required).	<p>*SDI [&gt;&gt; SDI]: SDI format</p> <p>SDTI [&gt;&gt; SDTI]: SDTI (QSDI) format</p>
<b>AUDIO OUTPUT</b> [> Audio Out]: Select the channels for audio output from the AUDIO OUT 1/3 and 2/4 connectors.	<p>*1/2 CH [&gt;&gt; 1/2CH]: Output channel 1 to the AUDIO OUT 1/3 connector and channel 2 to the AUDIO OUT 2/4 connector.</p> <p>3/4 CH [&gt;&gt; 3/4CH]: Output channel 3 to the AUDIO OUT 1/3 connector and channel 4 to the AUDIO OUT 2/4 connector.</p>
<b>REMOTE IF</b> [> Remote IF]: When remote-controlling this unit with the LOCAL/REMOTE switch set to REMOTE, select either the REMOTE connector or DV IN/OUT connector (optional DSBK-1501 board required) for connecting a remote control unit.	<p>*RPM [&gt;&gt; RPM]: Remote-control via the REMOTE connector.</p> <p>LINK [&gt;&gt; LINK]: Remote-control via the DV IN/OUT connector.</p>
SETUP BANK OPERATION [Setup Bank]: Settings related to menu bank operations	Description of settings
<b>RECALL BANK1</b> [> Recall 1]: Recall menu settings from menu bank 1.	<p><b>Description of settings</b></p> <p>(1) Select the bank you want to recall, then press the &gt; button.</p> <p>Message "RECALL OK?" appears.</p> <p>(2) To recall, press the SET (YES) button.</p> <p>To quit recalling, press the RESET (NO) button.</p>
<b>RECALL BANK2</b> [> Recall 2]: Recall menu settings from menu bank 2.	
<b>RECALL BANK3</b> [> Recall 3]: Recall menu settings from menu bank 3.	
<b>RECALL BANK4</b> [> Recall 4]: Recall menu settings from menu bank 4.	

SETUP BANK OPERATION [Setup Bank]: Settings related to menu bank operations		Description of settings
SAVE BANK 1 [> Save 1]: Save current menu settings to menu bank 1.		(1) Select the bank you want to save, then press the [>] button. Message "SAVE OK?" appears. (2) To save, press the SET (YES) button. To quit saving, press the RESET (NO) button.
SAVE BANK 2 [> Save 2]: Save current menu settings to menu bank 2.		
SAVE BANK 3 [> Save 3]: Save current menu settings to menu bank 3.		
SAVE BANK 4 [> Save 4]: Save current menu settings to menu bank 4.		
<b>Menu banks</b> This unit allows four different complete sets of menu settings to be saved in what are termed "menu banks" numbered 1 to 4. Saved sets of menu settings can be recalled for use as required.		
MENU GRADE [Menu grade]: Selection of menu items to be displayed		Description of settings
Determine whether to display basic items only or both basic and enhanced items on the monitor screen and in the time counter display when using the menu.		<b>*BASIC [&gt; Basic]:</b> Display basic items only. <b>ENHANCED [&gt; Enhanced]:</b> Display both basic and enhanced items.



## EE OUT PHASE settings for time code output


Use the following as reference information when setting the EE OUT PHASE menu item (see page 63).

### THROUGH mode

In this mode, the LTC signal is output with the phase synchronized with the input time code signal. This mode is appropriate when recording signals from multiple devices on a number of VCRs.

When the camcorder is in genlock mode, the time code precision is  $\pm 0$  frames. When the camcorder is not in genlock mode, it is  $\pm 1$  frame.

**Note**  
The optional boards (see page 7) corresponding to the input signal formats to be used are required.

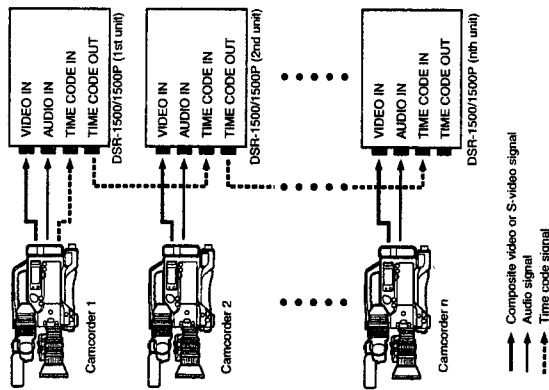

## VIDEO INPUT PHASE mode


The time code output signal is synchronized with the input video signal.

This mode is appropriate when the output from a single device is recorded on a number of VCRs. The connections are loop-through connections.

In this mode, the same time code is recorded on all of the VCRs 1 to n.

### Note


The optional boards (see page 7) corresponding to the input signal formats to be used are required.

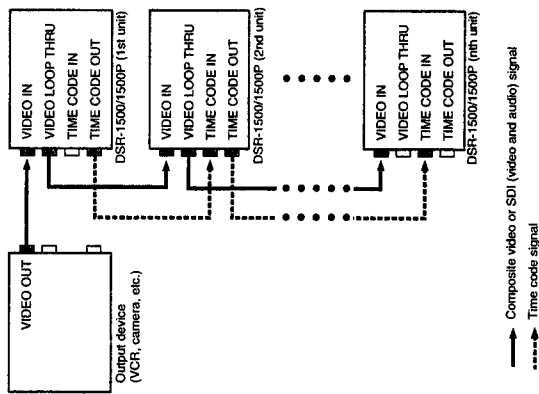

VIDEO OUTPUT PHASE mode

The time code output signal is synchronized with the output video signal.  
This mode is appropriate when outputting signals from a single device to a number of VCRs using separate cables for video, audio, and time code.  
In this mode, the same time code is recorded on all of the VCRs 1 to n.

**Note**  
The optional boards (see page 7) corresponding to the input signal formats to be used are required.

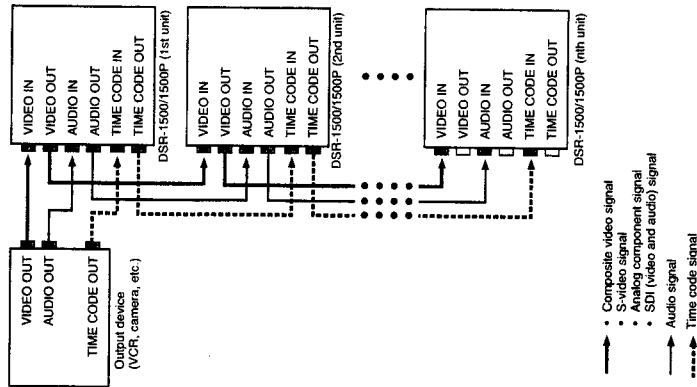

Auto Mode (AUTO FUNCTION) Execution Menu

The following table shows the purpose and function of the items in the auto mode execution menu.

For details of the use of individual items, see "Digitally Dubbing Signals in DVCAM Format" on page 51 and "Rerecording the Time Code—TC Insert Function" on page 47.

Menu contents

SDTI DUBBING [SDTI DUB]: Selection of data for SDTI dubbing	Settings
For dubbing through the SDTI (QSDF) interface, select data that the dubbing applies to.	AV [> AVI]: Dub the audio and video. AV/TC [> AV/TC]: Dub the audio, video, and time code. AV/TC/CM [> AV/TC/CM]: Dub the audio, video, time code, and cassette memory contents. <b>Note</b> When AVI is selected, the time code recorded follows the setting of the TIME CODE menu items (see page 62) in the setup menu.
i.LINK DUBBING [i.LINK DUB]: Selection of data for i.LINK dubbing	Settings
For dubbing through the i.LINK interface, select data that the dubbing applies to.	AV [> AVI]: Dub the audio and video. AV/TC [> AV/TC]: Dub the audio, video, and time code. AV/TC/CM [> AV/TC/CM]: Dub the audio, video, time code, and cassette memory contents. <b>Note</b> When AVI is selected, the time code recorded follows the setting of the TIME CODE menu items (see page 62) in the setup menu.
TC INSERT [TC insert]: Time code rewriting	Settings
Rewrite the time code from an initial value which can be set freely.	—

## Changing Menu Settings

This section explains how to change menu settings.


### Buttons Used to Change Settings

Use the following buttons in the menu control section to change the menu settings.


Menu control buttons	Functions
MENU button	<ul style="list-style-type: none"><li>Opens the menu and launches menu control mode.</li><li>Closes the menu and exits menu control mode.</li></ul>
Δ and ▽ buttons	These buttons move the highlighted cursor up and down within the current level to select an item or setting. Hold down one of these buttons to make the highlighted cursor move continuously.
< and > buttons	<ul style="list-style-type: none"><li>Press the &gt; button to go down one level.</li><li>Press the &lt; button to go up one level.</li><li>Hold down one of these buttons to make the highlighted cursor move continuously.</li></ul>
RESET (NO) button	<ul style="list-style-type: none"><li>Returns the setting to the factory default setting.</li><li>Sends a negative response to prompts on the monitor screen.</li></ul>
SET (YES) button	<ul style="list-style-type: none"><li>Saves the new setting in memory.</li><li>Sends a positive response to prompts on the monitor screen.</li></ul>

## Changing the Settings of Basic Items


The factory default setting is to display only the basic items. To change the settings of basic items proceed as follows.

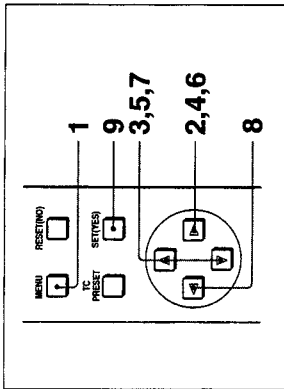


- 1 Press the MENU button in the menu control section.  
The menu selection level display appears on the monitor.  
In the figure below, "SETUP MENU" is selected (shown in reverse video).  
The time counter display of this unit shows only the currently selected item. When the item name is long, it is abbreviated.

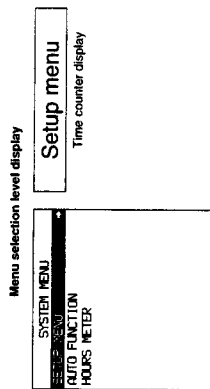


- 2 With "SETUP MENU" selected, press the > button.  
This displays all items on menu level 1.

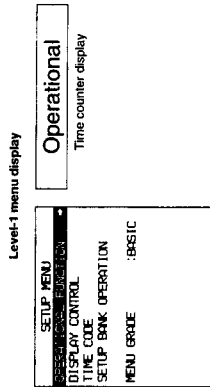


- 3 Press the Δ or ▽ button to select the required item.

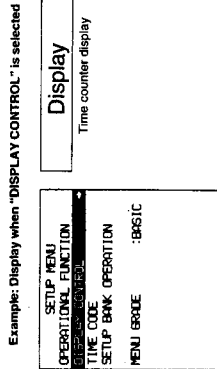


- 4 Press the > button.  
This displays menu level 2 for the menu item selected in step 3.

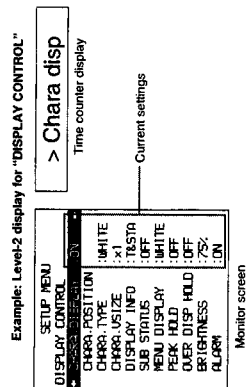


- 5 Press the Δ or ▽ button to select the item whose setting you wish to change.  
For menu items on level 3, press the > button to go to level 3, then press the Δ or ▽ button to select the item whose setting you wish to change.

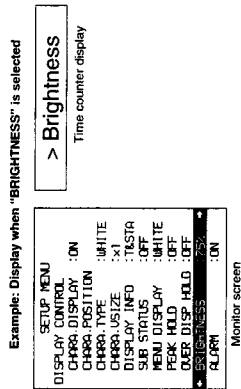

- 6 Press the > button.  
This displays all possible settings for the item selected in step 5.

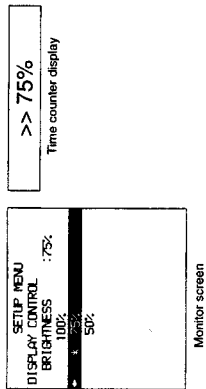

- 7 Press the Δ or ▽ button to change the setting of the item.

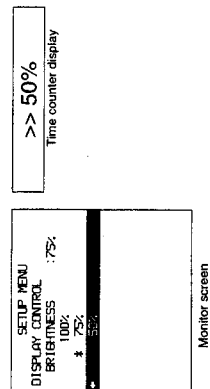

**8** To change other settings, press the  $\triangleleft$  button to return to the previous screen, then repeat steps 5 to 7 as required.

**9** When you have completed the settings, press the SET (YES) button.

The message "NOW SAVING..." appears on the monitor screen, and "Saving..." appears in the time counter display, while the new settings are saved in memory.  
When the saving operation is completed, the monitor screen and time counter display return to their normal indications.

#### NOTES

- If you power off the unit before saving operation is completed, settings may be lost. Wait until the saving is completed before powering off the unit.
- If, instead of pressing the SET (YES) button, you press the MENU button, the new settings are not saved. The message "ABORT!" appears on the monitor screen and "Abort!" in the time counter display for about 0.5 second, and the system exits the menus. To change more than one setting, be sure to press the SET (YES) button after making the settings.

### Meanings of indications on the monitor screen

On-screen indication	Meaning
Right-pointing arrow ( $\rightarrow$ ) at the right of a menu item. See step 1 of the foregoing operating procedure.	Pressing the $\rightarrow$ button switches to the next lower menu level or to a setting selection screen.
Left-pointing arrow ( $\leftarrow$ ) at the left of a menu item. See step 4 of the foregoing operating procedure.	Pressing the $\leftarrow$ button returns to the previous (higher) menu level.
Character string at the right of a menu item. See step 4 of the foregoing operating procedure.	Current setting of the menu item. <b>When shown with a colon (:)</b> : the current setting is the same as the factory default setting. <b>When shown with a raised dot (<math>\cdot</math>)</b> : the current setting is different from the factory default setting. See step 2 of the foregoing operating procedure in "Changing the Settings of Enhanced Items."
An asterisk in a complete list of settings. See step 6 of the foregoing operating procedure.	Factory default setting


### Displaying Enhanced Items

The factory default setting is not to display enhanced items.

To display enhanced items, set the MENU GRADE menu item (see page 68) to ENHANCED, following the procedure in the previous section "Changing the Settings of Basic Items." (In step 3, first select "MENU GRADE," and next select "ENHANCED," then press the SET (YES) button to save the setting in memory.)  
With this done, when you press the MENU button and the  $\rightarrow$  button to display the setup menu, all basic and enhanced items on menu level 1 appear.


### Changing the Settings of Enhanced Items

To change the settings of enhanced items, first carry out the procedure in the previous section "Displaying Enhanced Items," then proceed as follows.

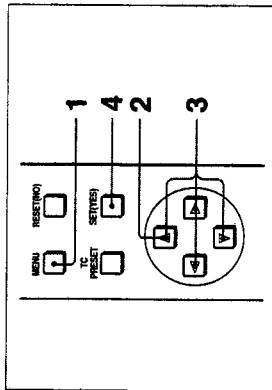

**1** Press the MENU button in the menu control section.  
The menu selection level display appears on the monitor.

**2** With "SETUP MENU" selected, press the  $\rightarrow$  button.  
This displays all basic and enhanced items on menu level 1.

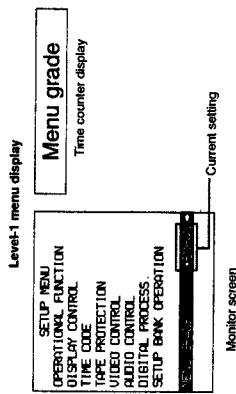

**3** Follow the same procedure as in steps 3 to 8 of the procedure in the section "Changing the Settings of Basic Items" (page 72) using the  $\Delta$ / $\nabla$ / $\leftarrow$ / $\rightarrow$  buttons to select an item and change its setting.

**4** When you have completed the settings, press the SET (YES) button.

The message "NOW SAVING..." appears on the monitor screen, and "Saving..." appears in the time counter display, while the new settings are saved in memory.

When the saving operation is completed, the monitor screen and time counter display return to their normal indications.

### Returning Menu Settings to Their Factory Default Settings

After making menu setting changes, to return settings to their factory default settings (setting initialization), use the following procedure.

### To return a particular setting to its factory default setting

In the section "Changing the Settings of Basic Items" (page 72), carry out the procedure up to step 6, then with the current setting displayed (in the example, if the factory default setting has been changed, the current setting will be 100% or 50%), proceed as follows.

**1** Either press the RESET (NO) button or select the default setting using the  $\Delta$  or  $\nabla$  button.

**2** Press the SET (YES) button.

The setting returned to its factory default is saved in memory as the current setting.

### To return all settings to their factory default settings

**1** Press the MENU button in the menu control section.  
The menu selection level display appears on the monitor screen.

**2** Press the  $\rightarrow$  button to display level 1 of the setup menu.

**3** Press the RESET (NO) button.

A message appears, to confirm whether or not you wish to return all settings to their factory default settings.

Monitor screen message	Message in the time counter display
INITIALIZE ALL ITEMS TO FACTORY PRESET VALUES?	Init setup?

**4** Press the SET (YES) button.

The message "NOW SAVING..." appears on the monitor screen, and "Saving..." appears in the time counter display, while the settings of all items are returned to their factory default settings. These factory default settings are saved in memory.

#### NOTE


If you power off the unit while settings are being saved, settings may not be correctly returned to their factory default settings. Wait until the saving is completed before powering off the unit.

### To abandon the resetting operation

Instead of pressing the SET (YES) button, press the RESET (NO) button. The display returns to menu level 1, leaving the settings unchanged.

# Displaying Supplementary Status Information

When you set the SUB STATUS menu item (see page 61) to other than OFF, you can view supplementary status information on the monitor screen below the operating mode display area.

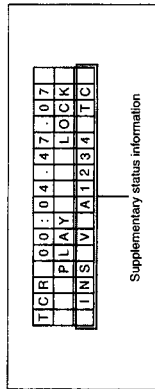

The following items of supplementary status information are displayed depending on the setting of the SUB STATUS menu item.

Setting of SUB STATUS menu item	Items of supplementary information displayed
EDIT PRESET	Editing mode settings made on the editing control unit
TC MODE	Operating mode of the internal time code generator
REMAIN	Remaining capacity of the tape
AUDIO MIXING	Setting for input audio mixing
ALL	All of the above items

The following tables show the on-screen indications of supplementary information and their meaning. In each table, the indications given in brackets such as [ASM] are the indications displayed when the SUB STATUS menu item is set to ALL.

For the display format when ALL is selected, see the next section.

When the SUB STATUS menu item is set to EDIT PRESET:

On-screen indication	Meaning
ASM [ASM]	Assemble editing mode
INS V A1234 TC [V1234T]	INS: Insert editing mode V A1234 TC: Channels or signals selected for insert editing V: Video A1234: Audio 1, 2, 3, 4 TC: Time code

When the SUB STATUS menu item is set to TC MODE:

On-screen indication	Meaning
INT PRST FREE [IP F]	The internal time code generator is operating in FREE RUN mode.
INT PRST REC [IP R]	The internal time code generator is operating in REC RUN mode.
INT REGEN-T&U [IRTU]	The internal time code generator is in synchronization with the playback line code (LTC) read from tape.
EXT LTC-T&U [ELTU]	The internal time code generator is in synchronization with the external time code (LTC) input to the unit and is generating the same time code value and user bit value as those of the external time code (regeneration).
EXT VITC-T&U [EVTU]	The internal time code generator is in synchronization with VITC present in the external video signal input to the unit and is generating the same time code value and user bit value as those of the external time code (regeneration).
EXT OSDI-T&U [EOTU]	The internal time code generator is in synchronization with the external time code (OSDI) input to the unit via the SDTI (OSDI) interface and is generating the same time code value and user bit value as those of the external time code (regeneration).
EXT OSDI-V-T&U [EOTU]	The internal time code generator is in synchronization with the external VITC input to the unit via the SDTI (OSDI) interface and is generating the same time code value and user bit value as those of the external time code (regeneration).
EXT DVIN-T&U [EDTU]	The internal time code generator is in synchronization with the external time code input to the unit via the LINK (DV IN) interface and is generating the same time code value and user bit value as those of the external time code (regeneration).
EXT DVIN-V-T&U [EDTU]	The internal time code generator is in synchronization with the external VITC input to the unit via the LINK (DV IN) interface and is generating the same time code value and user bit value as those of the external time code (regeneration).

When the SUB STATUS menu item is set to REMAIN:


On-screen indication	Meaning
REMAIN 184 min	Remaining capacity of the tape in minutes. When the remaining capacity has not been calculated, "REMAIN --- min" appears.

When the SUB STATUS menu item is set to AUDIO MIXING:

On-screen indication	Meaning
1 2 3 4 [MIX]	Input audio channels selected for mixing 1 2 3 4: Input audio channels 1, 2, 3 and 4
Example display:	
12 2 3 34	
	Input audio channels 3 and 4 are mixed and recorded on audio channel 4 on tape.
	Input audio channel 3 is recorded on audio channel 3 on tape.
	Input audio channel 2 is recorded on audio channel 2 on tape.
	Input audio channels 1 and 2 are mixed and recorded on audio channel 1 on tape.

## Display format of supplementary status information when the SUB STATUS menu item is set to ALL

All items of supplementary status information are displayed in the order shown below.

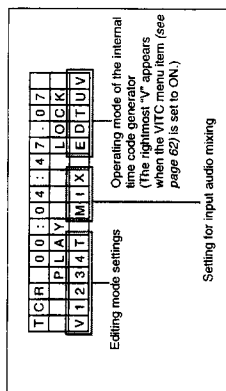

# 5

## Connections and Settings

### Chapter

## Connections for a Digital Non-Linear Editing System

This unit can be connected to an ES-7 EditStation to configure a digital non-linear editing system. If you use the SDTI (QSDF) interface with the optional DSBK-1501 board installed in the unit, you can transfer video, audio, time code, and other compressed data between this unit and the ES-7.

The unit supports ClipLink functions, enabling index pictures recorded on tape and ClipLink log data stored in cassette memory to be transferred to the ES-7 in an instant.

*For a general description of ClipLink functions, see the appendix "ClipLink Guide" (page 105).*

The following figure shows a connection diagram for a non-linear editing system in which this unit serves as the recorder.


*For connections of the ES-7 and its peripheral devices such as the ESBK-7011 Control Panel, the ESBK-7045 Disk Unit, etc., refer to your ES-7 Operating Instructions.*

#### Note

The DSR-1500/1500P unit shown in the following figure is fitted with the optional DSBK-1501, DSBK-1503, and DSBK-1504/1504P boards.





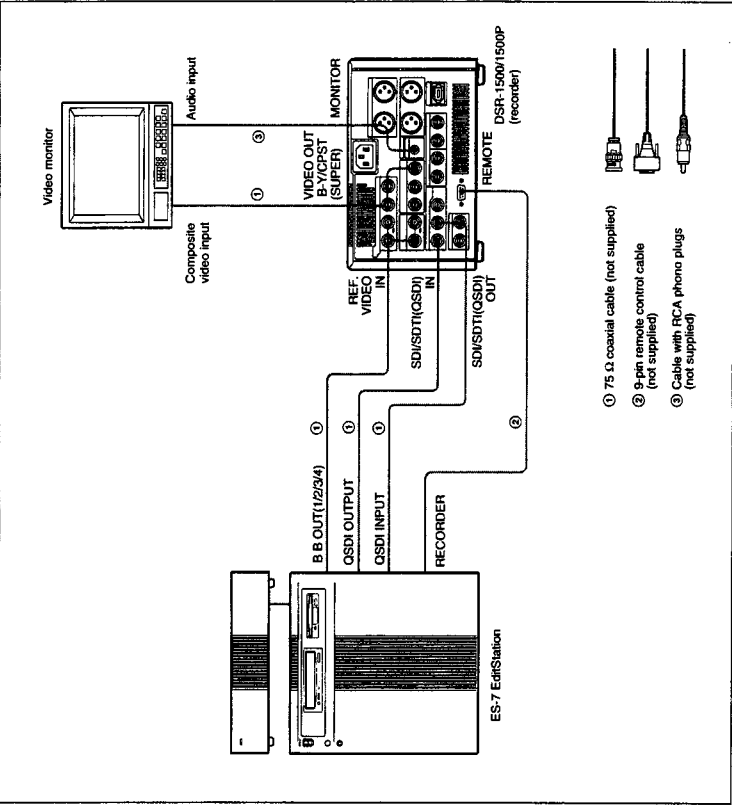

Settings on the DSR-1500/1500P

Switch/menu item	Setting
LOCAL/REMOTE switch	REMOTE (REMOTE indicator lights.)
DIGITAL OUTPUT menu item (see page 67)	SDTI (SDTI indicator lights.)
REMOTE I/F menu item (see page 67)	9PIN (9P indicator lights.)

For details of video/audio input and audio mode settings, see "Settings for Recording" on page 27.


## Connections for a Cut Editing System

The following figure shows a cut editing system configuration that includes two DSR-1500/1500P units to serve as the player and recorder.

For details of connecting devices other than the DSR-1500/1500P, refer to the instruction manual for each device.

### Notes

- This application requires both of the DSR-1500/1500P units (recorder and player) to be fitted with the optional DSBK-1501 board.
- The DSR-1500/1500P units shown in the following figure are fitted with the optional DSBK-1501, DSBK-1503, and DSBK-1504/1504P boards.

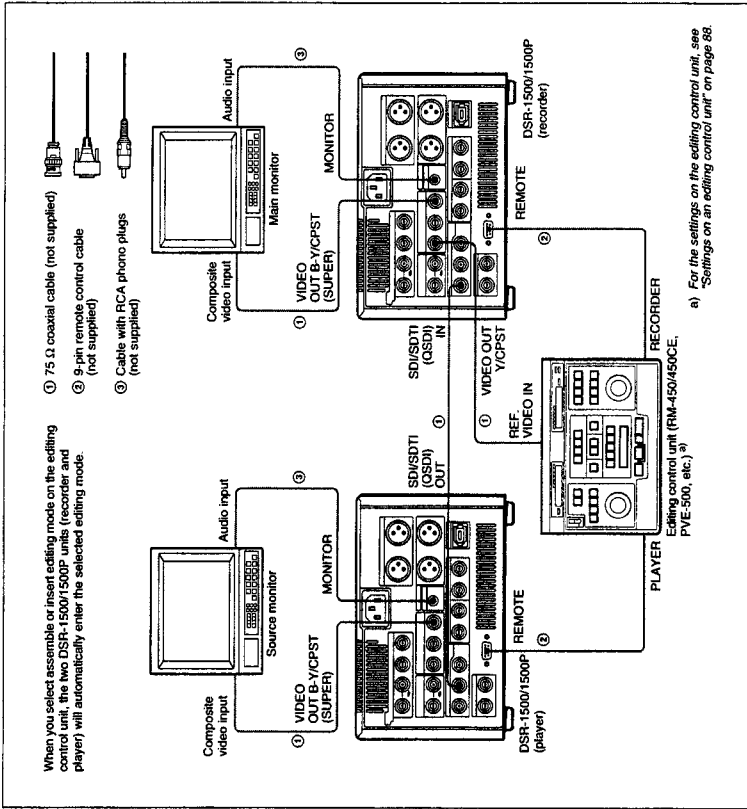

a) For the settings on the editing control unit, see "Settings on an editing control unit" on page 88.

Settings on the DSR-1500/1500Ps (recorder and player)

Switch/menu item	Setting
LOCAL/REMOTE switch	REMOTE (REMOTE indicator lights.)
DIGITAL OUTPUT menu item (see page 67)	SDTI (for player only) (SDTI indicator lights.)
REMOTE I/F menu item (see page 67)	9PIN (9P indicator lights.)

For details of the video/audio input and audio mode settings for the recorder, see "Settings for Recording" on page 27.

About reference video signals

In order to provide stable video and audio signals for analog editing, it is necessary for the built-in time base corrector (TBC) to operate correctly. To ensure this, input a reference video signal synchronized with the video signal to the REF. VIDEO IN connector.

Connections for an A/B Roll Editing System


The following is an example configuration of A/B roll editing system using the DSR-1500/1500P. In this configuration, two DSR-1500/1500P units are used, one as the recorder and the other as player 1, and an analog Betacam UVW-1600/1600P Videocassette Player unit is used as player 2. To create a final tape (a tape that contains a completely packaged program) in Betacam format, use a Betacam VCR such as the UVW-1800/1800P as the recorder.

Notes

- This application requires the DSR-1500/1500P unit used as the recorder to be fitted with the optional DSBK-1504/1504P board.
- The DSR-1500/1500P units shown in the following figure are fitted with the optional DSBK-1501, DSBK-1503, and DSBK-1504/1504P boards.

The purpose of the following figure is to indicate the flow of signals among the component devices in the system. The specific connections and settings are described beginning on page 85.




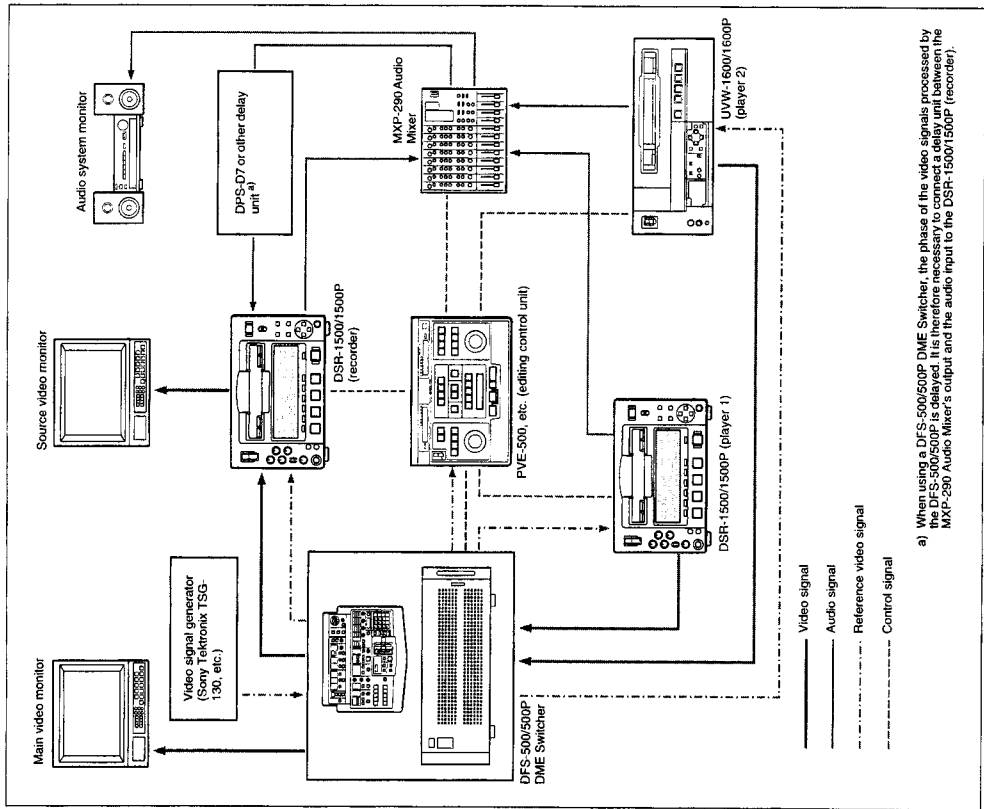

### Audio monitor system connections

The following shows an example of audio monitor system connections.


For details of these connections, refer to the instruction manual for each connected device.

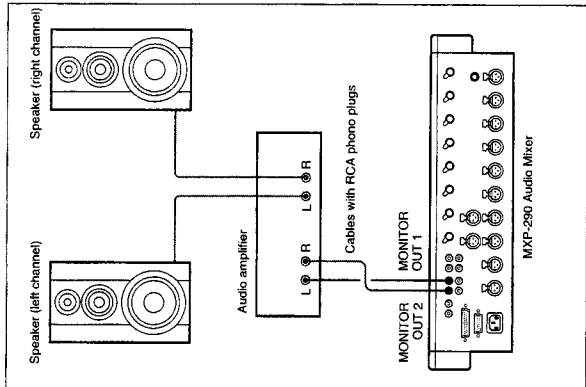

### Reference video signal connection


When you perform recording, be sure to input a reference video signal.

For details of reference video signals, see "About reference video signals" on page 82.

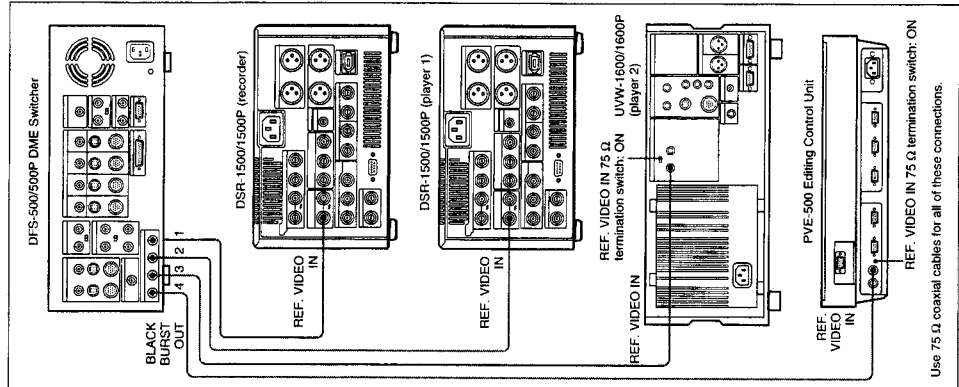


Control signal connections

The following shows an example of control signal connections to enable the editing control unit to control all other A/B roll editing system devices.

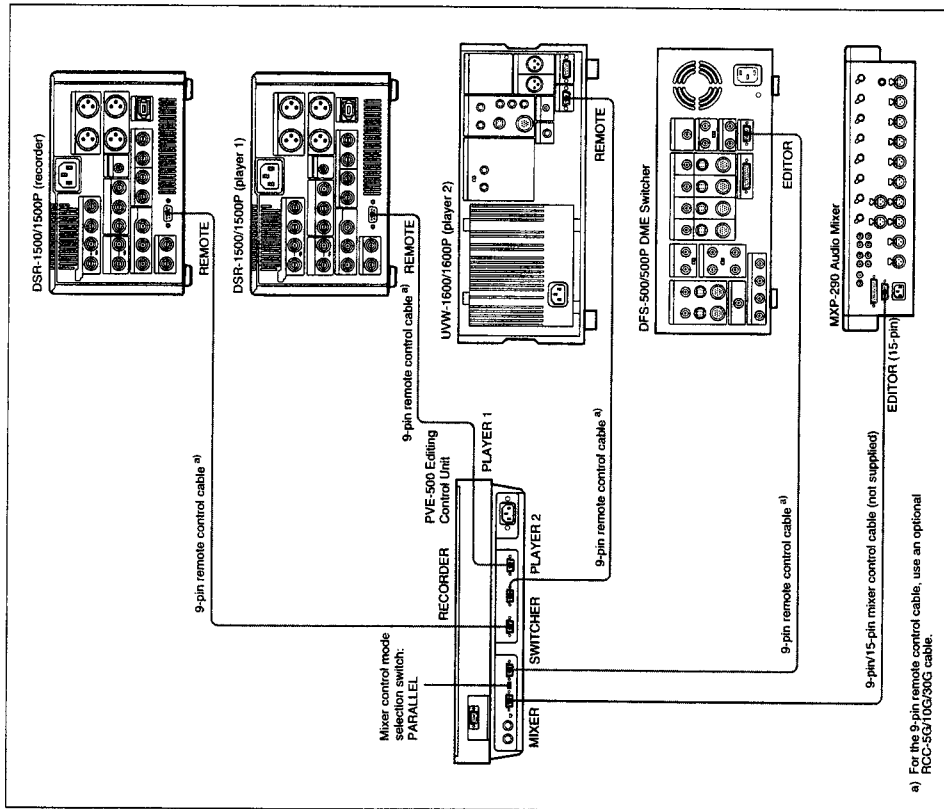

Video/audio signal connections

The following shows an example of video/audio signal connections in an A/B roll editing system.

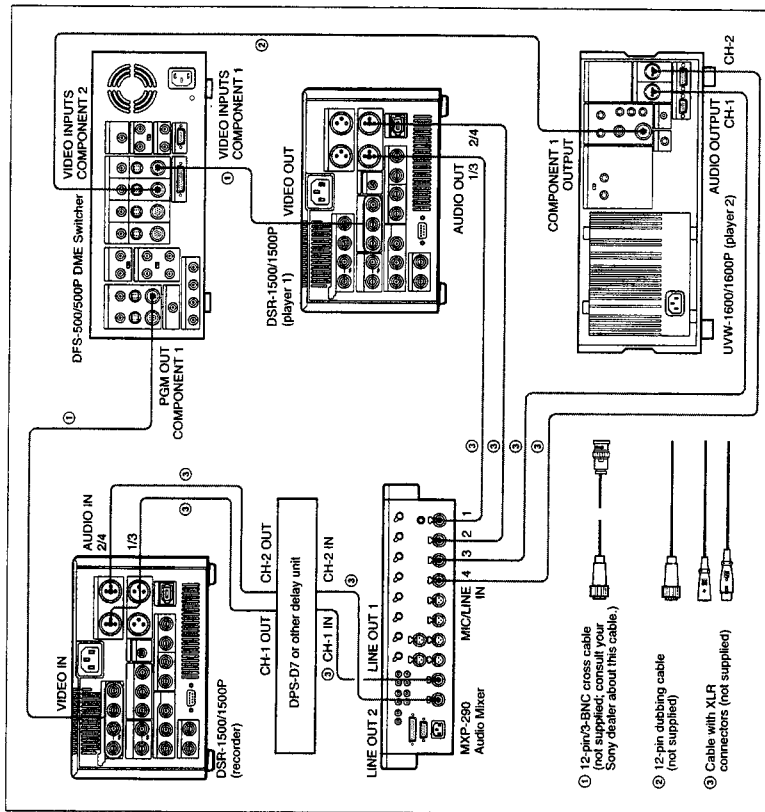

Settings on the DSR-1500/1500P (recorder)

Switch/menu item	Setting
LOCAL/REMOTE switch	LOCAL
CH1 IN LEVEL and CH2 IN LEVEL menu items (see page 66)	Normally +4 dBm


For details of the video/audio input and audio mode settings, see "Settings for Recording" on page 27.

Settings on the DSR-1500/1500P (player)

Switch/menu item	Setting
LOCAL/REMOTE switch	LOCAL
OUTPUT LEVEL menu item (see page 66)	Normally +4 dBm
VIDEO OUTPUT menu item (see page 67)	Y-R, B (Y-R, B indicator lights.)
AUDIO OUTPUT menu item (see page 67)	1/2 CH or 3/4 CH (CH 1/2 or CH 3/4 indicator lights.)

Connection of a video monitor

Set up the following connections to enable monitoring of video and audio signals on a video monitor. In addition to the video and audio signals, you can have time data, the operation mode of the unit, alarm messages, and other information displayed as text on the monitor screen by setting the CHARA. DISPLAY menu item (see page 60) to ON (factory default setting).

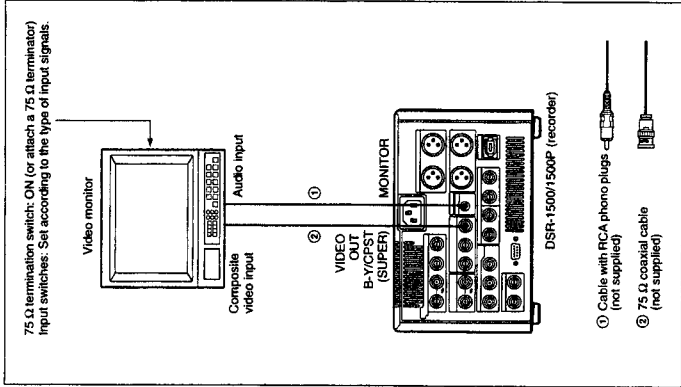

Settings on an editing control unit

When connecting an editing control unit, make the settings as follows, according to the model.

PVE-500

No settings are required.

BVE-600/900/910/2000 (NTSC model) or FXE-100/120P

Set the VCR constants as follows.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
80	17	00	96	05	03	80	0A	08	FE	00	80	5A	FF	

BVE-600/900/910/2000 (PAL model) or FXE-100P/120P

Set the VCR constants as follows.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
81	17	00	7D	05	02	80	0A	07	FE	00	80	4C	FF	

RM-450/RM-450CE

Set the DIP switches as follows.

Left switches

7	6	5	4	3	2	1	0
OFF	—	—	OFF	—	—	—	—

Right switches (RM-450)

7	6	5	4	3	2	1	0
OFF	—	OFF	ON	OFF	OFF	ON	ON

Right switches (RM-450CE)

7	6	5	4	3	2	1	0
ON	—	OFF	ON	OFF	OFF	ON	ON

BVE-800

Set the DIP switches as follows.

SW2

1	2	3	4	5	6	7	8
ON	OFF	ON	ON	—	ON	ON	—

SW3 (NTSC model)

1	2	3	4	5	6	7	8
ON	ON	ON	OFF	—	ON	OFF	OFF

SW3 (PAL model)


1	2	3	4	5	6	7	8
OFF	OFF	OFF	ON	—	ON	OFF	OFF

Connections for SDTI (QSDI) Dubbing

The following shows an example of connections for digitally dubbing SDTI (QSDI) signals (see page 57) using a pair of DSR-1500/1500P units.

Notes

- This application requires both of the DSR-1500/1500P units (recorder and player) to be fitted with the optional DSBK-1501 board.
- The DSR-1500/1500P units shown in the following figure are fitted with the optional DSBK-1501, DSBK-1503, and DSBK-1504/1504P boards.

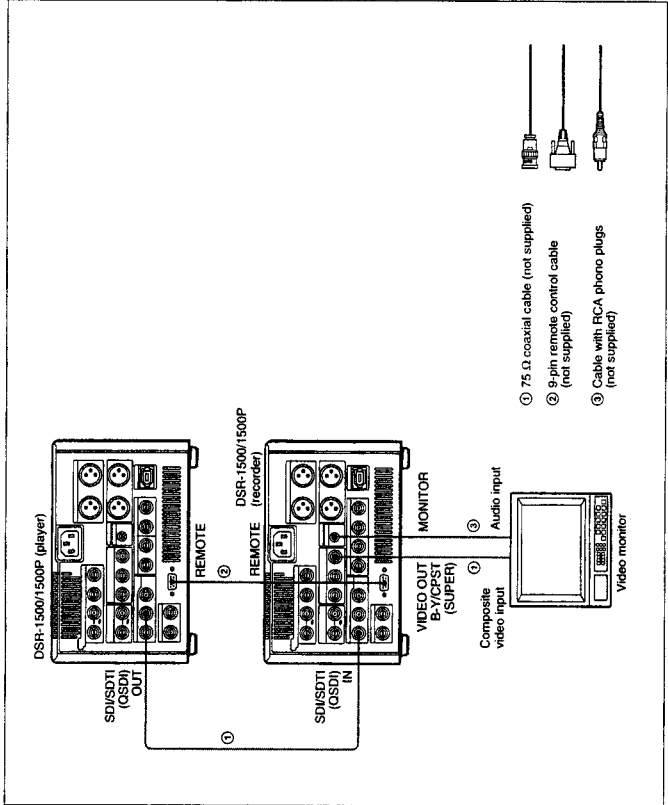

Settings on the DSR-1500/1500P (recorder)

Switch/menu item	Setting
LOCAL/REMOTE switch	LOCAL


Settings on the DSR-1500/1500P (player)

Switch/menu item	Setting
LOCAL/REMOTE switch	REMOTE (REMOTE indicator lights.)
DIGITAL OUTPUT menu item (see page 67)	SDTI (SDTI indicator lights.)
REMOTE I/F menu item (see page 67)	9PIN (9P indicator lights.)


## Displaying the digital hours meter

Use the following procedure.

- 1 Press the MENU button in the menu control section. The menu selection level display appears on the monitor screen and in the time counter display.

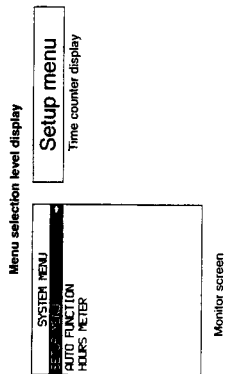

- 2 Press the V button to select "HOURS METER."

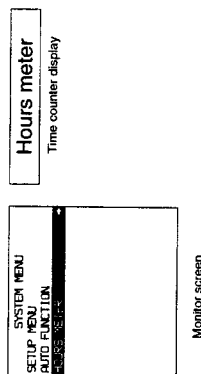


- 3 Press the D button.

The cumulative counts by the digital hours meter are indicated on the monitor screen and in the time counter display.

## Digital hours meter indications on the monitor screen

All four counts (T1, T2, T3, and CT) are indicated on the monitor screen.

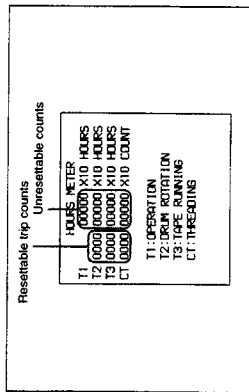

The four-digit value to the left of the slash (/) is the resettable trip count, and the right value is the cumulative total from manufacture.

## Digital hours meter indications in the time counter display

One of the four indications appears in the time counter display at a time. Use the Δ and V buttons in the menu control section to change the item displayed. Initially, only the trip value appears. Hold down the D button to display also the cumulative total from manufacture, which will appear to the right of the trip value and the slash (/).

The following illustrates the digital hours meter indications in the time counter display in all four display modes. The right-hand indication for each display mode is the indication you can view while holding down the D button in the menu control section.

### T1 (OPERATION) mode:

Oper. 00000

### T2 (DRUM ROTATION) mode:

Drum 0000 0000/00000

### T3 (TAPE RUNNING) mode:

Tape 0000 0000/00000

### CT (THREADING) mode:

Thread 0000 0000/00000

## To end the digital hours meter display

Press the MENU button in the menu control section.

## To reset the trip values

About this operation, consult your Sony dealer.

## Head Cleaning

Always use the DVM12CL (mini size) or DVI2CL (standard size) Cleaning Cassette to clean the video and audio heads. You can run the cleaning cassette for 10 seconds per cleaning operation. Follow the instructions for the cleaning cassette, as inappropriate use of the cleaning cassette can damage the heads.

## To clean the heads

Insert the cleaning cassette. This automatically starts cleaning. You cannot operate any tape transport control buttons other than the EJECT button during the cleaning operation.

After about 10 seconds, the cleaning cassette will be automatically ejected.



## Troubleshooting

If an alarm message appears on the monitor screen, or if the unit appears to be malfunctioning, please check the following before contacting your Sony dealer.

Tape problems		
Symptom	Cause	Remedy
Recording is not possible.	The cassette's REC/SAVE switch is set to SAVE.	Set the REC/SAVE switch to REC, or use another cassette.
The unit's tape transport control buttons (PLAY F.WD, REW, etc.) do not work.	The REMOTE indicator in the display section is lit and the LOCAL ENABLE menu item is set to STOP & EJECT or ALL DISABLE.	Set the LOCAL/REMOTE switch to LOCAL to turn the REMOTE indicator off, or change the setting of the LOCAL ENABLE menu item (see page 59) to ALL ENABLE.
The NO EDIT indicator on the front panel lights up.	No cassette is loaded. The audio recording mode selected on this unit does not coincide with that of the loaded tape.	Insert a cassette (see page 25). • When your current purpose is editing, set the LOCAL/REMOTE switch to LOCAL to turn the REMOTE indicator off and set the unit for the same audio recording mode as with the tape using the REC MODE menu item (see page 65), then set the switch to REMOTE to light the REMOTE indicator again. • When your current purpose is recording, you can use the tape currently loaded in the unit.
	The recording format of the currently loaded tape is "DV" or "DVCPRO."	Replace the tape with one recorded in the DVCAM format.

Time data problems		
Symptom	Cause	Remedy
Cannot freely set the initial time data value.	The TC MODE menu item is set to EXT REGEN.	Change the setting of the TC MODE menu item (see page 62) to INT PRESET.
	CNT is selected as the time data type to be displayed (the COUNTER time data type indicator is lit).	Press the COUNTER SELECT button to make the TC or U-BIT time data type indicator light up (the CNT value cannot be set freely).
	The REMOTE indicator in the display section is lit and the LOCAL ENABLE menu item is set to STOP & EJECT or ALL DISABLE.	Set the LOCAL/REMOTE switch to LOCAL to turn the REMOTE indicator off or change the setting of the LOCAL ENABLE menu item (see page 59) to ALL ENABLE.
The tape is running, but the time data is not shown in the time counter display.	The MENU button or TC PRESET button in the menu control section has been pressed. The U-BIT time data type indicator is lit.	Press the button once again to exit the menu control mode, time code preset mode, or digital hours meter display mode. (In either of the menu control mode and time code preset mode, the time data is not shown in the time counter display.) Press the COUNTER SELECT button to make the COUNTER or TC time data type indicator light up.

Input problem		
Symptom	Cause	Remedy
It is not possible to record an SDTI (QSDI) signal.	No SDTI signal is input to the unit, or the SDTI format has not been selected.	Connect an SDTI signal to the SD/SDTI (QSDI) IN connector, or set the DIGITAL OUTPUT menu item (see page 67) to SDTI.

Monitor problems		
Symptom	Cause	Remedy
Data is not superimposed on the monitor screen.	The CHARA. DISPLAY menu item is set to OFF. The monitor is not connected to the B-Y/C/PST (SUPER) connector of this unit.	Set the CHARA. DISPLAY menu item (see page 60) to ON. Connect the monitor to the B-Y/C/PST (SUPER) connector. (You must make this connection to display any type of text on the monitor.)
The image on the monitor screen is too bright.	The 75 $\Omega$ termination switch for video input on the monitor is in the OFF position, or a 75 $\Omega$ terminator is not fitted to its video input connector.	Set the 75 $\Omega$ termination switch to ON or connect a terminator.
The image on the monitor screen is too dark.	In a video signal loop-through connection of video monitors, 75 $\Omega$ termination switches for video input on monitors other than the loop-end monitor are in the ON position.	Set the 75 $\Omega$ termination switches to OFF on all monitors other than the loop-end monitor.
The image is too dark when recording a composite video signal.		
Audio problem		
Symptom	Cause	Remedy
The REC/PB LEVEL control knobs do not work.	The VAR switch on the front panel is set to PRESET.	Set the VAR switch to REC when recording, or set it to PB when playing back.
Editing restriction		
Symptom	Cause	Remedy
Execution of video editing in insert mode erases subcode data (user bit data, etc.) recorded on tape other than time code data.	This phenomenon cannot be avoided with an editing system using this unit as the recorder.	




## Error Messages

This unit is provided with a self-diagnostic function that detects internal abnormalities. When it detects an abnormality, it outputs an error message to the monitor screen and indicates an error code in the time counter display.

### Note


To display error messages on the monitor screen, connect the monitor to the B-Y/CPST (SUPER) connector, and set the CHARA. DISPLAY menu item (see page 60) to ON (factory default setting).

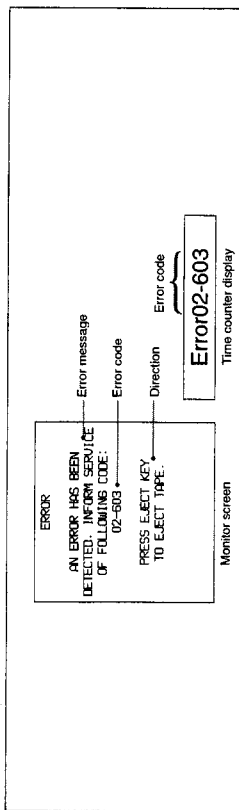

If an error message appears, follow the direction indicated on the monitor screen.

## Alarm Messages

When operating this unit, the unit may sometimes output alarm messages such as the one shown below to the monitor screen and the time counter display.

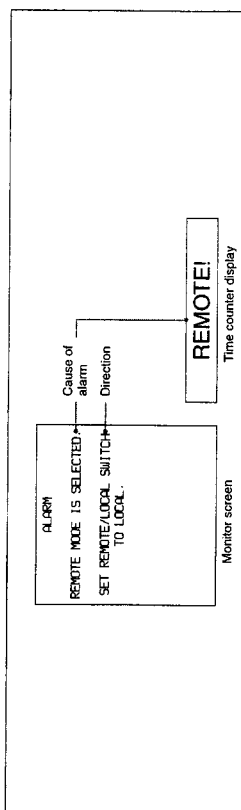

If such an alarm message appears, a connection or operation error may have been made, or condensation on heads may have occurred. Follow the direction indicated on the monitor screen.

### Note

To display alarm messages on the monitor screen, it is necessary for the monitor to be connected to the B-Y/CPST (SUPER) connector, and set the following menu items to ON.

- CHARA. DISPLAY (see page 60)
- ALARM (see page 61)
- REF ALARM (see page 61)

Alarm messages and associated directions

Alarm message on monitor screen (Cause)	Direction	Alarm message in time counter display
A cleaning tape has been inserted.	The tape will automatically be ejected after cleaning is completed.	Cleaning Tp!
A non-standard signal is being used for input video.	Use a standard signal.	VIN NON-STD
A non-standard ref. signal is being used for REF. VIDEO.	Use a standard signal.	REF NON-STD
Abnormal settings selected in setup menu.	Correct the setup menu settings. Contact your Sony dealer if this alarm message appears again after making corrections.	ILL. SETUP!
Audio mixing mode cannot be changed during recording.	—	REC model!
Audio not editable on this tape.	Use a tape recorded in 2-channel/48 kHz or 4-channel/32 kHz mode.	2CH/32kHz! Fs 44.1kHz!
Audio REC mode selection different from audio on tape.	Use a tape having audio signals recorded in locked mode.	UNLOCK mode
Audio REC (recording) mode cannot be changed during recording.	Select the same audio recording mode as that of the tape.	A mode err
Cassette adaptor not usable.	—	REC model!
Counter mode is selected.	Use a tape without cassette adaptor.	Adaptor!
Input selection cannot be changed in REC (recording) mode.	Use the COUNTER SELECT button to light the TC or U-BIT time data type indicator in the display section.	CNT model!
Input signal does not conform to DVCAM/DV format.	—	REC model!
Input signal is 625/50. (For DSR-1500)	—	Unknown Sig
Input signal is 525/60. (For DSR-1500P)	—	625/50 sig! (For DSR-1500) 525/60 sig! (For DSR-1500P)
Input video is not detected.	Check the VIDEO indicator in the INPUT signal display section and supply an appropriate video signal.	No INPUT!
Input video signal does not synchronize with REF. VIDEO signal.	Use a reference video signal.	ILL. REF!
Moisture has been detected.	Keep the power on and wait until this alarm message disappears.	HUMID!
No cassette in VTR.	Load a cassette.	No Cass.!
Rec inhibit mode is selected.	Set the REC INHIBIT menu item (see page 59) to OFF.	REC INHI.!
Record inhibit plug on the cassette is set to inhibit.	Set the REC/SAVE switch on the cassette to REC.	REC INHI.!
Remote mode is selected.	Set the LOCAL/REMOTE switch to LOCAL.	REMOTE!
Tape cannot be replayed.	Use a tape recorded in 525/60 format. (For DSR-1500)	625/50 Tape (For DSR-1500)
	Use a tape recorded in 625/50 format. (For DSR-1500P)	525/60 Tape (For DSR-1500P)
Tape end has been detected.	Use a new cleaning tape.	Tape end!





Alarm messages and associated directions

Alarm message on monitor screen (Cause)	Direction	Alarm message in time counter display
Tape not editable.	Use a tape recorded in DVCAM format. Use a tape recorded in 525/60 format. (For DSR-1500)	Not DVCAM!
	Use a tape recorded in 525/60 format. (For DSR-1500P)	525/60 Tape (For DSR-1500P)
Tape not recordable.	Use a DVCAM/DV ME tape.	REC INH!
Tape not usable.	Use a DVCAM/DV/DVCPRO (25 Mbps) tape.	ILL. Tape!
TC EXTERNAL is selected.	Set the TC MODE menu item (see page 62) to INT PRESET.	TC EXT!
TCG REGEN mode is selected.	Set the TC MODE menu item (see page 62) to INT PRESET.	REGEN model
TCG RUN mode is set to REC RUN.	Set the RUN MODE menu item (see page 62) to FREE RUN.	REC RUN!

# Appendixes

## Precautions

### On safety

- Should any liquid or solid object fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it further.
- Unplug the unit from the wall outlet if it is not to be used for an extended period of time.
- To disconnect the cord, pull it out by the plug. Never pull the cord itself.

### On operation and storage locations

- Avoid operation or storage in any of the following places.
- Location subject to extremes of temperature (operating temperature range 5°C to 40°C (41°F to 104°F))
- Location subject to direct sunlight for long periods, or close to heating appliances (Note that the interior of a car left in summer with the windows closed can exceed 50°C (122°F).)
- Damp or dusty places
- Location subject to severe vibrations
- Location near equipment generating strong electromagnetic emissions
- Location near transmitting stations generating strong radio waves

### Operate the unit in a horizontal position

This unit is designed to be operated in a horizontal position. Do not operate it on its side, or tilted through an excessive angle (exceeding 20°).

### Avoid violent impacts

Dropping the unit, or otherwise imparting a violent shock to it, is likely to cause it to malfunction.

### Do not obstruct ventilation openings

To prevent the unit from overheating, do not obstruct ventilation openings, by for example wrapping the unit in a cloth while it is in operation.

### On cleaning

If the casing or panel is dirty, wipe it gently with a soft dry cloth. In the event of extreme dirt, use a cloth steeped in a neutral detergent to remove the dirt, then wipe with a dry cloth. Applying alcohol, thinners, insecticides, or other volatile solvents may result in deforming the casing or damaging the finish.

### On repacking and shipping


Save the original shipping carton and packing material: they will come in handy if you ever have to ship your unit. For maximum protection, repack your unit as it was originally packed at the factory, and take care not to impart violent shocks in transit.

## Specifications

### General

Signal system	DSR-1500: NTSC DSR-1500P: PAL
Power requirements	100 V to 240 V AC, 50/60 Hz
Power consumption (with all options installed)	65 W
Peak inrush current	(1) Power ON, current probe method: 30 A (100 V), 30 A (240 V) (2) Hot switching inrush current, measured in accordance with European standard EN55103-1: 20 A (230 V)
Operating temperature	5°C to 40°C (41°F to 104°F)
Storage temperature	-20°C to +60°C (-4°F to +140°F)
Operating relative humidity	Less than 80%
Storage relative humidity	Less than 90%
Mass	6.0 kg (13 lb 3 oz)

External dimensions (w/h/d)  
211 × 137 × 420 mm  
(8<sup>1</sup>/<sub>8</sub> × 5<sup>1</sup>/<sub>2</sub> × 16<sup>5</sup>/<sub>8</sub> inches)

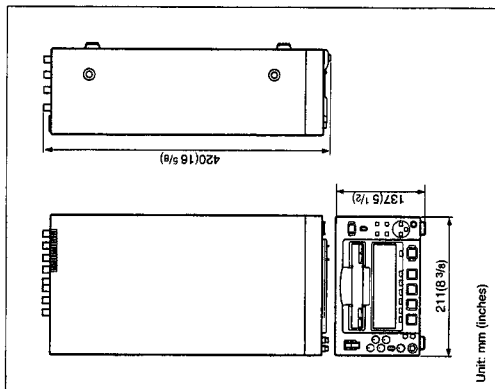

### Tape transport control system

Tape speed	DSR-1500: 28.193 mm/s DSR-1500P: 28.221 mm/s
Recording/playback time	Using PDV-184ME standard size cassette: Maximum 184 minutes Using PDV-40ME mini-size cassette: Maximum 40 minutes
Fast forward/rewind time	Using PDV-184ME standard-size cassette: Less than 3 minutes Using PDV-40ME mini-size cassette: Less than 1 minute
Search speed	When controlling via RS-422A interface: Maximum 60 times normal speed in both directions When controlling from DSRM-10 Remote Control Unit: Jog mode: 0 (still) to 2 times normal speed in both directions Shuttle mode: 8 speeds from 0 (still) to 16 times normal speed in both directions

### Video performance

Band width	Composite/S-video (DSR-1500): 30 Hz to 4.2 MHz ±1.0 dB (Y) Composite/S-video (DSR-1500P): 25 Hz to 4.8 MHz ±1.0 dB (Y) Component (DSR-1500): 30 Hz to 5.0 MHz ±1.0 dB (Y), 30 Hz to 1.5 MHz ±1.0 dB (R-Y/ B-Y) Component (DSR-1500P): 25 Hz to 5.0 MHz ±1.0 dB (Y), 25 Hz to 2.0 MHz ±1.0 dB (R-Y/ B-Y)
S/N	Composite/S-video I/O (Y): 52 dB or more Component I/O (Y): 55 dB or more Y/C delay 30 ns or less K-factor 2.0% or less (K2T, KPB)

### Processor adjustment range

Video level*	±3 dB/—∞ to 3 dB selectable
Chroma level*	±3 dB/—∞ to 3 dB selectable
Setup/Black level*	±30 IRE (±210 mV)
Chroma phase**	±30°
System phase**	Sync: ±1 μs SC: ±180°

\* Adjust with menu settings.  
\*\* Adjust with controls on the front panel.

### Audio performance

Frequency response	Two-channel (48 kHz) mode: 20 Hz to 20 kHz ±1.0 dB Four-channel (32 kHz) mode: 20 Hz to 14.5 kHz ±1.0 dB
Dynamic range	More than 87 dB
Distortion (THD + N)	Less than 0.07% (48 kHz)

### Input connectors

<b>Digital signal inputs</b> SDI/SDTI (QSDD) IN (optional DSBK-1501 Digital Input/ Output Board required)	BNC type SDTI (QSDD) format (270 Mbps) SDI format (270 Mbps), SMPTE 259M/ CCIR656-III
<b>AUDIO (AES/EBU) IN</b> (optional DSBK-1501 Digital Input/Output Board required)	BNC type (x2), complying with AES- 31d-1995
<b>DV IN/OUT</b> (optional DSBK-1503 i.LINK/DV Input/ Output Board required)	6-pin IEEE 1394 connector

### Analog video inputs

REF. VIDEO IN	BNC type (x2, loop-through with 75 Ω automatic terminator) Black burst 0.286 V (DSR-1500) or 0.3 V (DSR- 1500P), 75 Ω, negative sync Composite sync VIDEO IN (optional DSBK-1504/1504P Analog Input Board required) BNC type (x3 and 1 loop-through connector with 75 Ω automatic terminator), composite/component/S- video switchable Composite Y/CPST and 1 loop-through connector with 75 Ω automatic terminator: 1.0 Vp-p, 75 Ω, sync negative Component Y/CPST: 1.0 Vp-p, 75 Ω, negative sync R-Y/C and B-Y: 0.7 Vp-p (75% color bars for DSR-1500 or 100% color bars for DSR-1500P), 75 Ω S-video Y/CPST: 1.0 Vp-p, 75 Ω, negative sync R-Y/C: 0.286 Vp-p (DSR-1500) or 0.3 Vp-p (DSR-1500P), 75 Ω (burst level)
---------------	--

### Analog audio inputs

AUDIO IN (optional DSBK-1504/1504P Analog Input Board required)	XLR 3-pin, female (x2), +40/-34/-6 dBm, high impedance, balanced * For DSR-1500P only
<b>Time code input</b> TC IN	BNC type, SMPTE time code (DSR- 1500) or EBU time code (DSR- 1500P), 0.5 Vp-p to 18 Vp-p, 3.3 kΩ, unbalanced



Appendices



Appendices

Output connectors

Digital signal outputs

SDI/SDTI (OSDI) OUT (optional DSBK-1501 Digital Input/Output Board required)  
BNC type (x2)  
SDTI (OSDI) format (270 Mbps)  
SDI format (270 Mbps), SMPTE 259M/ CCR656-III

AUDIO (AES/EBU) OUT (optional DSBK-1501 Digital Input/Output Board required)  
BNC type (x2), complying with AES-31d-1995

DV IN/OUT (optional DSBK-1503 i.LINK/DV Input/Output Board required)  
6-pin IEEE 1394 connector

Analog video outputs

VIDEO OUT  
BNC type (x3), composite/component/  
S-video switchable

Composite

Y/CPST, R-Y/CPST, and B-Y/CPST (SUPER): 1.0 Vp-p, 75 Ω, sync negative

Component

Y/CPST: 1.0 Vp-p, 75 Ω, negative sync  
R-Y/CPST and B-Y/CPST (SUPER): 0.7 Vp-p (75% color bars for DSR-1500 or 100% color bars for DSR-1500P), 75 Ω

S-video

Y/CPST: 1.0 Vp-p, 75 Ω, negative sync  
R-Y/CPST: 0.286 Vp-p (DSR-1500) or 0.3 Vp-p (DSR-1500P), 75 Ω (burst level)

Analog audio outputs

AUDIO OUT  
XLR 3-pin, male (x2), +40/-3/-6 dBm, 600 Ω loading, low impedance, balanced

MONITOR

Phono jack, ∞ to -11 dBu ±1 dBu, 47 kΩ, unbalanced

\* For DSR-1500P only

Output for headphones

HEADPHONES

Stereo phone jack, ∞ to -13 dBu, 8 Ω, unbalanced

Time code output

TC OUT

BNC type, SMPTE time code (DSR-1500), EBU time code (DSR-1500P), 2.2 Vp-p ±3 dB, 600 Ω, unbalanced

Remote control connectors

REMOTE D-sub 9-pin, for connection of control unit\* RS-422A standard  
CONTROL S Stereo minijack, for connection of SIRCS-compatible remote control unit (DSRM-10)

DV IN/OUT (optional DSBK-1503 i.LINK/DV Input/Output Board required)  
6-pin IEEE 1394 connector

\* ES-7, PVE-500, RM-450/450CE, BYE-400/800/102000/9100/9100P, etc.

Supplied accessories

AC power cord (1)  
Operating Instructions (1)

Optional accessories

DSBK-1501 Digital Input/Output Board  
DSBK-1503 i.LINK/DV Input/Output Board  
DSBK-1504/1504P Analog Input Board  
RCC-5G10G/30G 9-pin remote control cable (length: 5 m (16 ft)/10 m (33 ft)/30 m (98 ft))

Digital video cassette  
Standard size: PDVM-64ME/94ME/124ME/184ME  
Mini size: PDVM-12ME/22ME/32ME/40ME

Cleaning cassette

DV12CL (standard size), DVM12CL (mini size)

Related equipment

ES-3/7 EditStation  
Linear editing control unit: PVE-500, RM-450/450CE, BYE-600/800/9102000/9100/9100P  
DME switcher: DFS-300/300P, DFS-500/500P, DFS-700/700P  
DXC-D30/D30P Color Video Camera  
DSR-11P/300A Digital Videocassette Recorder  
DSR-85/85P/70P/80/80P/1800/1800P/2000/2000P Digital Videocassette Recorder  
DSR-1600/1600P Digital Videocassette Player  
DSR-300/300P/500WS/500WS/1301/301P/1501/1501P Digital Camcorder  
DSRM-10 Remote Control Unit

Design and specifications are subject to change without notice.

High-speed transfer of recordings

It is also possible to transfer the editing material itself between the DSR-85/85P and ES-7 at four times normal speed. In other words, the transfer can be carried out in one fourth of the real time duration. It is of course possible to carry out a transfer at four times normal speed when backing up video and audio data recorded on the disk drive to the DSR-85/85P, or in the opposite direction when loading data backed up on the DSR-85/85P to the disk drive. Thus the time required is much shorter than with conventional equipment (for which, for example, transferring a 40-minute segment of video takes 40 minutes).

ClipLink Guide

What Is ClipLink?

The ClipLink function greatly improves the efficiency of the video production process as a whole by shooting various editing-related data on tape when recording. As such, ClipLink is a revolutionary function that transcends the conventional separation of shooting and editing.

How ClipLink Changes Video Production Techniques

The following describes various ways in which ClipLink\* video production differs from conventional video production.

\* The ClipLink system is a video production system which uses the cassette memory function.

Recording of ClipLink log data lightens the shooting workload

When you start shooting a scene, ClipLink log data such as the scene number and time code data are automatically recorded into the cassette memory. This eliminates the need for a conventional "shot list" compiled by someone using a stopwatch, clipboard and pencil. You can also designate unwanted scenes as "NG" (no good) and automatically skip all "NG" scenes when editing.


Recorded index pictures drastically cut editing time

The ClipLink function also features index pictures as a time-saving tool for rough editing. Each index picture is a compressed image taken from the start of each scene, which is recorded onto the tape as a still picture. When editing, begin by transferring only the index pictures and the ClipLink log data to the EditStation's hard disk. You can also transfer OK scenes only ("NG" scenes are skipped).

Next, begin rough editing by viewing the index pictures on the EditStation's GUI display and rearranging them as you wish. This eliminates the difficult work of matching up a handwritten shot list with recorded scenes. After you have completed this rough editing, you can then transfer only the recordings needed for your video program.




The following illustration shows an example system configuration for using the ClipLink function and a typical ClipLink operation flow.

 

The following describes the kinds of data that is generated when using the ClipLink function.

 When shooting, a single-frame image from the Mark IN point at the start of each scene is recorded as a still picture into the camcorder's internal memory. These images are called "index pictures." When you finish shooting, the index pictures from all scenes are recorded onto the tape after the last scene.



ClipLink log data can be recorded automatically or manually into the cassette memory for use as a convenient alternative to the conventional "shot list."

ClipLink log data includes the following items.

ClipLink log data	Description
Reel number (cassette number)	Consisting of alphanumeric characters and/or symbols (This is left blank at shipping).
Scene number	A three-digit number from 001 to 196 (starts at 001 and is automatically incremented with each scene.)
Take number	This cannot be changed (set to "1" at shipping).
OKING	Indicates the OKING status of a particular scene. (In the OK case, nothing is recorded.)
Mark IN/OUT point time codes	These are the time codes that indicate the Mark IN and Mark OUT points for each scene (HH:MM:SS). These time codes are recorded when the camera has been set to MAHK mode. The time code value is rounded up at each Mark IN point and rounded down at each Mark OUT point, to a whole number of seconds. <i>For details, see "Time codes recorded for Mark IN/OUT points" on page 109.</i>
Cue point time code	This is the time code that indicates the cue points (valid up to the frame digit). This time code is recorded when the camera has been set to CUE mode. When in this mode, the time codes at the start and end of a recording (the Rec IN and Rec OUT time codes) are automatically recorded as Mark IN and OUT points, respectively.

### How to record ClipLink log data


The following describes how to record the various ClipLink log data items.

#### OK/NG status

To designate a scene as "NG," press the NG button on the camera while shooting the scene or at any time before you begin shooting the next scene.  
All scenes that do not receive an "NG" designation are recorded as "OK" scenes.  
(When you exit the VCR recording mode, changing the OK/NG status is no longer possible.)


#### Mark IN/OUT point time codes

This data is especially useful when shooting a video program for which a scenario has been created.  
Set the camera to MARK mode before you start shooting.  
While shooting, each time you press the camera's TAKE button, Mark IN and Mark OUT point time codes are recorded alternately.

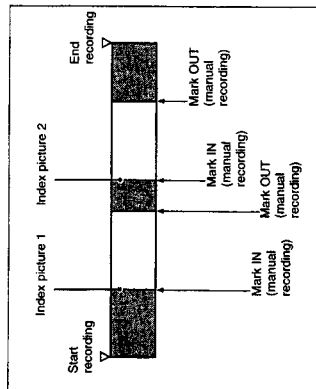


#### Cue point time codes

This type of data is especially useful when shooting scenes that may contain unexpected events, such as when shooting for sports coverage or documentaries.  
Set the camera to CUE mode before you start shooting.  
While shooting, each time you press the camera's TAKE button, the current time code is recorded as a cue point time code.

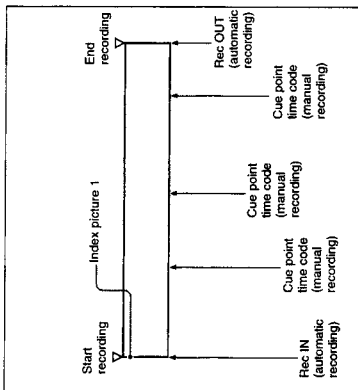

### Time codes recorded for Mark IN/OUT points

There is a gap between actual time codes and Mark IN/OUT time codes recorded in the cassette memory, as shown in the figure below. The time code value is rounded up at each Mark IN point and rounded down at each Mark OUT point, to a whole number of seconds.

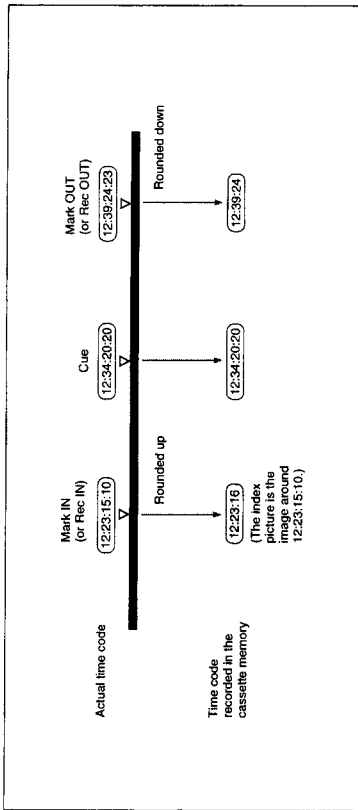

### Recording capacity for Mark IN/OUT point time codes and cue point time codes

When in MARK mode, up to 198 pairs of Mark IN and Mark OUT points can be recorded (if using a cassette with 16 Kbits of cassette memory).  
When in CUE mode, up to 396 time code points (including all cue point time codes and all Mark (Rec) IN and Mark (Rec) OUT time codes) can be recorded (if using a cassette with 16 Kbits of cassette memory).



## Glossary

### AB roll editing

An editing method that uses two or more playback VCRs to create special effects such as dissolve and wipe, and uses one record VCR to record the results of the editing. Using an editing control unit allows efficient control of the VCRs and very precise editing.

### AES/EBU format

A unified format for digital audio signals. It allows a single connector to carry the signals for two channels.

### B-Y signal

A chrominance signal determined by subtracting the Y (luminance) signal from the B (blue) signal. One of the component signals.

### Capstan

A drive mechanism that moves the tape at a specified speed. Its rotation normally synchronizes with a reference sync signal.

### Chrominance signal

Color signal containing color information such as hue and saturation. Also called C signal.

### Component signals (VRB)

A video signal consisting of a luminance signal (Y) and two chrominance signals (R-Y, B-Y).

### Composite signal

A composite video signal containing video, burst and sync signals.

### Condensation

Condensation of moisture on the tape transport mechanisms of VCRs including the head drum. If moisture condenses on the head drum, the tape adheres to the drum and causes malfunction.

### Drop frame mode

Time code runs at 30 frames/sec. The NTSC system, however, runs at about 29.97 frames/sec. Drop frame mode adjusts this difference. The time code and video are synchronized by dropping the first two frames of the time code every minute, except at the ten-minute marks.

### EE mode

EE is an abbreviation of "Electric to Electric." Video and audio signals are supplied to the VCR's internal circuits, but not to the recording heads.

### Head drum

A metal cylinder to which a video head is attached. This drum is rotated at high speeds in synchronization with the sync signal during recording and playback.

### Linear editing

Editing while playing back video and audio signals recorded on video tape. See also "Non-linear editing."

### Loading

When being loaded, the tape is pulled out of the cassette case and threaded along the specified tape path and wrapped round the drum to be ready for recording or playback. Generally, this is done automatically when you place the cassette at the cassette entrance of the VCR. Also called threading.

### Loop-through connection

A connection which allows a signal input to an input connector to pass through the unit and exit from an output connector as input to external equipment. Also called bridging connection.

### Luminance signal

The signal that determines the brightness of the picture. Also called Y signal. One of the component signals.

### Non-drop frame mode

The number of frames of the time code and video run is not adjusted. When you use the time code in non-drop frame mode, the real playback time will be about 86 seconds shorter per day than the time code. If you edit frame by frame or if you determine the length of a shot by counting the time code, use drop frame mode.

### Non-linear editing

Editing while playing back video and audio signals recorded on hard disks. Video scenes stored on disk can be cued up quickly, for increased editing efficiency. See also "Linear editing."

### PCM audio

This is an audio signal represented by pulse code modulation. The analog audio signal is first broken down into a sequence of pulses, and these are then represented digitally.

### Preroll

Running off a video tape to a prior to an edit-start point to enable the tape to reach a steady speed and to be synchronized with other video tapes.

### R-Y signal

A chrominance signal determined by subtracting the Y (luminance) signal from the R (red) signal. One of the component signals.

### Reference video signal

A video signal consisting of a sync signal or sync and burst signals, used as a reference.

### Setup (for DSR-1500)

The difference between the reference black level and the blanking level of a composite signal.

### SMPTÉ

Abbreviation of Society of Motion Picture and Television Engineers, a professional association established in the USA.

### S/N

Abbreviation of Signal-to-Noise (ratio). The higher the S/N value, the less noise and higher the picture quality.

### Search mode

A VCR operating mode used when searching for specific scenes, by viewing the video output or time code values while playing back the tape at various speeds in forward or reverse direction.

### Servo lock

Synchronizing the drum rotation phase and tape transport phase with a reference signal during playback and recording so that the video heads scan the tape in the same pattern during playback and recording.

### Standby Off mode

One of two conditions in the stop mode. The drum does not rotate and tape is slackened. There is no damage to the video heads and the tape, but the VCR is not ready for immediate recording or playback.

### Standby On mode

One of two conditions in the stop mode. The drum is rotating and the tape is wrapped round the drum. The VCR is ready for recording or playback, so a still picture can be obtained.

### Subcarrier

A sine wave imposed on the luminance portion of a video signal and modulated to carry color information. Its amplitude represents color saturation and its phase represents hue.

### Superimpose

To put a set of characters onto a picture so that both can be seen at the same time.

### S-video

A signal format in which Y (luminance) and C (chrominance) signals are separated to reduce interference between them so that noiseless images are reproduced.

### Sync signal

A reference signal consisting of vertical and horizontal sync signals used for synchronizing the scanning patterns of the video camera and the monitor.

### TBC

Abbreviation of Time Base Corrector. Electronic circuits to electrically stabilize the playback signals by removing color variation and roll in the playback picture caused by irregularity in drum rotation and tape movement. Time base correction reduces deterioration of picture quality when transmitting or copying playback signals.

### Threading

See "Loading."

### Time code

Signals recorded on the tape to supply information on tape position such as the hour, minute, second and frame, to assist in setting edit points or searching for particular scenes.

### Unloading

When the EJECT button is pressed, the VCR automatically winds the tape back into the cassette case. Also called "Unthreading."

### User bits

Sections of time code information consisting of a total of 32 bits that can be used for recording information such as date, tape ID number, program ID number, etc.



Appendixes

## Index

### Numerics

2CH indicator 16  
 32K indicator 15  
 44.1K indicator 15  
 48K indicator 15  
 4CH indicator 16  
 9P indicator 15

### A

A/B roll editing system 83  
 AC IN connector 18  
 Accessories 104  
 AES/EBU  
   format 12  
   indicator 14  
 Alarm messages 98  
 Analog  
   audio 6  
   audio input(s) 12, 103  
   audio outputs 104  
   Input Board 7  
   interfaces 6  
   recording 90  
   video 6  
   video inputs 103  
   video outputs 104  
   video/audio signal input section 19  
   video/audio signal output section 20

ANALOG indicator 14

Arrow buttons 17

Audio

  input/output level control section 11

  level meters 9

  performance 103

  problem 97

  test signal 12

AUDIO (AES/EBU)

  IN 1/2 and 3/4 connectors 21

  OUT 1/2 and 3/4 connectors 21

AUDIO IN 1/3 and 2/4 connectors 19

AUDIO indicators 14, 15

AUDIO OUT 1/3 and 2/4 connectors 20

AUTO FUNCTION 71

  Auto mode execution menu 71

  Automatic cyclical playback 36

### B

B-Y connector 19

B-Y/CPST (SUPER) connector 20

### C

Cassette 23

  compartment 9

  memory indicator 15

CH1 1/2 button 12

CH-1 1/2 indicator 14

CH2 3/4 button 12

CH-2 3/4 indicator 14

CL indicator 15

ClipLink 7

  Guide 105

  index pictures 107

  log data 107

  log data recording 108

  log data recording capacity 109

  system configuration 106

Closed caption 7

CNT 10

  value resetting 45

Component video input 11

COMPOSITE indicator 14

Composite video input 11

Condensation 93

Connections 79

  A/B roll editing system 83

  analog recording 90

  audio monitor system 85

  control signal 86

  cut editing system 81

  digital non-linear editing system 79

  reference video signal 85

  SDTI (QSDI) dubbing 89

  video monitor 88

  video/audio signal 87

CONTROL S connector 10

COUNTER 10, 15

  SELECT button 10

  Cue point 108

  Cuing up 42

  Cut editing system 81

  Cyclical playback 36

### D

Digital

  hours meter 7

  Input/Output Board 7

  interfaces 6

  jog sound 6

  non-linear editing system 79

  signal input/output section 21

  signal inputs 103



Index

signal outputs 104  
 slow motion playback 6, 50

Digital hours meter 93

Display section 13

Drop frame indication 44

DSBK-1501/1503/1504/1504P 7

Dubbing 51

  SDTI (QSDI) 89

DV 15

  input 11

DV IN/OUT connector 18

DVCAM 15, 51

  cassettes 24

  digital dubbing 51

  format 5

### E

EBU time code 15

EDIT MODE indicator 16

Editing

  control unit settings 88

  points 50

  restriction 97

EE OUT PHASE 69

EJECT button 9

Error messages 98

### F

F FWD button 16

FREE RUN 46

Front panel 8

### H

Head cleaning 95

High-speed

  search 6, 50

  transfer 105

Hours meter 7, 93

### I

i.LINK 11

  indicator 13, 15

i.LINK (DV) 6

i.LINK DUBBING 71

i.LINK/DV Input/Output Board 7

Index pictures 107

Input problem 96

INPUT signal display section 13

Interfaces 6

  Internal test signal generator 7

  Internal time code generator 45

  advancement 46

**J**

Jog 50  
audio 50  
sound 6

**L**

LOCAL/REMOTE switch 9  
LP 15

**M**

Maintenance 7, 93  
Mark IN/OUT points 108, 109  
Menu 55

AUDIO CONTROL 65  
AUTO FUNCTION 71

changing settings 72  
contents 58

DISPLAY CONTROL 60  
indications 58

INTERFACE SELECT 67  
MENU GRADE 68

REC/PB LEVEL control knobs 11  
OPERATIONAL FUNCTION 58

organization 55

resetting to default settings 75  
SETUP BANK OPERATION 67

TAPE PROTECTION 63  
TIME CODE 62

VIDEO CONTROL 64  
Menu button 17

Menu control section 17  
METER CH-1/2, 3/4 button 10

MONITOR  
connector 20

SELECT button 10  
Monitor

problems 97  
screen contents 44

**N**

NO EDIT indicator 15

**O**

OK/NG status 108  
Operation mode 44

indications 43  
Optional boards 7

OUTPUT signal display section 14

**P**

PB Fs display 15  
PCM digital audio 5

Phase adjustment 91  
PHONES

connector 9  
control knob 9

PLAY button 16  
Playback 33

compatibility 5  
cyclical 36

procedure 34  
settings 33

slow motion 6  
tape format indicators 15

Points A and B 36  
POWER switch 9

Precutions 101  
Processor adjustment range 103

**R**

Rear panel 18  
REC button 16

REC INHI indicator 15  
REC MODE display 16

REC RUN 46  
REC/PB LEVEL control knobs 11

Recording 27  
procedure 30

settings 27  
REF. VIDEO IN connectors 18

Reference video signals 82  
Regular checks 93

Related equipment 104  
REMOTE

connector 18  
indicator 15

Remote  
control 6

control connectors 104  
mode indicators 15

REPEAT indicator 15  
Repeat playback 36

Rerecording time code 47  
RESET (NO) button 17

REW button 16  
R-Y/C connector 19

R-Y/C/CPST connector 20

**S**

S VIDEO indicator 14  
SC control 9

SDI 6  
audio input 12

indicator 14  
video input 11

SDI/SDTI (QSDI)  
IN connector 21

OUT1/OUT2 connectors 21  
SDTI (QSDI) 6, 89

Input 11

SDTI DUBBING 71  
SDTI indicator 13, 14

SDTI/LINK button 11  
Search 50

via external equipment 50  
SERVO indicator 15

SET (YES) button 17  
Setup menu 58

SG indicator 14  
Shuttle 50

Slow motion playback 6  
SMPT-E time code 15

Still 50  
STOP button 16

Subcarrier phase 91  
Superimposed text 20

Superimposition 7  
Supplementary status information 76

S-video input 11  
SYNC control 9

Sync phase 91

**T**

Tape

end alarm indicator 15  
problems 96

transport control section 16  
TC 10, 15

IN connector 21  
INSERT 71

insert function 47  
OUT connector 21

PRESET button 17  
Test signal generator 7

THROUGH mode 69  
Time code 7

input 103  
input/output section 21

output 104  
rerecording 47

synchronization 46  
value setting 45

Time code generator 45  
advancement 46

Time counter display 15  
Time data

displaying 43, 45  
problems 96

setting 43  
type 44

type indicators 15  
Troubleshooting 96

**U**

U-BIT 10, 15  
Usable cassettes 23



Index



Index



**SONY**

3-205-071-01(1)



# *Digital Input/Output Board*

---

Installation Instructions



**DSBK-1501**

© 2000 by Sony Corporation

## Overview

### For the customers in the USA

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### For the customers in Canada

This Class A digital apparatus complies with Canadian ICES-003.

### For the customers in Europe

This product with the CE marking complies with the EMC Directive (89/336/EEC) issued by the Commission of the European Community.

Compliance with this directive implies conformity to the following European standards:

- EN55103-1: Electromagnetic Interference (Emission)
- EN55103-2: Electromagnetic Susceptibility (Immunity)

This product is intended for use in the following Electromagnetic Environment(s):

E1 (residential), E2 (commercial and light industrial), E3 (urban outdoors) and E4 (controlled EMC environment, ex. TV studio).

### Pour les utilisateurs au Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

### Pour les clients européens

Ce produit portant la marque CE est conforme à la Directive sur la compatibilité électromagnétique (EMC) (89/336/CEE) émise par la Commission de la Communauté européenne.

La conformité à cette directive implique la conformité aux normes européennes suivantes:

- EN55103-1: Interférences électromagnétiques (émission)
- EN55103-2: Sensibilité électromagnétique (immunité)

Ce produit est prévu pour être utilisé dans les environnements électromagnétiques suivants:

E1 (résidentiel), E2 (commercial et industrie légère), E3 (urbain extérieur) et E4 (environnement EMC contrôlé ex. studio de télévision).

### Für Kunden in Europa

Dieses Produkt besitzt die CE-Kennzeichnung und erfüllt die EMV-Direktive (89/336/EEC) der EG-Kommission.

Die Erfüllung dieser Direktive bedeutet Konformität für die folgenden Europäischen Normen:

- EN55103-1: Elektromagnetische Interferenz (Emission)
- EN55103-2: Elektromagnetische Empfindlichkeit (Immunität)

Dieses Produkt ist für den Einsatz unter folgenden elektromagnetischen Bedingungen ausgelegt:

E1 (Wohnbereich), E2 (kommerzieller und in beschränktem Maße industrieller Bereich), E3 (Stadtgebiet im Freien) und E4 (kontrollierter EMV-Bereich, z.B. Fernsehstudio).

### Per i clienti in Europa

Questo prodotto recante il marchio CE è conforme alla direttiva sulla compatibilità elettromagnetica (EMC) (89/336/CEE) emessa dalla Commissione della Comunità Europea.

La conformità a questa direttiva implica la conformità alle seguenti normative europee:

- EN55103-1: Interferenza elettromagnetica (Emissione)
- EN55103-2: Sensibilità ai disturbi elettromagnetici (Immunità)

Questo prodotto è destinato all'uso nei seguenti ambienti elettromagnetici:

E1 (residenziali), E2 (commerciali e industriali leggeri), E3 (esempi urbani) e E4 (ambienti EMC controllati, ad esempio studi televisivi).

The DSBK-1501 Digital Input/Output Board is an optional board for the DSR-1500/1500P Digital Videocassette Recorder.

The DSBK-1501 optional board is provided with three fastening screws (M3 x 6).


Refer to the DSR-1500/1500P Operating Instructions for information on connecting and operating the DSR-1500/1500P fitted with the DSBK-1501.

## Installation

### Caution


If this option is installed incorrectly, personal injury or damage to peripheral items may occur due to fire, shock, or other accidental circumstances. To avoid such risks, installation should be performed by qualified service personnel.

1

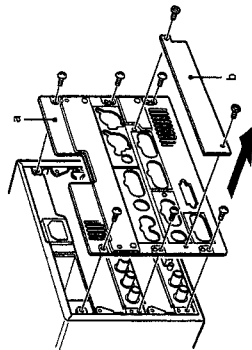


Remove the blanking panel (b) and the rear panel (a).

2

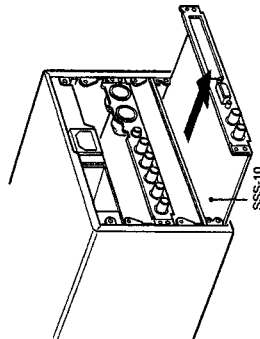


Pull out the lower board (SSS-10).

3

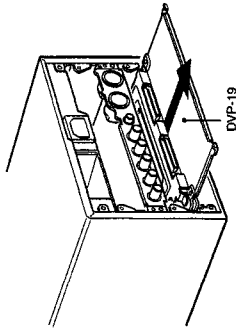

Pull out the second board (DVP-19) from the bottom.


4

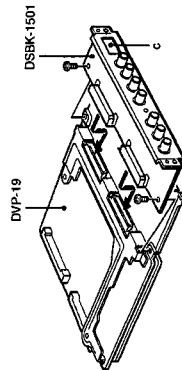

Plug the connectors on the DSBK-1501 board into the connectors on the edge of the board (DVP-19) you have just pulled out, then fasten the DSBK-1501 board with the screws.


If the DSBK-1503 board and i.DV IN/OUT connector are already installed, remove the i.DV IN/OUT connector from the connector adapter, and refit to the i.DV IN/OUT connector section (c) of the DSBK-1501 board.

5

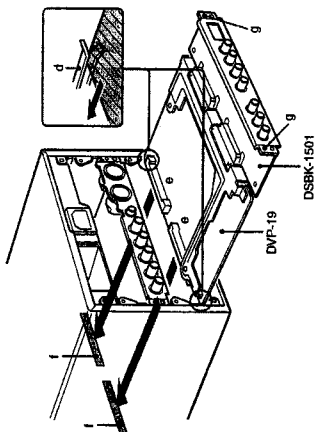


Insert the DVP-19 board and DSBK-1501 board, aligning them with the guides (d), and plug the connectors (e) of the DVP-19 board into the connectors (f) on the DSR-1500/1500P unit. At this point, align the positioning holes (g) with the studs at the edge of the unit.

6

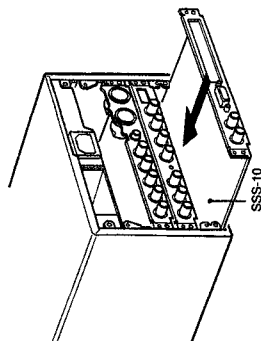

Replace the lower board (SSS-10).

7

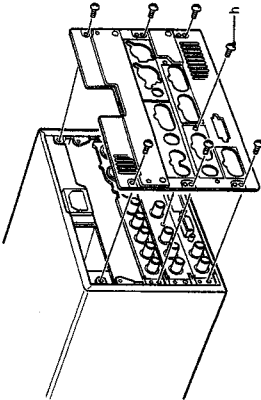

Replace the rear panel. Fasten the screw (h).

# i.LINK/DV Input/ Output Board

## Installation Instructions



DSBK-1503

© 2000 by Sony Corporation

### For the customers in the USA

The equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### For the customers in Canada

This Class A digital apparatus complies with Canadian ICES-003.

### For the customers in Europe

This product with the CE marking complies with the EMC Directive (89/336/EEC) issued by the Commission of the European Community.

Compliance with this directive implies conformity to the following European standards:

- EN55103-1: Electromagnetic Interference (Emission)
- EN55103-2: Electromagnetic Susceptibility (Immunity)

This product is intended for use in the following Electromagnetic Environment(s):  
E1 (residential), E2 (commercial and light industrial), E3 (urban outdoors) and E4 (controlled EMC environment, ex. TV studio).

### Pour les utilisateurs au Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

### Pour les clients européens

Ce produit portant la marque CE est conforme à la Directive sur la compatibilité électromagnétique (EMC) (89/336/CEE) émise par la Commission de la Communauté européenne. La conformité à cette directive implique la conformité aux normes européennes suivantes:

- EN55103-1: Interférences électromagnétiques (émission)
- EN55103-2: Sensibilité électromagnétique (immunité)

Ce produit est prévu pour être utilisé dans les environnements électromagnétiques suivants:  
E1 (résidentiel), E2 (commercial et industrie légère), E3 (urbain extérieur) et E4 (environnement EMC contrôlé ex. studio de télévision).

### Für Kunden in Europa

Dieses Produkt besitzt die CE-Kennzeichnung und erfüllt die EMV-Direktive (89/336/EEC) der EG-Kommission.

Die Erfüllung dieser Direktive bedeutet Konformität für die folgenden Europäischen Normen:

- EN55103-1: Elektromagnetische Interferenz (Emission)
- EN55103-2: Elektromagnetische Empfindlichkeit (Immunität)

Dieses Produkt ist für den Einsatz unter folgenden elektromagnetischen Bedingungen ausgelegt:  
E1 (Wohnbereich), E2 (kommerzieller und in beschränktem Maße industrieller Bereich), E3 (Stadtbereich im Freien) und E4 (kontrollierter EMV-Bereich, z.B. Fernsehstudio).

### Per i clienti in Europa


Questo prodotto recante il marchio CE è conforme alla direttiva sulla compatibilità elettromagnetica (EMC) (89/336/CEE) emessa dalla Commissione della Comunità Europea. La conformità a questa direttiva implica la conformità alle seguenti normative europee:

- EN55103-1: Interferenza elettromagnetica (Emissione)
- EN55103-2: Sensibilità ai disturbi elettromagnetici (Immunità)


Questo prodotto è destinato all'uso nei seguenti ambienti elettromagnetici:  
E1 (residenziali), E2 (comerciali e industriali leggeri), E3 (esterni urbani) e E4 (ambienti EMC controllati, ad esempio studi televisivi).

# Overview

The DSBK-1503 iLINK\*DV Input/Output Board is an optional board for the DSR-1500/1500P Digital Videocassette Recorder.  
Refer to the DSR-1500/1500P Operating Instructions for information on connecting and operating the DSR-1500/1500P fitted with the DSBK-1503.

\* iLINK and  are trademarks and indicate that this product is in agreement with IEEE1394-1995 specifications and their revisions.

The DSBK-1503 consists of the following items.

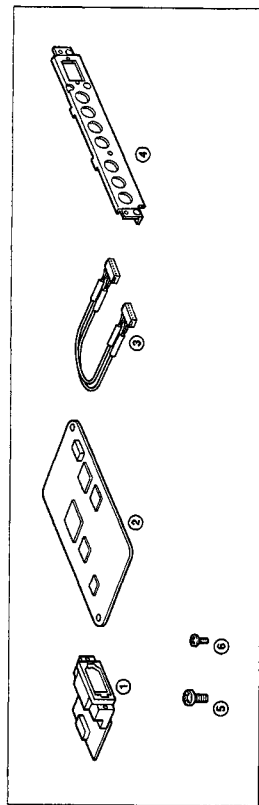


- ① iDV IN/OUT connector
- ② DV-25 board
- ③ Harness
- ④ Connector adapter
- ⑤ Screws (M3 x 6 x 3)
- ⑥ Screws (M2 x 5 x 2)

# Installation

## Caution


If this option is installed incorrectly, personal injury or damage to peripheral items may occur due to fire, shock, or other accidental circumstances. To avoid such risks, installation should be performed by qualified service personnel.

1

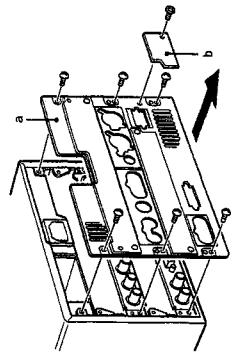

Remove the blanking panel (b) and the rear panel (a).


2

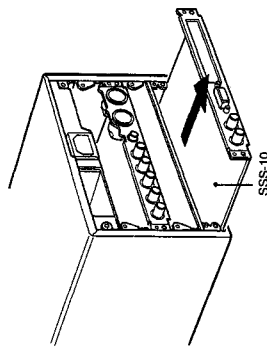

Pull out the lower board (SSS-10).


## Installation

3

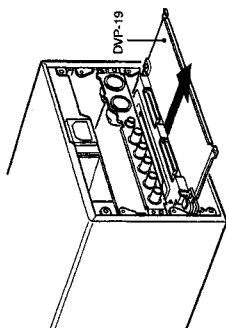


Pull out the second board (DVP-19) from the bottom.

4

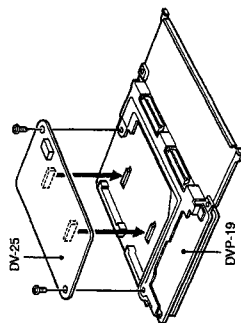


Plug the connectors on the underside of the DV-25 board into the connectors on the top of the board (DVP-19) you pulled out in step 3, and fasten the DV-25 board with screws.

5

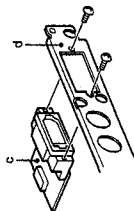


Fasten the iDV IN/OUT connector (c) to the supplied connector adapter (d) with screws.

6

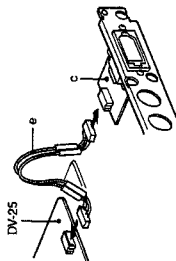


With the supplied harness (e), connect the iDV IN/OUT connector (c) to the DV-25 board.

7

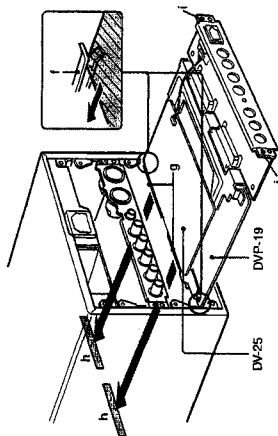


Insert the DVP-19 board and DV-25 board, aligning them with the guides (f), and plug the connectors (g) on the DVP-19 board into the connectors (h) on the DSR-1500/1500P unit. At this point, align the positioning holes (i) with the studs at the edge of the unit.

8

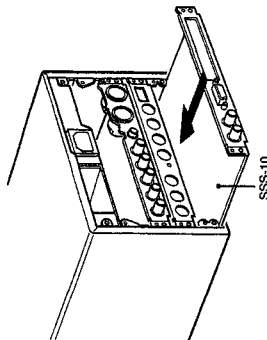

Replace the lower board (SSS-10).

9

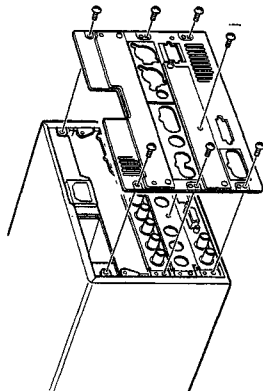

Replace the rear panel. Fasten the screw (j).

**If the DSBK-1501 board is already installed**

In the foregoing procedure, modify step 5 as follows.

- 5 Fit the i.DV IN/OUT connector to the i.DV IN/OUT connector section of the DSBK-1501 board.



SONY.

3-205-072-01(1)

## Analog Input Board

### Installation Instructions

## Overview

The DSBK-1504/1504P Analog Input Board is an optional board for the DSR-1500/1500P Digital Videocassette Recorder.

The DSBK-1504/1504P optional board is provided with a fastening screw (M3 × 6). Refer to the DSR-1500/1500P Operating Instructions for information on connecting and operating the DSR-1500/1500P fitted with the DSBK-1504/1504P.

### Pour les utilisateurs au Canada (pour DSBK-1504 seulement)

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

### Pour les clients européens (pour DSBK-1504P seulement)

Ce produit portant la marque CE est conforme à la Directive sur la compatibilité électromagnétique (EMC) (89/336/CEE) émise par la Commission de la Communauté européenne.

La conformité à cette directive implique la conformité aux normes européennes suivantes:

- EN55103-1: Interférences électromagnétiques (émission)
- EN55103-2: Sensibilité électromagnétique (immunité)

Ce produit est prévu pour être utilisé dans les environnements électromagnétiques suivants:

E1 (résidentiel), E2 (commercial et industrie légère), E3 (urbain extérieur) et E4 (environnement EMC contrôlé ex. studio de télévision).

### Für Kunden in Europa (nur für DSBK-1504P)

Dieses Produkt besitzt die CE-Kennzeichnung und erfüllt die EMV-Direktive (89/336/EEG) der EG-Kommission.

Die Erfüllung dieser Direktive bedeutet Konformität für die folgenden Europäischen Normen:

- EN55103-1: Elektromagnetische Interferenz (Emission)
- EN55103-2: Elektromagnetische Empfindlichkeit (Immunität)

Dieses Produkt ist für den Einsatz unter folgenden elektromagnetischen Bedingungen ausgelegt:

E1 (Wohnbereich), E2 (kommerzieller und in beschränktem Maße industrieller Bereich), E3 (Stadtgebiet im Freien) und E4 (kontrollierter EMV-Bereich, z.B. Fernsehstudio).

### Per i clienti in Europa (soltanto per la DSBK-1504P)

Questo prodotto recante il marchio CE è conforme alla direttiva sulla compatibilità elettromagnetica (EMC) (89/336/CEE) emessa dalla Commissione della Comunità Europea.

La conformità a questa direttiva implica la conformità alle seguenti normative europee:

- EN55103-1: Interferenza elettromagnetica (Emissione)
- EN55103-2: Sensibilità ai disturbi elettromagnetici (Immunità)

Questo prodotto è destinato all'uso nei seguenti ambienti elettromagnetici:

E1 (residenziali), E2 (commerciali e industriali leggeri), E3 (esterni urbani) e E4 (ambienti EMC controllati, ad esempio studi televisivi).

### For the customers in the USA (for DSBK-1504 only)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not belted and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### For the customers in Canada (for DSBK-1504 only)

This Class A digital apparatus complies with Canadian ICES-003.

### For the customers in Europe (for DSBK-1504P only)

This product with the CE marking complies with the EMC Directive (89/336/EEC) issued by the Commission of the European Community. Compliance with this directive implies conformity to the following European standards:

- EN55103-1: Electromagnetic Interference (Emission)
- EN55103-2: Electromagnetic Susceptibility (Immunity)

This product is intended for use in the following Electromagnetic Environment(s):

E1 (residential), E2 (commercial and light industrial), E3 (urban outdoors) and E4 (controlled EMC environment, ex. TV studio).



DSBK-1504/1504P


Sony Corporation © 2000 Printed in Japan

## Installation

### Caution

If this option is installed incorrectly, personal injury or damage to peripheral items may occur due to fire, shock, or other accidental circumstances. To avoid such risks, installation should be performed by qualified service personnel.

- 1 Remove the blanking panel (b) and the rear panel (a).
- 2 Insert the DSBK-1504/1504P board, aligning it with the guides (c), and plug the connector (d) on the DSBK-1504/1504P board into the connector (e) on the DSR-1500/1500P unit.  
At this point, align the positioning holes (f) with the studs at the edge of the unit.
- 3 Replace the rear panel. Fasten the screw (g).

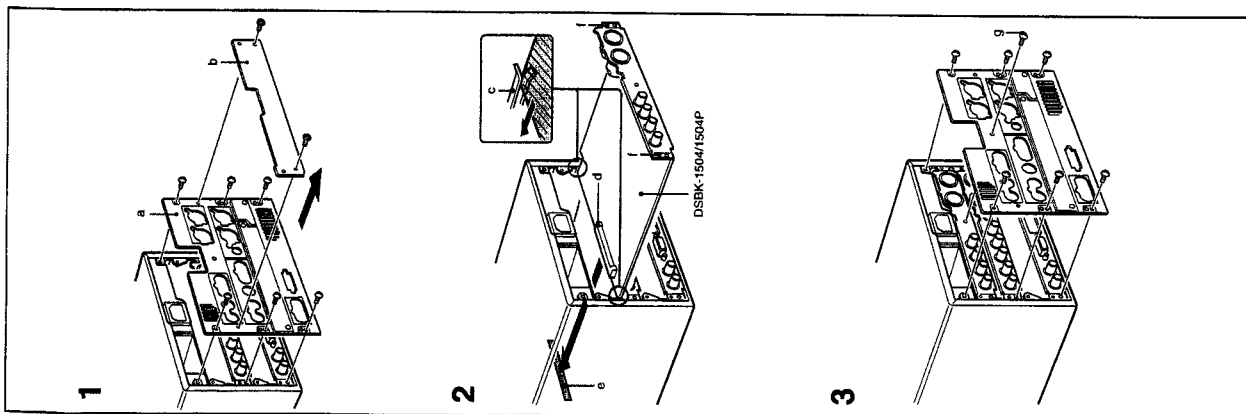

## Section 2

### Installation

Be sure to install the DSR-1500/1500P in location satisfying the required operational environment described below to assure the DSR-1500/1500P superior performance and to maintain the excellent serviceability and accessibility.

#### 2-1. Operational Environment

- Operating temperature : +5 °C to +40 °C
- Humidity : 80 % or less
- Storage temperature : -20 °C to +60 °C
- Locations to avoid :
  - Areas where the unit will be exposed to direct sunlight or any other strong lights.
  - Dusty areas or areas where it is subject to vibration.
  - Areas with strong electric or magnetic fields.
  - High-temperature environment.(Good air circulation is essential to prevent internal heat build-up. Place the unit in location with sufficient air circulation. Do not block the ventilation holes on the sides of the cabinet and the rear panel.)
- Horizontal condition : within  $\pm 30^\circ$

#### 2-2. Operating Voltage

- Power voltage : AC 100 V to 240 V
- Power frequency : 50/60 Hz
- Power consumption : 65 W

#### 2-3. Supplied Accessories

- AC power cord : 1
- Operating instructions : 1

#### 2-4. Optional Accessories

- Digital input/output board : DSBK-1501
- i.LINK/DV input/output board : DSBK-1503
- Analog input board : DSBK-1504/1504P
- 9-pin remote cable : RCC-5G/10G/30G
- Cleaning cassette tape : DV12CL (Standard size), DVM12CL (Mini size)
- DVCAM video cassette (Mini size) : PDVM-12ME/22ME/32ME/40ME
- DVCAM video cassette (Standard size) : PDV-64ME/94ME/124ME/184ME

## 2-5. Matching Connectors

### 2-5-1. Matching Connectors/Cables

When external cables are connected to the connector on a connector panel during maintenance, the following connectors, cables (or their equivalents) must be used.

Connectors on DSR-1500/1500P Side		Matching connector/cable	
Panel indication	Designation	Sony Part No.	Remark
ANALOG IN REF. VIDEO IN TIME CODE IN	BNC, MALE	1-560-069-11	When DSBK-1504/ 1504P is attached
AUDIO IN CH-1/3, 2/4	XLR 3P, FEMALE	1-508-083-11	When DSBK-1504/ 1504P is attached
ANALOG OUT TIME CODE OUT VIDEO OUT COMPONENT VIDEO OUT	BNC, MALE	1-560-069-11	
MONITOR AUDIO	PIN PLUG	Standard Product	
AUDIO OUT CH-1/3, 2/4	XLR 3P, MALE	1-508-084-11	
i.LINK	IEEE1394 6P (1 m) IEEE1394 6P (3.5 m)	1-782-408-21 1-791-184-11	When DSBK-1503 is attached
SDI/SDTI (QSDI) INPUT	BNC, MALE	1-560-069-11	When DSBK-1501 is attached
SDI/SDTI (QSDI) OUTPUT	BNC, MALE	1-560-069-11	When DSBK-1501 is attached
DIGITAL AUDIO (AES/EBU) INPUT CH-1/2, CH-3/4	BNC, MALE	1-560-069-11	When DSBK-1501 is attached
OUTPUT CH-1/2, CH-3/4	BNC, MALE	1-560-069-11	When DSBK-1501 is attached
REMOTE-IN	D-SUB 9P, MALE	1-560-651-11	

## 2-5-2. Input/Output Signals of the Connectors


### INPUT

REF.VIDEO :	BNC × 2 (loop-through : with 75 Ω automatic termination switch) NTSC black burst, 0.286 V p-p, 75 Ω, sync negative : when the composite video signal is input (The BB signal can be input.) PAL black burst, 0.3 Vp-p , 75 Ω sync negative
COMPONENT VIDEO :	BNC × 3 (when the DSBK-1504/1504P is attached) Luminance : 1.0 V p-p, 75 Ω, sync negative, loop-through : with 75 Ω automatic termination switch R-Y/C : 0.7 V p-p, 75 Ω (75 %), in case of NTSC S-C : 0.286 V p-p (burst level), 0.7 V p-p, 75 Ω (100 %), in case of PAL S-C : 0.3 V p-p (burst level) B-Y : 0.7 V p-p, 75 Ω (75 %), in case of NTSC 0.7 V p-p, 75 Ω (100 %), in case of PAL
SDI/SDTI (QSDI) INPUT :	BNC × 1 (when the DSBK-1501 is attached) SDI : Serial digital interface format (270 Mbps), SMPTE 259M (NTSC)/ITU-R BT.656 (PAL) SDTI (QSDI) : Serial digital interface unit (DVCAM compressed signal : video + audio + TC signal)
AUDIO IN :	XLR 3P × 2 (when the DSBK-1504/1504P is attached) Reference level switchable (−6/0/+4 dBu), high impedance, balanced
DIGITAL AUDIO (AES/EBU) :	BNC × 2 (when the DSBK-1501 is attached) conformed with AES-3id-1995
TIME CODE :	BNC × 1 SMPTE (NTSC)/EBU (PAL) 0.5 to 18 V p-p, 3 kΩ, unbalanced
i.LINK :	IEEE1394 connector 6P × 1 (when the DSBK-1503 is attached)

### OUTPUT

COMPONENT VIDEO :	BNC × 3 Luminance : 1.0 V p-p, 75 Ω, sync negative, loop-through : with 75 Ω automatic termination switch R-Y/C : 0.7 V p-p, 75 Ω (75 %), in case of NTSC S-C : 0.286 V p-p (burst level), 0.7 V p-p, 75 Ω (100 %), in case of PAL S-C : 0.3 V p-p (burst level) B-Y : 0.7 V p-p, 75 Ω (75 %), in case of NTSC 0.7 V p-p, 75 Ω (100 %), in case of PAL
SDI/SDTI (QSDI) OUTPUT :	BNC × 2 (when the DSBK-1501 is attached) SDI : Serial digital interface format (270 Mbps), SMPTE 259M (NTSC)/ITU-R BT.656 (PAL) SDTI (QSDI) : Serial digital interface unit (DVCAM compressed signal : video + audio + TC signal)
AUDIO OUT :	XLR 3P × 2, MALE +4 dBu, 600 Ω load, balanced (low impedance)
MONITOR AUDIO :	Pin jack × 1 −∞ to −11 dBu (NTSC : −20 dBFS), −∞ to −9 dBu (PAL : −18 dBFS) 47 kΩ load, unbalanced , Headphone Volume : Center
DIGITAL AUDIO :	BNC × 2 (when the DSBK-1501 is attached) conformed with AES-3id-1995
TIME CODE :	BNC × 1 SMPTE (NTSC)/EBU (PAL) 2.2 V p-p ±3.0 dB, 600 Ω, unbalanced
i.LINK :	IEEE1394 connector 6P × 1 (when the DSBK-1503 is attached)

**REMOTE** (D-sub 9-pin : MALE)

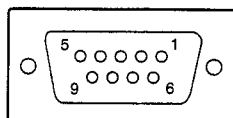

– EXT VIEW –

Pin No.	Controlling Device	Controlled Device
1	FRAME GROUND	FRAME GROUND
2	RECEIVE A	TRANSMIT A
3	TRANSMIT B	RECEIVE B
4	TRANSMIT COMMON	RECEIVE COMMON
5	PRIORITY IN	PRIORITY OUT
6	RECEIVE COMMON	TRANSMIT COMMON
7	RECEIVE B	TRANSMIT B
8	TRANSMIT A	RECEIVE A
9	FRAME GROUND	FRAME GROUND

## 2-6. Installation Setup and Adjustment

### 2-6-1. Front Panel Setting


#### Front panel

1. VIDEO INPUT select switch setting  
 COMPOSITE : Ordinary video signal  
 SG : Built-in video signal  
 S VIDEO : Y/C separation type S video signal  
 Y-R, B : Component signal (Betacam)  
 SDI : Component digital signal  
 SDTi/i.LINK : DV compressed digital signal
2. AUDIO INPUT SELECT switch setting  
 ANALOG/DIGITAL (AES/EBU)/SDI/SG (built-in audio signal)
3. AUDIO REC/PB VAR switch  
 PRESET : Sets both the REC and PB levels to the normal level.  
 REC : Sets the REC audio level of the channels respectively with the CH-1/2/3/4 knobs.  
 PB : Sets the PB audio level of the channels respectively with the CH-1/2/3/4 knobs.

#### SUB control panel

4. SYNC : Adjusts the sync phase of the output signal.
5. SC : Adjusts the phase of the subcarrier.


### Layout of knobs and buttons on the front panel

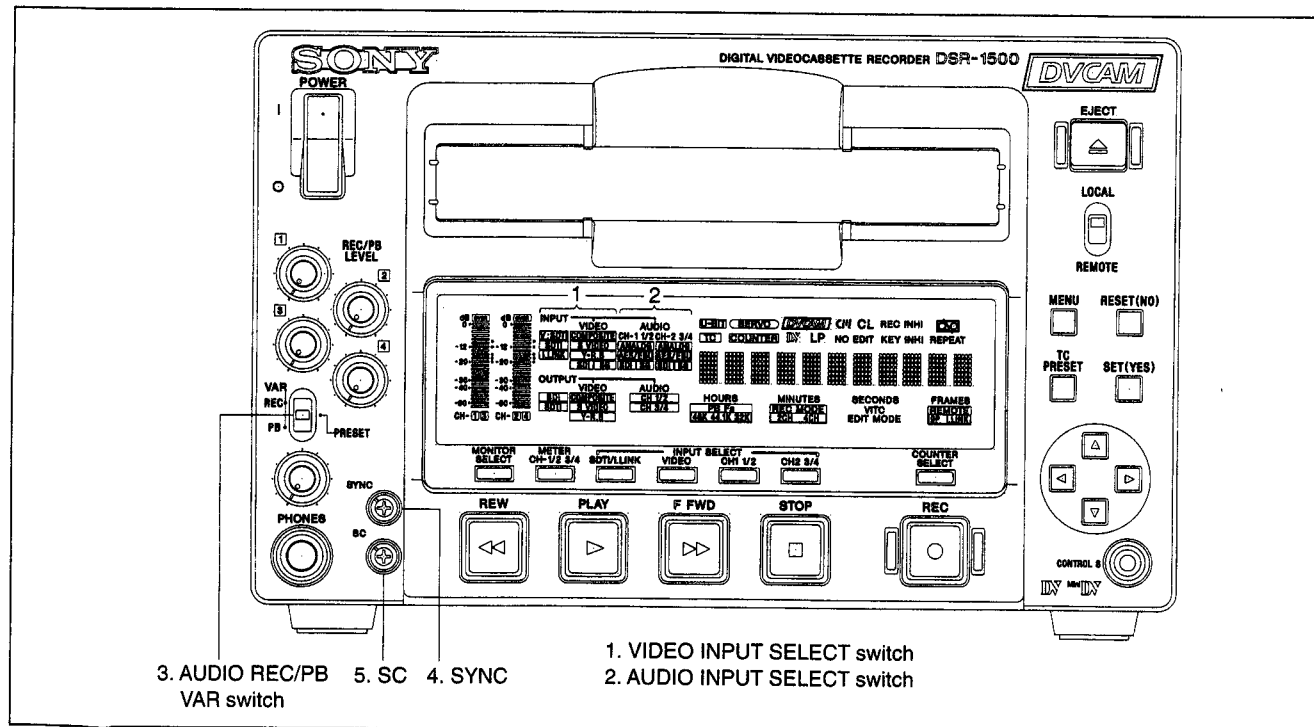

①	MB-909	Motherboard
②	RP-117	RF REC/PB, ATF Detection
③	CN-2103 (DSBK-1503)	DV/i.Link Connector Board
④	DDE-15/15P (DSBK-1504)	Audio/Video Analog Input Board
⑤	AVP-3/3P	Audio/Video Analog Output Board
⑥	DVP-19	Video/Audio Digital Process
⑦	SSS-10	Super Syscon/Servo
⑧	FU-78AP	Video Process (PB)
⑨	FU-78AR	Video Process (REC)
⑩	DV-25 (DSBK-1503)	DV/i.LINK Input/Output Board
⑪	SDI-58 (DSBK-1501)	Digital Input/Output Board


DSR-1500/1500P

3-1

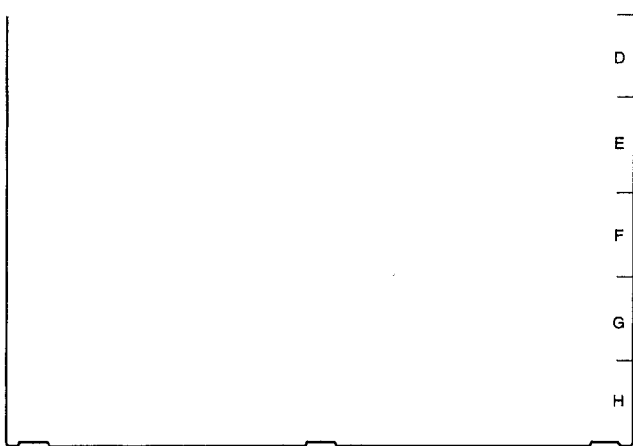

A side (component side)

Ref No.	Description	Factory Setting
S400	Sets the THRU OUT side of CN1 to REF or COMPOSITE (SUPER).	REF THRU

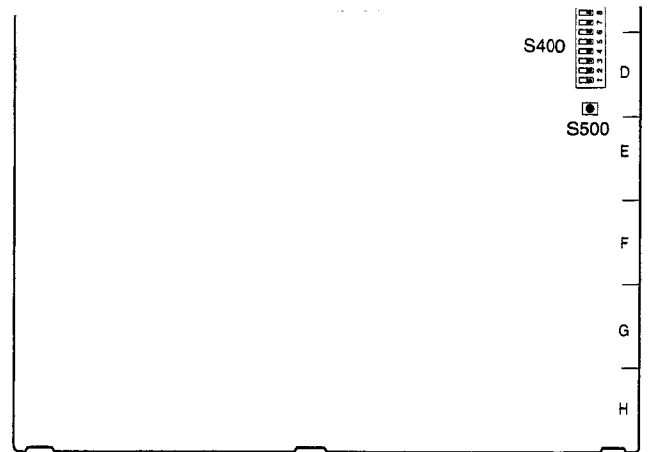


A side (component side)

#### Note

Do not change the setting of switches when the "factory use" is shown in the description.

Ref No.	Description	Factory Setting
S400-1	factory use	OFF
S400-2	factory use	OFF
S400-3	factory use	OFF
S400-4	factory use	OFF
S400-5	factory use	OFF
S400-6	factory use	OFF
S400-7, 8	Sets the destination	-
	Destination	bit-7 bit-8
	UC	OFF OFF
	J	ON OFF
	CE	OFF ON
S500	Push this switch when resetting the system control.	-

### DDE-15/15P board (DSBK-1504/1504P)

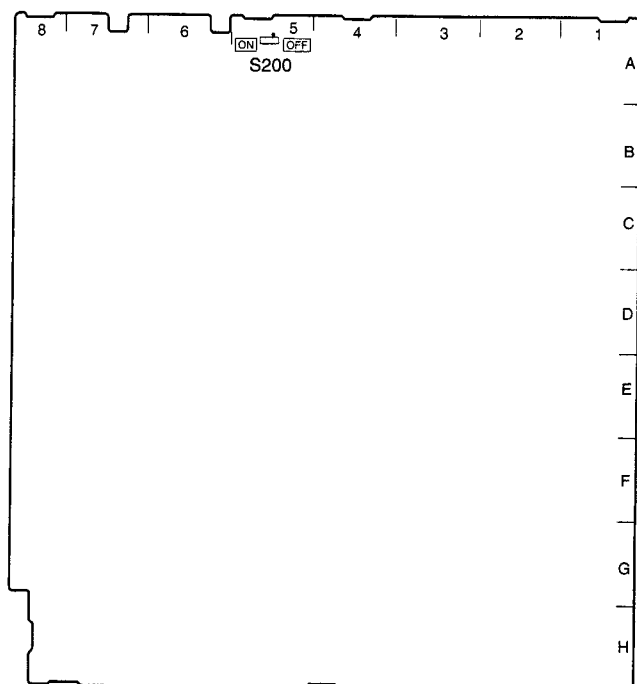

A side (component side)

Ref No.	Name	Description	Factory Setting
S200	A/D LEVEL REF	<p>Use this switch when performing the A/D level adjustment. When this switch is set to ON, the standard-level signal generated based on the internal data is output to adjust the A/D level.</p> <p>Return the setting of the switch (S200) to OFF position.</p> <p><b>Note</b></p> <p>The switch (S200) on the DDE-15/15P board functions only when the switch (S400-1) on the SSS-10 board is set to ON position.</p>	OFF

### 2-6-3. System Adjustment After Installation

Observe the following precautions when this equipment is used for editing system.

- The REF. VIDEO INPUT requires video signal which is in conformity with the RS-170A (NTSC).
- Adjust the sync phase of this equipment to the system sync with [SYNC PHASE] control on the front panel.
- Adjust the SCH phase of this equipment to the system SCH with [SC PHASE] control on the front panel.
- When this unit is connected to a switcher that does not have the sync switching function, the SYNC/ BURST level adjustment is required.




## Section 3

### Service Overview


#### 3-1. Location of Main Parts

##### 3-1-1. Location of Printed Circuit Boards

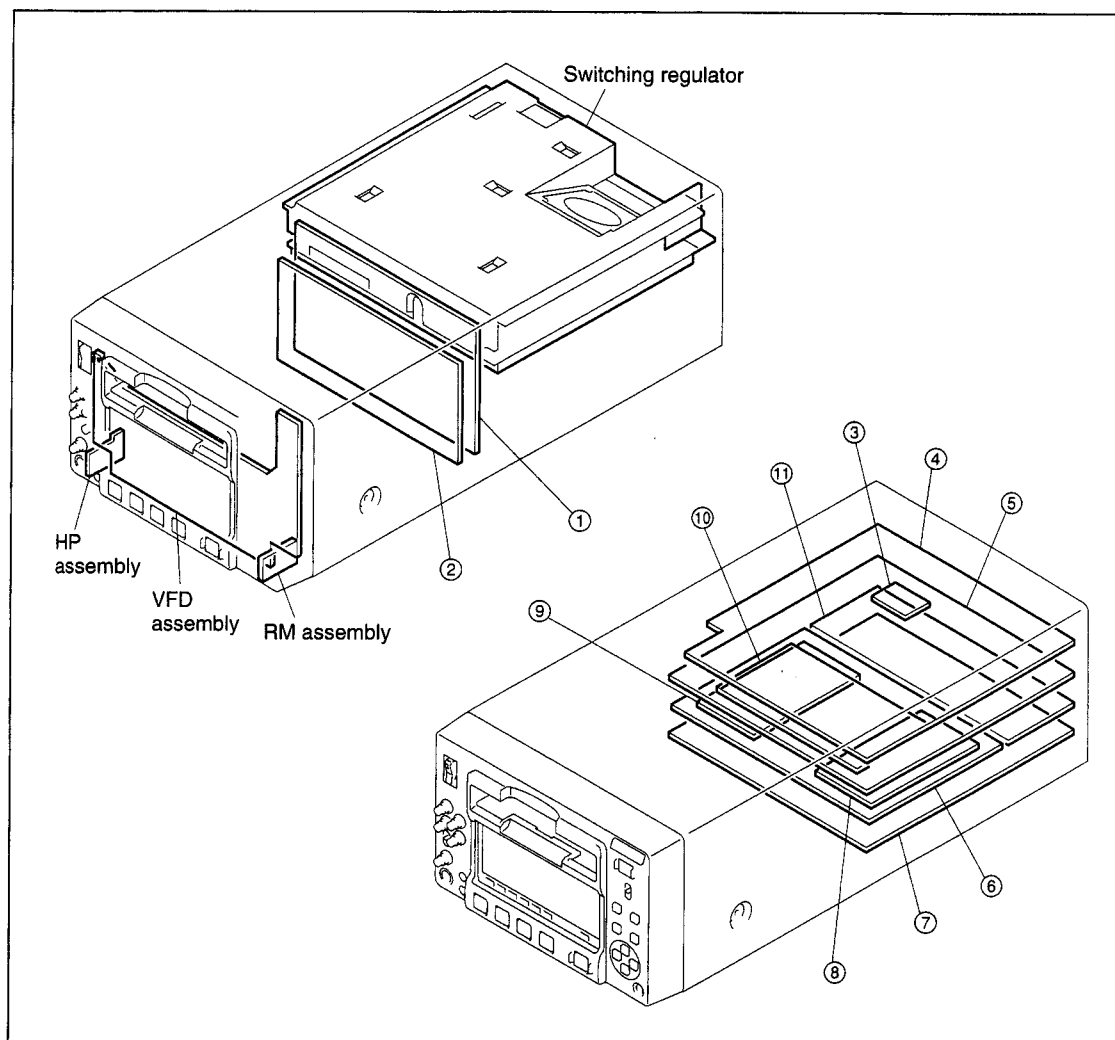


	Board Name	Circuit Configuration
①	MB-909	Motherboard
②	RP-117	RF REC/PB, ATF Detection
③	CN-2103 (DSBK-1503)	DV/i.Link Connector Board
④	DDE-15/15P (DSBK-1504)	Audio/Video Analog Input Board
⑤	AVP-3/3P	Audio/Video Analog Output Board
⑥	DVP-19	Video/Audio Digital Process
⑦	SSS-10	Super Syscon/Servo
⑧	FU-78AP	Video Process (PB)
⑨	FU-78AR	Video Process (REC)
⑩	DV-25 (DSBK-1503)	DV/i.LINK Input/Output Board
⑪	SDI-58 (DSBK-1501)	Digital Input/Output Board

## Locations of mechanism deck

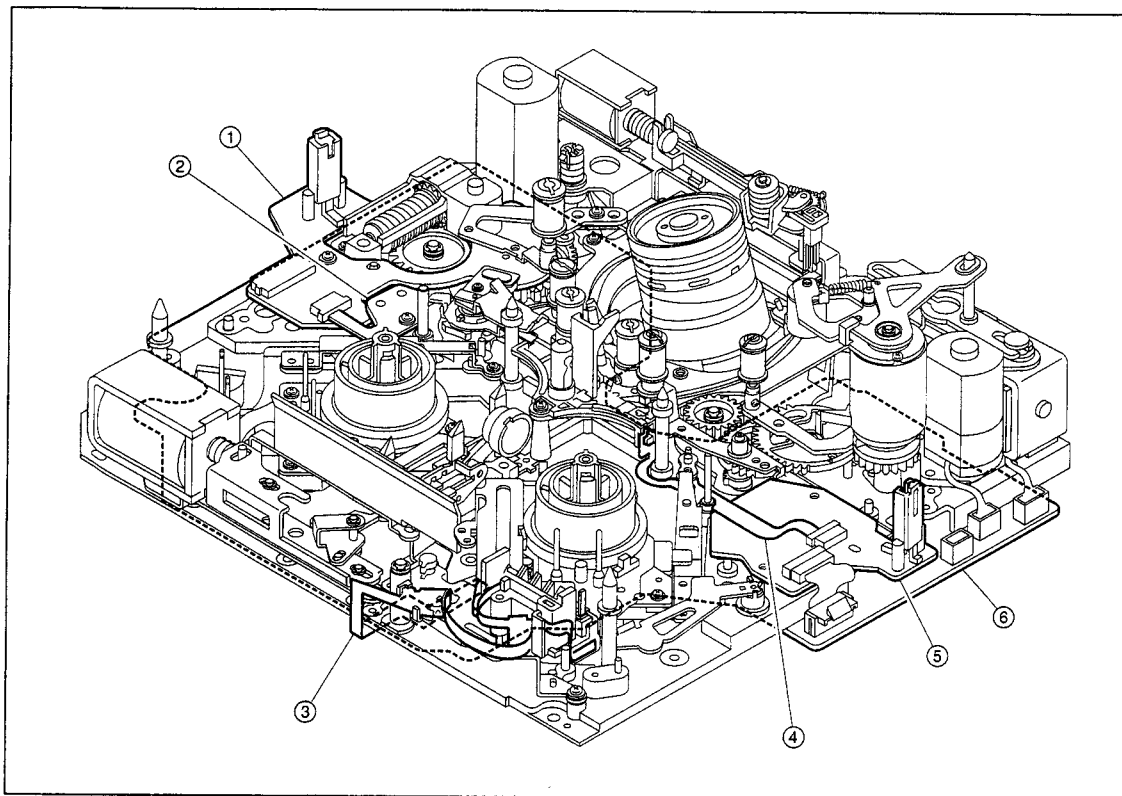


No.	Board Name	Circuit Configuration
①	SE-521	Mode sensor/tape end sensor/loading motor FG sensor
②	SE-538	Tension sensor
③	CN-1863	Sensor input/output board
④	SE-525	LED signal board
⑤	SE-522	Tape top sensor/reel position sensor (Mini/M/Standard)
⑥	DR-428	Servo/mechanism control

## Locations of cassette compartment

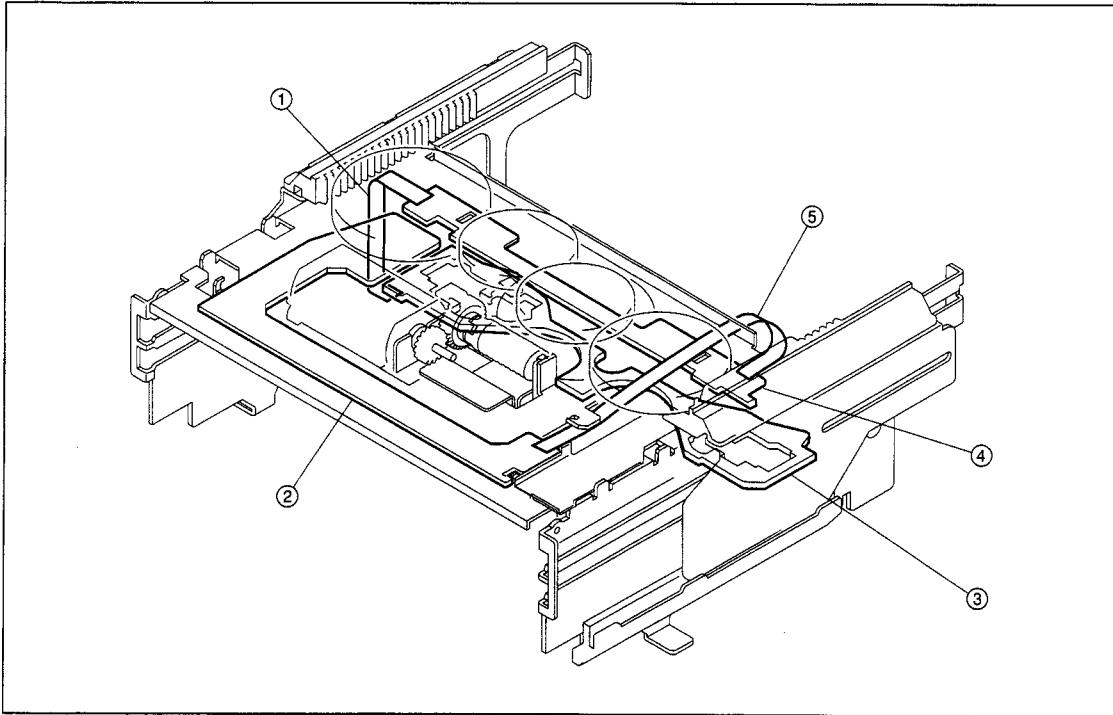

No.	Board Name	Circuit Configuration
①	CN-2021	Intermediate board between CC-84 and CC-83
②	CC-83	Cassette compartment mode detection/intermediate board
③	CC-85	Cassette compartment cassette in detection
④	CC-84	Cassette compartment cassette type detection
⑤	CN-2022	Intermediate board between CC-85 and CC-84


### 3-1-2. Location of Main Mechanical Parts

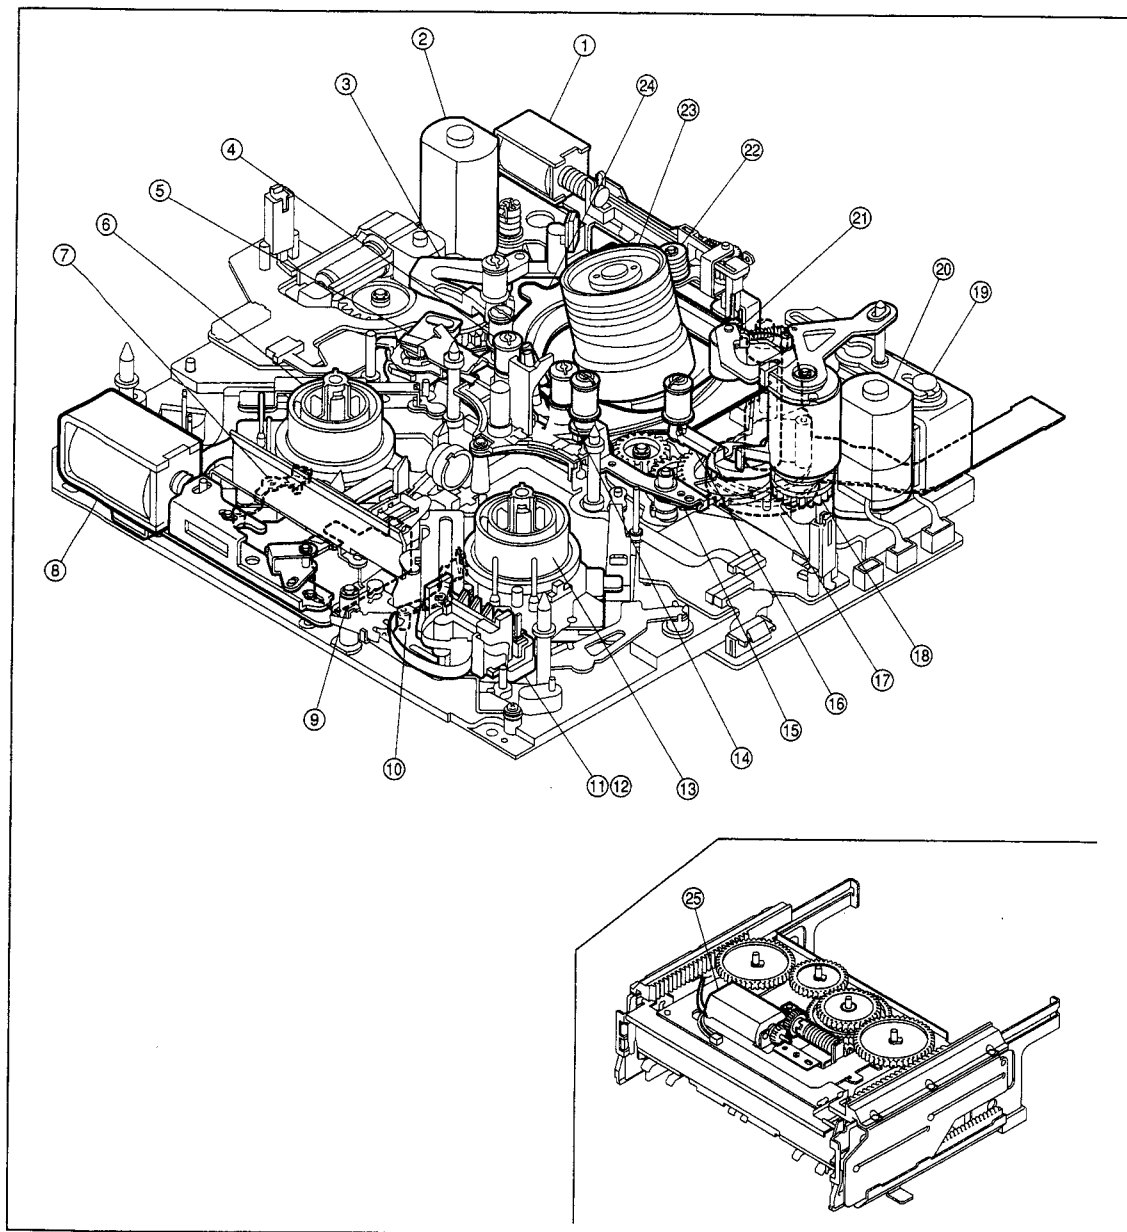

- |                                |                                       |
|--------------------------------|---------------------------------------|
| ① Head cleaning solenoid       | ⑭ Shuttle (right) assembly            |
| ② Loading motor                | ⑮ T drawer arm assembly               |
| ③ TG1 arm assembly             | ⑯ TG8 arm assembly                    |
| ④ Shuttle (left) assembly      | ⑰ Capstan motor                       |
| ⑤ S tension regulator assembly | ⑱ Elevator cam                        |
| ⑥ S reel motor                 | ⑲ Pinch solenoid assembly             |
| ⑦ S brake assembly             | ⑳ Reel shift motor                    |
| ⑧ Brake solenoid               | ㉑ Pinch roller                        |
| ⑨ M stop solenoid assembly     | ㉒ HC roller assembly                  |
| ⑩ T brake assembly             | ㉓ Drum assembly                       |
| ⑪ MIC assembly                 | ㉔ Rail assembly                       |
| ⑫ MIC holder assembly          | ㉕ Cassette compartment motor assembly |
| ⑬ T reel motor                 |                                       |


### 3-1-3. Location of Sensors

#### (1) Mechanism deck

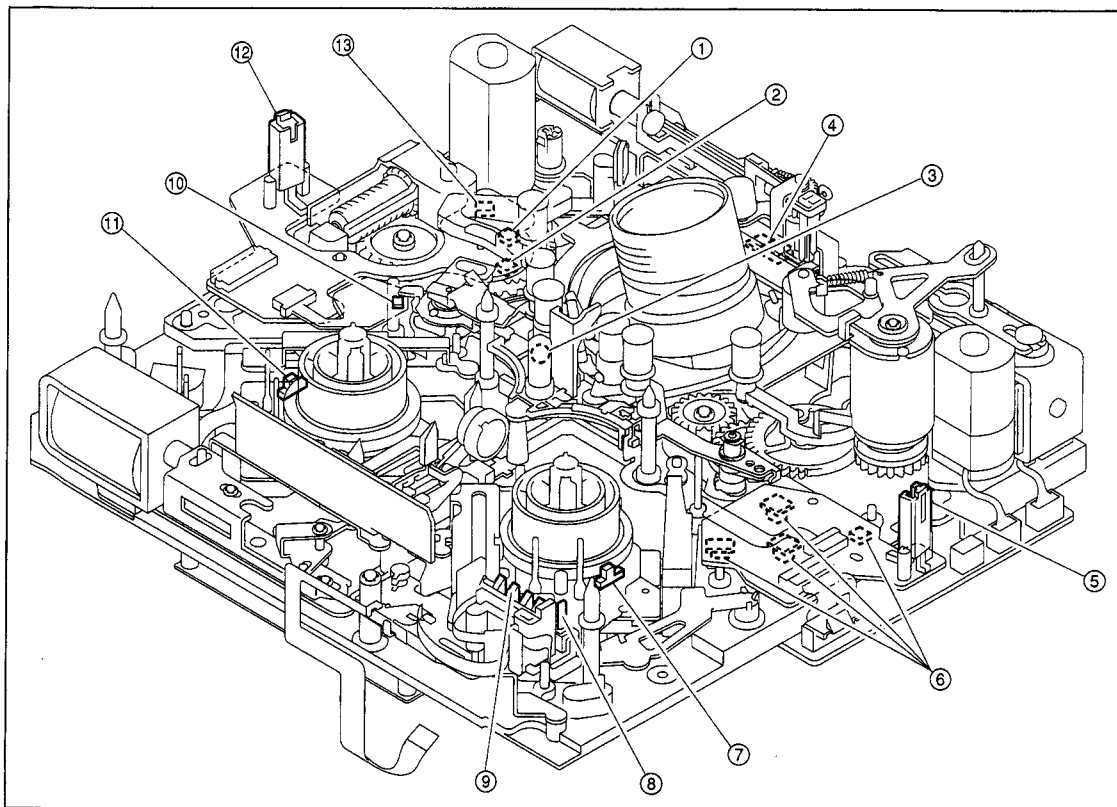

- ①, ② Mode sensor  
Detects the mechanism position during threading.
- ③ Tape top/end detect LED  
Detects the top and end of a tape.
- ④ Condensation sensor  
Detects condensation occurred in DSR-1500/1500P.
- ⑤ Tape top sensor  
Detects the beginning of a tape that runs in the REV direction.
- ⑥ Reel position sensors (4 pieces) (Mini, M, Standard reel position)  
Detects the reel table position at the each specified reel position according to the cassette type.
- ⑦ Reel FG sensor (Take-up side)  
Detects rotation of the take-up reel table. The FG output of the sensor is sent to the servo circuit and used to control the rotating speed and torque of the reel motor.
- ⑧ Record proof sensor (common to standard, M and mini size cassettes)  
Protects a tape from mis-recording.
- ⑨ Cassette memory terminal  
Determines whether cassette memory is used, and reads and writes data to and from the cassette memory.
- ⑩ Tension sensor  
The tension arm keeps the tension of a running tape constant during recording and playing. The tension sensor detects the mechanical position of the tension arm.
- ⑪ Reel FG sensor (Supply side)  
Detects the rotation of the supply reel table. The PG output of the sensor is input to the servo circuit and controls the rotating speed and torque of the reel motor.
- ⑫ Tape end sensor  
Detects the end of a tape that runs in the FWD direction.
- ⑬ Threading motor FG sensor  
Detects the rotation speed of the gearbox motor. The FG output of the sensor is input to the servo circuit and controls the threading speed so that excessive force is not applied to the tape during threading.


## (2) Cassette compartment

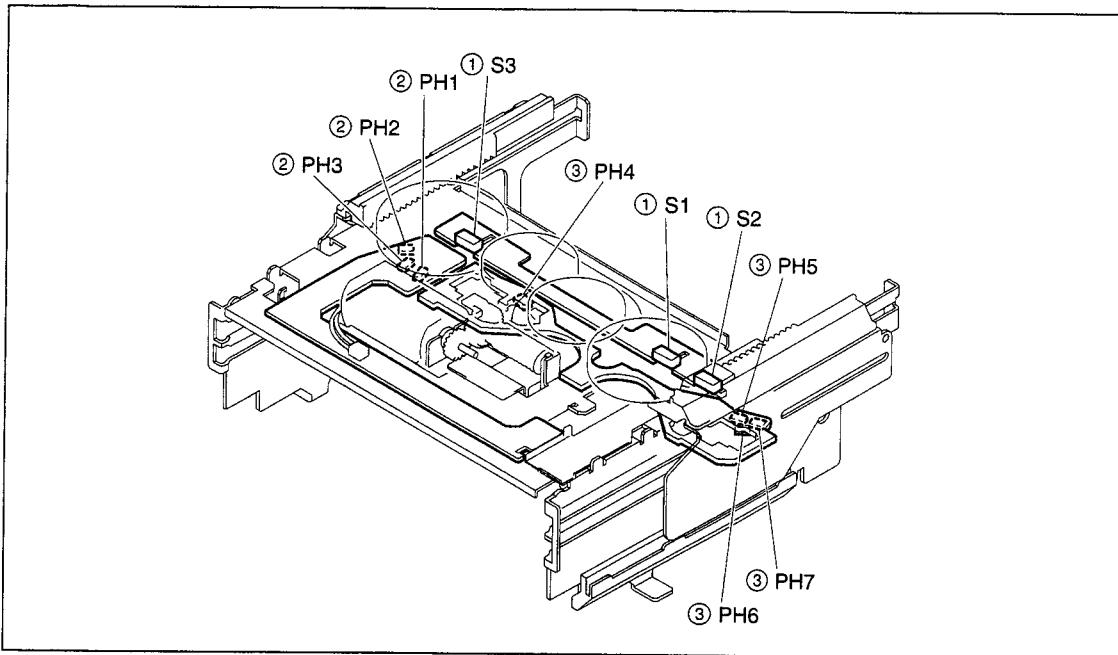


- ① The sensors S1, S2 and S3 discriminate the inserted cassette type among the mini, M, standard cassettes and the cassette adaptor for DVCPRO by on/off of the sensors.
- ② The sensors PH1, PH2 and PH3 detect the movement of a cassette compartment by their combination.
- ③ The sensors PH4 and PH5 detect that a mini cassette got inserted.  
The sensors PH4 and PH6 detect that a M cassette got inserted.  
The sensors PH4 and PH7 detect that a standard cassette got inserted.

### 3-2. Functions of Record Proof Hole and Record Proof Plug of Cassette


#### Standard cassette, M cassette

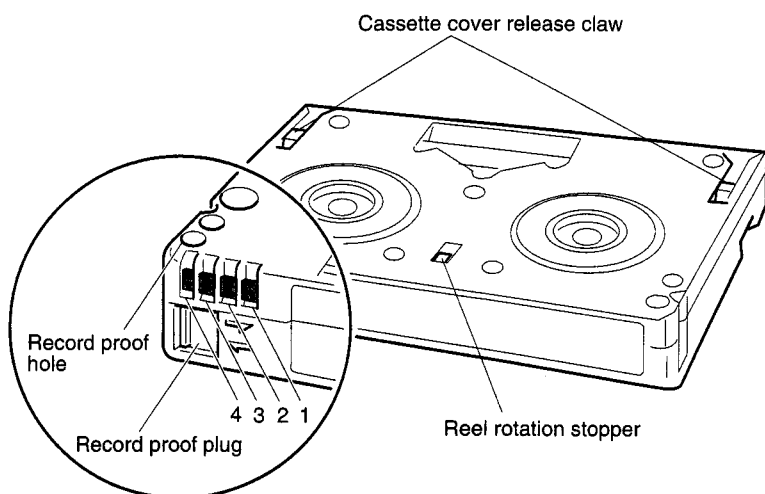

#### Mini cassette

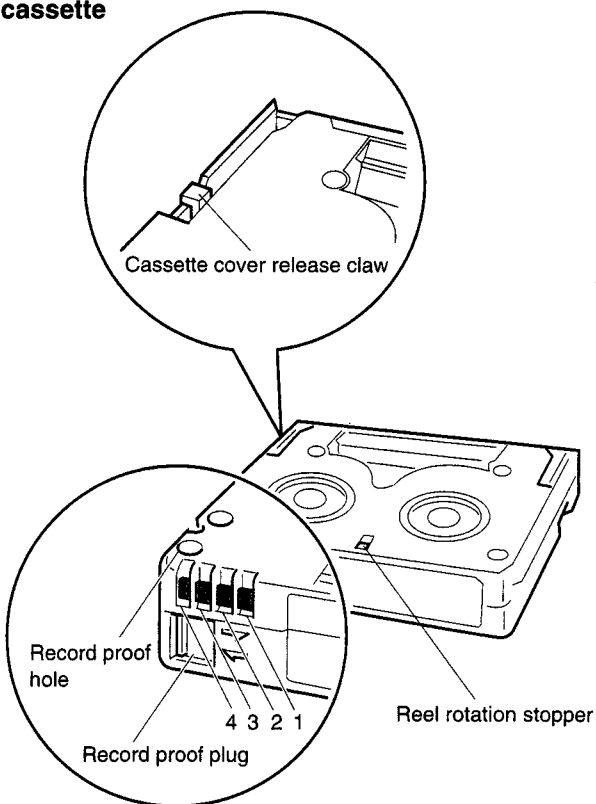

#### Hole and plug for record proof

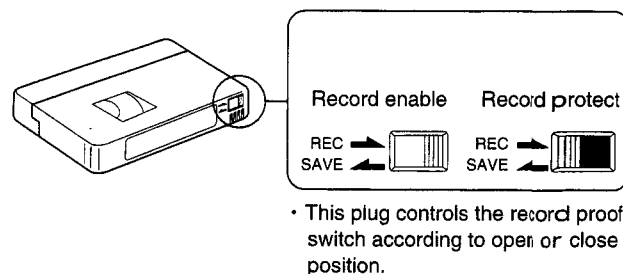

Pin No.	Function	
	Equipped with built-in memory	Not equipped with built-in memory
1	+DC	Detecting tape thickness
2	DATA	Detecting tape type (Example: ME/MP)
3	CLOCK	Detecting tape application (Example: consumer/professional)
4	GND	—

### 3-3. Removing/Installing the Cabinets

#### Note

Before removing the cabinets, be sure to turn off the main power.


#### Removal/Installation of the Cabinets

1. Remove the four screws and remove the top panel in the direction of the arrow.

#### Note


Be careful not to break or peel off the internal packing.

2. Re-attach the parts in reverse order of the disassembling procedure.

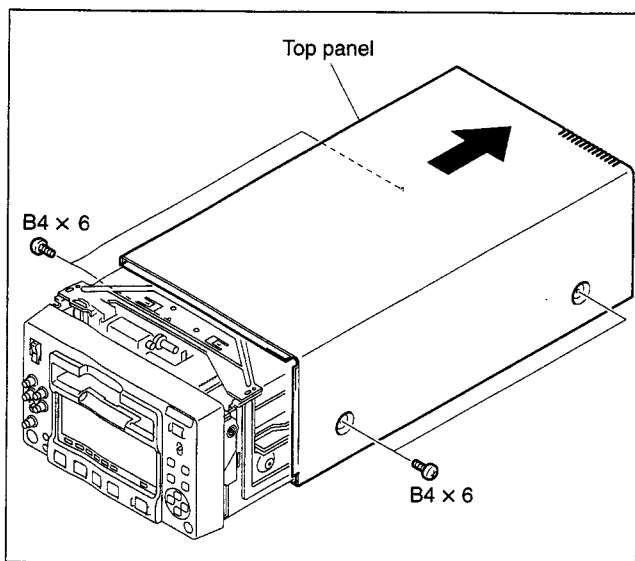

#### Removal/Installation of the Bottom Plate


1. Stand the main unit on the left side.
2. Remove the two screws and remove the bottom plate in the direction of the arrow.
3. Re-attach the parts in reverse order of the disassembling procedure.

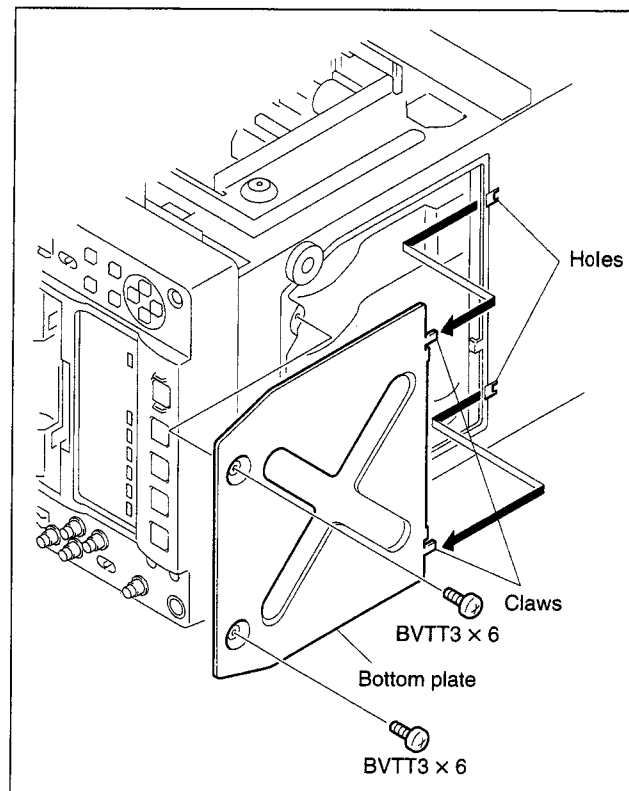



## Removal/Installation of the Front Panel

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the bottom panel. (Refer to Section 3-3.)
3. Remove the flexible card wire connected to the connector (CN81) on the MB-909 board.
4. Remove the harness connected to the connector (CN2) on the switching regulator.
5. Remove the four screws.
6. Pull the front panel to the front to remove it.
7. Re-attach the parts in reverse order of the disassembling procedure.

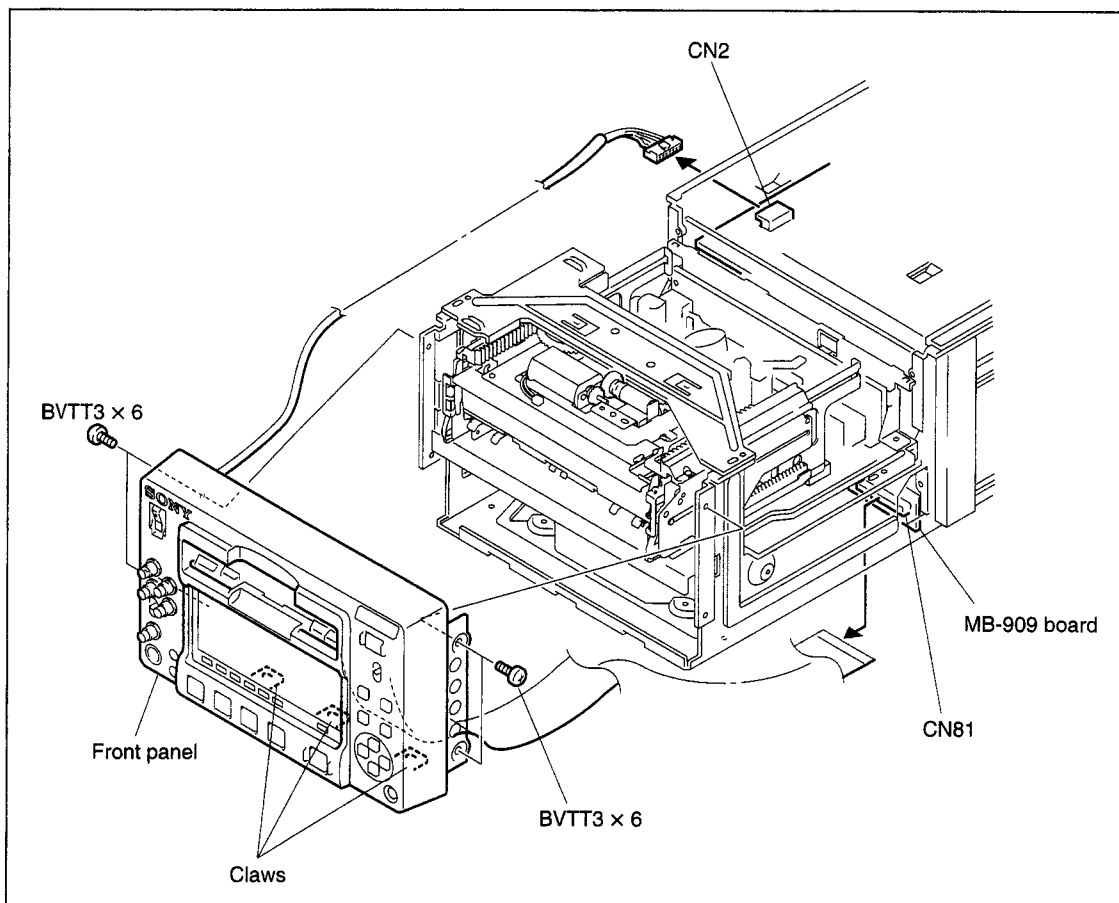

### 3-4. Removing/Installing the Cassette Compartment


S/N : 100001 through 100070 (DSR-1500)  
400001 through 4000140 (DSR-1500P)

#### Removal

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the C cable retainer.
3. Remove the flexible card wire connected to the connector (CN1) on the CC-83 board.
4. Remove the two screws and remove the protector and the cassette compartment retainer.
5. Remove the cassette compartment in the direction of the arrow.

#### Installation

1. Put in the cassette compartment in the opposite direction of the arrow and align the four positioning holes with the four positioning pins.
2. Attach the protector and the cassette compartment with the two screws.
3. Connect the flexible card wire to the connector (CN1) on the CC-83 board.
4. Attach the C cable retainer.
5. Attach the top panel. (Refer to Section 3-3.)

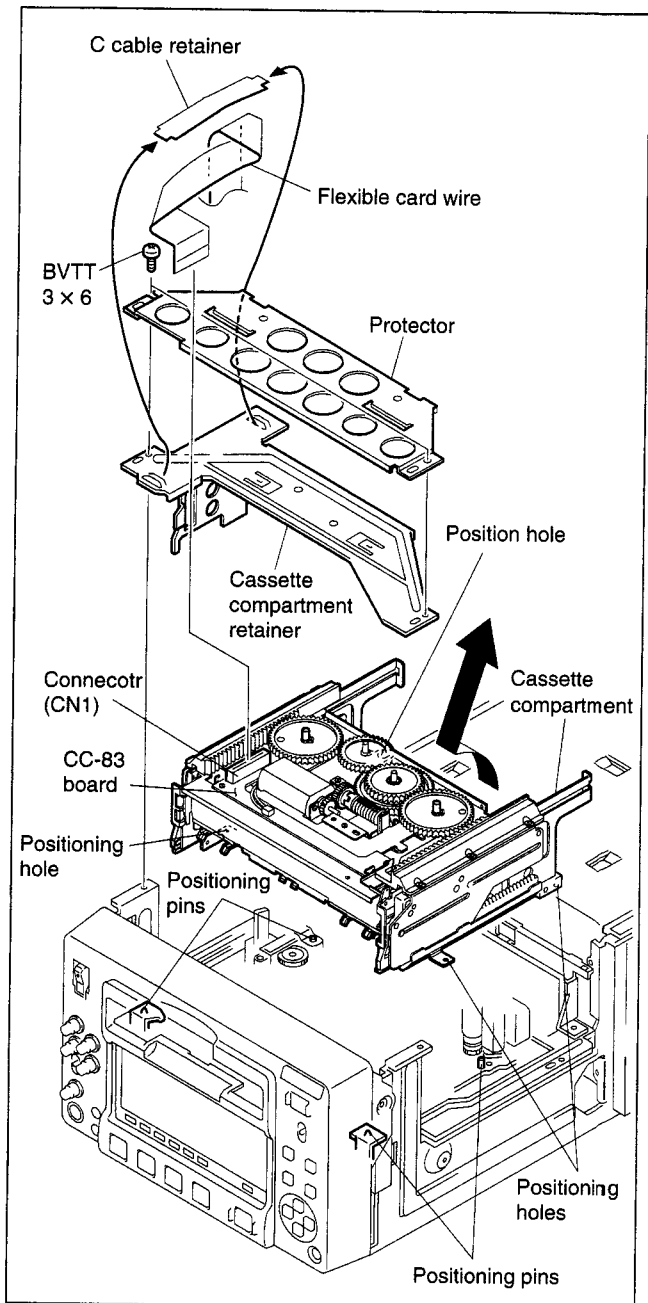


**S/N : 100071 or higher (DSR-1500)**  
**400141 or higher (DSR-1500P)**

### Removal

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the C cable retainer.
3. Remove the flexible card wire connected to the connector (CN1) on the CC-83 board.
4. Remove the two screws and remove the cassette compartment retainer.
5. Remove the cassette compartment in the direction of the arrow.

### Installation


1. Put in the cassette compartment in the opposite direction of the arrow and align the four positioning holes with the four positioning pins.
2. Attach the cassette compartment with the two screws.
3. Connect the flexible card wire to the connector (CN1) on the CC-83 board.
4. Attach the C cable retainer.
5. Attach the top panel. (Refer to Section 3-3.)

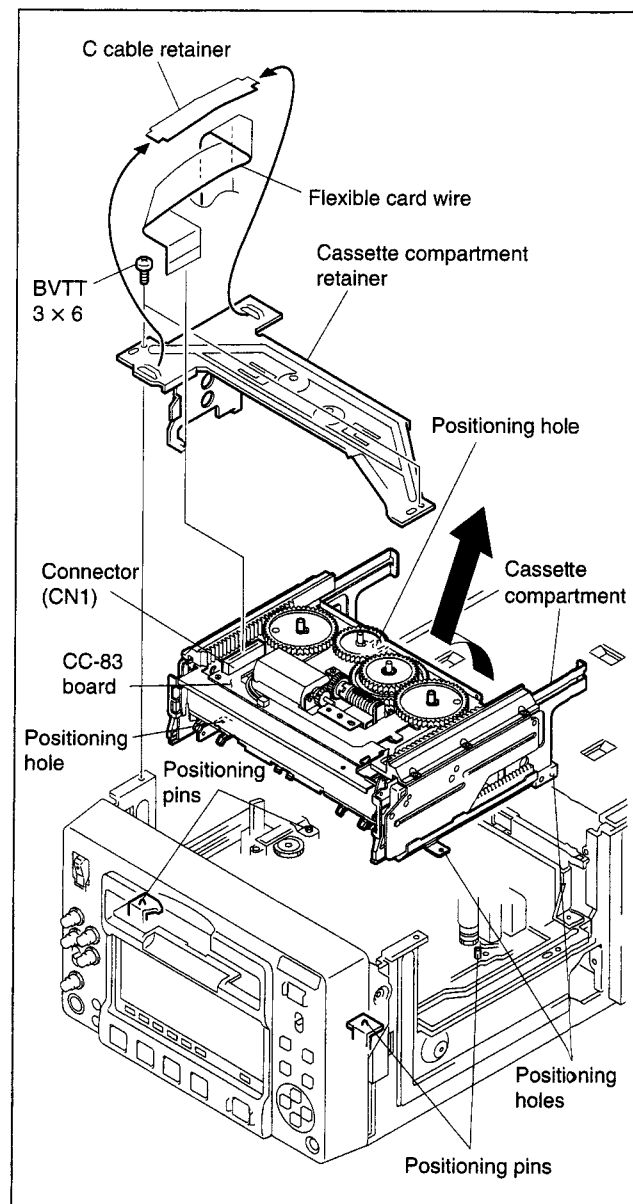


### Note

The protector cannot be attached because the cassette compartment retainer has changed its shape for higher strength on and after serial number 100071 (DSR-1500) or 400141 (DSR-1500P).

S/N : 100001 through 100070  
(DSR-1500)  
 S/N : 400001 through 400140  
(DSR-1500P)

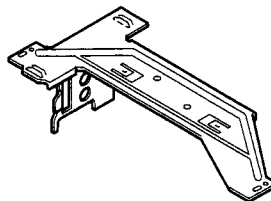

S/N : 100071 or higher  
(DSR-1500)  
 S/N : 400141 or higher  
(DSR-1500P)

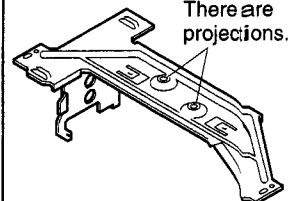

### 3-5. Removing/Installing the MD Assembly

#### Note


Before removing the assembly, be sure to turn off the main power.

#### Removal

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the bottom panel. (Refer to Section 3-3.)
3. Remove the harnesses and the flexible card wires connected to the three connectors (CN302, CN303, CN301) on the DR-428 board.
4. Remove the flexible card wire connected to the connector (CN102) on the RP-117 board.
5. Remove the front panel. (Refer to Section 3-3.)
6. Remove the three screws and remove the MD assembly.

#### Installation

1. Insert the positioning pins on the main unit into the positioning holes on the MD assembly.
2. Attach the MD assembly with the three screws.
3. Attach the front panel. (Refer to Section 3-3.)
4. Connect the harnesses and flexible card wires to the three connectors (CN302, CN303, CN301) on the DR-428 board and the connector (CN102) on the RP-117 board.
5. Attach the bottom panel. (Refer to Section 3-3.)
6. Attach the top panel. (Refer to Section 3-3.)

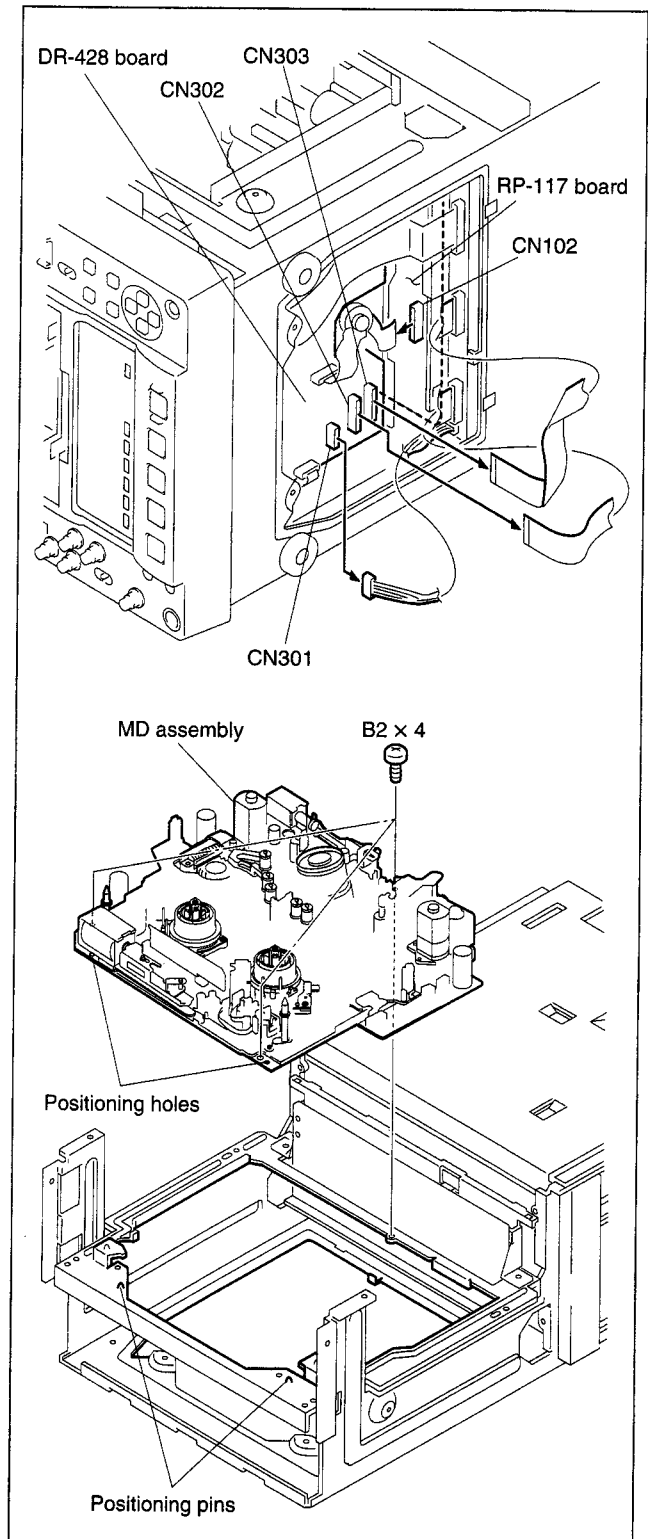


### 3-6. Removing/Installing the Switching Regulator

#### Note

Before removing the regulator, be sure to turn off the main power.

#### Removal

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the four screws and remove the rear panel. (Refer to Section 3-7-1.)
3. Remove the four screws and remove the switching regulator in the direction of the arrow.
4. Re-attach the parts in reverse order of the disassembling procedure.

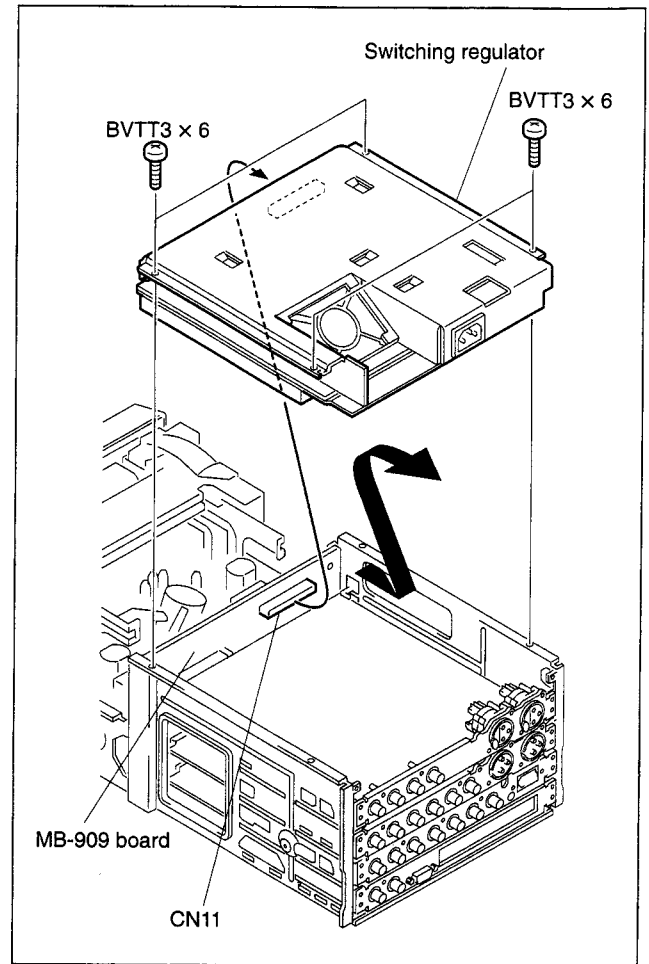

## 3-7. How to Remove/Install the Boards


### 3-7-1. Removing/Installing the Boards

#### Note

Before removing the boards, be sure to turn off the main power.


#### Removal/Installation of the AVP-3/3P Board

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the six screws and remove the rear panel.
3. Pull out the AVP-3/3P board in the direction of the arrow.
4. Re-attach the parts in reverse order of the disassembling procedure.

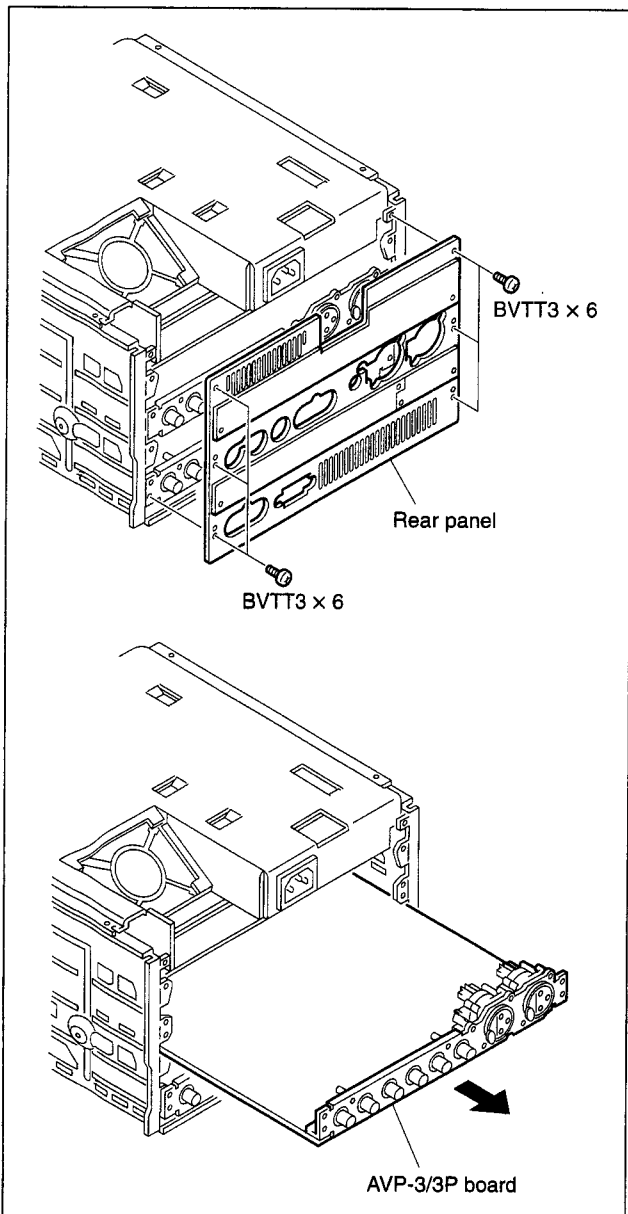


#### Removal/Installation of the SSS-10 Board

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the six screws and remove the rear panel.
3. Pull out the SSS-10 board in the direction of the arrow.
4. Re-attach the parts in reverse order of the disassembling procedure.

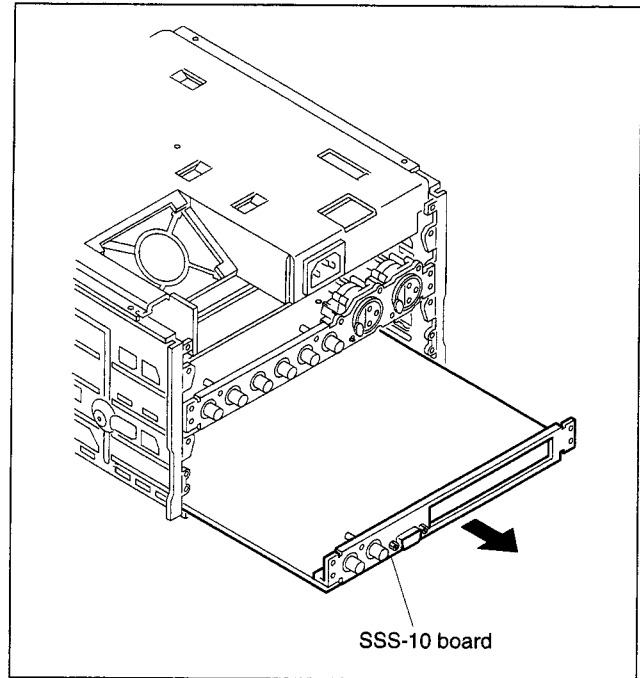


### Removal/Installation of the MB-909 Board

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the bottom panel. (Refer to Section 3-3.)
3. Remove the harnesses and the flexible card wires connected to the four connectors (CN71, CN72, CN73, CN81) on the MB-909 board.
4. Remove the AVP-3/3P board.
5. Remove the SSS-10 board.
6. Remove the switching regulator. (Refer to Section 3-6.)
7. Remove the four screws and remove the MB-909 board.
8. Re-attach the parts in reverse order of the disassembling procedure.

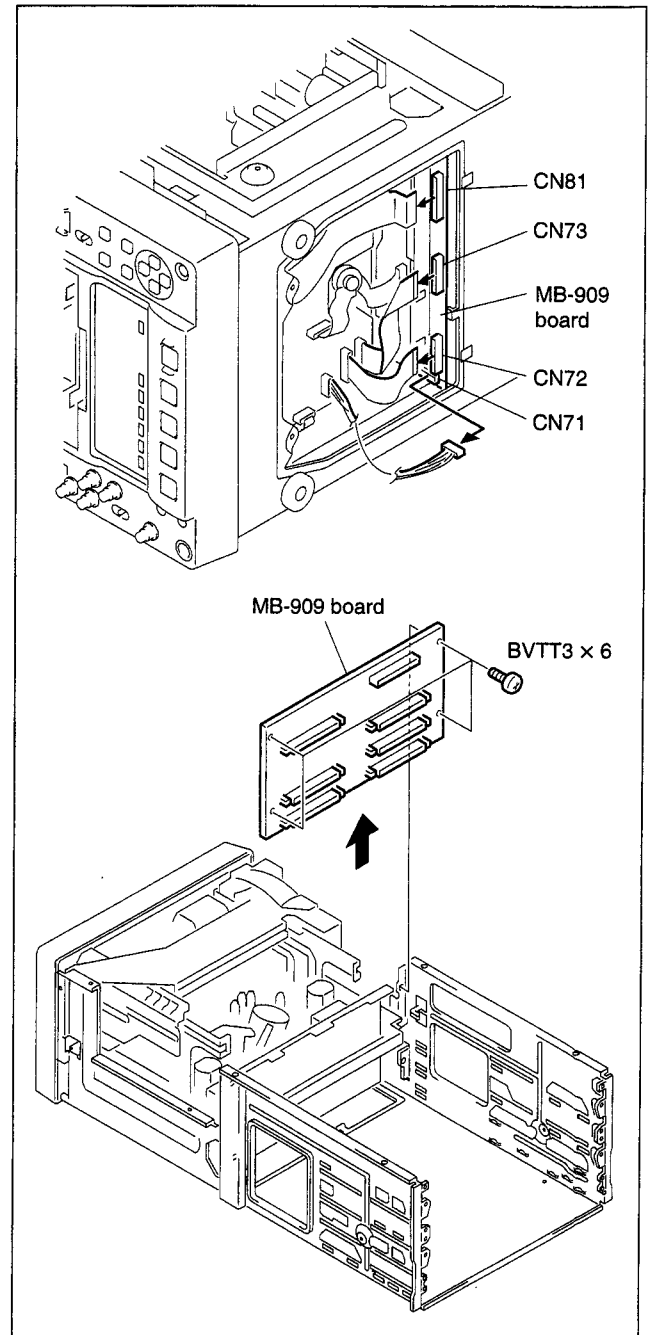

### Removing/Installing the RP-117 Board

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the bottom panel. (Refer to Section 3-3.)
3. Remove the harnesses and cables from the four connectors on the MB-909 board. (Refer to "Removal/Installation of the MB-909 Board")
4. Remove the flexible card wire connected to the connector (CN102) on the RP-117 board.
5. Remove the two screws and remove the shield case (R) and the RP attachment panel.
6. Remove the two screws and remove the RP-117 board.
7. Re-attach the parts in reverse order of the disassembling procedure.

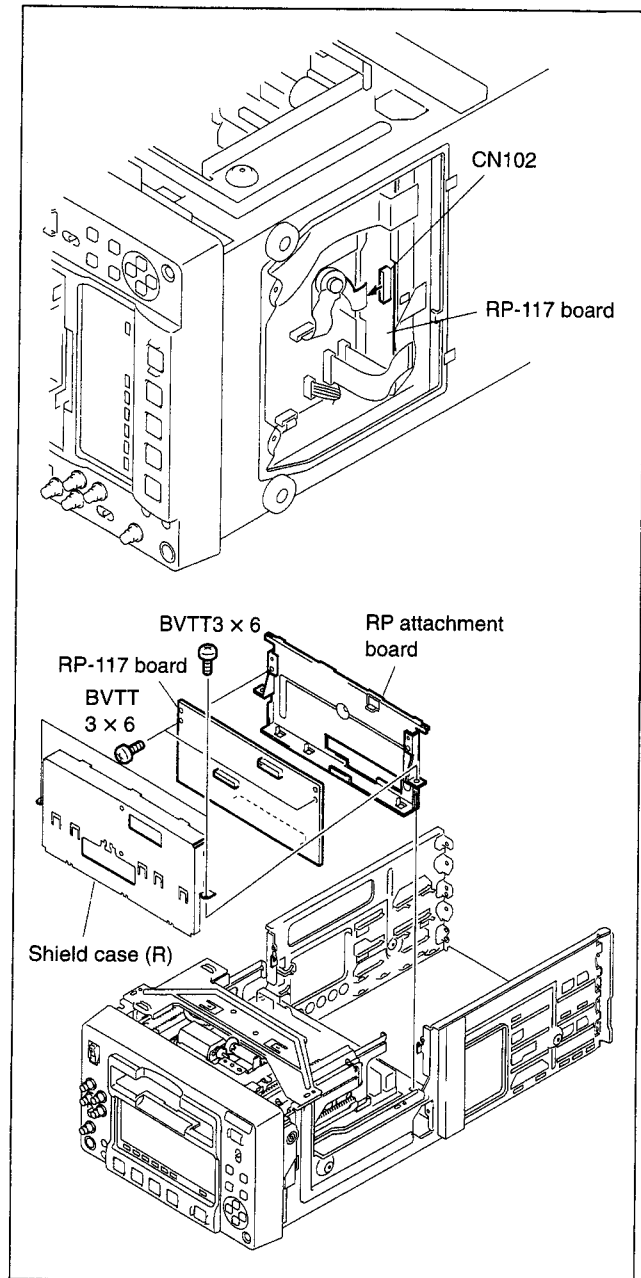



## Removing/Installing the VFD Assembly, RM Assembly and HP Assembly

### Note


Before removing the boards, be sure to turn off the main power.

1. Remove the front panel. (Refer to Section 3-3.)
2. Remove the five knobs.
3. Remove the two screws (PS3 × 5) and remove the cassette guide assembly.
4. Remove the two screws (BTP3 × 10) from the front panel assembly and the two screws (BTP3 × 10) from the VFD assembly, then remove the front chassis.
5. Remove the harness connected to the connectors (CN2, CN1) on the VFD assembly.
6. Remove the supplied nut and washer, then remove the RM assembly.

### Note


Remove the nut while holding the RM assembly from the back.

7. Remove the supplied nut and washer, then remove the HP assembly.
8. Remove the three screws (BVTT3 × 6) and remove the VFD assembly.
9. Re-attach the parts in reverse order of the disassembling procedure.

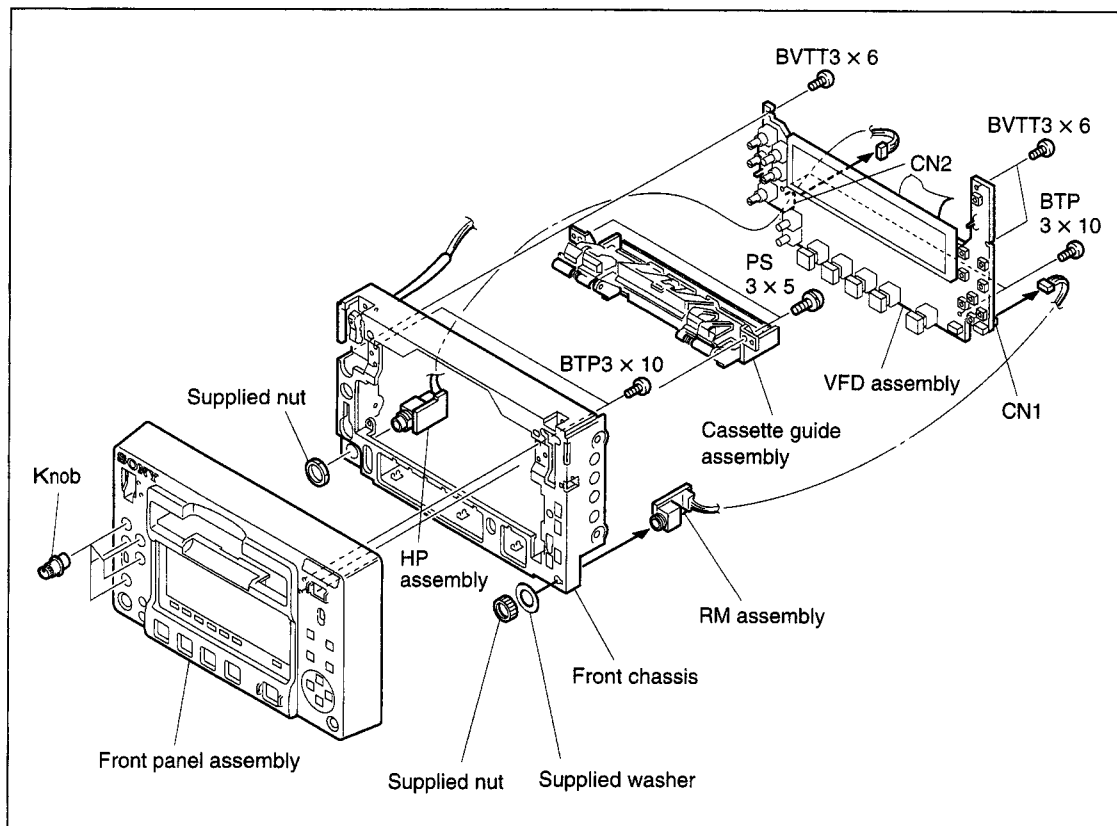


## Removal/Installation of the DR-428 Board

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the bottom panel. (Refer to Section 3-3.)
3. Remove the cassette compartment. (Refer to Section 3-4.)
4. Remove the harnesses and cables from the seven connectors (CN4, CN10, CN11, CN3, CN19, CN20, CN21) on the DR-428 board.

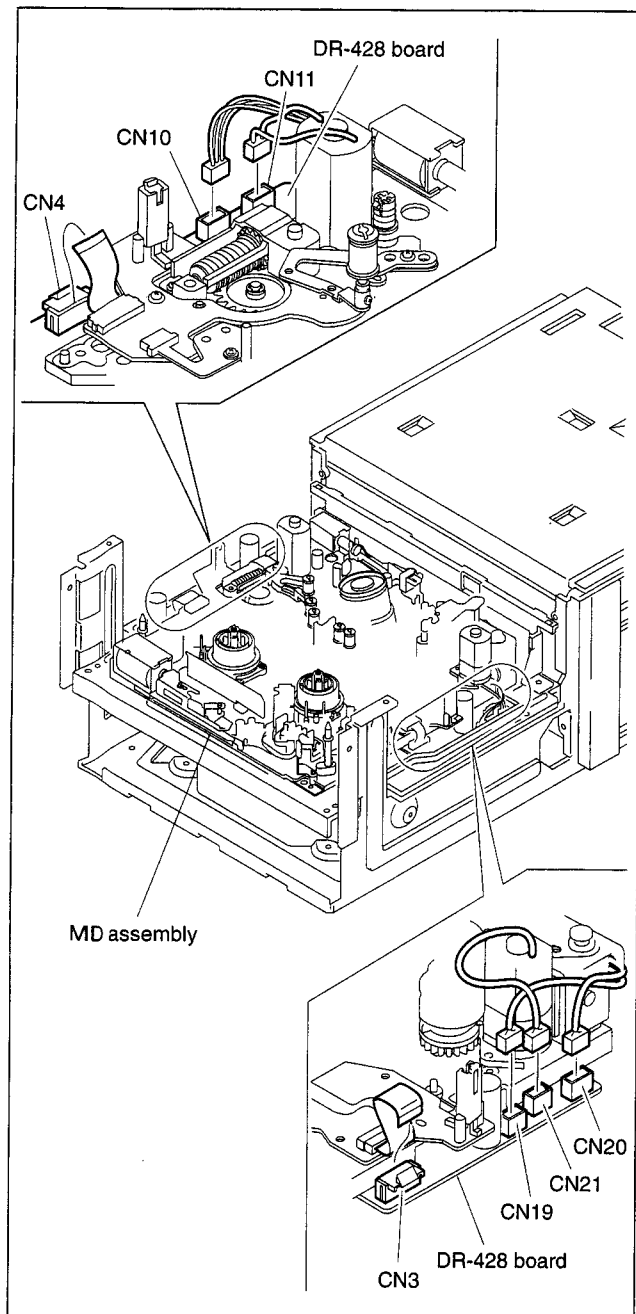


5. Stand the unit with the left side down.
6. Remove the harnesses and cables from the 11 connectors (CN1, CN12, CN13, CN14, CN15, CN16, CN17, CN18, CN301, CN302, CN303) on the DR-428 board.
7. Remove the flat cable from the connector (CN102) on the RP-117 board.

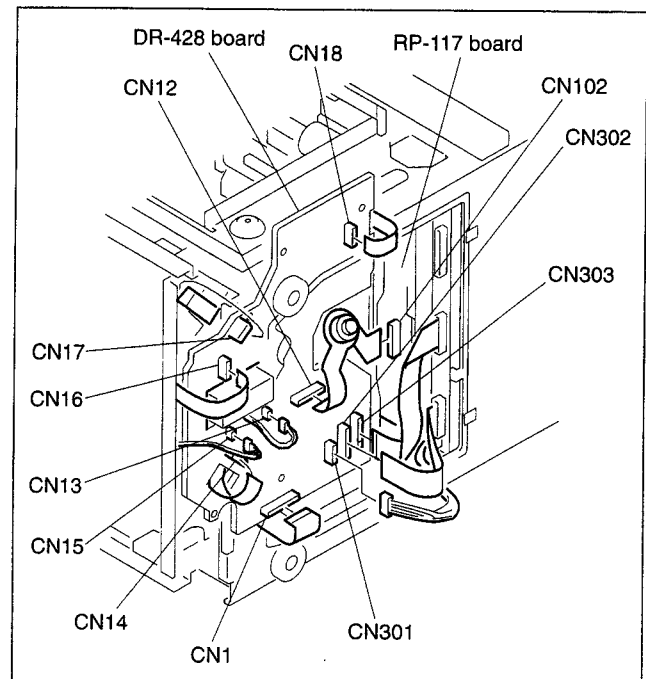

8. Remove the six screws securing the DR-428 board.
9. Re-attach the parts in reverse order of the disassembling procedure.

### Note

When attaching the parts, align the two positioning holes on the DR-428 board with the positioning pins.

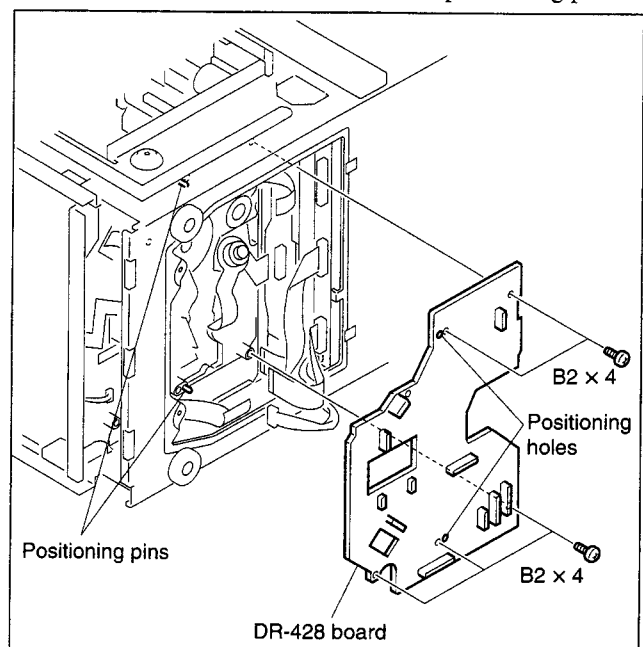

## Removal/Installation of the SE-521 Board

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the cassette compartment. (Refer to Section 3-4.)
3. Remove the TG1 arm assembly. (Refer to Section 7-13.)
4. Remove the loading motor assembly. (Refer to Section 7-18.)
5. Remove the flexible card wire connected to the connector (CN3) on the SE-521 board.
6. Remove the flexible card wire connected to the connector (CN4) on the SE-521 board.
7. Remove the screw and remove the SE-521 board.
8. Insert the hole and long hole on the SE-521 board into the two shafts of the chassis and fix the board with a screw.


Tightening torque : 0.1•Nm { 1 kgf•cm }

### Note

Do not pinch the tip of the flexible card wire on the S tension regulator assembly in between the SE-521 board and the MD chassis.

Put the board under the claw of the warm holder.


9. Connect the flexible card wire to the connector (CN4) on the SE-521 board.
10. Connect the flexible card wire on the S tension regulator assembly to the connector (CN3) on the SE-521 board.
11. Attach the loading motor assembly. (Refer to Section 7-18.)
12. Attach the TG1 arm assembly. (Refer to Section 7-13.)

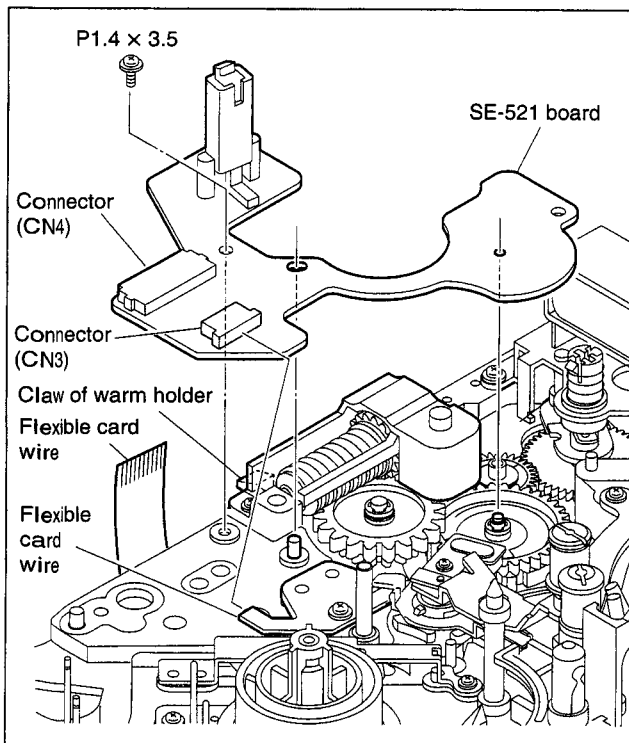

## Removal/Installation of the SE-522 Board

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the cassette compartment. (Refer to Section 3-4.)
3. Remove the flexible card wires from the connectors (CN2, CN3) on the SE-522 board.
4. Remove the two screws (P1.4 × 3.5) and remove the SE-522 board while avoiding contacting the T drawer arm assembly.
5. Insert the two positioning holes on the SE-522 board into the positioning pins on the MD chassis, and insert the sensors (PH1, PH2, PH3) into the square hole on the MD chassis.
6. Re-attach the parts in reverse order of steps 1 through 5 of the disassembling procedure.


Tightening torque : 0.1 N•m { 1 kgf•cm }

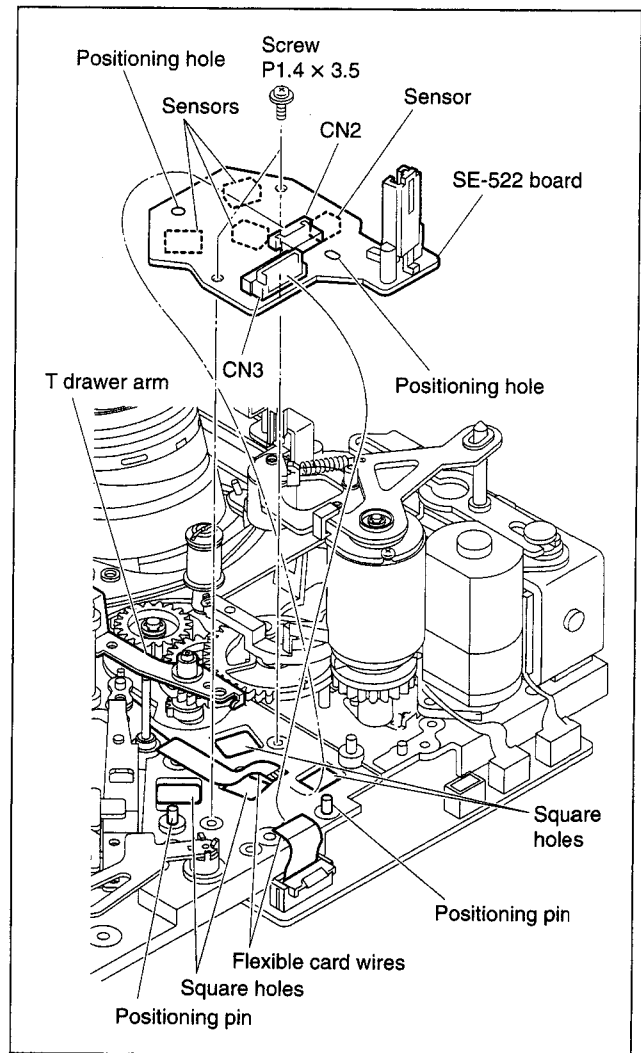

## Removal/Installation of the SE-525 Board (LED Holder Assembly)

1. Remove the top panel. (Refer to Section 3-3.)
2. Remove the cassette compartment. (Refer to Section 3-4.)
3. Remove the RMP retainer (T1) assembly.  
(Refer to Section 7-8.)
4. Remove the rail assembly. (Refer to Section 7-15.)
5. Remove the LED holder assembly from the rail assembly.
6. Attach the LED holder assembly to the rail assembly.
7. Re-attach the parts in reverse order of steps 1 through 4 of the disassembling procedure.

Tightening torque : 0.1 N·m { 1 kgf·cm }

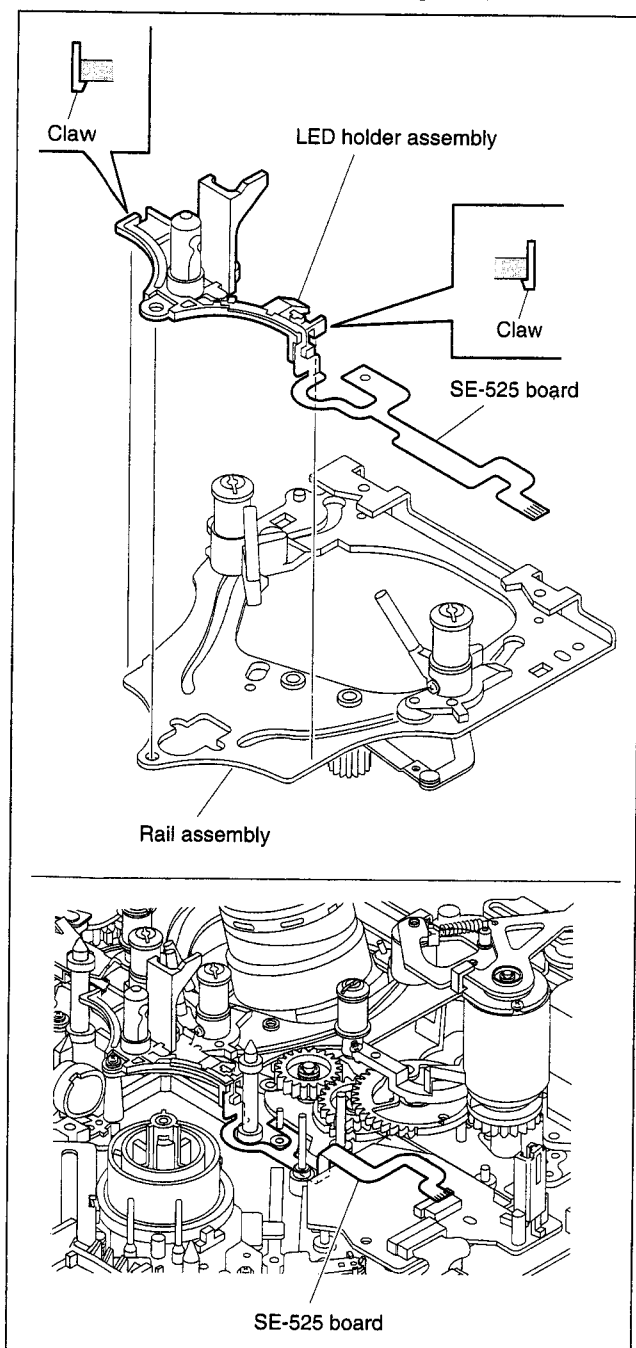

## 3-7-2. Extension Board

An optional extension board is supplied to check and adjust the card boards. Attach the extension board to this unit and attach the board to be checked and adjusted to the top of the extension board.


Extension board	Card boards which can be connected
DJ-495	AVP-3/3P, DVP-19, SSS-10, DDE-15/15P (DSBK-1504)

### 3-7-3. Installing the Extension Board

**Note**


When attaching the extension board, be sure to turn off the main power.

1. Remove the rear panel. (Refer to Section 3-7-1.)
2. Attach the extension board to the main unit as shown below.

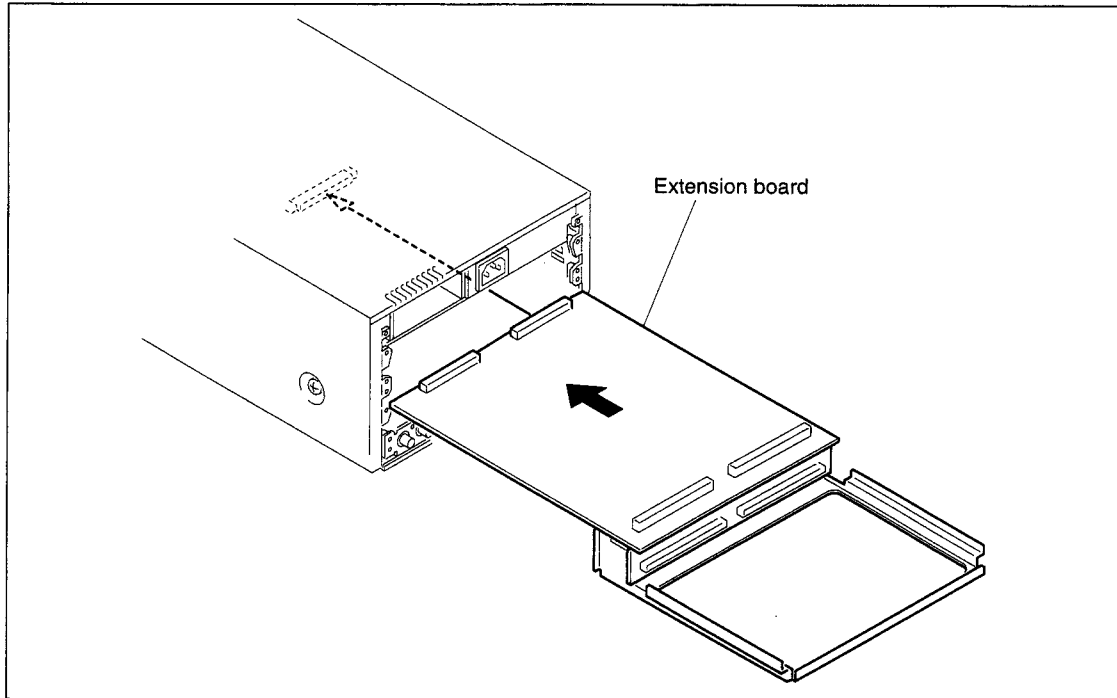


#### In case of horizontal extension

1. Remove the rear panel. (Refer to Section 3-7-1.)
2. Attach the board to be extended to the extension board horizontally as shown below.

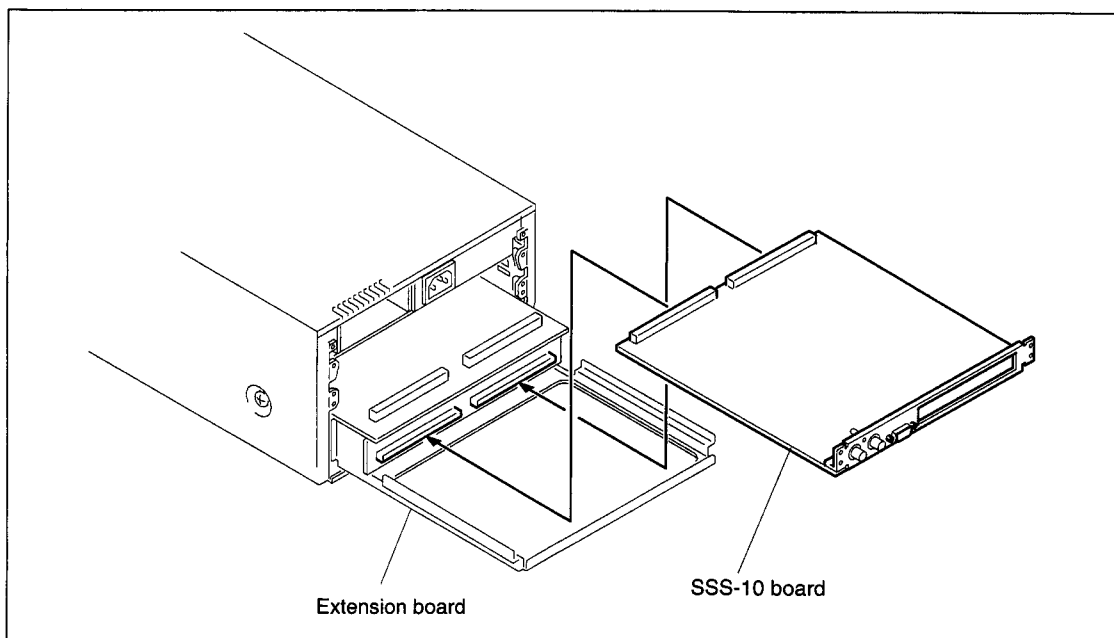


### In case of vertical extension

1. Remove the rear panel. (Refer to Section 3-7-1.)
2. Attach the board to be extended to the extension board vertically as shown below.

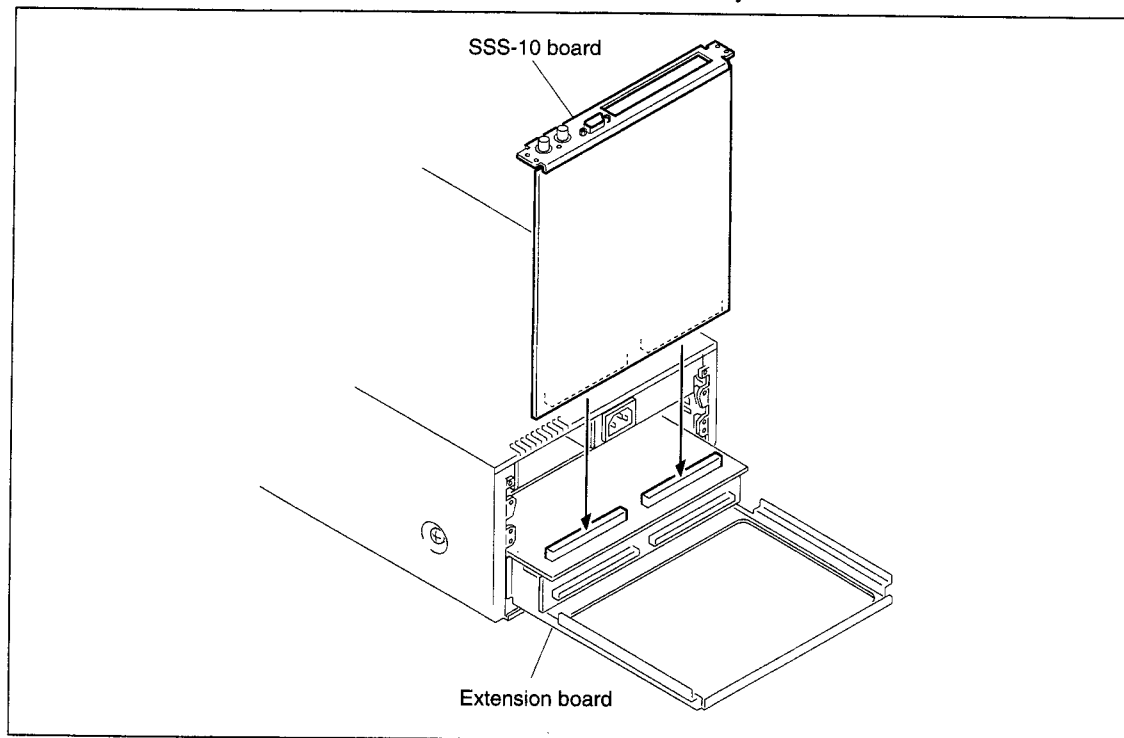

### In case of inserting into the bottom slot

1. Remove the rear panel. (Refer to Section 3-7-1.)
2. Put the table (at least 50 mm in thickness) under the main unit.
3. Attach the extension board to the main unit as shown below.

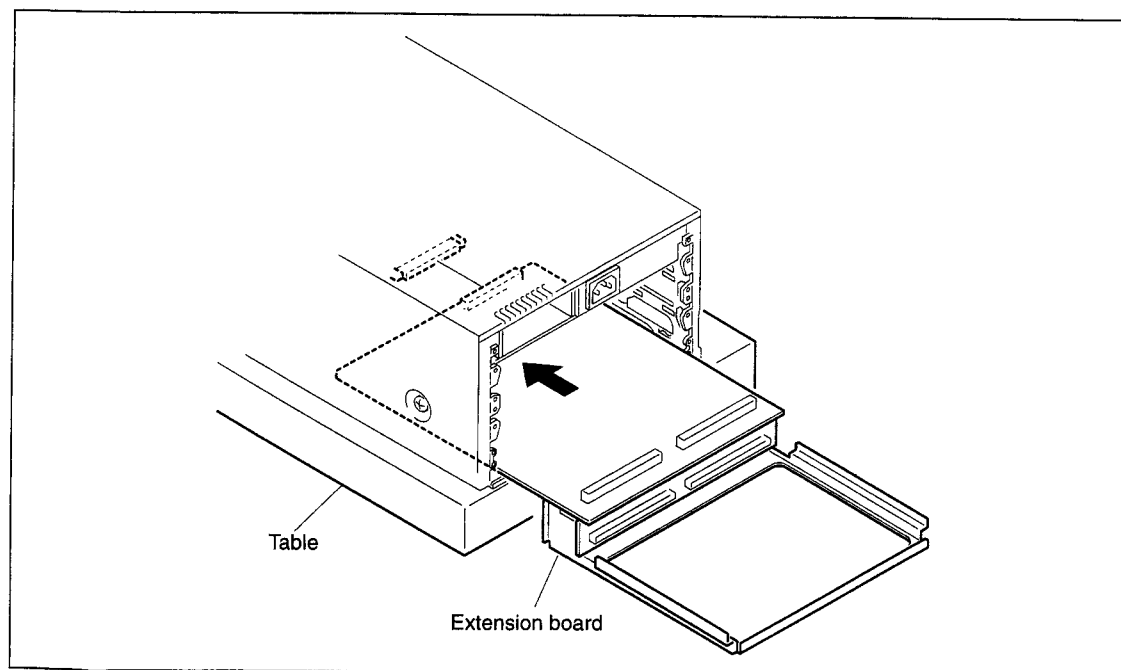

### 3-7-4. Installing/Removing the Option Boards

#### Note


When attaching the option boards, be sure to turn off the main power.

#### Installing/Removing the SDI-58 Board (DSBK-1501)


1. Remove the rear panel. (Refer to Section 3-7-1.)

#### Note


When the DSBK-1503 is already installed, remove the seven screws and remove the rear panel.

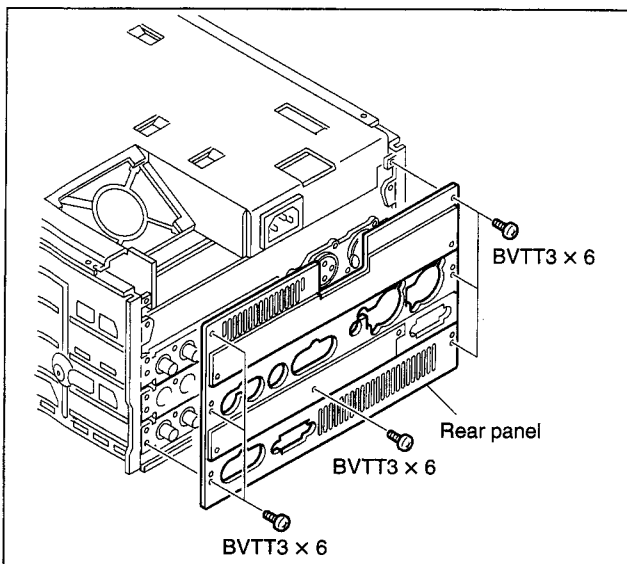

2. Remove the SSS-10 board. (Refer to Section 3-7-1.)
3. Remove the DVP-19 board.

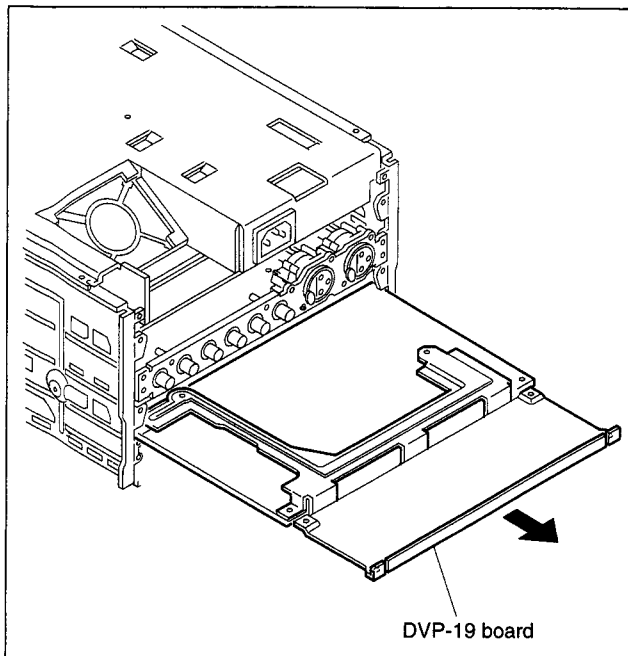


4. Securely connect the two connectors (CN101, CN102) on the SDI-58 board to the connectors on the DVP-19 board.
5. Fix the SDI-58 board with the two screws (B3 x 6).

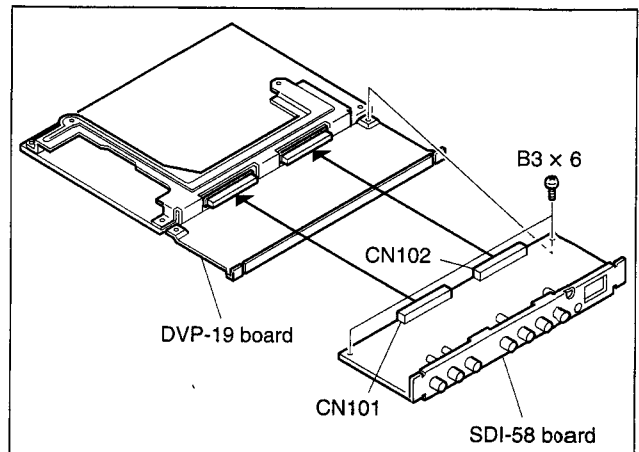

#### Note

When the DSBK-1503 is already attached, remove the CN-2103 board from the connector adapter and attach the board to the rear panel of the DSBK-1501.


6. Insert the DVP-19 board to the specified slot and securely connect the board to the motherboard.
7. Insert the SSS-10 board to the specified slot and securely connect the board to the motherboard.
8. Remove the two screws and remove the blank panel from the rear panel.

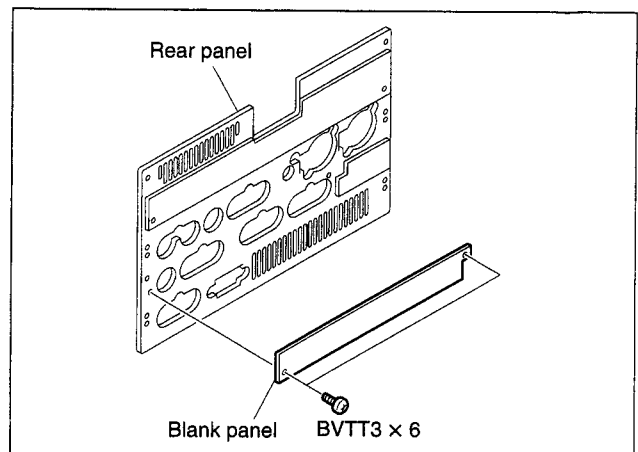


9. Attach the rear panel with the six screws (BVTT3 x 6).
10. Remove the parts in reverse order of the installing procedure.

## Installing/Removing the CN-2103/DV-25 Board (DSBK-1503)

1. Remove the rear panel. (Refer to Section 3-7-1.)
2. Remove the SSS-10 board. (Refer to Section 3-7-1.)
3. Remove the DVP-19 board.

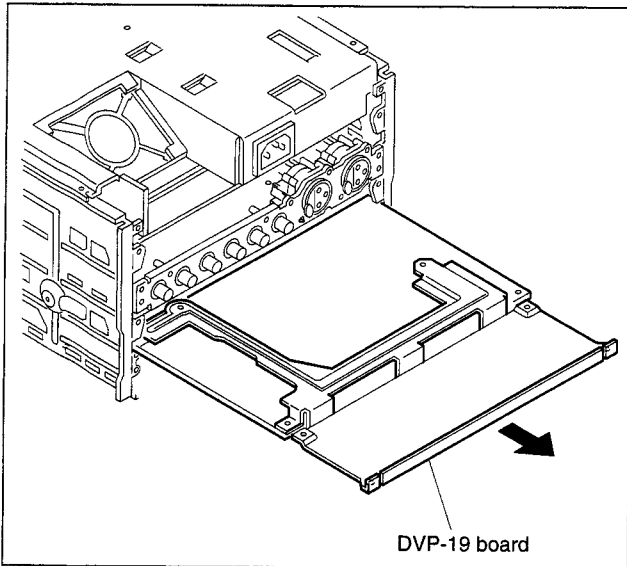

4. Securely connect the two connectors (CN51, CN52) on the DV-25 board to the connectors on the DVP-19 board.
5. Fix the DV-25 board with the two screws (B3 × 6).

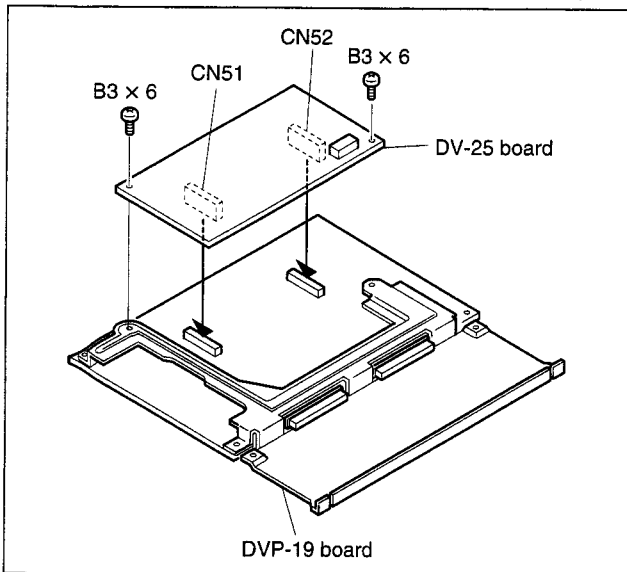


6. Attach the CN-2103 board with the two screws (B2 × 5) to the supplied connector adapter.


### Note

When the DSBK-1501 is already attached, attach the CN-2103 board to the rear panel of the DSBK-1501 with the two screws (B2 × 5).


7. Connect CN501 on the DV-25 board and CN2 on the CN-2103 board with the supplied harness.

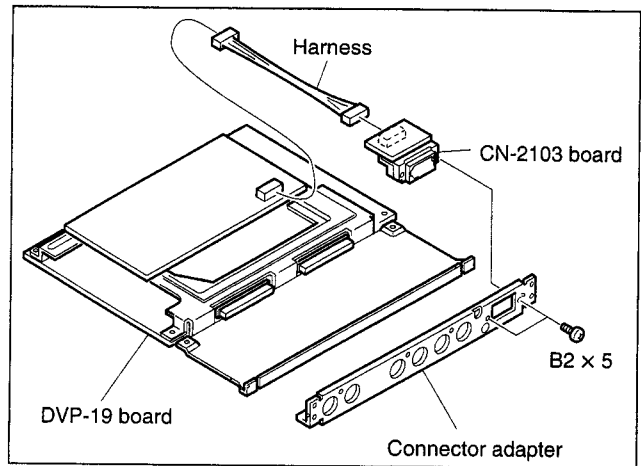

8. Insert the DVP-19 board to the specified slot and securely connect the board to the motherboard.
9. Insert the SSS-10 board to the specified slot and securely connect the board to the motherboard.
10. Remove the screw and remove the blank panel from the rear panel.

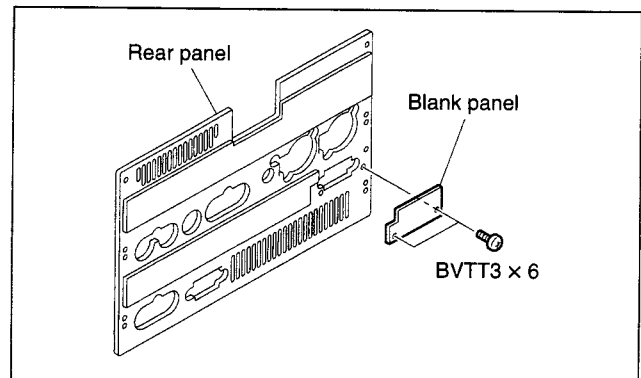

11. Attach the rear panel with the seven screws (BVTT3 × 6).

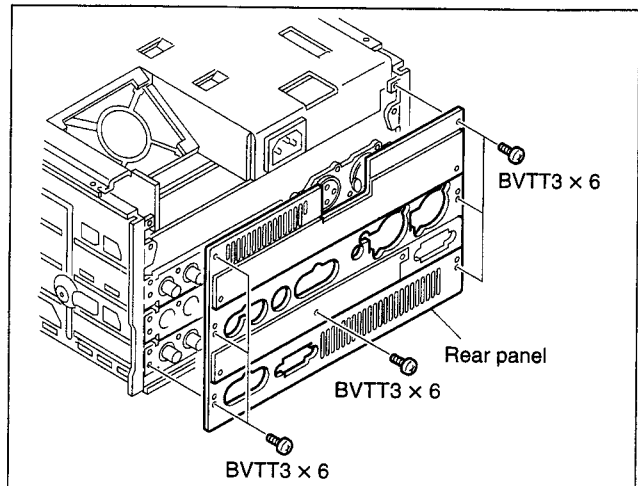

12. Remove the parts in reverse order of the installing procedure.



## 3-8. Notes on Repair Parts

### 3-8-1. Flexible Card Wire Replacement

The following six types of flexible card wire are used in the DSR-1500/1500P.

#### Note

Take utmost care when handling the flexible card wires because their life is extremely shortened by folding.


#### < Type A >

##### Removing method

Raise the portion marked "A" of the connector and release the lock. Pull out the flexible card wire.

##### Insertion method

Insert the flexible card wire fully up to the marked line and push up the portion marked "A" of the connector.

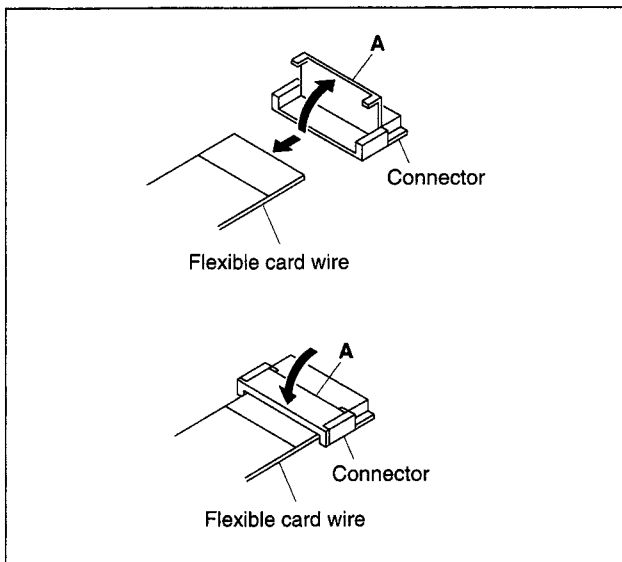

#### Note

The flexible card wire has the conduction side and the insulation side. Connect the flexible card wire after checking for the correct side as shown.

If the condition side and the insulation side are connected in the wrong direction, the circuit will not operate.


#### < Type B >

##### Removing method

Raise the portion marked "A" of the connector and release the lock. Pull out the flexible card wire.

##### Insertion method

Insert the flexible card wire fully up to the marked line and push up the portion marked "A" of the connector.

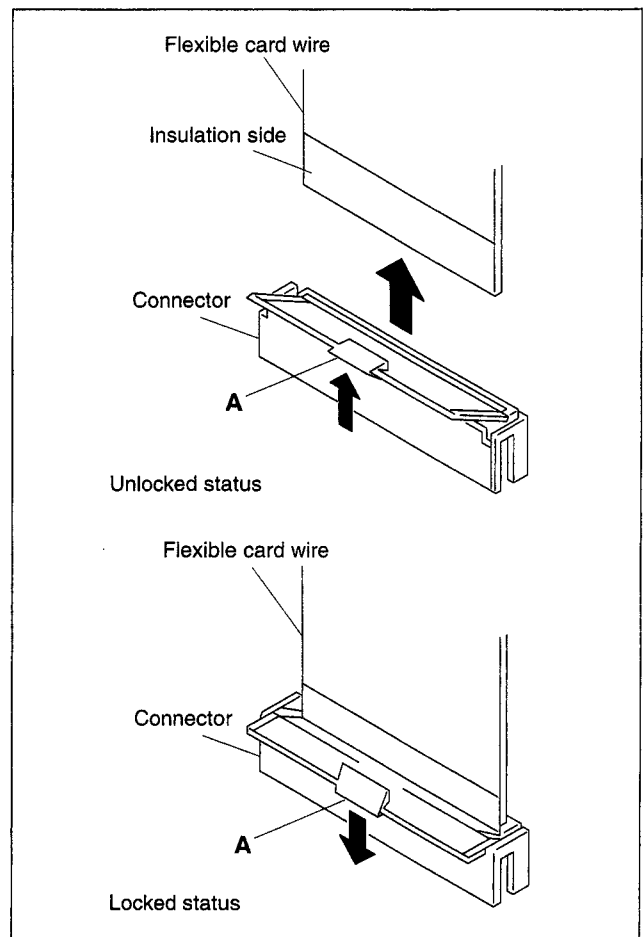

#### Note

The flexible card wire has the conduction side and the insulation side. Connect the flexible card wire after checking for the correct side as shown.

If the condition side and the insulation side are connected in the wrong direction, the circuit will not operate.


### < Type C >

#### Removing method

Raise the portion marked "A" of the connector and release the lock. Pull out the flexible card wire.

#### Insertion method

Insert the flexible card wire fully up to the marked line and push up the portion marked "A" of the connector.

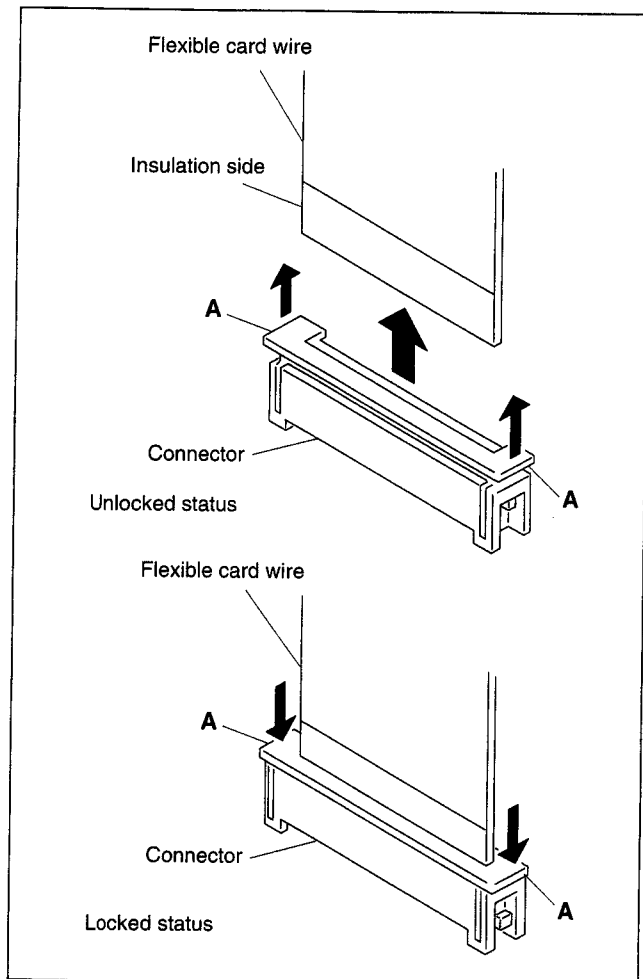

#### Note

The flexible card wire has the conduction side and the insulation side. Connect the flexible card wire after checking for the correct side as shown. If the condition side and the insulation side are connected in the wrong direction, the circuit will not operate.

### < Type D >

#### Removing method

##### Notes


- Do not pull the flexible card wire before releasing the lock.
- The flexible card wire has the conduction side and the insulation side. Check the conduction side and the insulation side before disconnection.

1. Move the portion "A" of the connector in the direction of the arrow A to release the lock. Remove the flexible card wire.

#### Insertion method

##### Notes

- Confirm that the contacting surface of the flexible card wire is free from stain and dust.
  - Confirm that the lock of the connector is already released.
1. Insert the flexible card wire securely to the deep end.
  2. Push in the portion marked "A" of the connector in the direction of the arrow to lock the connector. Be careful that the flexible card wire is not slanted with respect to the connector.

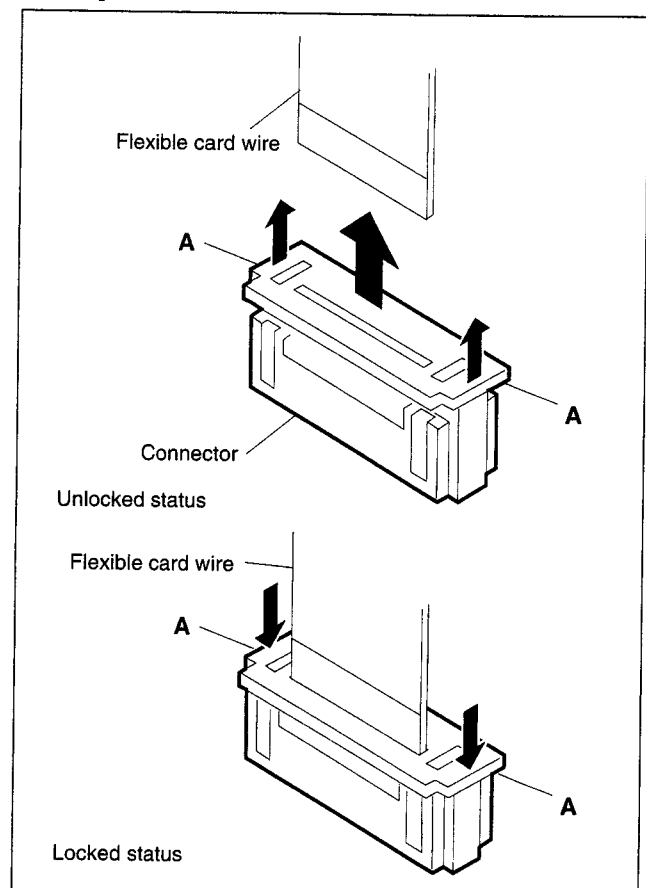

## < Type E >

### Removing method


#### Notes

- Do not pull the flexible card wire before releasing the lock.
  - The flexible card wire has the conduction side and the insulation side. Check the conduction side and the insulation side before disconnection.
1. Move the portion "A" of the connector in the direction of the arrow A to release the lock. Remove the flexible card wire.

### Insertion method

#### Notes

- Confirm that the contacting surface of the flexible card wire is free from stain and dust.
  - Confirm that the lock of the connector is already released.
1. Insert the flexible card wire securely to the deep end.
  2. Push in the portion marked "A" of the connector in the direction of the arrow to lock the connector. Be careful that the flexible card wire is not slanted with respect to the connector.

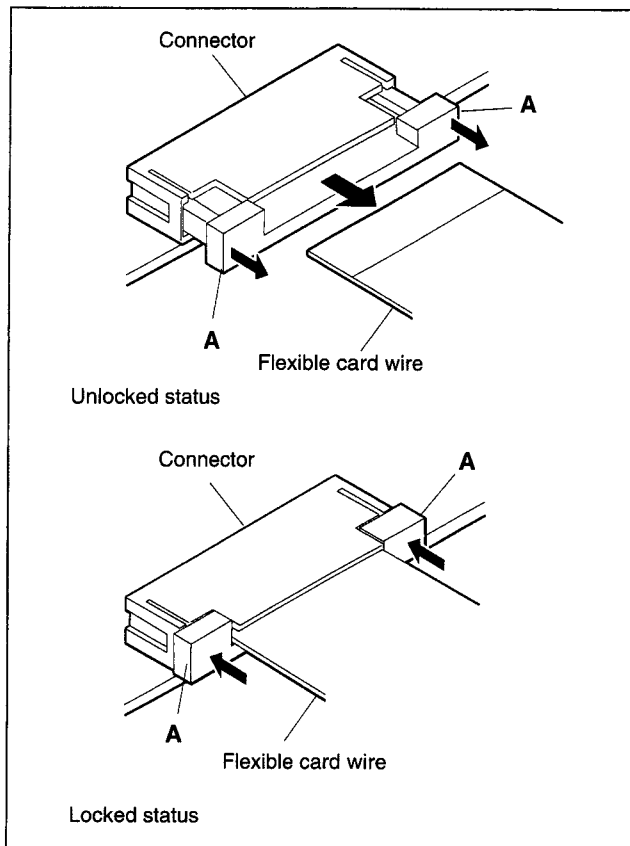


## < Type F >

### Removing method

#### Notes


- Do not pull the flexible card wire before releasing the lock.
  - The flexible card wire has the conduction side and the insulation side. Check the conduction side and the insulation side before disconnection.
1. Move the portion "A" of the connector in the direction of the arrow A to release the lock. Remove the flexible card wire.

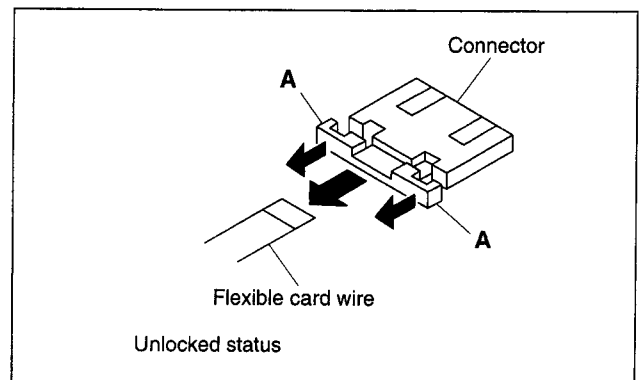

### Insertion method

#### Notes

- Confirm that the contacting surface of the flexible card wire is free from stain and dust.
  - Confirm that the lock of the connector is already released.
1. Insert the flexible card wire securely to the deep end.
  2. Push in the portion marked "A" of the connector in the direction of the arrow to lock the connector. Be careful that the flexible card wire is not slanted with respect to the connector.

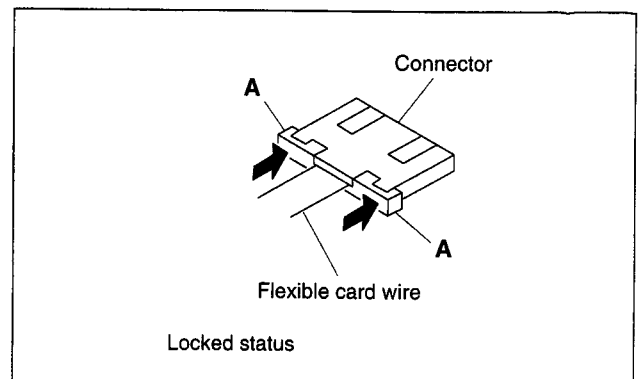

### 3-9. Replacement of Lithium Battery

The SSS-10 board has the built-in lithium battery as the countermeasure for power failure. The lithium battery is attached on top of IC600 (F-4). Life of the lithium battery is about 6 years.

Time to exchange the battery is displayed in the time counter display block and on the monitor display. Replace the battery when the following message appears.

PLEASE EXCHANGE THE  
BATTERY TO A NEW ONE.  
PLEASE CONTACT SERVICE.

#### Time counter display block

Exchg Batt!


Sony part number : 1-528-749-11  
Type : M4Z28BR00SH1

#### Backup battery replacement procedure

##### Note


When replacing the battery, insert the replacement battery with the “+” and “-” ends correctly oriented. If the battery’s positive (+) and negative (-) terminals are backward, physical injury or damage to peripheral equipment can be result due to explosion and or leakage of internal materials.

1. Remove the SSS-10 board. (Refer to Section 3-7-1.)
2. Insert tip of a flat head (-) screwdriver in between the battery and IC600, and remove the battery.
3. Attach the replacement lithium battery so that the protrusion of the lithium battery is directed in the arrow direction as shown, and the battery is firmly secured by the four claws.

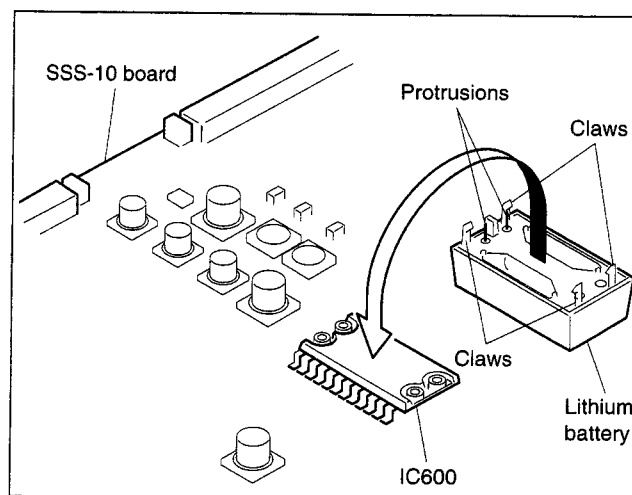

### 3-10. Fixtures and Tools list

Fig.	Part No.	Description	Uses
①	J-6080-029-A	Small adjustment mirror	Video tracking adjustment
②	J-6082-231-A	Washer mounting fixture (ø1.5)	Parts replacement
③	J-6082-232-A	Washer mounting fixture (ø1.2)	Parts replacement
④	J-6082-233-A	Washer mounting fixture (ø0.8)	Parts replacement
⑤	J-6082-234-A	Washer extracting fixture A	Parts replacement
⑥	J-6082-236-A	Washer fixture kit	Parts replacement (Set of No.2 to No.5)
⑦	J-6082-362-A	Tape guide adjustment driver	Tape guide height adjustment
⑧	J-6082-373-A	Torque cassette	FWD/REV winding torque adjustment
⑨	J-6325-110-A	Torque screwdriver's bit (M1.4)	Parts replacement
⑩	J-6325-380-A	Torque screwdriver's bit (M2)	Parts replacement
⑪	J-6325-400-A	Torque screwdriver (3 kg)	Tightening screws
⑫	J-6443-710-A (CCW)	Brake torque gauge (CCW) (DJ-371)	Brake torque adjustment
⑬	J-6443-720-A (CW)	Brake torque gauge (CW) (DJ-372)	Brake torque adjustment
⑭	J-6444-950-A	Extension board (DJ-495)	Extension board for DSR-1500/1500P
⑮	J-6444-610-B	Path adjustment board (DJ-461)	For tape path adjustment RF envelope detector fixture
⑯	J-6444-720-A	Path adjustment board connection cable (DJ-472)	Tape path adjustment for DSR-1800/1800P/1600/1600P/1500/1500P
⑰	3-184-527-01	Cleaning cloth	Cleaning
⑱	7-432-114-11	Locking compound	Locking compound
⑲	7-662-001-39	Grease SG-941(20g)	Parts replacement
⑳	8-967-999-02	Alignment tape XH2-1AST	Tape path alignment (NTSC & PAL)
㉑	8-967-999-22	Alignment tape XH5-1A2 (NTSC)	Audio/video alignment (DVCAM)
	8-967-999-26	Alignment tape XH5-1AP2 (PAL)	Audio/video alignment (DVCAM for PAL)
㉒	8-967-999-31	Alignment tape XH4-1A (NTSC)	Audio/video alignment (DV)
㉓	9-919-573-01	Cleaning fluid	Cleaning
㉔	J-6444-970-A	System control/Servo download tool board (DJ-497)	Software version-up
㉕	J-6444-990-A	FPGA download tool board (DJ-499)	Software version-up
㉖	J-6445-000-A	Path tool power supply cable (DJ-500)	Tape path adjustment for DSR-1500/1500P

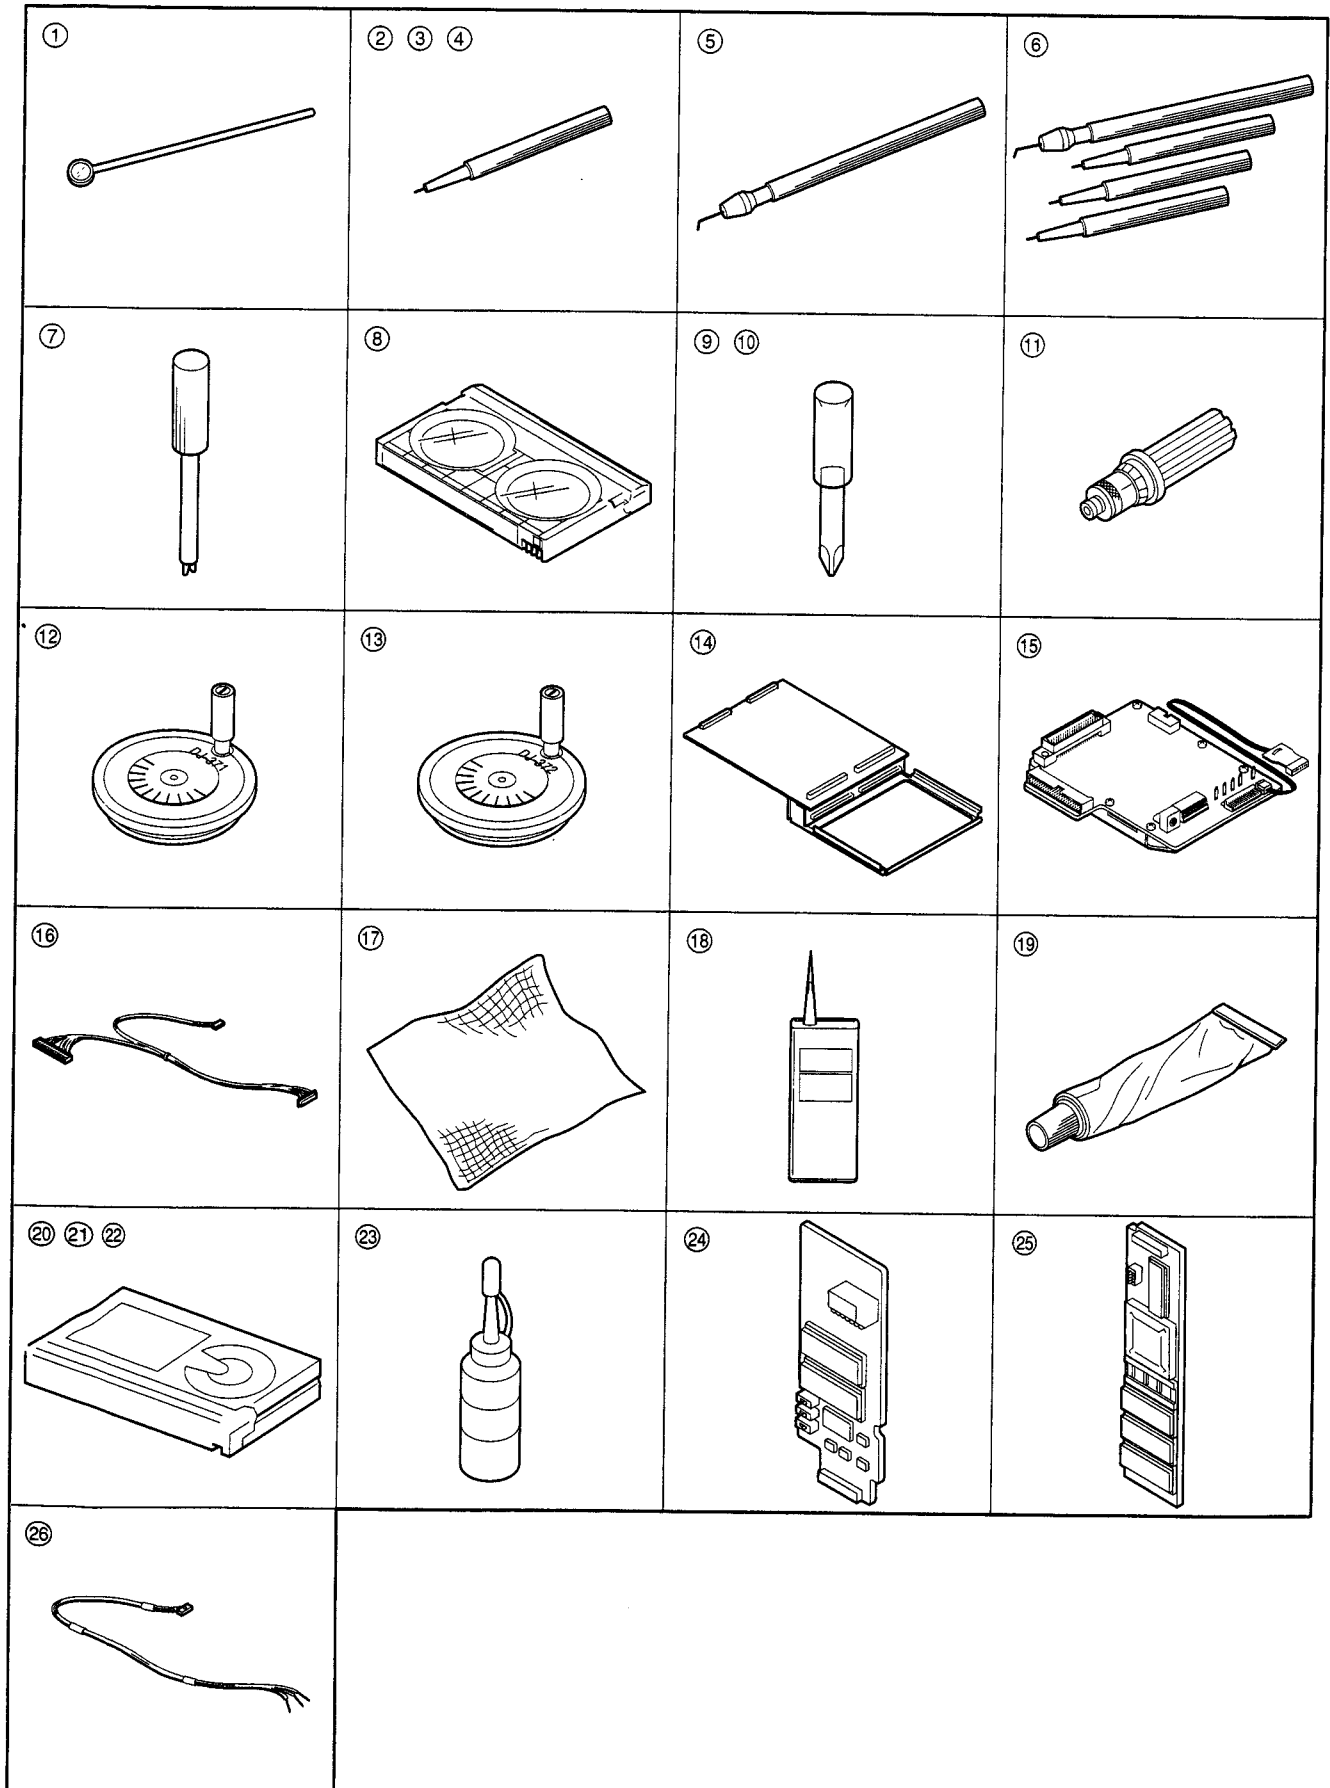

### 3-11. Upgrading the System/Servo CPU Program Version

The DSR-1500/1500P mounts the CPU for SY and SV on the SSS-10 board and uses flash ROMs for loading this program.

Do the following procedure to upgrade the version of the flash ROMs mounted on the board.

There are two methods of the upgrading the flash ROMs.

- (1) High-speed writing using the fixture board, J-6444-970-A (DJ-497)
- (2) Writing by downloading from a PC (through RS-422)

#### 3-11-1. Upgrading the Version Using the Fixture Board

##### 1. Setting the fixture board DJ-497

Write the CPU software to be written into the following PROMs.

ROMs to be used on the fixture DJ-497

SV CPU      MX27C2000DC-12 (8-759-477-94) or equivalent

SY CPU      M27C4001-10F1-(G) (8-759-568-73) or equivalent

As these CPUs employ 16 bits data bus, 2 pieces of PROMs are required for one CPU.

Write softwares into PROMs in the 8 bit split mode. A PROM at even address side is for CN102.


A PROM at odd address side is for CN101.

- (1) Insert the PROMs, in which CPU software are written, into the socket on the fixture board DJ-497.
- (2) Set bit 1 of S1 on the fixture DJ-497 to OPEN (upper side) and the rest of bits to the board side (lower side).
- (3) Set S3 on the fixture DJ-497 to **ROM** side and S2 on the fixture DJ-497 to **DOWN** side.
- (4) Set S4 on the fixture DJ-497 to **8M** (at the SY CPU) or set to **4M** (at the SV CPU).

## 2. How to upgrade

- (1) Remove the top panel of the unit. (Refer to Section 3-3, "Removing/Installing the Cabinets".)
- (2) Extend the SSS-10 board with the extension fixture board DJ-495. (Refer to section 3-7-3, "Installing the Extension Board " for installation of the extension fixture board.)
- (3) Connect the fixture board DJ-497, in which the PROMs of the CPU software to be written are installed, as shown in the following figure.

CPU of software to be written	Target board to which DJ-497 is connected
SY CPU (IC501/SSS-10)	CN1/SSS-10
SV CPU (IC202/SSS-10)	CN2/SSS-10

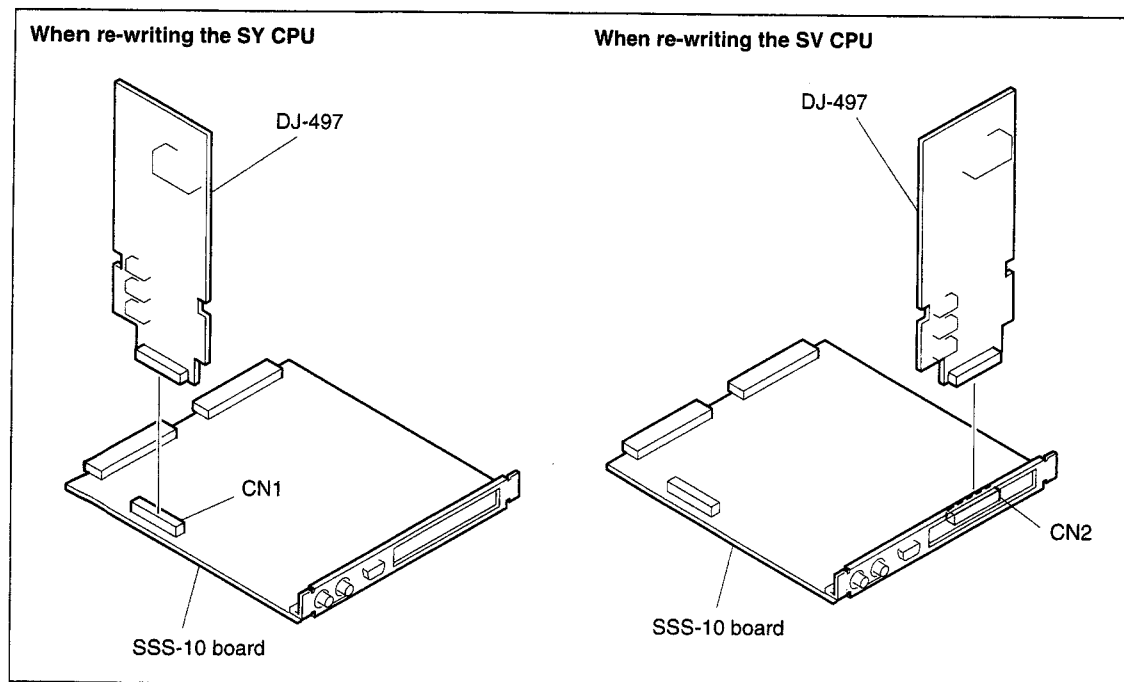

- (4) Turn on the power of the set. Then, writing starts.  
While writing is being executed, the LEDs of the fixture DJ-497 show the status shown below.

D2 lights up.	ERASE is being executed.
D2 and D4 light up.	BLANKCHECK is being executed.
D3 lights up.	COPY is being executed.
D4 lights up.	VERIFY is being executed.
- (5) When only D5 (green LED next to three red LEDs) lights up, writing ends.

D5 lights up.	Normal termination
D1 lights up.	Abnormal termination

(Suspect the cause of abnormality judging from status of LEDs other than the above ones.)
- (6) Turn off the power switch of the unit and remove the fixture board.
- (7) Turn on the power switch of the unit again and confirm the PROM version on the maintenance menu.  
(For checking procedure, refer to Section 5, "Maintenance Menu".)



### 3-11-2. Version Upgrade from a PC through RS-422


#### 1. Preparation

To convert the RS-232C of a PC to RS-422 (9 pin), use a conversion box or conversion board available on the market.


- 1) Install the version upgrade application software (fup.exe) on the PC on which Windows95 or 98 is installed.
- 2) Download the version upgrade software of CPUs to be upgrade.

#### 2. How to use fup.exe

Start up the fup.exe and then the main dialogue menu shown below appears.

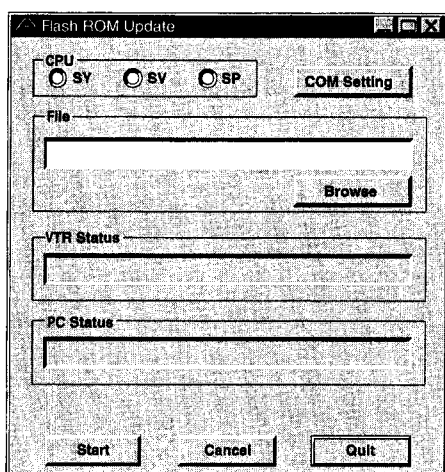

Main Dialogue

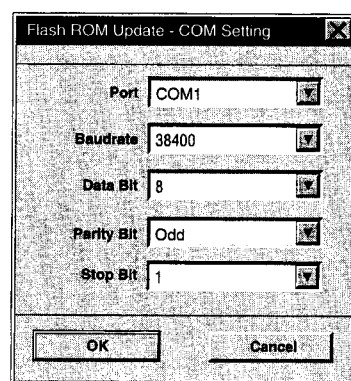

Communication Setting Dialogue

The details of each button are as follows.

- CPU :** Select one of SY and SV.  
(Designate a target CPU to be transferred.)
- COM Setting :** The communication setting dialogue appears.  
(DO NOT assign items other than Port.)
- File :** Enter a hex filename to be transferred in this field.  
When a filename is selected using Browse, the selected filename appears.  
Drag & Drop is supported.
- Browse :** The file selection menu appears.
- VTR Status :** The message from a VTR appears in this field.
- PC Status :** This field shows a status such as "FINISH",
- Start :** The file transfer to a VTR is started. (Unless a filename is designated, it is invalid. )
- Cancel :** The file transfer to a VTR is stopped.
- Quit :** Flash ROM Update is terminated.

### 3. Operation

Operate in the order of "Select CPU." → "Designate hex.filename to be transferred." → "Press Start button."

After the version upgrade is completed, turn off and on the power of the VTR.

(In case of upgrading the same CPU or other CPU, it is not necessary to power down.)

When it is properly finished, confirm the PROM versions on the maintenance menu.

(For checking procedure, refer to Section 5, "Maintenance Menu".)

During transferring, the status is displayed in between "PC Status" and "Start, Cancel and Quit buttons".  
The progress bar and the remaining time are displayed.

#### Messages

##### VTR Status

Displayed messages	Contents	Details
Download completed	Completed download.	
Flash memory erasing	Erasing flash memory.	
Flash memory writing	Writing flash memory.	
Flash memory access failure	Unable to access to flash memory.	Flash ROM device error, Writing error
Flash memory erase failure	Unable to erase of flash memory.	Flash ROM erasure error
Verify error	Verify Error occurs.	Verify-error in writing into flash memory
Checksum error	Checksum error occurs.	Checksum error in data received from a PC
Communication error between VTR and PC	Communication error occurs in VTR and PC.	Overrun, flaming, parity error

##### PC Status

Displayed messages	Contents	Details
Communication establishment with VTR	Trying communication with a VTR.	Starts at the pressing the Start button and ends until VTR starts to erase flash memory.
Communication stop with VTR	Communication with a VTR is stopped.	A user pressed Cancel button.


##### Message Box

Displayed messages	Contents	Details
There is not the response from VTR	No response from a VTR	
VTR it was not made to a remote mode	Can't set a VTR to remote mode.	
VTR it was not made to an adjustment mode	Can't set a VTR to adjustment mode.	
VTR it was not made to a download mode	Can't set a VTR to download mode.	
File open error	File not found.	When Start button is pressed, if a file is not found.
Port open error	Can't open a port.	When Start button is pressed, RS-232C COM port does not open.
VTR the communication discontinuation before download completed	A VTR interrupts communication.	Before transfer finishes, a VTR finishes.

## VFD Display

Displayed messages	Details
loading XX (XX : SY, SV)	Now loading.
complete!	Download is completed without fail.
incomplete!	Download is abnormally terminated.
Error91-130	SY flash ROM is abnormal. (Valid only in download mode.)
Error91-430	SV flash ROM is abnormal. (Valid only in download mode.)
Error91-215	Waiting for data sent from a PC. (Communication error between SY and KY) Power down a VTR once.

## Monitor

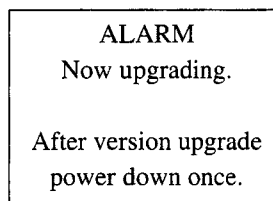

## 3-12. Upgrading the FPGA Program Version

The DSR-1500/1500P mounts the FPGA (field programmable gate alley) on the process board and uses flash ROMs for loading this program.

The version of these flash ROMs mounted on the board can be upgraded using the following method.


### 3-12-1. Setting of DJ-499

The switch setups are different according to the program file to be written. Set the switches as shown in the following table.

Model name	Board name	Connect to DJ-499	PROM file name	Switch setting of DJ-499 S3
DSR-1500/ 1500P	DVP-19	CN4	SIF-00/01/02	<p>COPY MD0 MD1 2000</p> <p>(■ indicate the knob position.)</p>
		CN5	FU-00/01/02/03	

### 3-12-2. Upgrading the Version

- (1) Prepare the fixture board DJ-499 (J-6444-990-A).
- (2) Write the required number of rewritable program files in the PROM (M27C1001-70F1 (F8) (8-759-58-91) or equivalent). Refer to the following for the number required.
- (3) Mount the PROMs in order from the one with the smallest number to the DJ-499 ref. No. 100 to 103.
- (4) Set the DJ-499 while referring to Section 3-12-1.
- (5) With the power of the unit set to OFF, mount the DJ-499 as show in the following figure.

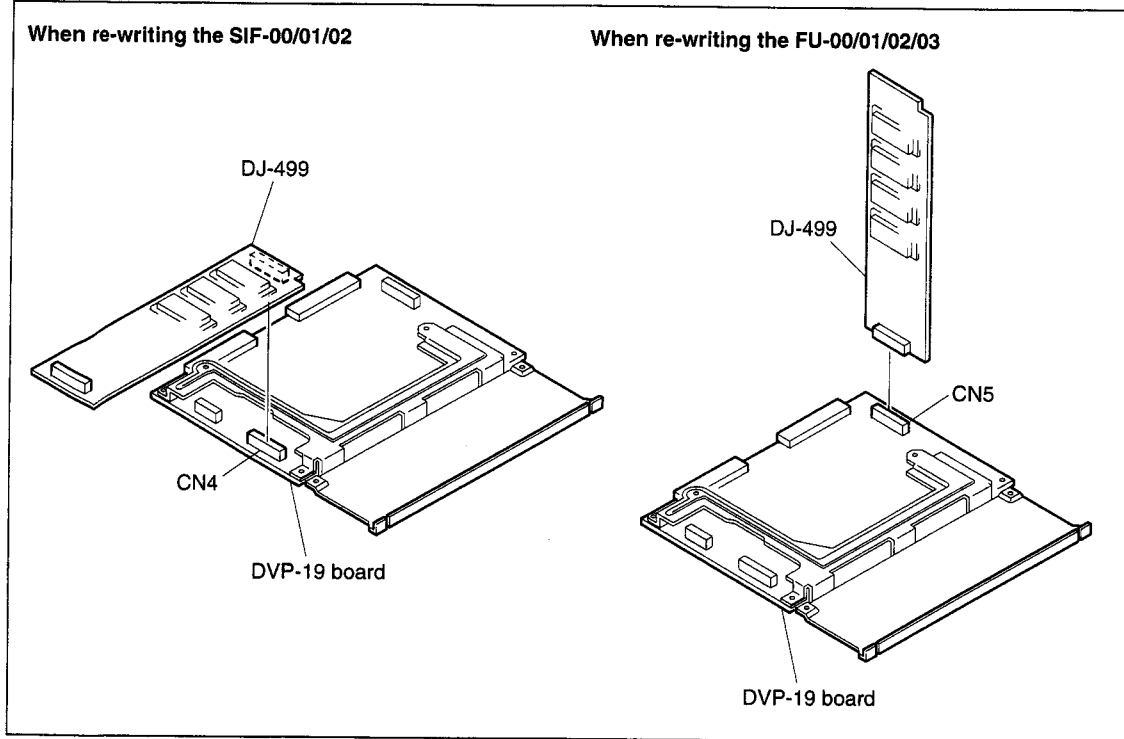

- (6) Turn ON the power of the unit.
  - Of the three LEDs on the DJ-499, the green D1 at the end lights up and goes off.  
(The dummy data will be loaded in the FPGA. It will be completed when D1 goes off.)
  - The same green D1 will blink after a while.  
(The flash ROM on the board is erased and new data is downloaded.)
  - It stops blinking, and the green D2 in the middle lights up, meaning that upgrading has ended normally.
  - If the red D3 in the middle lights up halfway through, it means that a writing error has occurred.  
Check if the DJ-499 is connected properly, and perform step (6).

## Section 4

### Error Messages

#### 4-1. Alarm Display

This unit has an alarm display function.

When a problem is detected, an alarm is displayed immediately in the timer counter block. The alarm and a message describing the countermeasure are displayed on a video monitor connected to the B-Y/CPST (SUPER) connector.


This unit has two types of alarms : one is for operators while the other is for service persons. This manual describes only the alarms for service persons. For details of alarms for operators, refer to the operating instruction or overview in this manual. Activating the alarm display may influence the system, such as when the reference video signal is not used. Therefore, you can select whether or not to display the alarm from the Setup menu selection. As for Setup menu, refer to Section 1 of this manual or to the operating instruction. However, the alarms for service persons are displayed regardless of the Setup menu setting.

##### 4-1-1. Alarm Display when the Main Power is Turned On

Detection : The cassette compartment is not attached, or the harness is not connected to the cassette compartment.

Operation after detection : None

Display : The alarm is displayed until any key is pressed.

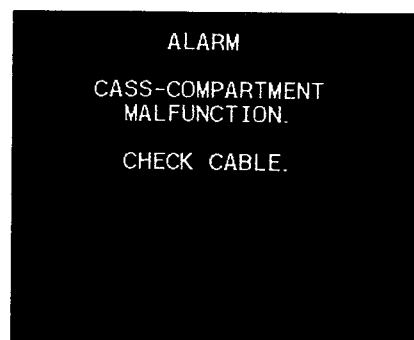


CAS-COM Err

Detection : Checks the settings of switch S400-5 to 8 on the SSS-10 board and the contents of non-volatile memory (EEPROM).

Operation after detection : None


Display : The alarm is displayed until any key is pressed.

For UC

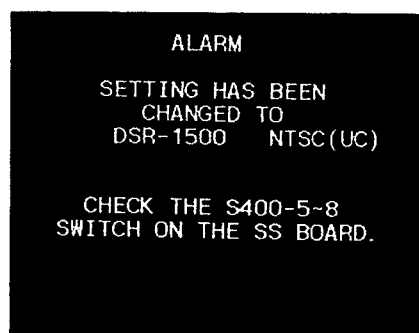

VTR Change!

For CE

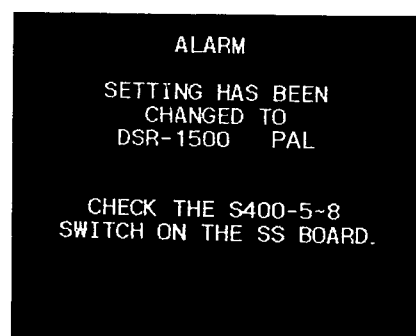


VTR Change!

Detection : Checks the version of the Setup menu.

Operation after detection : The Setup menu operates using the factory settings. The contents of the non-volatile memory (EEPROM) remain unchanged. Therefore, if the setting of the Setup menu is not changed, the same alarm will appear when the main power is turned on.


Display : The alarm is displayed until any key is pressed.

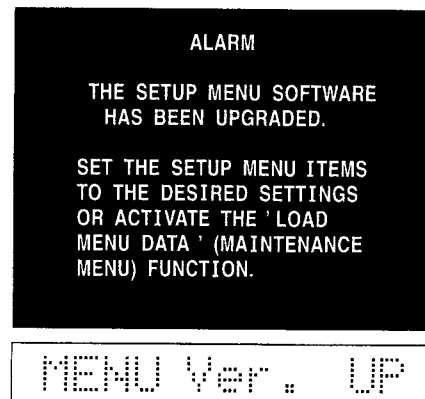

Detection : Checks that switch S400-1 to 4 on the SSS-10 board is set to ON.

Operation after detection : None


Display : The alarm is displayed until any key is pressed.

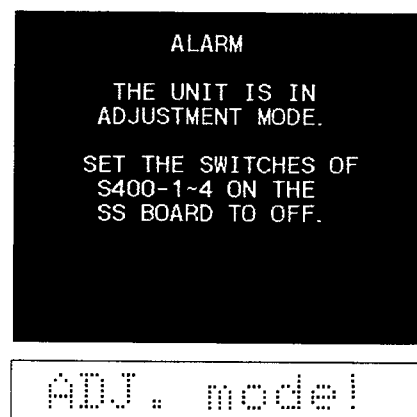

Detection : Checks that the FACTORY USE item of the Setup menu is changed.

Operation after detection : None

Display : The alarm is displayed until any key is pressed.

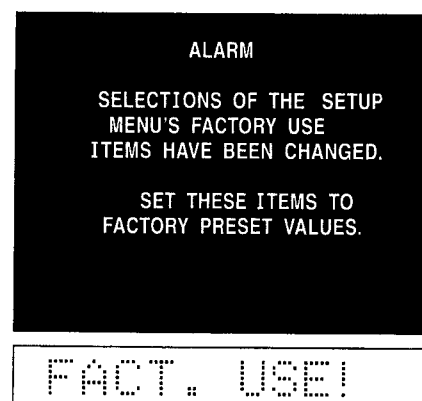

## 4-2. Error Codes

This unit has a self diagnostics function which detects internal abnormalities. When a problem is detected, an error code is displayed immediately in the time counter block, and details of the error appear on the video monitor connected to the B-Y/CPST (SUPER) connector.

### Note

An error code appears in the column shown by XX-XXX on the display.



When detected, some errors turn the unit to AUTO OFF. (Refer to Section "4-2-3. Error Codes," excluding error code 08-032.)

This error is kept in memory even after the main power of this unit is turned off. In other words, the error code or the contents of the detected error appear even when the main power of this unit is turned off and then back on again, so this unit enters AUTO OFF mode again.

This unit enters the emergency EJECT mode when the **EJECT** key is pressed at this moment.

### Reference

In the emergency EJECT mode, the tape is ejected gently by usable motor assuming that the tape is slack or a device may be faulty.

The following message appears on the video monitor connected to the B-Y/CPST (SUPER) connector when this unit enters the emergency EJECT mode.

The error code is displayed on the time counter.



The message shown to the right appears on the video monitor connected to the B-Y/CPST (SUPER) connector when a cassette tape is ejected in the emergency EJECT mode.

The error code is displayed on the time counter.



The message shown to the right appears on the video monitor connected to the B-Y/CPST (SUPER) connector when a cassette tape cannot be ejected with the emergency EJECT mode.

The error code is displayed on the time counter.



Perform Section "4-3-1. How to Take Out the Cassette Whose Tape is Slacked (MANUAL EJECT) " when a cassette tape cannot be ejected with the emergency EJECT mode.




#### 4-2-1. Display of Previously Detected Error Codes




When the DSR-1500/1500P detects an internal abnormality, the error code is memorized in EEPROM.  
(Excluding error code 9X-XXX)


A maximum of 8 error codes detected previously, starting from the latest error code, can be displayed.




##### How to display the error code

1. While pressing the  key, press the **MENU** key.

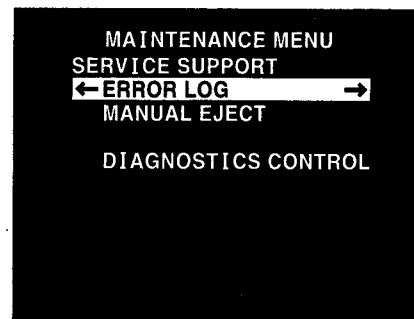

2. Move the cursor to SERVICE SUPPORT so that the letters are highlighted using the ,  keys, then press the  key.



3. Move the cursor to ERROR LOG so that the letters are highlighted using the ,  keys, then press the  key.

The display changes as shown to the right, and the error log appears.



## 4-2-2. Main Codes and Sub Codes

### Main codes


The main code is a two-digit number that indicates the system which sensed the error.

Main code 0X :	Servo and tape path system error
Main code 2X :	Mechanism control system error
Main code 3X :	Sensor error
Main code 91 :	Communication system and interface system error
Main code 92 to 94 :	Sync. system error
Main code 95 :	Digital signal process system error and communication error with ICs

### Sub codes

The sub code is a three-digit number. Each digit has the following meaning.

#### When the Main Code is 0X or 2X :

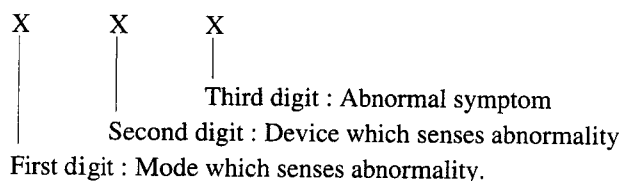

#### First digit : Mode which senses abnormality.

- 0 : Mode cannot be identified, or mode identification is not necessary.
- 1 : Cassette down mode
- 2 : Threading mode
- 3 : STOP mode
- 4 : F. FWD or REW mode
- 5 : SEARCH mode
- 6 : PLAY or RECORD mode
- 7 : STANDBY-OFF mode
- 8 : Unthreading mode
- 9 : Cassette up mode
- A : Cassette out mode

(State that a cassette is ejected.)

#### Second digit : Device which senses abnormality

- 0 : Device cannot be identified, or device identification is not necessary.
- 1 : Cassette up/down motor/sensor
- 2 : Threading motor/FG/sensor
- 3 : Drum motor/FG
- 4 : Capstan motor/FG
- 5 : Supply reel motor/FG
- 6 : Supply reel brake solenoid
- 7 : Takeup reel motor/FG
- 8 : Takeup reel brake solenoid
- 9 : Supply and takeup reel motor/FG
- A : Tension regulator
- B : Pinch solenoid
- C : Reel position motor/sensor
- D : Head cleaning solenoid
- E : M stop solenoid


#### Third digit : Abnormal symptom

- 0 : Abnormal symptom identification is not necessary.
- 1 : Operation could not be completed within the specified time.
- 2 : Abnormal speed detected.
- 3 : Tape slack detected.
- 4 : FG cannot be detected.
- 5 : FG detected.
- 6 : Rotating direction error detected.
- 7 : Excessive tension detected.
- 8 : Abnormal current detected.
- 9 : The full top or full end of a tape cannot be released.
- A : Retry in progress  
(Unthreading and re-threading)

### When the Main Code is 3X :

All sub codes are 000.

### When the Main Code is 91 :

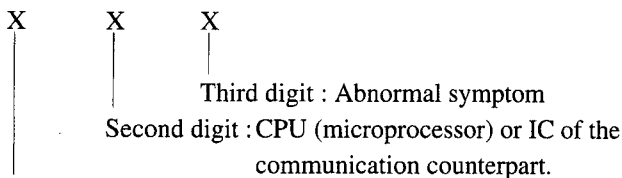

First digit : CPU (microprocessor) or IC which detects the abnormality.

**First and second digits : CPU (microprocessor) code.**

- 1 : System control main CPU (SSS-10, IC501)
- 2 : Keyboard u-COM (KY-474, U102)
- 3 : Memory
- 4 : Servo main CPU (SSS-10, IC102)
- 5 : Servo sub u-COM (DR-428, IC1)
- 7 : SPCON main CPU (SSS-10, IC501)
- D : DV I/F u-COM (DV-25, IC602)
- E : Digital I/F u-COM (SDI-58, IC903)


**Third digit : Abnormal symptom (when the communication counterpart is other than memory)**

- 1 : Abnormal checksum
- 2 : Abnormality of overrun
- 3 : Abnormal parity
- 4 : Abnormal framing
- 5 : Communication could not be completed in the specified time.

**Third digit : Abnormal symptom (when the communication counterpart is memory)**

- 0 : Abnormality of ROM
- 1 : Abnormality in the external memory area
- 2 : Abnormality in the internal memory area
- 3 : Abnormality in the common memory-1 area
- 4 : Abnormality in the common memory-2 area
- 5 : Abnormality in the external serial memory-1 area
- 6 : Abnormality in the external serial memory-2 area
- 7 : Abnormality in the external serial memory-3 area
- 8 : Abnormality in the external serial memory-4 area
- 9 : Abnormality in the EEPROM area
- A : Abnormality in the NVRAM area
- B : Abnormality in the Hours Meter area
- F : Abnormality of MIC


**When the Main Code is from 92 to 94 :**

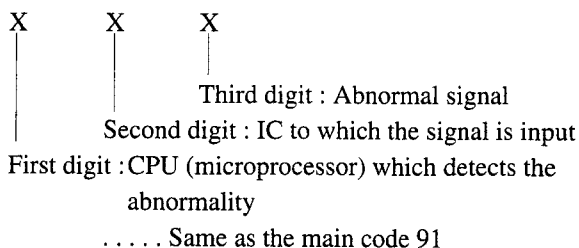

**Third digit : Abnormal signal**

- 1: Reference frame pulse of the output signal (NSG OE)
- 2: Reference track pulse of the playback side (P-TRKT)
- 3: Reference frame pulse of the playback side (P-FLTT)
- 4: Reference track pulse of the record side (R-TRKT)
- 5: Reference frame pulse of the record side (R-FLTT)
- 6: Reference track pulse of the playback side (P-TRKD)
- 7: Reference frame pulse of the playback side (P-FLTD)
- 8: Reference track pulse of the record side (R-TRKD)
- 9: Reference frame pulse of the record side (R-FLTD)

### When the Main Code is 95 :

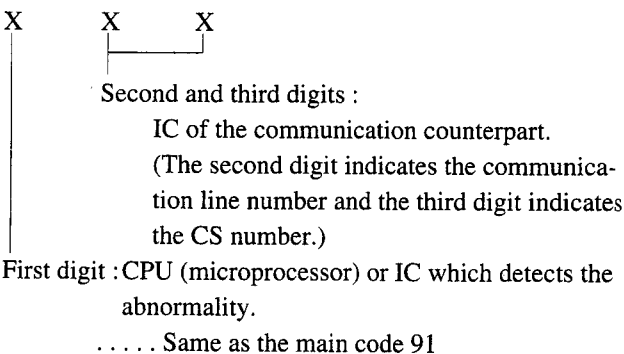

### 4-2-3. Error Codes

#### Main code 0X : abnormality of servo and tape path system

##### ① Main code 02

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
058	Detected an abnormal current in the S reel motor.	AUTO OFF	EJECT (Emergency EJECT)	Displayed until the next cassette tape is inserted.
068	Detected an abnormality of reel brake plunger solenoid.			
078	Detected an abnormal current in the T reel motor.			
0B8	Detected an abnormality of pinch plunger solenoid.	Cassette tape insertion and unthreading are prohibited until the error is solved.		Displayed until the error is solved.
154	Failed to detect the S reel FG by the FG check during cassette tape insertion.	Cassette tape will be ejected.	—	Displayed until the next cassette tape is inserted.
174	Failed to detect the T reel FG by the FG check during cassette tape insertion.			
194	Failed to detect both S and T reel FGs by the FG check during cassette tape insertion.			
254	Failed to detect the S reel FG during threading.	AUTO OFF	EJECT (Emergency EJECT)	
255	Detected the S reel FG during threading.			
274	Failed to detect the T reel FG during threading.			
275	Detected the T reel FG during threading.			
291	Failed to complete winding a tape.			
355	Detected the S reel FG during STOP and STILL.			
375	Detected the T reel FG during STOP and STILL.			
395	Detected both S and T reel FGs during STOP and STILL.	STOP	The machine operates normally after the error is solved.	
402	Detected an abnormal tape speed during F. FWD and REW.			
403	Detected slack tape during F. FWD and REW.	AUTO OFF	EJECT (Emergency EJECT)	
454	Failed to detect the S reel FG during F. FWD and REW.			
474	Failed to detect the T reel FG during F. FWD and REW.			
494	Failed to detect both S and T reel FGs during F. FWD and REW.			
496	Detected the abnormal direction of S and T reel rotation during F. FWD and REW.			
503	Detected slack tape during search.			
554	Failed to detect the S reel FG during search.			
574	Failed to detect the T reel FG during search.			
594	Failed to detect the S and T reel FGs during search.			
596	Detected the abnormal direction of S and T reel rotation during search.			
603	Detected slack tape during PLAY and REC.			

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
654	Failed to detect the S reel FG during PLAY and REC.	AUTO OFF	EJECT (Emergency EJECT)	Displayed until the next cassette tape is inserted.
674	Failed to detect the T reel FG during PLAY and REC.			
694	Failed to detect both S and T reel FGs during PLAY and REC.			
696	Detected the abnormal direction of S and T reel rotation during PLAY and REC.			
803	Detected slack tape during unthreading.			
854	Failed to detect the S reel FG during unthreading.			
855	Detected the S reel FG during unthreading.			
874	Failed to detect the T reel FG during unthreading.			
875	Detected the T reel FG during unthreading.			
A55	Detected the S reel FG during cassette eject.	Insertion of a cassette is inhibited until the error is solved.		
A75	Detected the T reel FG during cassette eject.			
A95	Detected both S and T reel FGs during cassette eject.			

## ② Main code 06

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
3A7	Detected abnormal tape tension during STOP.	AUTO OFF	EJECT (Emergency EJECT)	Displayed until the next cassette tape is inserted.
4A7	Detected abnormal tape tension during F.FWD/REW.			
5A7	Detected abnormal tape tension during SEARCH.			
6A7	Detected the abnormal tape tension during PLAY and RECORD.	The mode at the time of detection is kept continued. (If the mode is PLAY, PLAY continues.) If mode is changed to other than PLAY and RECORD, machine enters AUTO OFF.	The machine operates normally after the error is solved. The PLAY and RECORD modes continue but other modes are changed to STOP then EJECT (Emergency EJECT).	Displayed until the error is solved and any key is pressed.

## ③ Main code 07

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
042	Detected the abnormal capstan speed.	STOP	The machine operates normally after the error is solved.	Displayed until any key is pressed.
144	Failed to detect the capstan FG by the FG check during cassette tape insertion.	Cassette tape will be ejected.	—	Displayed until the next cassette is inserted.

#### ④ Main code 08

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
03A	Detected the abnormal drum speed.  Video monitor display  <div data-bbox="212 553 639 875" data-label="Image"> </div>	Retry (The mechanism unthreads once then threads again.)	EJECT	Displayed until the error is solved.
032	The abnormal drum speed error is not solved.	AUTO OFF	EJECT	Displayed until the next cassette is inserted.

#### ⑤ Main code 09

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
010	Detected abnormal position of cassette compartment.	Cassette tape insertion and unthreading are prohibited until the error is solved.		Displayed until the error is solved.
020	Detected an abnormality of threading position sensor.			
028	Detected an abnormal current of threading motor.			
221	Failed to complete threading within the specified time	AUTO OFF	EJECT (Emergency EJECT)	Displayed until the next cassette is inserted.
224	Failed to detect the threading FG during threading.			
821	Failed to complete unthreading within the specified time			
824	Failed to detect the threading FG during unthreading.			

#### • Main code 2X : Abnormality related to the mechanism control

##### ① Main code 20

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
018	Detected the abnormal current in the cassette up/down motor.	AUTO OFF	EJECT (Emergency EJECT)	Displayed until the next cassette is inserted.
111	Failed to complete the cassette down motion within the specified time.			
911	Failed to complete the cassette up motion within the specified time.			

## ② Main code 21

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
0C8	Detected the abnormal current in the reel position motor.	AUTO OFF	EJECT (Emergency EJECT)	Displayed until the next cassette is inserted.
OE8	Detected the abnormal current of M stop plunger solenoid.			
1C1	Failed to complete the reel position movement within the specified time.	Cassette tape will be ejected.		

## ③ Main code 22

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
0D8	Detected an abnormal current of cleaning plunger solenoid.	AUTO OFF	EJECT (Emergency EJECT)	Displayed until the next cassette is inserted.

## • Main code 3X : Sensor trouble

Sub codes are all 000.

Sub code	Detected contents	Operation after detecting an abnormality	Operable mode	Display period
31	Failed to release the tape top.	STOP	PLAY, FF, EJECT	Displayed until the error is solved and any key is pressed.
32	Failed to release the tape end.	STOP	PLAY, REW, EJECT	
33	Detected an abnormal current of reel shift sensor LED.	Insertion of cassette tape is inhibited.	—	
34	Detected an abnormality of threading sensor.	Cassette tape insertion and unthreading are prohibited until the error is solved.		
35	Detected an abnormality of cassette compartment position sensor.	EJECT	—	
36	Detected an abnormality of fan motor.	Only error is displayed.	—	
39	Detected an abnormality of cassette top/end sensor LED.	STOP	PLAY, EJECT	
3A	Detected an abnormality of tension sensor.	AUTO OFF	EJECT (Emergency EJECT)	

## Main code 91 : Abnormality of communication system or interface system

Main code	Sub code	Detected contents
91	125	Communication error between system control and keyboard (detected by SY).
	130	System control detected abnormality of ROM.
	131	System control detected abnormality of external memory.
	132	System control detected abnormality of internal memory.
	133	System control detected abnormality of common memory for SERVO.
	134	System control detected abnormality of common memory for SPCON.
	139	System control detected abnormality of EEPROM (IC8 on the DR-428 board).
	13A	Detected abnormality in NVRAM.
	13B	Detected abnormality in Resetable Hour Meter.
	13C	Detected abnormality in Volume adjustment data area.
	13F	Communication error to MIC.
	145	Communication error between system control and servo.
	175	Communication error between system control and SPCON.
	195	Communication error between system control and the SW microprocessor.
	1A5	Communication error between system control and external keyboard.
	1D5	Communication error between system control and the DV microprocessor.
	1E5	Communication error between system control and the DIF microprocessor.
	215	Communication error between system control and keyboard (detected by KY).
	430	Servo main detect abnormality of ROM.
	431	Servo detected abnormality of external memory.
	439	Detected abnormality in the servo adjustment data area.
	43B	Detected abnormality in Unresetable Hours Meter.
	455	Communication error between servo main and servo sub microprocessors.
	539	Detected abnormality in the EQ data area.
	730	SPCON detected abnormality of ROM.
	731	SPCON detected abnormality of external RAM (IC503 on the SSS-10 board).
	732	SPCON detected abnormality of internal RAM.
	733	SPCON detected abnormality of the communication IC (IC503 on the SSS-10 board) with SY.
	734	SPCON detected communication error (IC401 on the SSS-10 board) with SV.

## Main code 92 to 94 : Abnormality of sync system

Main code	Sub code	Detected contents
92	101	System control detected abnormality in NSG OE.
	702	SPCON detected abnormality in P-TRKT.
	703	SPCON detected abnormality in P-FLTT.
	704	SPCON detected abnormality in R-TRKT.
	705	SPCON detected abnormality in R-FLTT.
93	407	The servo main microprocessor detected abnormality of P-FLTD.
	506	The servo sub microprocessor detected abnormality of P-TRKD.
94	409	The servo main microprocessor detected abnormality of R-FLTD.
	508	The servo sub microprocessor detected abnormality of R-TRKD.



## Main code 95 : Communication error with digital process system IC

Main code	Sub code	Detected contents
95	120	Communication error between system control and C1R MOD.
	122	Communication error between system control and C1P MOD.
	12A	Communication error between system control and NSG.
	12C	Communication error between system control and VPRAD.
	415	Communication error between servo and D1R.
	416	Communication error between servo and HIF.
	423	Communication error between servo and D1P.
	511	Communication error between drum and M1.
	710	Frame communication error between SPCON and D1P.
	711	Track pair communication error between SPCON and D1P.
	712	Communication error between SPCON and V2P.
	713	Communication error between SPCON and F1P.
	714	Communication error between SPCON and SIFE.
	715	Communication error between SPCON and SIFP.
	720	Communication error between SPCON and AIFP.
	730	Frame communication error between SPCON and D1R.
	731	Track pair communication error between SPCON and D1R.
	732	Communication error between SPCON and V2R.
	733	Communication error between SPCON and F1R.
	734	Communication error between SPCON and SIFR.
	740	Frame communication error between SPCON and A1R Front.
	741	Track pair communication error between SPCON and A1R Front.
	742	Frame communication error between SPCON and A1R Rear.
	743	Track pair communication error between SPCON and A1R Rear.
	744	Communication error between SPCON and AIF-INDI.
	745	Communication error between SPCON and ACTL.
	751	Communication error between SPCON and REC-DSP.
	752	Communication error between SPCON and PB-DSP.
	753	Communication error between SPCON and OUT-DSP.

#### 4-2-4. Possible Causes of Errors

##### Possible causes of errors

Main code	02													06
<div>Sub code</div> <div>Possible causes</div>	403	574	554	402	355	058	154	254	594	494	395	496	3A7	
	503	674	654	454	375	078	174	854	694			596	4A7	
	603	803		474			194					696	5A7	
							255						6A7	
							275							
							875							
							A55							
							A75							
							A95							
1. Tape is stuck to the tape running mechanism.	O	O	O	O				O		O			O	
2. Tape is loosely wound in the cassette.	O	O	O	O	O						O	O		
3. Cassette tape is not confined properly. (Cassette compartment is unlocked.)	O	O	O	O				O	O	O	O	O		
4. Reel motor does not generate the correct torque.	O	O	O	O	O	O	O	O	O	O	O	O	O	
5. Abnormality of reel FG	O	O	O	O	O		O	O	O	O	O	O	O	
6. Tension regulator is defective.	O													
7. Cut-and-spliced tape is used.		O	O		O				O		O	O		
8. Top detector and end detector are defective.			O	O					O	O			O	
9. Pinch roller has insufficient pressure against capstan.									O			O		

##### Check procedure for the possible causes, and the related circuit boards and devices

Possible causes	Check items and check procedure	Related circuit boards and devices
1. Tape is stuck to the tape running mechanism. • Tape is dirty. • Tape run mechanism is dirty. • Humidity or condensation	<ul style="list-style-type: none"> <li>• Check if tape is stuck to tape guides or drum.</li> <li>• Check if foreign material is adhered to tape.</li> <li>• Check if tape is damaged.</li> <li>• Check if foreign material is adhered to tape run mechanism and drum.</li> </ul>	
2. Tape is loosely wound in the cassette. • A tape which has been used for many times, is used. • A damaged tape is used.	<ul style="list-style-type: none"> <li>• Check if tape has severe non-uniform winding.</li> </ul>	
3. Cassette tape is not confined properly. (Cassette compartment is unlocked.)	<p>Check that the four pins of the cassette compartment are inserted into the holes of the slant table.</p> <p>Check that the cassette compartment retainer is securely fastened.</p> <p>↓</p> <p>If a cassette compartment is unlocked when a cassette compartment is inserted, exchange the cassette compartment.</p> <p>↓</p> <p>When a cassette compartment is lock after it is exchanged, the trouble is caused by the cassette compartment. Otherwise the trouble is caused by the defective drive circuit.</p>	cassette compartment DR-428 board

Possible causes	Check items and check procedure	Related circuit boards and devices
4. Reel motor does not generate the correct torque. <ul style="list-style-type: none"> <li>• Reel brake has mechanical defect.</li> <li>• Reel brake solenoid is open.</li> <li>• Reel brake solenoid drive IC is defective.</li> <li>• Reel motor is defective.</li> <li>• Reel motor drive circuit is defective.</li> <li>• Harness is defective.</li> </ul>	<ul style="list-style-type: none"> <li>• When the S and T reel brakes are considered to be the cause of trouble : Check the S and T reel brakes. Check that the S and T reel brakes are released.</li> <li>• When the S and T reel motors are considered to be the cause of trouble : Perform the servo adjustment. Confirm that the servo adjustment is completed as intended.</li> </ul>	When the reel brake is considered to be the cause of trouble : DR-428 board, reel brake solenoid  When the S and T reel motor or the S and T reel FG is considered to be the cause of trouble : DR-428 board, S and T reel motor
5. Abnormality of reel FG <ul style="list-style-type: none"> <li>• S and T reel motor is defective.</li> <li>• S and T reel FG amp is defective.</li> </ul>	Perform the S and T reel adjustment. Confirm that the reel FG adjustment is completed as intended.	
6. Tension regulator is defective.	Check the magnet position using the tension adjustment menu. Confirm that OK appears on display.	SSS-10 board, DR-428 board, SE-538 board
7. Cut-and-spliced tape is used.		
8. Top detector and end detector are defective.	Check the tape top and tape end. The top and end sensor must turn on and off correctly.	When the tape top sensor is considered to be the cause of trouble : SE-522 board, DR-428 board, tape top sensor LED When the tape end sensor is considered to be the cause of trouble : SE-521 board, DR-428 board, tape end sensor LED
9. Pinch roller has insufficient pressure against capstan. <ul style="list-style-type: none"> <li>• Pinch roller has mechanical defect.</li> <li>• Pinch solenoid is open.</li> <li>• Pinch solenoid drive IC is defective.</li> </ul>	Check the pinch roller. Pinch roller must be pressed against the capstan shaft correctly.	DR-428 board, pinch solenoid

## 4-3. Countermeasure in an Emergency

### 4-3-1. How to Take Out the Cassette Whose Tape is Slacked (MANUAL EJECT)

- (1) Turn the power off.
- (2) Remove the top panel. (Refer to Section 3-3.)
- (3) Remove the front panel. (Refer to Section 3-3.)
- (4) Turn the manual eject gear A (red) in the arrow direction with a phillips screwdriver while pressing the gear. When the tape comes to slack, turn the reel table from the front side utilizing a skewer and wind the tape.

**Note**


In a case of standard cassette and M cassette :

Turn the reel table (T)

In a case of mini cassette :

Turn the reel table (S)

- (5) Repeat step (4) until each guide comes to the unthreading end position and furthermore the tape completely returns into the cassette.
- (6) Turn the manual eject gear B (red) in the arrow direction until the cassette compartment completely comes into cassette out state.

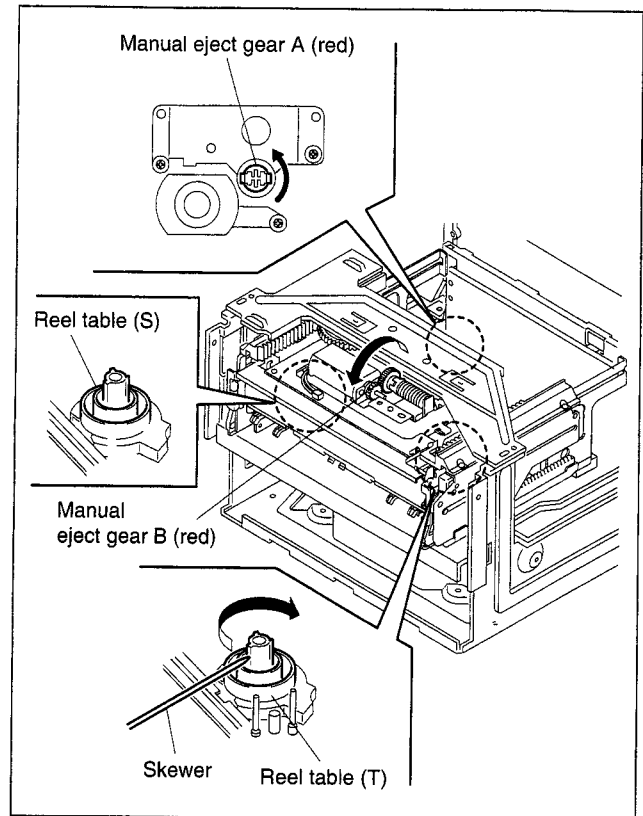

### 4-3-2. Head Cleaning when Head Clogging Occurs

Clean the video head as follows when the video head gets dirty.

---

#### Procedure to Use the Cleaning Cassette

##### Note

Use only the cleaning cassette tape as follows.

If another cleaning cassette tape is used, abnormal abrasion or breakage of the video head could occur.

Cleaning cassette tapes :

DV12CL (Standard)

DVM12CL (Mini)

1. Insert the specific cleaning cassette tape in this unit.  
The unit is automatically set in the PLAY mode and the cleaning tape starts running.  
Confirm that the **PLAY** key lights and the display appears.
2. The cleaning cassette tape is automatically ejected after running for 10 seconds.  
**Note**  
Do not rewind the cleaning cassette tape to use it again.
3. Make sure that the head is no longer dirty.  
If the video head is still dirty after step 2 above, clean the video head as follows.

---

#### Procedure to Use the Cleaning Cloth

1. Soak the cleaning cloth with cleaning liquid and bring it into contact lightly with the video head.
2. Turn the upper drum slowly by hand in the rotating direction of the head (counterclockwise when viewed from the top) to clean the video head.

##### Notes

- Never move the cleaning cloth in the vertical direction against the video head because it may break the head.
- Turn the power switch off when cleaning the video head.

### 4-3-3. Operating the VTR without A Cassette Tape

The VTR can be operated without a cassette tape by the following switch setting.

---

#### Switch Setting

1. Remove the cassette compartment from this unit.
2. Turn on switches S400-4 of the SSS-10 board.
3. Then turn on the main power.

---

#### Operating Method

##### Threading

While pressing the S/T reel motors, press the **STOP** key. The upper drum rotates, threading ring rotates. The unit enters the threading mode.

The tension arm and the threading ring move to the specified position, then the threading is completed. This condition in which the threading is completed is referred to as the STOP status.

##### PLAY

Press the **PLAY** key.

The pinch roller is pressed against the capstan shaft to enter the PLAY status.

When the **PLAY** key is pressed during threading, the pinch roller is pressed against the capstan shaft to enter the PLAY status after the threading has completed.

##### FF

Press the **F FWD** key.

The pinch roller is pressed against the capstan shaft to set the FWD.SEARCH to five-times speed.

##### REW

Press the **REW** key.

The pinch roller is pressed against the capstan shaft to set REV.SEARCH to five-times speed.

## REC

While pressing the record proof sensor on the right side of the T side reel table, press both the **PLAY** key and the **REC** key.

The pinch roller is pressed against the capstan shaft to enter REC status.

When the record proof sensor is released, the REC status is released and the recorder returns to PLAY status.

## Unthreading


Press the **EJECT** key.

Each guide moves to the specified position to complete the unthreading.

## Reel position selection

Press the **SET (YES)** key on the control panel.

Reel position will be changed as shown below in accordance with the number of pressing the **SET (YES)** key.

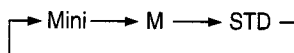

### Note

Make sure to turn off switches S400-4 on the SSS-10 board after the adjustment.

## Section 5

### Maintenance Menu

#### 5-1. Menu Structure

This unit has a maintenance menu which is used for maintenance.

The maintenance menu has a layered structure through which you move to perform the various checks, settings and adjustments using the specified menu items. Contents of the maintenance menu are displayed on the video monitor connected to the VIDEO OUT B-Y/CPST (SUPER) connector and the time counter of DSR-1500/1500P.

Values in parenthesis ( ) are time counter display.

MENU, First layer	MENU, Second layer	MENU, Third layer
MENU DATA CONTROL (MENU CNT)	MENU STATUS DISPLAY (>MENU STA) SAVE MENU DATA (>Save MENU) LOAD MENU DATA (>Load MENU)	
EDIT CHECK (EDIT Check)	VIDEO INSERT (>VIDEO INS) A1 INSERT (>A1 INS) A2 INSERT (>A2 INS) TC INSERT (>TC INS) ASSEMBLE (>ASSEMBLE)	
SERVO CHECK (SV Check)	SENSOR CHECK (>Sensor)	CASS-COMPARTMENT (>>Cass-COM) TAPE TOP/END (>>Top/End) HUMID [MOISTURE] (>>HUMID) REC INHIBIT (>>REC INHI.)
	MOTOR CHECK (>Motor)	S-REEL (>>S-Reel) T-REEL (>>T-Reel) THREADING (>>Threading) CASS-COMPARTMENT (>>Cass-COM) CAPSTAN (>> Capstan) DRUM (>>Drum) REEL POSITION (>>Reel POS.)
	PLUNGER CHECK (>Plunger)	PINCH (>>Pinch) REEL BRAKE (>>Brake) M PLUNGER (>>M Plunger) HEAD CLEANER (>>H. Cleaner)
SERVO ADJUST (SV Adjust)	S/T-REEL & CAPSTAN (>Reel & Cap.) S-REEL ONLY (>S-Reel) T-REEL ONLY (>T-Reel) CAPSTAN ONLY (>Capstan) TENSION (>Tension)	
TAPE PATH ADJUST (TP Adjust)	TRACKING ADJUST (>Tracking)	
	RF SWITCHING POSITION (>Switching)	




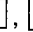
Values in parenthesis ( ) are time counter display.


MENU, First layer	MENU, Second layer	MENU, Third layer
ELECTRICAL ADJUST (EL Adjust)	PLL F0 (>PLL f0)	
	EQ AUTO ADJ (>EQ auto)	DVCAM (>>DVCAM) DV (>>DV) DVCPRO (>>DVC PRO)
	EQ MANUAL ADJ (>EQ manual)	DVCAM (>>DVCAM) DV (>>DV) DVCPRO (>>DVCPRO)
	REC CURRENT (>REC cur) FE CHECK (>FE check)	
	PROCESS CHECK : OFF (>Proc check)	OFF (>>off) DPR (>>dpr) MAIN (>>main) SUB (>>sub) PRE (>>pre)
	REF CHECK : OFF (>REF check)	OFF (>>off) NON-STD (>>Non-STD) STD (>>STD)
	RP DATA INITIALIZE (>RP initial)	
SERVICE SUPPORT (Support)	ERROR LOG (>Error LOG) MANUAL EJECT (>Manu. Eject)	
	DIAGNOSTICS CONTROL (>DIAG CNT)	CLEAR ERROR LOG (>>Clear LOG)
OTHERS (Others)	SOFTWARE VERSION (>Version) DSBK-1503 SERIAL NO. (>DVIO No.) KEYBOARD CHECK (>KY Check)	
	MEMORY DISPLAY (>MEM Check)	SY MEMORY DISPLAY (>> SY MEM.) SV MEMORY DISPLAY (>> SV MEM.) SP MEMORY DISPLAY (>> SP MEM.) KY MEMORY DISPLAY (>> KY MEM.) CM DISPLAY (>> CM DISP.)
	DATA DISPLAY (>Data Check)	SP DATA DISPLAY (>>SP DATA)







## 5-2. How to Operate Maintenance Menu
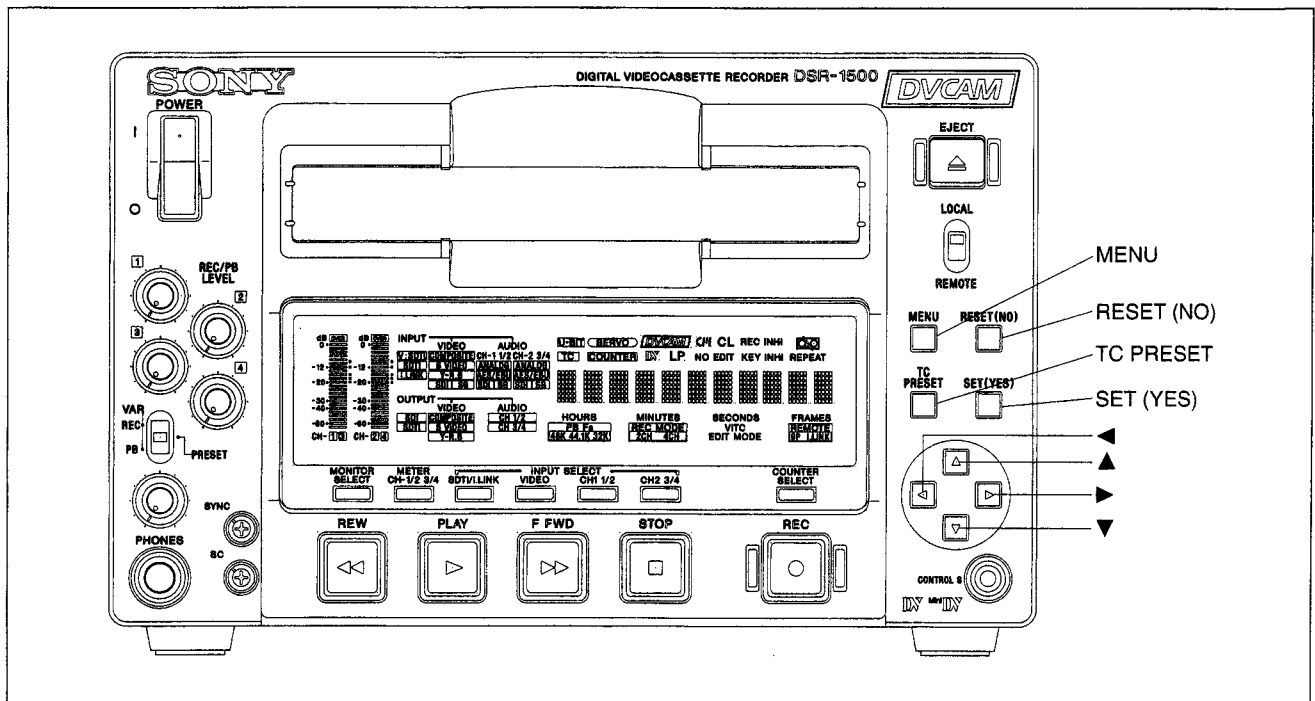
### 5-2-1. Location and Function of Switches

Use , , , , **MENU**, **SET (YES)**, **TC RESET**, **RESET (NO)** switches on the front panel shown below to perform the maintenance menu.







The maintenance menu has a layered structure through which you move to select the desired item.

-  KEY : Use this key to move in the direction of ↑ within the same layer.
-  KEY : Use this key to move in the direction of ↓ within the same layer.
-  KEY : Use this key to move in the direction of ← to higher layers.
-  KEY : Use this key to move in the direction of → to lower layers. (It is inoperative if there is no lower layer.)

To indicate depth of layer, the displayed menu items are indented on the video monitor and ">" is added to the top on the time counter.

### 5-2-2. How to Enter the Maintenance Menu

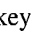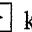1. While pressing the  key, press the **MENU** key. The DSR-1500/1500P enters the maintenance menu. The maintenance menu appears on the video monitor.
2. Select the desired item using the  key and the  key. The cursor shown with a white background moves to the selected item.
3. After the desired item is selected, press the  key to designate the selected item.

### 5-2-3. How to Exit the Maintenance Menu

Press the **MENU** key to exit the maintenance menu.



## 5-3. Contents of Maintenance Menu

### 5-3-1. Menu Data Control

The MENU DATA CONTROL item provides a SETUP MENU data display and saving and loading the SET UP MENU data.


This item is used to return the settings to their original values after maintenance is complete or ROM upgrading is complete.

#### Operating procedure

1. Enter the maintenance menu.
2. Move the cursor to "MENU DATA CONTROL" which is displayed with a white background, using the ,  keys.








MENU CNT

3. Press the  key.  
"MENU DATA CONTROL" is selected and its lower layer submenu appears.



>MENU STA

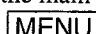
4. Move the cursor displayed with a white background to a desired item using the ,  keys.
5. When an item is selected, press the  key. The contents of the selected item appear.
6. Press the  key to exit MENU DATA CONTROL and return to the main menu.
7. Press the  key to exit the maintenance menu.

## (1) MENU STATUS DISPLAY

Displays the current status of the SET UP MENU data.

MENU VERSION : Version number of the SET UP MENU  
NUMBER OF ITEM : Numbers of the SET UP MENU items  
CHANGED ITEM : Numbers of the items which were  
changed from the factory default  
settings

DATA CHECK SUM : Data check sum

Pressing  key displays the status of the SET UP MENU  
stored in the menu bank 1 to 4.

```
MENU STATUS

MENU VERSION   : V1.0
NUMBER OF ITEM : 103
CHANGED ITEM   : 000
DATA CHECK SUM : 1646

BANK SEL : (-)(+) KEY
TO MENU  : MENU KEY
```

```
>>Menu V1.0
```

## (2) SAVE MENU DATA

This is used to temporarily save the user's SETUP MENU data. A temporary saved data can be reset later.

1. The version of the current setup menu is displayed, and it is waiting to press the **SET (YES)** key.

\* Pressing the **MENU** key returns to the main menu.

```
SAVE MENU DATA

CURRENT MENU VERSION
V1.0

SAVE OK ?

SAVE : SET KEY
TO MENU : MENU KEY
```

```
>>Save OK ?
```

2. Press the **SET (YES)** key.  
The SET UP MENU data is stored in EEPROM.  
Confirm that **[COMPLETE]** appears and data saving is complete.

```
SAVE MENU DATA

COMPLETE !!

TO MENU : MENU KEY
```

```
Complete !!
```

### Notes

- Data which has once been saved will not be deleted by turning the main power on and off, or by upgrading the ROM version. However, the saved data is deleted when the DR-428 board or the EEPROM is replaced because the data is saved in the EEPROM in the DR-428 board.
- When the SET UP MENU is upgraded by ROM's version upgrade, an alarm message appears after the ROM is replaced. Either initialize the SET UP MENU or execute "LOAD MENU DATA" when the alarm appears.

### (3) LOAD MENU DATA

The saved data is stored as ordinary SET UP MENU data when it is loaded.

1. The version number of the current SET UP MENU and that of the SET UP MENU to be loaded are displayed, and it is waiting to press the **SET (YES)** key.

\* Pressing the **MENU** key returns to the main menu.

```
LOAD MENU DATA

SAVED      CURRENT
MENU       MENU
VERSION    VERSION
V0.3      ---> V1.0

LOAD OK ?

LOAD : SET KEY
TO MENU : MENU KEY
```

```
>>Load OK ?
```

2. Press the **SET (YES)** key.

The SET UP MENU data is stored in EEPROM.

Confirm that **[COMPLETE]** appears and data saving is complete.

```
LOAD MENU DATA

COMPLETE !!

UNCHANGED DATA : 088
CHANGED DATA   : 0
ILLEGAL DATA   : 0
DELETED ITEM    : 0
ADDED ITEM      : 0

TO MENU : MENU KEY
```

```
Complete!!
```



#### In the case of trouble :


Loading of the data will not start if SET UP MENU data has not been saved or the saved SET UP MENU data contains an error.

### 5-3-2. EDIT CHECK


Enables the editing function to be checked without using a remote controller.


#### Operating procedure

1. Enter the maintenance menu.
2. Move the cursor to "EDIT CHECK" which is displayed with a white background using the ,  keys.

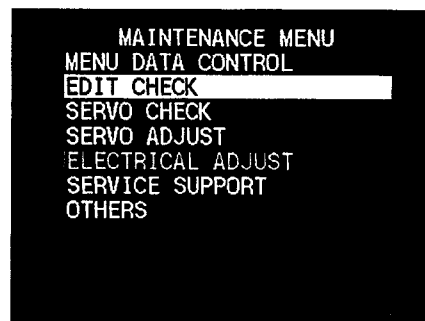



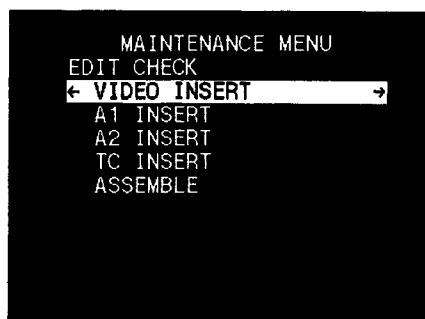


EDIT Check

3. Press the  key.  
"EDIT CHECK" is selected and its lower layer submenu appears.



>VIDEO INS

4. Move the cursor displayed with a white background to a desired item using the ,  keys.
5. When an item is selected, press the  key. The contents of the selected item appear.
6. Press the  key to exit EDIT CHECK and return to the main menu.
7. Press the  key to exit the maintenance menu.

---

## 1. VIDEO INSERT

Pressing the **REC** and **PLAY** keys simultaneously enters the VIDEO INSERT mode.

EDIT CHECK MODE  
PUSH REC & PLAY KEY.  
VIDEO INSERT WILL BE  
PERFORMED.  
T\*R 00:00.00.00  
TO MENU : MENU KEY

---

## 2. A1 INSERT

Pressing the **REC** and **PLAY** keys simultaneously enters the AUDIO CH-1 INSERT mode.

EDIT CHECK MODE  
PUSH REC & PLAY KEY.  
A1 INSERT WILL BE  
PERFORMED.  
T\*R 00:00.00.00  
TO MENU : MENU KEY

---

## 3. A2 INSERT

Pressing the **REC** and **PLAY** keys simultaneously enters the AUDIO CH-2 INSERT mode.

EDIT CHECK MODE  
PUSH REC & PLAY KEY.  
A2 INSERT WILL BE  
PERFORMED.  
T\*R 00:00.00.00  
TO MENU : MENU KEY

---

## 4. TC INSERT

Pressing the **REC** and **PLAY** keys simultaneously enters the TIME CODE INSERT mode.

EDIT CHECK MODE  
PUSH REC & PLAY KEY.  
TC INSERT WILL BE  
PERFORMED.  
T\*R 00:00.00.00  
TO MENU : MENU KEY

---

## 5. ASSEMBLE

Pressing the **REC** and **PLAY** keys simultaneously enters the ASSEMBLE mode.

### Note










When the AUDIO REC MODE is set to 4 channel, A1 is assigned to CH-1 and CH-2, and A2 is assigned to CH-3 and CH-4.

EDIT CHECK MODE  
PUSH REC & PLAY KEY.  
ASSEMBLE WILL BE  
PERFORMED.  
T\*R 00:00.00.00  
TO MENU : MENU KEY

### 5-3-3. Servo Check






Checks the servo system automatically or semi-automatically.

#### Operating procedure

1. Enter the maintenance menu.
2. Move the cursor to "SERVO CHECK" which is displayed with a white background using the ,  keys.
3. Press the  key.  
"SERVO CHECK" is selected and its lower layer submenu appears.
4. Move the cursor displayed with a white background to a desired item using the ,  keys.
5. Press the  key.  
The lower layer submenu appears.
6. Move the cursor displayed with a white background to a desired item using the ,  keys.
7. Press the  key to select the desired item.
8. Press the **SET (YES)** key to execute the selected item.
9. After completing the check, press the **MENU** key to return to the main menu.
10. To check other menus and submenus, repeat steps 4 to 9.
11. Press the **MENU** key to exit the maintenance menu.

#### Note

If the **MENU** key is pressed while the check is in progress, the check operation is forcibly ended and the display returns to the main menu.

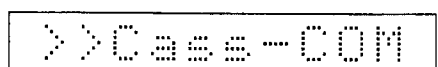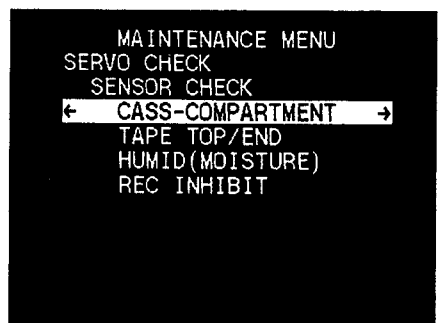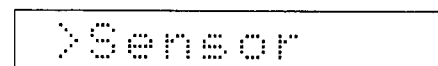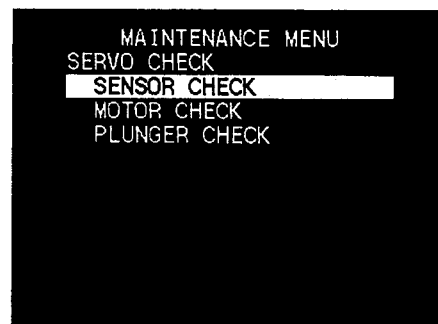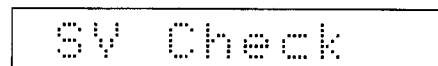


## 1. SENSOR CHECK

The respective items of "SENSOR CHECK" are described below :





### ① CASS-COMPARTMENT

Checks the respective switches of the cassette compartment.

SW/Sensor	Applicable board
PH1 PH2 PH3 PH4	CC-85
S1 S2 S3	CC-84

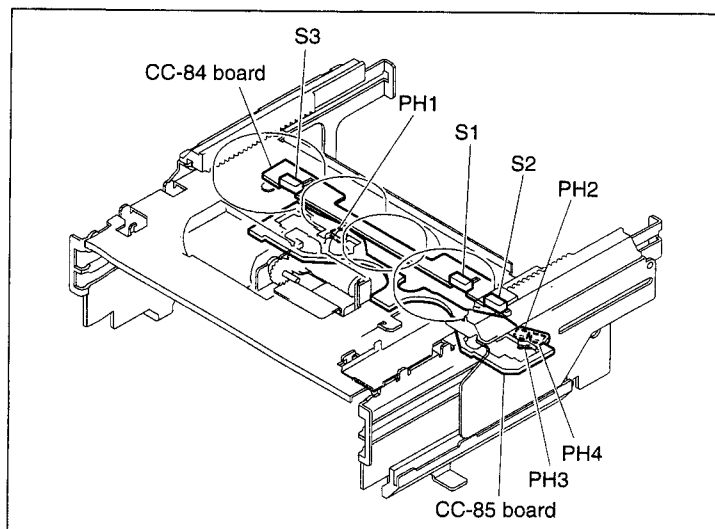

1. Execute the CASS-COMPARTMENT.
2. Confirm that the sensors are all OFF with no cassette inserted.

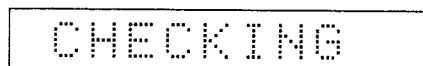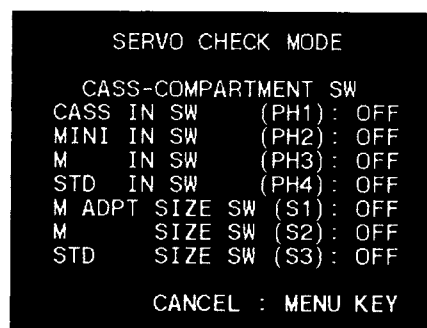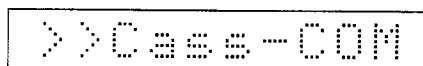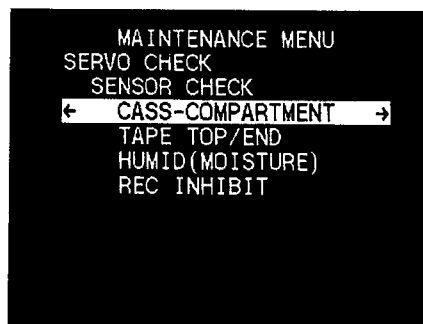



3. Insert the mini-cassette and confirm that the status of the sensor is the monitor display shown right.

```

SERVO CHECK MODE

CASS-COMPARTMENT SW
CASS IN SW (PH1): ON
MINI IN SW (PH2): ON
M IN SW (PH3): --
STD IN SW (PH4): --
M ADPT SIZE SW (S1): OFF
M SIZE SW (S2): OFF
STD SIZE SW (S3): OFF

CANCEL : MENU KEY

```

4. Insert the M-cassette and confirm that the status of the sensor is the monitor display shown right.

```

SERVO CHECK MODE

CASS-COMPARTMENT SW
CASS IN SW (PH1): ON
MINI IN SW (PH2): --
M IN SW (PH3): ON
STD IN SW (PH4): --
M ADPT SIZE SW (S1): ON
M SIZE SW (S2): ON
STD SIZE SW (S3): OFF

CANCEL : MENU KEY

```

5. Insert the standard cassette and confirm that the status of the sensor is the monitor display shown right.

```

SERVO CHECK MODE

CASS-COMPARTMENT SW
CASS IN SW (PH1): ON
MINI IN SW (PH2): --
M IN SW (PH3): --
STD IN SW (PH4): ON
M ADPT SIZE SW (S1): ON
M SIZE SW (S2): ON
STD SIZE SW (S3): ON

CANCEL : MENU KEY

```

6. Insert the M-ADPT (Cassette adaptor for DVCPRO) and confirm that the status of the sensor is the monitor display shown right.

```

SERVO CHECK MODE

CASS-COMPARTMENT SW
CASS IN SW (PH1): --
MINI IN SW (PH2): --
M IN SW (PH3): --
STD IN SW (PH4): --
M ADPT SIZE SW (S1): OFF
M SIZE SW (S2): ON
STD SIZE SW (S3): OFF


CANCEL : MENU KEY

```

\* -- : not care

## ② TAPE TOP/END

Checks the tape-top and tape-end sensors.

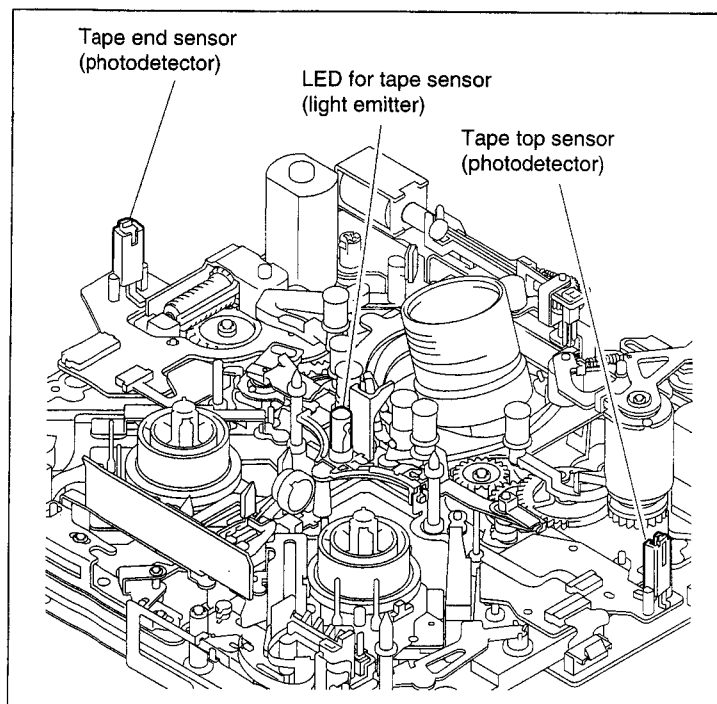

1. Execute the TAPE TOP/END.
2. Confirm that both TOP SENSOR and END SENSOR are [ON!].
3. Interrupt between the LED for the tape sensor (light emitter) and the tape-top sensor (photodetector) by inserting a finger or the like.  
Confirm that the TOP SENSOR display changes from [ON!] to [OFF] on the monitor display.

4. Interrupt between the LED for the tape sensor (light emitter) and the tape-end sensor (photodetector) by inserting a finger or the like.  
Confirm that the END SENSOR display changes from [ON!] to [OFF] on the monitor display.

### In the case of trouble :

If the display does not change check whether the tape-top sensor or the tape-end sensor itself is defective.

Check also the tape-top/tape-end sensor circuit (DR-428, SE-521/522 board).

```
SERVO CHECK MODE
TOP/END SENSOR

TOP SENSOR : ON!
LEVEL      (**)
END SENSOR : ON!
LEVEL      (**)

CANCEL : MENU KEY
```

```
CHECKING
```

```
SERVO CHECK MODE
TOP/END SENSOR

TOP SENSOR : ON!
LEVEL      (**)
END SENSOR : OFF
LEVEL      (**)

CANCEL : MENU KEY
```



```
SERVO CHECK MODE
TOP/END SENSOR

TOP SENSOR : OFF
LEVEL      (**)
END SENSOR : ON!
LEVEL      (**)

CANCEL : MENU KEY
```

### ③ HUMID (MOISTURE)

Checks the HUMID (condensation) sensor.

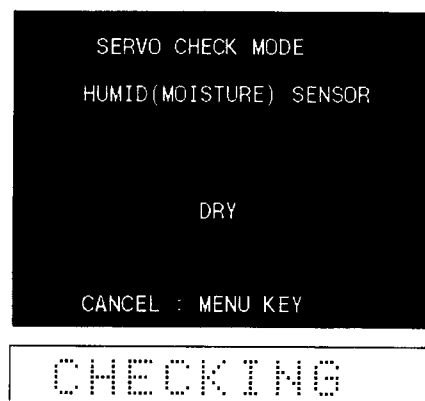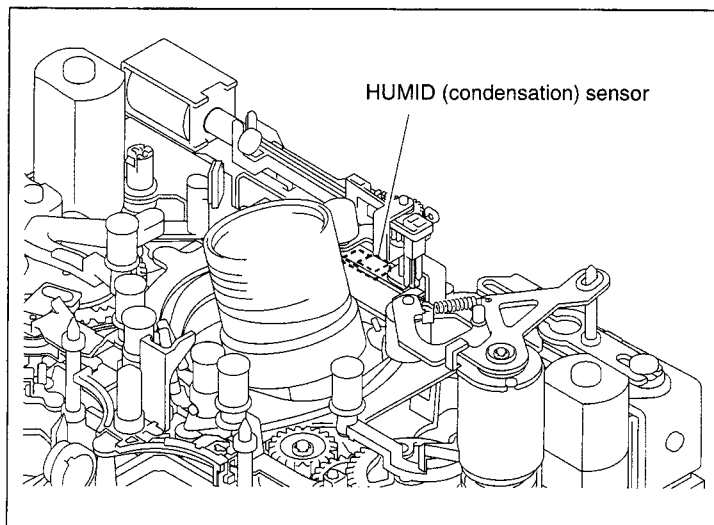

1. Execute the HUMID (MOISTURE).
2. Bring a cotton swab moistened with water in contact with the HUMID sensor.

Confirm that [DRY] changes to [WET!] on the monitor display.



3. Blow wind onto the HUMID sensor to evaporate any water. Confirm that the display changes to [DRY] on the monitor 30 minutes later.

**Note**

Once the HUMID sensor detects [WET!], even if make it dry immediately, it takes 30 minutes to detect [DRY].


#### In the case of trouble :

If the display does not change from DRY to WET!, check whether the HUMID sensor itself is defective.


Check also the HUMID sensor detection circuit (DR-428 board).

#### ④ REC INHIBIT


Checks the REC INHIBIT switch.

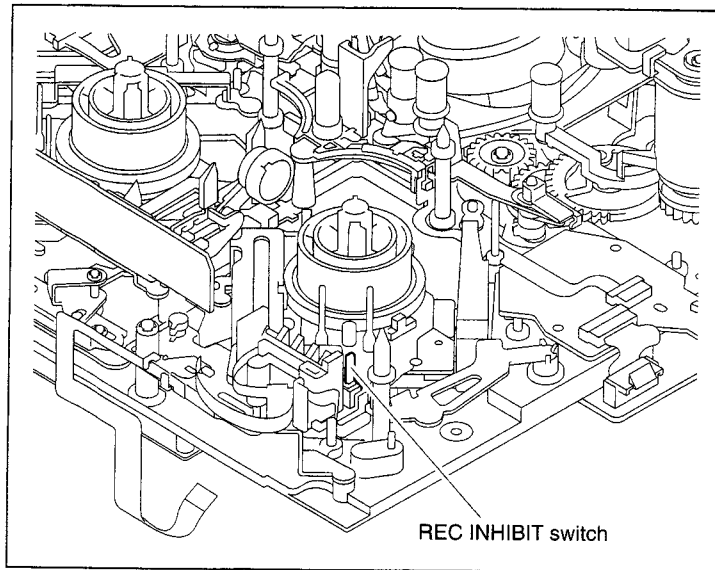

1. Execute the REC INHIBIT.
2. Confirm the monitor display is as shown right.

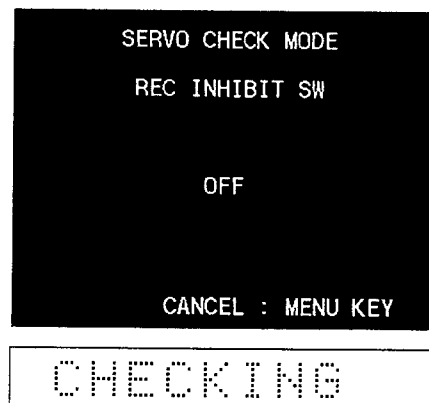

3. Press the REC INHIBIT switch.  
Confirm that ON is displayed on the monitor display.

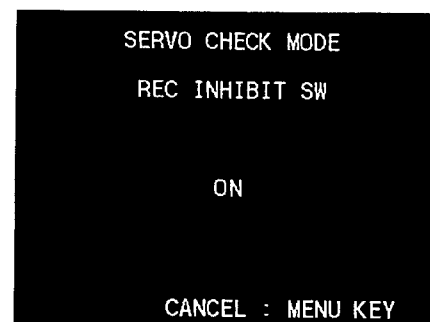

#### In the case of trouble :





If OFF is not displayed, check the sensor on the MIC arm.

## 2. MOTOR CHECK



The respective items of "MOTOR CHECK" are described below :

### ① S-REEL

Checks the S-reel motor.





1. Execute the S-REEL.
2. Press and hold the ,  keys for one to two seconds, and release the reel brake by activating the brake solenoid. Confirm that the S reel motor rotates clockwise and counterclockwise respectively during pressing the ,  keys.

#### In the case of trouble :



If the brake solenoid does not emit the operating sound and the S reel motor does not rotate in the specified direction even though pressing the ,  keys, check the S reel motor assembly and reel motor driver circuit (SSS-10 board and DR-428 board).

### ② T-REEL

Checks the T-reel motor.

1. Execute the T-REEL.
2. Press and hold the ,  keys for one to two seconds, and release the reel brake by activating the brake solenoid. Confirm that the T reel motor rotates clockwise and counterclockwise respectively during pressing the ,  keys.

#### In the case of trouble :

If the brake solenoid does not emit the operating sound and the T reel motor does not rotate in the specified direction even though pressing the ,  keys, check the T reel motor assembly and reel motor driver circuit (SSS-10 board and DR-428 board).

```
MAINTENANCE MENU
SERVO CHECK
MOTOR CHECK
S-REEL
T-REEL
THREADING
CASS-COMPARTMENT
CAPSTAN
DRUM
REEL POSITION
```

```
>> S-Reel
```

SERVO CHECK MODE

S REEL MOTOR

WIND OUT DIR. : (↑) KEY  
WIND IN DIR. : (↓) KEY

CANCEL : MENU KEY

```
CHECKING
```

SERVO CHECK MODE

T REEL MOTOR

WIND IN DIR. : (↑) KEY  
WIND OUT DIR. : (↓) KEY

CANCEL : MENU KEY

```
CHECKING
```

### ③ THREADING

Checks the threading motor, the thread-end sensor, unthread-end sensor and the cassette compartment.


1. Execute the THREADING.

```
SERVO CHECK MODE
THREADING MOTOR

THREAD END

THREADING : (↑) KEY
UNTHREADING : (↓) KEY
CANCEL : MENU KEY
```

CHECKING


2. Press and hold the  key.  
Confirm that the threading ring completes threading and the message "THREAD END" appears on the monitor display.

```
SERVO CHECK MODE
THREADING MOTOR

THREAD END
  ↑ ↓
UNTHREAD END

THREADING : (↑) KEY
UNTHREADING : (↓) KEY
CANCEL : MENU KEY
```

CHECKING

3. Press and hold the  key.  
Confirm that the threading ring completes unthreading and "UNTHREAD END" appears on the monitor display.

```
SERVO CHECK MODE
THREADING MOTOR

UNTHREAD END

THREADING : (↑) KEY
UNTHREADING : (↓) KEY
CANCEL : MENU KEY
```

CHECKING


#### In the case of trouble :

If the threading motor does not rotate, or if the message "THREAD END" does not appear even though threading is complete, or if the message "UNTHREAD END" does not appear on the monitor even though the unthreading is complete, check the threading motor, the cassette compartment, the SSS-10 board. Check also the DR-428 board (the driver circuit and the threading FG amplifier circuit) and the SE-521 board (the sensor).


#### ④ CASS-COMPARTMENT

Check the cassette compartment motor.

1. Execute the CASS-COMPARTMENT.

2. Press the  key.

Confirm that the cassette compartment moves down.

3. Press the  key again, and confirm that the cassette compartment moves up.

(The monitor display changes in the reverse order of the steps for moving down the cassette compartment.)

```
SERVO CHECK MODE
CASS-COMPARTMENT MOTOR
OFF

UP

NEXT : (→) KEY
CANCEL : MENU KEY
```

CHECKING

```
SERVO CHECK MODE
CASS-COMPARTMENT MOTOR
ON

HORIZON

NEXT : (→) KEY
CANCEL : MENU KEY
```

CHECKING

```
SERVO CHECK MODE
CASSETTE COMP. MOTOR

VERTICAL

CHECK : (→) KEY
CANCEL : MENU KEY
```

CHECKING

```
SERVO CHECK MODE
CASS-COMPARTMENT MOTOR
OFF

DOWN

NEXT : (→) KEY
CANCEL : MENU KEY
```

CHECKING


#### In the case of trouble :


If the monitor display does not change, check the cassette compartment motor, the SSS-10 board (the sensor input circuit) and the CC-83 board (the sensor).


## ⑤ CAPSTAN


Checks the capstan motor.


1. Execute the CAPSTAN.

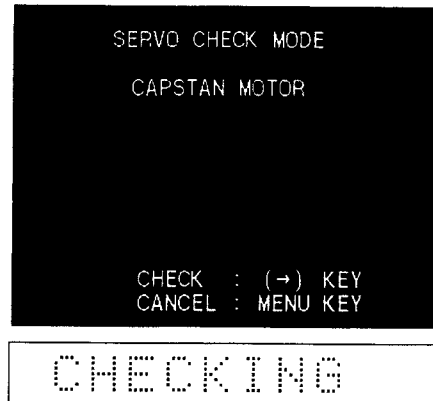

2. Press the  key.  
Confirm that [FORWARD ... OK] appears on the monitor display.

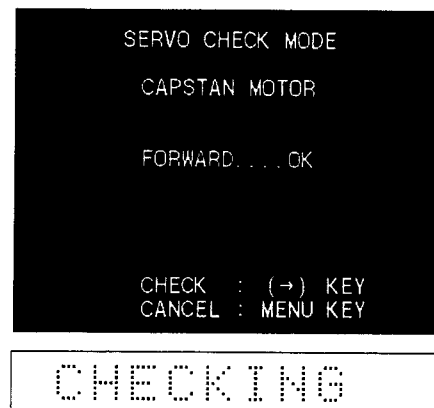

3. Press the  key again.  
Confirm that [REVERSE ... OK] appears on the monitor display.

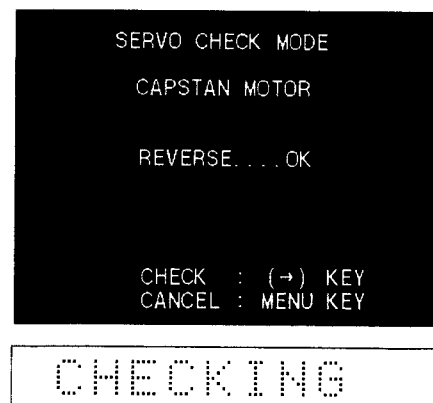

### In the case of trouble :

If the monitor display does not change, check the capstan motor and the capstan motor driver circuits (the SSS-10 board, DR-428 board)



## ⑥ DRUM

Checks the drum motor.

1. Execute the DRUM.
2. Confirm the monitor display is as follows.  
SPEED : [OK]  
PHASE : [LOCK]  
PG : [EXIST]

```
SERVO CHECK MODE  
DRUM MOTOR  
  
SPEED : OK  
PHASE : LOCK  
PG : EXIST  
  
CANCEL : MENU KEY
```

CHECKING

### In the case of trouble :

If the monitor display does not change, check the drum motor, the DR-428 board (the drum motor driver circuit, the drum FG amp circuit and the drum PG amp circuit).

## ⑦ REEL POSITION


Checks the reel position motor and the reel MINI/M/STD position sensor.

1. Execute the REEL POSITION.

```
SERVO CHECK MODE
REEL POSITION MOTOR
OFF
MINI-POSITION

CHECK : (→) KEY
CANCEL : MENU KEY
```

CHECKING

2. Confirm that the reel table moves in the order of the MINI position → the M position → the STD position then returning to the MINI position each time pressing the  key and the monitor display changes in accordance with the move.

```
SERVO CHECK MODE
REEL POSITION MOTOR
OFF
MIDDLE-POSITION

CHECK : (→) KEY
CANCEL : MENU KEY
```

CHECKING

```
SERVO CHECK MODE
REEL POSITION MOTOR
OFF
STD-POSITION

CHECK : (→) KEY
CANCEL : MENU KEY
```

### In the case of trouble :




If the reel table does not move or the monitor display does not change, check the reel position motor, the reel MINI/M/STD position sensor (the SE-522 and DR-428 boards) and reel position motor driver circuit (the SSS-10 and DR-428 boards).






### 3. PLUNGER CHECK

The respective items of "PLUNGER CHECK" are described below.

#### ① PINCH

Checks the pinch roller solenoid.

1. Execute the PINCH and confirm that the pinch solenoid operates when the threading starts.
2. Press the ,  keys to confirm that the PINCH comes to ON/OFF.
3. Press the  key to release the pinch solenoid and to bring to the unthreading.  
Doing so, the monitor display returns to the main menu.

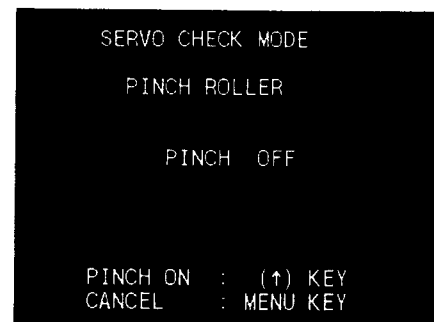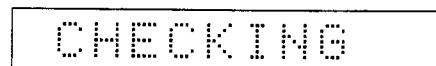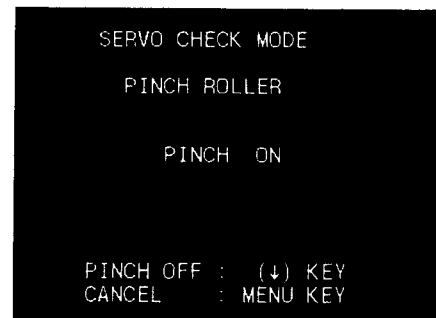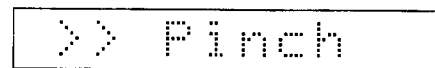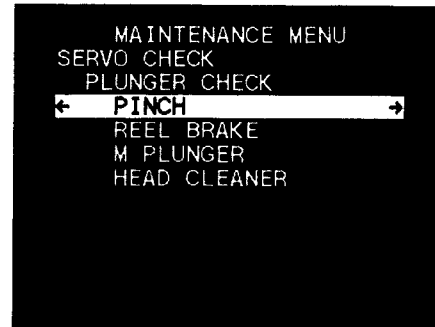




#### In the case of trouble :

If the pinch solenoid does not operate, check the pinch solenoid and the driver circuit (the DR-428 board).

## ② REEL BRAKE

Checks the reel brake solenoid.

1. Execute the REEL BRAKE and confirm that the reel brake solenoid operates.
2. Press the ,  keys to confirm that the REEL BRAKE comes to ON/OFF.
3. Press the  key to release the reel brake solenoid.  
Doing so, the monitor display returns to the main menu.

### In the case of trouble :

If the reel brake solenoid does not operate, check the reel brake solenoid and its driver circuit (the DR-428 board).

```
SERVO CHECK MODE
REEL BRAKE

REEL BRAKE  OFF

REEL BRAKE ON : (↑) KEY
CANCEL : MENU KEY
```

```
CHECKING
```




```
SERVO CHECK MODE
REEL BRAKE

REEL BRAKE  ON

REEL BRAKE OFF: (↓) KEY
CANCEL : MENU KEY
```

## ③ M PLUNGER

Checks the M plunger solenoid.

1. Execute the M PLUNGER.
2. Press the ,  keys to confirm that the M PLUNGER comes to ON/OFF.
3. Press the  key to release the M plunger solenoid.  
Doing so, the monitor display returns to the main menu.

### In the case of trouble :

If the M plunger solenoid does not operate, check the M plunger solenoid and its driver circuit (the DR-428 board).

```
SERVO CHECK MODE
M PLUNGER

M PLUNGER  OFF

M PLUNGER ON : (↑) KEY
CANCEL : MENU KEY
```

```
CHECKING
```

```
SERVO CHECK MODE
M PLUNGER



M PLUNGER  ON


M PLUNGER OFF: (↓) KEY
CANCEL : MENU KEY
```


### 5-3-4. Servo Adjust



Checks the servo system automatically or semi-automatically.



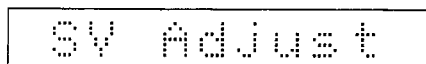

#### Operating procedure

1. Enter the maintenance menu.
2. Move the cursor to "SERVO ADJUST" which is displayed with a white background using the ,  keys.

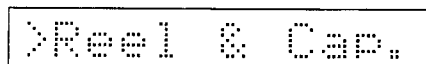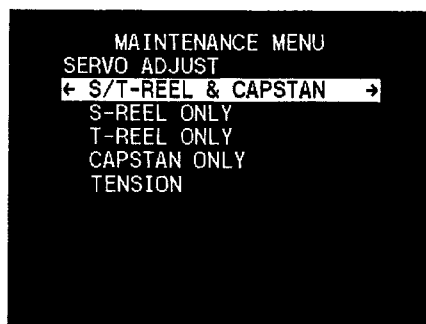

3. Press the  key.  
"SERVO ADJUST" is selected and its lower-layer submenu appears.



4. Move the cursor displayed with a white background to a desired item using the ,  keys.
5. Press the  key to select the desired item.  
(Refer to the respective menu description for the adjustment procedure.)
6. Press the **SET (YES)** key to execute the selected menu.
7. After completing the adjustment, press the  key to return to the main menu.
8. To check other menus and submenus, repeat steps 4 to 7.
9. Press the **MENU** key to exit the maintenance menu.

#### Note

If the **MENU** key is pressed while the adjustment is in progress, the adjustment operation is forcibly ended and the display returns to the main menu.

## (1) S/T REEL & CAPSTAN

Executes the automatic adjustment of the S and T reels and, capstan systems.



1. Execute the S/T REEL & CAPSTAN.
2. After completing adjustment, confirm that "COMPLETE" appears.

### Adjustment items

s reel fg duty  
s reel offset/friction  
s reel torque  
t reel fg duty  
t reel offset /friction  
t reel torque  
capstan fg duty

### In the case of trouble :

When "ADJUST INCOMPLETE" appears on the monitor display, check the SSS-10 and DR-428 boards (the reel FG amplifier circuit, reel motor driver circuit, capstan FG circuit and motor driver circuit). Check also the respective motors.

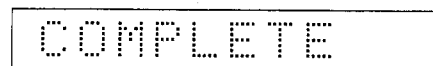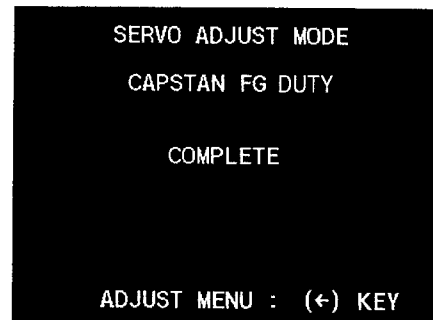

## (2) S-REEL ONLY

Executes the automatic adjustment of the S reel only.


1. Execute the S-REEL ONLY.
2. After completing adjustment, confirm that "COMPLETE" appears.

### Adjustment items

s reel fg duty  
s reel offset/friction  
s reel torque

### In the case of trouble :

When "ADJUST INCOMPLETE" appears on the monitor display, check the SSS-10 and DR-428 boards (the reel FG amplifier circuit, the reel motor driver circuit) and the S-reel motor.

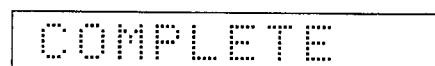

### (3) T-REEL ONLY

Executes the automatic adjustment of the T reel only.

1. Execute the T-REEL ONLY.
2. After completing adjustment, confirm that "COMPLETE" appears.

#### Adjustment items

t reel fg duty  
t reel offset/friction  
t reel torque

#### In the case of trouble :

When "ADJUST INCOMPLETE" appears on the monitor display, check the SSS-10 and DR-428 boards (the reel FG amplifier circuit, the reel motor driver circuit) and the T-reel motor.

```
SERVO ADJUST MODE
T REEL TORQUE

COMPLETE

ADJUST MENU : (←) KEY
```

```
COMPLETE
```

### (4) CAPSTAN ONLY

Executes the automatic adjustment of the capstan FG only.

1. Execute the CAPSTAN ONLY.
2. After completing adjustment, confirm that "COMPLETE" appears.

#### Adjustment item

capstan fg duty

#### In the case of trouble :

When "ADJUST INCOMPLETE" appears on monitor display, check the SSS-10 and DR-428 boards (the capstan motor driver circuit, the capstan FG amplifier circuit) and the capstan motor.

```
SERVO ADJUST MODE
CAPSTAN FG DUTY

COMPLETE

ADJUST MENU : (←) KEY
```

```
COMPLETE
```

## (5) TENSION

Executes the adjustment of the tape tension.

### Mode

PLAY mode

### Tool

DV torque cassette : J-6082-373-A

1. Remove the cassette compartment.
2. Turn on the main power and press the **EJECT** key.

#### Note


Make sure that the cassette compartment connection cable is not shorted to chassis when the main power is turned on.

3. Enter "MAINTENANCE MENU" and select "TENSION" from "SERVO ADJUST" using the **▲**, **▼** keys.
4. Press the **▶** key to move to the next display.



>Tension

5. When the display appears, press the **SET (YES)** key to start the adjustment.

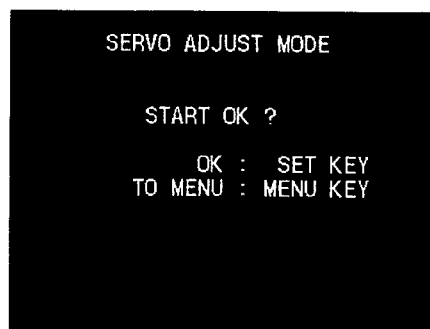

>>>Start ?



6. Wait until display changes and the menu appears as shown in the right.

```
SERVO ADJUST MODE
TENSION

TENSION OFFSET DC
NOW ADJUSTING ...

CANCEL : MENU KEY
```

```
ADJUSTING
```

7. Set the DV torque cassette and place a weight of about 300 g on it. Press the **STOP** key.

```
SERVO ADJUST MODE
TENSION

SET TORQUE CASSETTE
(DVL40-40)
AND PUSH STOP KEY.

CANCEL : MENU KEY
```

8. Keep pressing the **▲**, **▼** keys until the DV torque cassette reading agrees with the specification value on display.
9. When adjustment is completed, press the **▶** key.

```
SERVO ADJUST MODE
TENSION

ADJUST S REEL TORQUE
WITH (↑) OR (↓) KEY
IN RANGE OF XX.X ± Xgcm.

NEXT : (→) KEY
CANCEL : MENU KEY
```

Specification is as indicated on the display.

10. The display changes as shown in the right, and the DSR-1500/1500P enters the tension regulator magnet position check mode.

```
SERVO ADJUST MODE

TENSION
TENSION DC
NOW CHECKING ...
DATA: 0228
(SPEC.: 01AE <--> 0252)

CANCEL : MENU KEY
```

11. If the check is completed unsatisfactorily, the display changes as shown in the right.
12. Replace the tension regulator assembly in accordance with message on the display.




```
SERVO ADJUST MODE

TENSION

DC CHECK ... NG
DATA: 021D
(SPEC.: 01AE <--> 0252)

EXCHANGE THE TENSION
REGULATOR ASSY

ADJUST MENU : (←) KEY
```

13. If the check is completed satisfactorily, the display changes as shown in the right.
14. Keep pressing the ,  keys until the DV torque cassette reading agrees with the specification value on the display.
15. When adjustment is completed, press the  key.
16. Repeat steps 14 and 15 to readjust the DV torque cassette reading.


```
SERVO ADJUST MODE

TENSION

ADJUST S REEL TORQUE
WITH (↑) OR (↓) KEY
IN RANGE OF XX.X ± Xgcm.

NEXT : (→) KEY
CANCEL : MENU KEY
```

Specification is as indicated on the display.

17. Confirm that the DV torque cassette reading agrees with the specification value on the display.
18. After completing step 17, press the  key and the DSR-1500/1500P enters the REV mode automatically.




```
SERVO ADJUST MODE

TENSION

CHECK S REEL TORQUE
IN RANGE OF XX.X ± Xgcm.

NEXT : (→) KEY
CANCEL : MENU KEY
```

Specification is as indicated on the display.

19. Keep pressing the ,  keys until the REV holdback tension reading agrees with the specification value on the display.
20. When adjustment is completed, press the  key.

```

SERVO ADJUST MODE
TENSION

ADJUST S REEL TORQUE
WITH (↑) OR (↓) KEY
IN RANGE OF XX.X ± Xgcm.

NEXT : (→) KEY
CANCEL : MENU KEY

```

Specification is as indicated on the display.

21. Press the **EJECT** key and remove the DV torque cassette.

```

SERVO ADJUST MODE
TENSION

PUSH EJECT KEY.

```

22. Confirm that the message "COMPLETE" appears on the display.

```

SERVO ADJUST MODE
TENSION

COMPLETE

ADJUST MENU : (←) KEY

```

```

COMPLETE

```

- \* Press the **EJECT** key to return to the ADJUST menu.
- \* When adjustment is complete, attach the cassette compartment.

### **5-3-5. Tape Path Adjust**

Executes the adjustment of the tape path.

#### **(1) TRACKING ADJUST**

For adjustment of "TRACKING ADJUST", refer to Section 8-1.



#### **(2) RF SWITCHING POSITION**



For adjustment of "RF SWITCHING POSITION", refer to Section 8-3.


### 5-3-6. Electrical Adjust



Executes the electrical adjustment.




#### Operating procedure

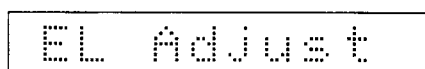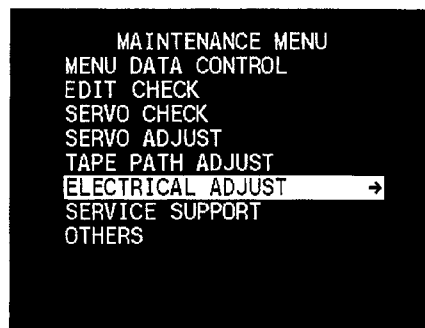1. Enter the maintenance menu.
2. Move the cursor to "ELECTRICAL ADJUST" which is displayed with a white background using the ,  keys.

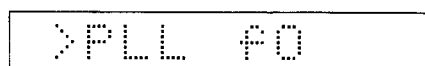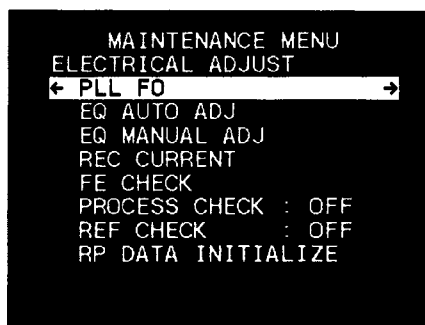

3. Press the  key.  
"ELECTRICAL ADJUST" is selected and its lower layer submenu appears.







4. Move the cursor displayed with a white background to a desired item using the ,  keys.
5. Press the  key to select the desired item.



## 1. PLL F0

The PLL adjustment is described below :

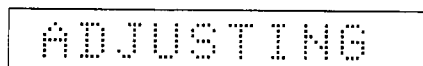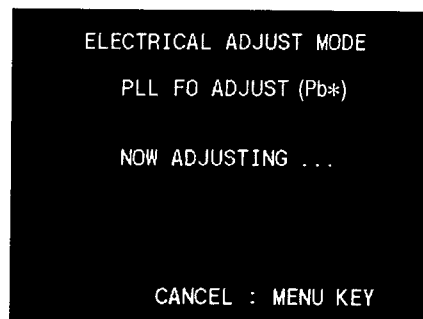1. Select "PLL F0" and the PLL adjustment is performed automatically.



2. After completing the adjustment, confirm that "COMPLETE" appears.
3. Press the  key to return to the ADJUST menu.
4. Press the  key to exit the maintenance menu.

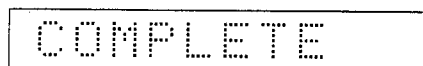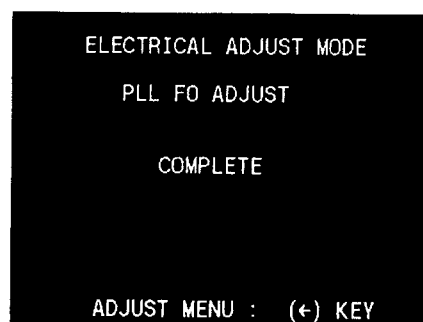

### In the case of trouble :


If "INCOMPLETE" appears on the monitor display, check the RP-117 board (the PLL circuit).

## 2. EQ AUTO ADJ


The EQ AUTO adjustment is described below :

### ① DVCAM

1. Select the EQ AUTO ADJ.

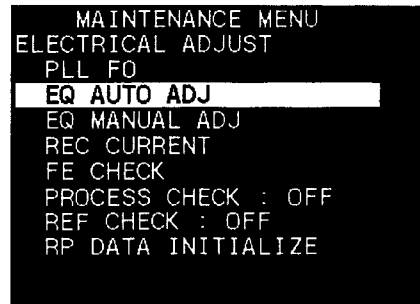

2. Move the cursor displayed with a white background to the DVCAM using the , keys and press the key.

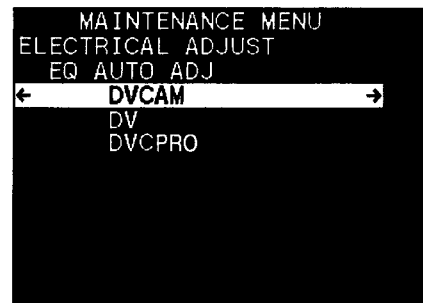

3. After the monitor display comes out as shown right, insert the XH5-1A2 (for NTSC) or XH5-1AP2 (for PAL) into the unit.
4. Press the key.
5. Confirm "COMPLETE" is displayed on the monitor.



To return to step 2, press the key once.

To return to step 1, press the key twice.

To return to the main menu, press the key three times.

### In the case of trouble :




If "INCOMPLETE" is displayed on the monitor ;

- ① Send the small length of the tape forward and repeat step 2 again.
- ② If "INCOMPLETE" is still displayed after performing ①, check the RP-117 board (the EQ circuit).


## ② DV

1. Select the EQ AUTO ADJ.

```
MAINTENANCE MENU
ELECTRICAL ADJUST
PLL FO
EQ AUTO ADJ
EQ MANUAL ADJ
REC CURRENT
FE CHECK
PROCESS CHECK : OFF
REF CHECK : OFF
RP DATA INITIALIZE
```

2. Move the cursor displayed with a white background to the DV using the ,  keys and press the  key.


```
MAINTENANCE MENU
ELECTRICAL ADJUST
EQ AUTO ADJ
DVCAM
DV
DVCPRO
```


3. After the monitor display comes out as shown right, insert the XH4-1A into the unit.
4. Press the  key.
5. Confirm "COMPLETE" is displayed on the monitor.


```
DV EQ AUTO ADJUST

SET DV TAPE
AND PUSH PLAY KEY.

CANCEL : MENU KEY
```

To return to step 2, press the  key once.

To return to step 1, press the  key twice.

To return to the main menu, press the  key three times.

### In the case of trouble :

If "INCOMPLETE" is displayed on the monitor ;




- ① Send the small length of the tape forward and repeat step 2 again.
- ② If "INCOMPLETE" is still displayed after performing ①, check the RP-117 board (the EQ circuit).




## ② DVCPRO

1. Select the EQ AUTO ADJ.

```
MAINTENANCE MENU
ELECTRICAL ADJUST
PLL FO
EQ AUTO ADJ
EQ MANUAL ADJ
REC CURRENT
FE CHECK
PROCESS CHECK : OFF
REF CHECK : OFF
RP DATA INITIALIZE
```

2. Move the cursor displayed with a white background to the DVCPRO using the ,  keys and press the  key.


```
MAINTENANCE MENU
ELECTRICAL ADJUST
EQ AUTO ADJ
DVCAM
DV
DVCPRO
```


3. After the monitor display comes out as shown right, insert the DVCPRO check tape into the unit.
4. Press the  key.
5. Confirm "COMPLETE" is displayed on the monitor.


```
DVCPRO EQ AUTO ADJUST

SET DVCPRO TAPE
AND PUSH PLAY KEY.

CANCEL : MENU KEY
```

To return to step 2, press the  key once.

To return to step 1, press the  key twice.

To return to the main menu, press the  key three times.

### In the case of trouble :

If "INCOMPLETE" is displayed on the monitor ;

- ① Send the small length of the tape forward and repeat step 2 again.
- ② If "INCOMPLETE" is still displayed after performing ①, check the RP-117 board (the EQ circuit).


### 3. EQ MANUAL ADJ

The EQ MANUAL ADJUSTMENT is described below :


#### Note

If any errors are found in the played back picture and audio, or if "INCOMPLETE" is displayed after completing the EQ AUTO ADJ in the previous section, this adjustment enables to check the status of the RF of each HEAD.

1. Select the EQ MANUAL ADJ.

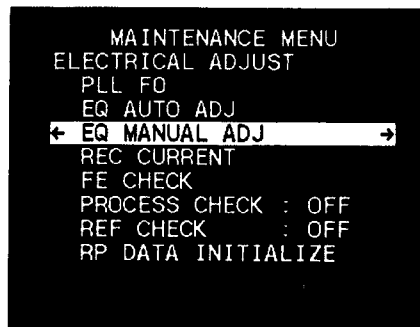

2. Select the mode desired to check using the ▲, ▼ keys, and press the ► key.
3. Insert the cassette of which mode you desire to check into the unit.  
DVCAM : 15 μ ADJ cassette  
DV : 10 μ ADJ cassette  
DVCPRO : DVCPRO check tape

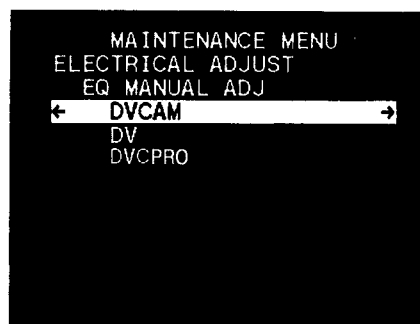

4. Press the PLAY key.
5. Press the RESET (NO) key to display asterisk mark "\*" to the right side of the DATA : XXXX.
6. Select the HEAD for checking with the ► key.

#### Note

The HEAD selected is displayed in the ( ) on the top of the monitor display.

#### In the case of DVCAM :

Main E → Main O

#### In the case of DV :

Main E → Main O


#### In the case of DVCPRO :

Main E → Main O

7. Confirm that the DATA on the screen is 0000\* through 000F\*.

#### Note

If press the SET (YES) key during confirmation, perform the EQ AUTO adjustment.

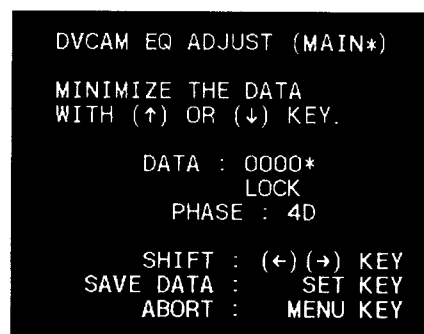





#### 4. REC CURRENT

1. Selected the REC CURRENT.

```
MAINTENANCE MENU
ELECTRICAL ADJUST
PLL FO
EQ AUTO ADJ
EQ MANUAL ADJ
← REC CURRENT →
FE CHECK
PROCESS CHECK : OFF
REF CHECK : OFF
RP DATA INITIALIZE
```

```
>REC cur
```

2. Press the ,  keys and the ,  keys to adjust the data to "C0".

```
REC CURRENT ADJUST

E      O
CO     CO

INC/DEC : (↑)(↓)KEY
SHIFT  : (←)(→)KEY
DATA SAVE : SET KEY
ABORT   : MENU KEY
```

```
rec E:CO
```



or

```
rec 0:CO
```



3. Press the **SET (YES)** key to save the data.

## 5. FE CHECK

1. Insert a blank tape.  
(Press the keys in this order : **TC PRESET**, **RESET (NO)** and **SET (YES)** keys, to set the time counter to 00, which facilitates the operation.)
2. Connect an oscilloscope as follows :  
Check : TP202/RP-117 board  
GND : E201  
TRIG : TP201
3. Select the FE CHECK.

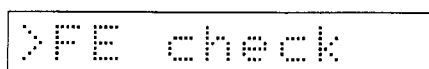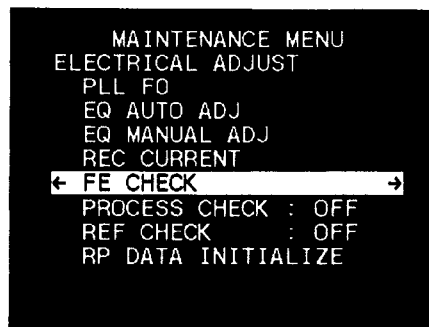




4. Select REC using the **▲** key. Press the **PLAY** and **REC** keys.  
After recording for 30 to 60 seconds (time counter reading), press the **STOP** key.
5. Playback the recorded segment and note down the waveform level.

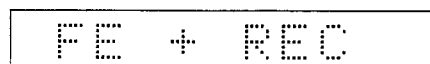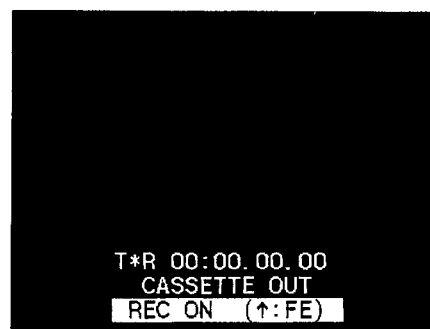

6. Select FE ONLY using the **▲** key. Locate the tape segment that is recorded in step “4”, and press the **PLAY** and **REC** keys to record (i.e., erase) the recorded segment for about 30 seconds.
7. Playback the segment recorded (erased) in step 6. and confirm that the waveform level is 30% or less.

### Note

In the SY software up to version 1.11, all the area is erased. In the SV software of version 1.12 and higher, only the video sub-code is erased.

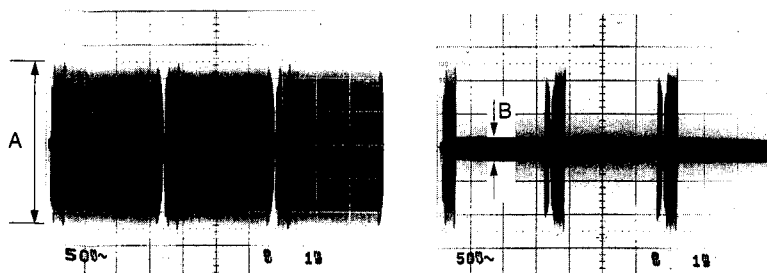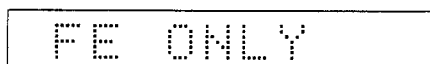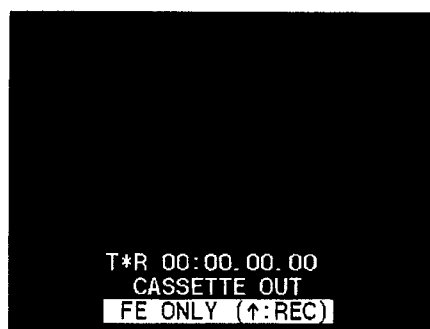

$$B \leq A \times 0.3$$

---

## 6. PROCESS CHECK

\* This menu is for the factory use only.

---

## 7. REF CHECK

\* This menu is for the factory use only.

---

## 8. RP DATA INITIALIZE

1. Select the RP DATA INITIALIZE.

```
MAINTENANCE MENU
ELECTRICAL ADJUST
PLL F0
EQ AUTO ADJ
EQ MANUAL ADJ
REC CURRENT
FE CHECK
PROCESS CHECK : OFF
REF CHECK      : OFF
← RP DATA INITIALIZE →
```

```
>RP initial
```

2. As "RP DATA INITIALIZE" will be displayed on the screen, press the **SET (YES)** key when initializing the adjusted data.

**Note**

After initialization, be sure to perform the following three adjustments in Section "5-3-6. Electrical Adjust."

1. PLL F0
2. EQ AUTO ADJ
4. REC CURRENT

```
RP DATA INITIALIZE

CLEAR ADJUST DATA
AND INITIALIZE?



ADJUST MENU : (←) KEY
INITIALIZE  : SET KEY
```

```
RP initial
```

### 5-3-7. Service Support


Displays the error codes and error contents which occurred in the past and provides the diagnosis.


#### Operating procedure

1. Enter the maintenance menu.
2. Move the cursor to "SERVICE SUPPORT" which is displayed with a white background using the ,  keys.






Support

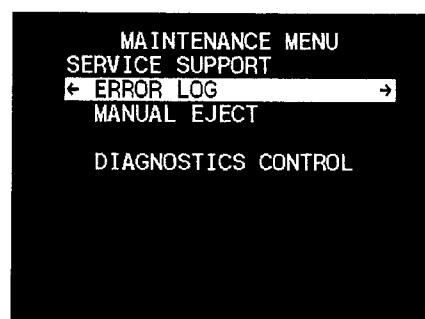3. Press the  key.  
"SERVICE SUPPORT" is selected and its lower layer sub-menu appears.



>Error LOG

4. Move the cursor displayed with a white background to a desired item using the ,  keys.
5. Press the  key to select the desired item.  
(Refer to the respective menu description for the check procedure.)
6. After completing the check, press the **MENU** key to return to the main menu.
7. To check other menus and submenus, repeat steps 4 to 6.
8. Press the **MENU** key to exit the maintenance menu.

---

## 1. ERROR LOG

The errors which occurred in the past are displayed.  
(The latest eight maximum errors are displayed.)



```
MAINTENANCE MENU
SERVICE SUPPORT
ERROR LOG
ERROR-33-000
```

\* The latest error is displayed on the top.

**Note**

The servo system errors only are stored here. The ERROR-91, 92, 93, 94 and 95 are not stored.

---

## 2. MANUAL EJECT

For the operating procedure of how to take out a tape when the EJECT is inoperable, refer to Section 4-3.

---

## 3. DIAGNOSTICS CONTROL



### ① CLEAR ERROR LOG

Clears the error history from the ERROR LOG.

### 5-3-8. Others


Enables to check the software version, keyboard and others.

#### Operating procedure

1. Enter the maintenance menu.
2. Move the cursor to "OTHERS" which is displayed with a white background using the ,  keys.






Others

3. Press the  key.  
"OTHERS" is selected and its lower layer submenu appears.



>Version

4. Move the cursor displayed with a white background to a desired item using the ,  keys.
5. Press the  key to select the desired item.  
(Refer to the respective menu description for the check procedure after execution.)
6. After completing the check, press the **MENU** key to return to the main menu.
7. To check other menus and submenus, repeat steps 4 to 6.
8. Press the **MENU** key to exit the maintenance menu.




## (1) SOFTWARE VERSION

Displays the model information and software version numbers.




SY : IC519 on the SSS-10 board.  
SV : IC211 on the SSS-10 board.  
SP : IC519 on the SSS-10 board.  
DR : IC1 on the DR-428 board.  
KY : IC102 on the KY-484 board.  
DVIO : IC602 on the DV-25 board.  
SDI : IC903 on the SDI-58 board.  
MENU : IC8 on the DR-428 board.

```
SOFTWARE VERSION
DSR-1500P
SY: V1.08  DVIO: V0.70
SV: V1.06  SDI : V0.5
SP: V1.07  MENU: V1.0
DR: V0.905
KY: V0.31
TO MENU : MENU KEY
```

Press the  key to display the version below.

SMART : IC401 on the SSS-10 board.  
V2P : FU-78AP (A-8326-487-A)  
V2R : FU-78AR (A-8326-486-A)  
NSG : IC510 on the AVP-3/3P board.  
ACTL : IC300 on the DVP-19 board.  
SIFP : IC902 on the DVP-19 board.  
SIFR : IC600 on the DVP-19 board.  
SIFE : IC601 on the DVP-19 board.  
AIF : IC1002 on the DVP-19 board.  
AIFI : IC202 on the DV-25 board or IC602 on the SDI-58 board.

```
SOFTWARE VERSION
DSR-1500P
SMART: V1.02  SIFP: V1.3
V2P : V3.2  SIFR: V1.1
V2R : V3.2  SIFE: V1.3
NSG : V2.2  AIF : V1.1
ACTL : V1.0  AIFI: V1.1
TO MENU : MENU KEY
```

- \* The message NONE appears for the DVIO, SDI and AIFI version when the optional board is not installed in the DSR-1500/1500P.
- \* When both the DSBK-150L (SDI-58 board) and DSBK-1503 (DV-25 board) are attached, the version of IC602 side on the DSBK-1501 (SDI-158 board) is displayed as the AIFI version.
- \* Contents which are shown in the time counter display can be changed using the ,  keys.
- \* Press the  key or the **MENU** key to return to the maintenance menu.

## (2) MEMORY DISPLAY

- \* Factory use only.

## (3) DATA DISPLAY

- \* Factory use only.



## Section 6

### Periodic Inspection and Maintenance

#### 6-1. Periodic Inspection List

The following table shows the reference parts replacement time which is not the warranty time of parts. Refer to the following table to establish the periodic inspection schedule which realizes the full performance and function of a unit and to extend life of a tape. The actual parts replacement period depend on the operating environment and conditions of a unit.

☆ : Part replace    ◇ : Check (Adjustment)    ○ : Cleaning

Inspection items			Hours meter	Inspection time (Hours)			
Item	Part No.	Name	Menu No.	2000	4000	6000	8000
Drum assembly	A-8320-778-B	DEH-13B-R	T2	☆	☆	☆	☆
Tape drive system blocks							
Pinch solenoid	A-8279-203-	Pinch Solenoid assembly	T2	◇	◇	◇	◇
Brake solenoid	1-454-930-11	Plunger solenoid	T2	◇	◇	◇	◇
Reel motor (T)	8-835-636-51	DC motor (SRD14A/J-RP)	T2	◇	◇	◇	◇
Reel motor (S)	8-835-637-51	DC motor (SRD15A/J-RP)	T2	◇	◇	◇	◇
Loading motor	A-8279-202-	LD motor assembly	T2	◇	◇	◇	◇
Reel sift motor	A-8279-204-	RS motor assembly	T2	◇	◇	◇	◇
T reel brake shoe	A-8324-480-	Brake (T) assembly	T2	◇	◇	◇	◇
S reel brake shoe	A-8324-481-	Brake (S) assembly	T2	◇	◇	◇	◇
Head cleaner solenoid	1-454-942-11	Plunger solenoid	T2	-	-	-	◇
M stop solenoid	1-454-932-11	Plunger solenoid	T2	-	-	◇	◇
Tape path system blocks							
Capstan motor	8-835-619-51	DC motor (SCD16A/J-RP)	T2	◇	◇	◇	☆
Pinch roller	A-8279-201-	Pinch limiter assembly	T2	☆	☆	☆	☆
Guide roller T2	A-8279-024-	Shuttle (R) assembly	T2	○	○	○	◇○
Guide roller T3	A-8279-026-	T drawer arm assembly	T2	○	○	○	◇○
Guide roller T4	A-8279-400-	TG-8 arm assembly	T2	○	○	○	◇○
Guide roller S2	A-8279-023-	Shuttle (L) assembly	T2	○	○	○	◇○
Guide roller S3	A-8323-655-	Tension regulator assembly	T2	○	○	○	◇○
Guide roller S4	A-8279-399-	TG-1 arm assembly	T2	○	○	○	◇○
Tape running surface (including tape cleaner)	—	—	—	○	○	○	◇
Head cleaner	X-3605-665-1	HC roller assembly		☆	☆	☆	☆
Others							
Cassette memory terminal	A-8323-659-	MIC holder assembly	T2	◇○	◇○	◇○	◇○

T2 : DRUM ROTATION

## 6-2. Hours Meter

The hours meter data is displayed on the monitor display and the time counter display area. Therefore, the hours meter data cannot be checked without turning on the main power to the unit. Periodic inspection is recommended to be performed using the hours meter reading.

### HOURS METER




The hours meter has the four types of display mode. The accumulated elapsed hours of operation or accumulated times of operation are displayed in the respective modes. The T2, T3 and CT modes have both of resettable accumulation counter and un-resettable accumulation counter.

#### Note

The actual hours and times are obtained by multiplying the displayed number by 10.


Modes	Contents of display
T1 : OPERATION	Accumulated hours of power on
T2 : DRUM ROTATION	Accumulated hours of drum rotation at the threaded-end position
T3 : TAPE RUNNING	Accumulated hours of tape running in the respective modes of fast forward, rewind, playback, search, record and edit (except for the still mode during search)
CT : THREADING	Numbers of times of threading and unthreading

Example : The following display indicates that the accumulated hours of drum rotation at the threaded-end position is 1500 hours.

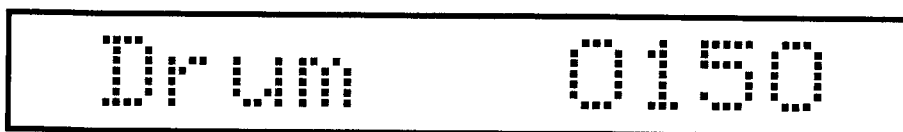

## 6-2-1. Displaying Hours Meter Information

1. Press the **MENU** key on the front panel.

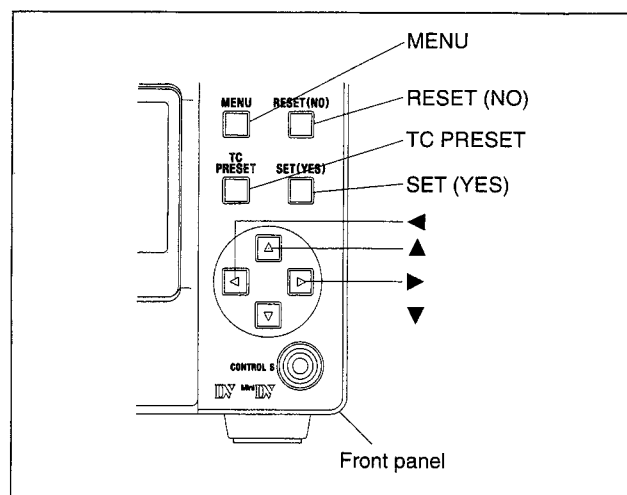


2. Select HOURS METER using **▲**, **▼** keys, and press the **▶** key.
3. All of the hours meter information of T1, T2, T3 and CT appear on the monitor screen.
4. Either one of T1, T2, T3 or CT is displayed on the time counter display area. Select another item using the **▲**, **▼** keys.
5. When the mode of T2, T3 or CT is selected, the resettable hours meter value appears first.
6. The un-resettable hours meter value is displayed while the **▶** key is kept pressed.

### Note


When the hours meter value becomes larger and exceeds the limit of display, “-----” will appear.

### [Monitor screen]

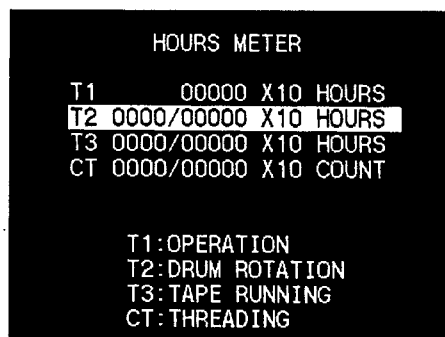

7. Press the **MENU** key again to return to the original mode.

### [Counter display area]

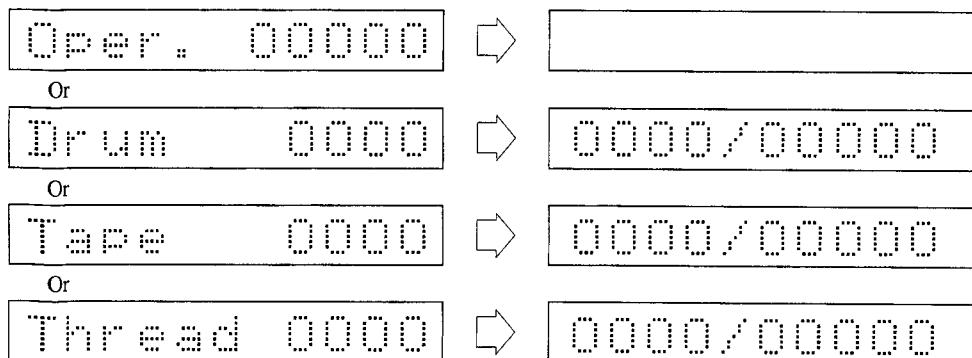

### 6-2-2. How to Reset Hours Meter

1. Set the switch S400-1 on the SSS-10 board to ON.
2. Press the **MENU** key.
3. Select HOURS METER using **▲**, **▼** keys, and press the **▶** key.
4. Select the desired item to reset using **▲**, **▼** keys.
5. When the **RESET (NO)** key is pressed, the display changes to "0000" which blinks.
6. When the **SET (YES)** key is pressed, a message appears requesting approval to reset, on the monitor.
7. To reset the memory, press the **SET (YES)** key again to exit the hours meter display mode.


#### Note

The following message appears while saving data into memory during reset.

If the main power is turned off while the message appears, the memory will not be reset correctly. Do not turn off the main power while the display appears.



8. Set the switch S400-1 on the SSS-10 board to OFF.

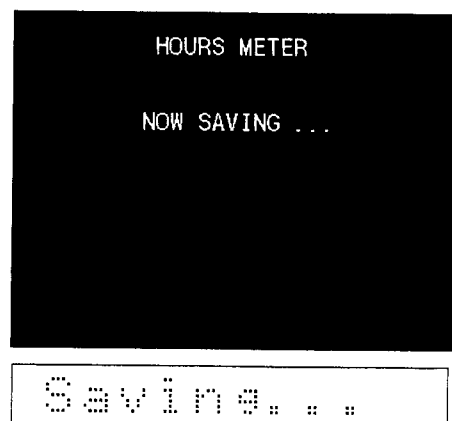

### 6-3. Maintenance upon Completion of Repair

Perform the following maintenance work regardless of the operating hours of the unit, after repairing it.


1. Video head cleaning  
(Refer to Section 6-3-1 for cleaning procedure.)
2. Tape running path cleaning  
(Refer to Section 6-3-2 for cleaning procedure.)

#### Note

After a unit is cleaned, insert a cassette after cleaning fluid is dried completely.

#### 6-3-1. Video Head Cleaning Procedure

Bring a cleaning cloth moistened with cleaning fluid in contact with the head tip gently, and rotate the drum slowly with hand for cleaning.

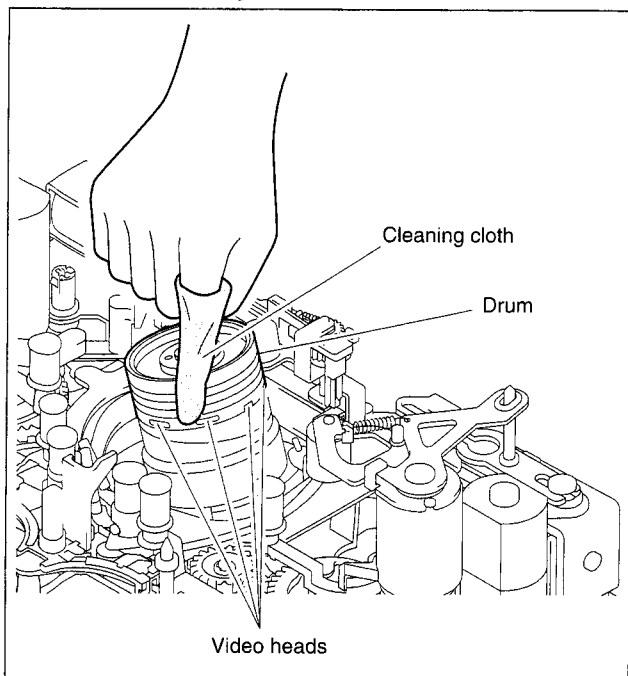

#### Notes


- Never move the cleaning cloth in vertical direction with respect to the drum rotation (up and down with respect to the drum) during cleaning.
- After cleaning, wipe off moisture using a dry cleaning cloth.
- Turn off the main power before cleaning a unit.

#### 6-3-2. Tape Running Path Cleaning

Clean the tape guide, drum, capstan, pinch roller, tape cleaner and other parts which contact with video tape, with cleaning cloth moistened with cleaning fluid.

#### Notes

- Be careful of the tape cleaner during cleaning because it has sharp edge.
- After cleaning, wipe off moisture using a dry cleaning cloth.

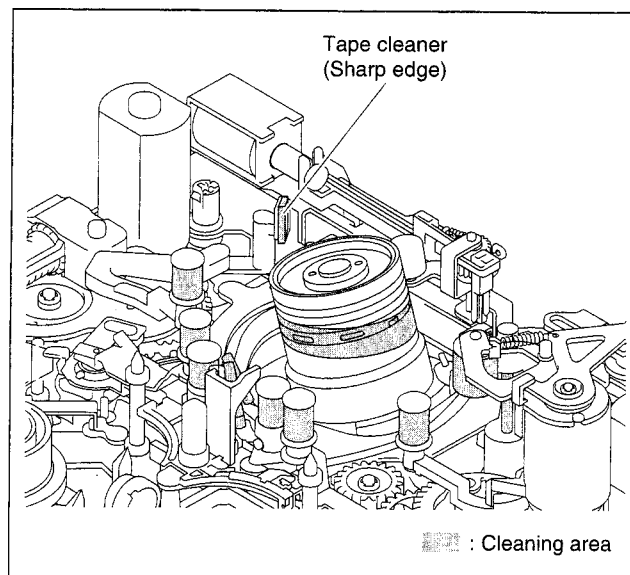


### 6-3-3. Cassette Compartment Entrance Cleaning

Clean the area around the cassette guide of the front panel and entire surface of the stage of the cassette compartment as shown using cleaning cloth moistened with cleaning fluid.


#### Note

Remove the cassette compartment when cleaning a unit to prevent foreign materials from dropping into a unit.

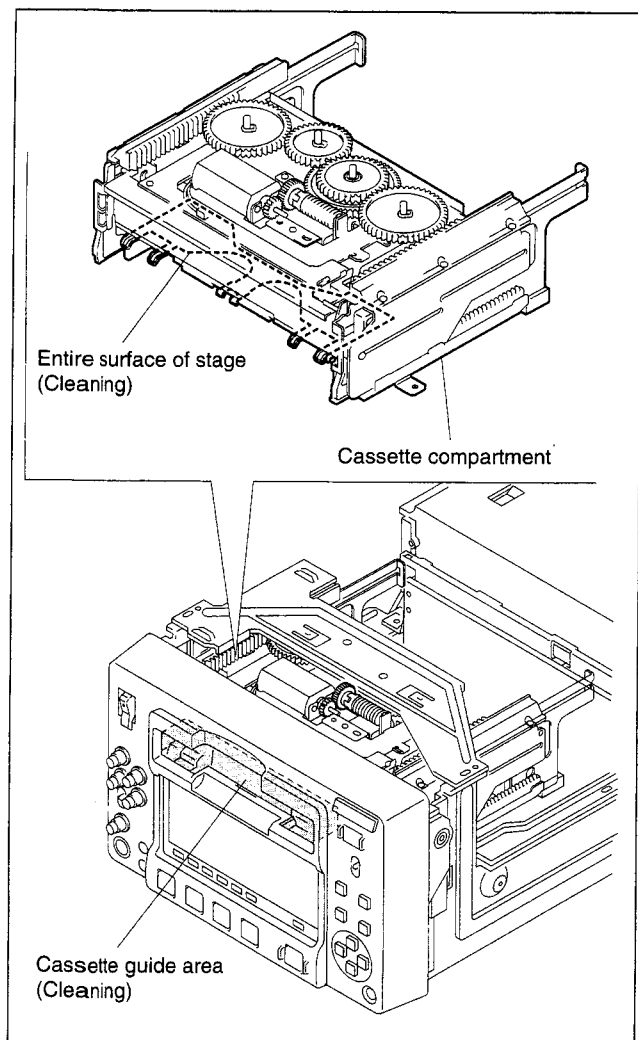


### 6-3-4. Cassette Compartment Shaft Cleaning

Turn the gear (red) in the arrow direction until you can see the shaft. Clean the shaft with a cleaning cloth moistened with a cleaning fluid.

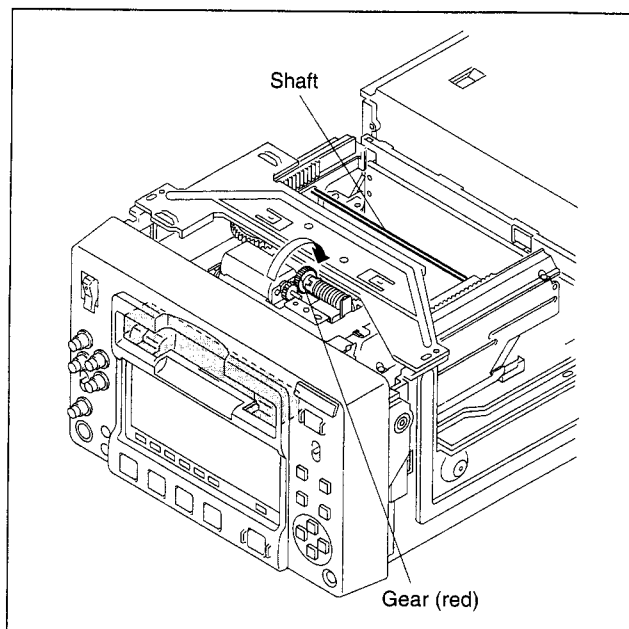

### 6-3-5. Cassette Guide Assembly Cleaning

Clean the rear block of the cassette guide assembly with a cleaning cloth moistened with a cleaning fluid.

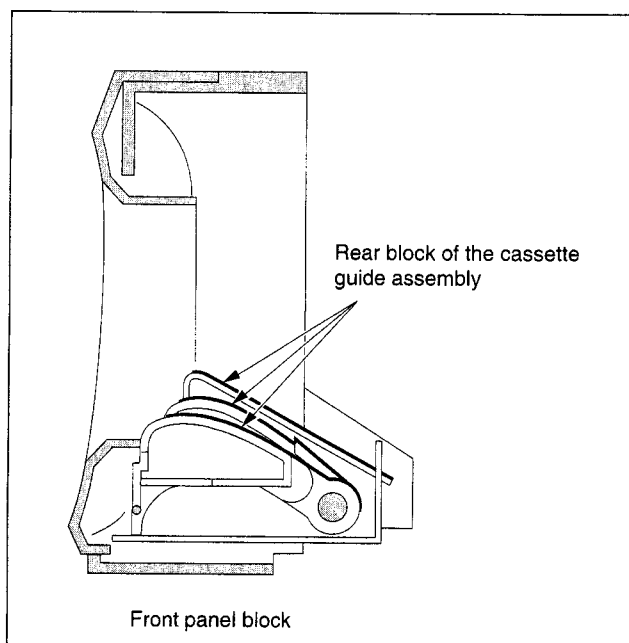



## **Section 7**

### **Replacement of Mechanical Parts**

#### **7-1. General Information on Parts Replacement and Adjustment**

##### **7-1-1. Preparation Before Starting Parts Replacement**

- Remove the ornamental parts as needed.
- When replacing parts or performing mechanical adjustment, remove the cassette compartment from the DSR-1500/1500P not so far as specified. (Refer to Section 3-4.)
- When the connector of the cassette compartment is removed, the protection circuit starts functioning. Refer to section "4-3-3. Operating the VTR without a Cassette Tape." to operate the DSR-1500/1500P without the cassette compartment.

##### **7-1-2. Drum Assembly**

- The drum assembly is a periodic replacement part. The drum should be replaced in accordance with the periodic replacement list.
- The drum assembly must be replaced in the following cases :
  - (1) When the video heads are worn out so that the proper tape-to-head contact is lost and recording and playback cannot be performed correctly;
  - (2) When the rabbit guide of the lower drum is worn out so that the correct RF envelope cannot be obtained even after adjusting the tape path to optimize the tracking.
  - (3) When the rabbit guide or tape running surface of the lower drum is damaged;
  - (4) If the drum rotation is abnormal and the VTR does not work properly due to noise or jitter.

##### **7-1-3. Grease**

Be sure to use only the authorized grease.

If grease other than the authorized one is used, major malfunctions may result due to differences in grease viscosity and its ingredients.

If grease containing dirt is used, the shafts and bearings may be damaged and major malfunctions may result.

Use the following grease for the DSR-1500/1500P :

Grease (SG941 (20 g)) : 7-662-001-39

- Do not apply grease to any parts other than the specified parts.
- Apply just enough grease to cover a coating on the surface.

Wipe off any grease that oozes out into the surrounding parts with gauze or a soft cloth.

## 7-1-4. Tightening Torque and Handling of Washers

### 1. Screwdrivers and Tightening Torque of Screws

Many M1.4 and M2 screws are used in the DSR-1500/1500P.

Be sure to use the authorized tools to loosen and tighten them.

In addition, use a torque screwdriver to tighten the screws with the specified tightening torque.

Torque screwdriver bit (for M 1.4) : J-6325-110-A

Torque screwdriver bit (for M 2) : J-6325-380-A

Hexagon bit (for torque screwdriver) : J-6326-120-A

Torque screwdriver (for 3 kgf•cm) : J-6325-400-A

Tightening torque

For M1.4 screw : 0.1 N•m (1.0 kgf•cm)

For M2 screw : 0.2 N•m (2.0 kgf•cm)

#### Note

The DSR-1500/1500P uses many small screws that easily fall inside the machine when removing and re-assembling parts. To avoid this risk, magnetize the screwdriver bit slightly enough to prevent small screws from falling into the machine. However, when installing the drum assembly, never use a magnetized screwdriver.

### 2. Stop Washer and E ring

Do not use old stop washers and E rings that have been removed.

Always use new stop washers and E ring to attach the parts.

Stop washer (1.5) : 3-669-465-01

Stop washer (2.3) : 3-669-596-01

E ring (2.3) : 7-624-105-04

Cotter polyethylene washer : 3-321-813-01

Polyslider washer (Ø2.0) : 3-701-437-01

### How to Remove the Stop Washers and E ring

(a) Use the following fixtures to remove stop washers and E ring.

Washer extracting fixture (A) : J-6082-234-A

#### Note

- Be careful not to drop the stop washers and E ring inside the DSR-1500/1500P.
- Be careful not to let tools touch other parts, especially the drum.

### How to Attach the Stop Washers


Use the following tools to attach stop washers :

Washer mounting fixture Ø1.5 : J-6082-231-A

Washer mounting fixture Ø1.2 : J-6082-232-A

Washer mounting fixture Ø0.8 : J-6082-233-A

- Insert a stop washer to the tip of the washer mounting fixture.
- Set the thin tip of the mounting fixture perpendicularly to the top of the shaft to which the stop washer is to be installed.
- Press the thick portion of the fixture downward to install the stop washer onto the shaft.

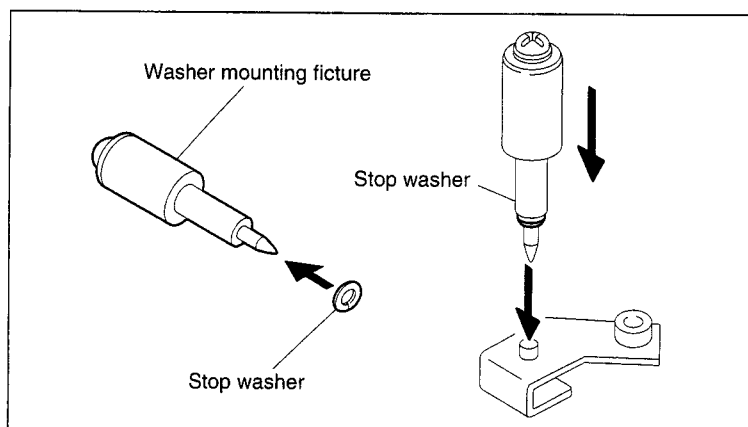

## 7-2. Drum Replacement

---

### Outline

#### Replacement

Disconnecting the connectors  
Removing the head cleaner assembly  
Replacing the drum assembly  
Reattaching the head cleaner assembly  
Reconnecting the connectors  
Cleaning the heads and tape running surface

#### Adjustment after replacement

Tape path adjustment  
RF switching position adjustment  
EQ adjustment

---

### Note

Take care not to damage the tape guides around the drum assembly, tape running surface on the drum, video heads of the drum assembly and so on when replacing the drum assembly.

---

### Basic Knowledge

Besides the periodic replacement, replace the drum assembly in the following cases.

- When no proper RF waveform can be obtained even if tracking adjustment is performed.
- When the damaged tape running surface on the drum cannot be recovered.

---

### Preparations

1. Set the unit into the unthreading end status.
2. Power off the unit.
3. Remove the top plate. (Refer to Section 3-3.)
4. Remove the bottom plate. (Refer to Section 3-3.)
5. Remove the cassette compartment assembly. (Refer to Section 3-4.)

---

### Tool


- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01
- Torque screwdriver bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A

### 1. Disconnecting the connectors

- (1) Remove the harnesses and flexible card wires that are connected to the two connectors (CN10, CN12) on the DR-428 board of the back of the chassis.
- (2) Remove the flexible card wire connected to the connector (CN102) on the RP-117 board.


**Note**

When disconnecting the connector, take extra care not to injure your hands with the chassis, etc.

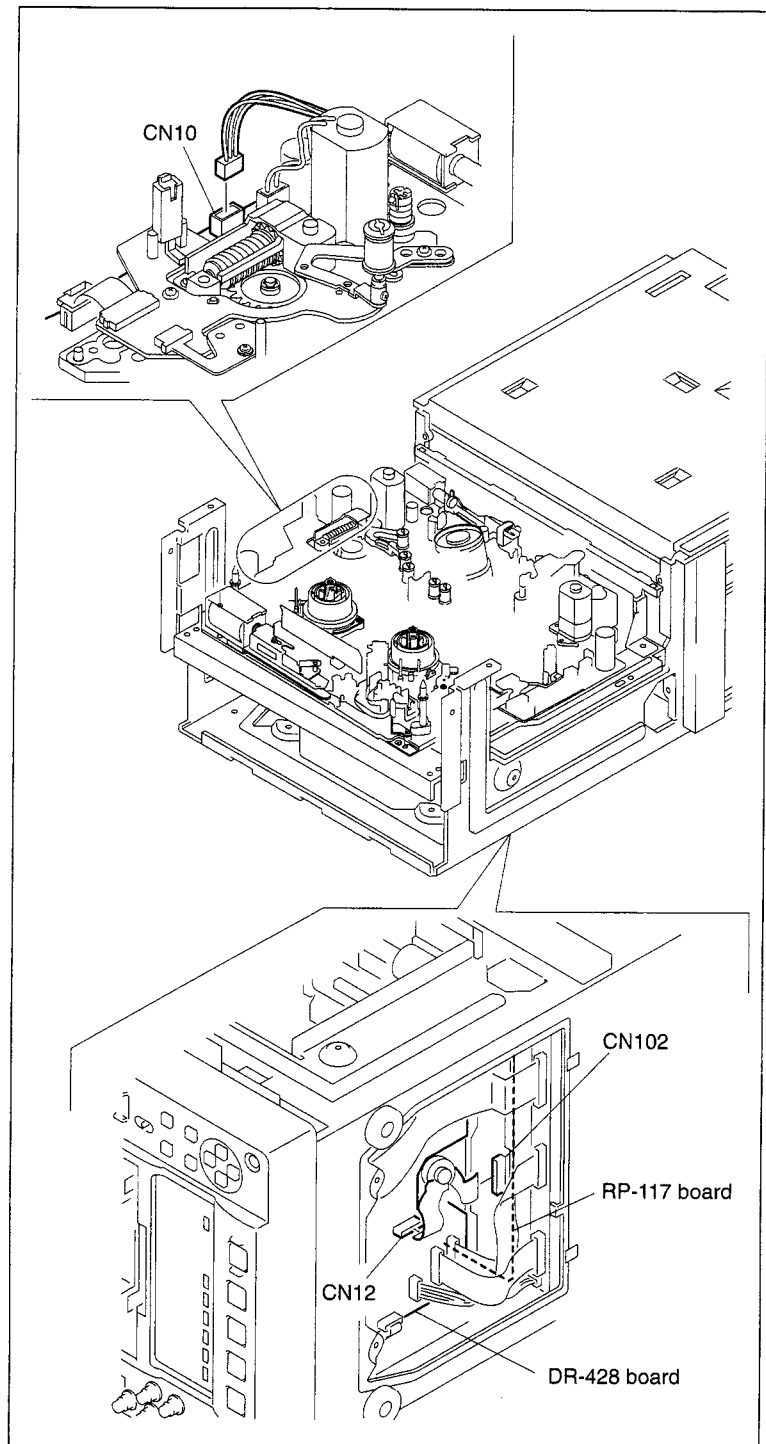

## 2. Removing the head cleaner assembly

- (1) Disconnect the harness from the connector (CN11) on the DR-428 board with tweezers.
- (2) Remove the two screws, and remove the head cleaner assembly in the direction of the arrow.

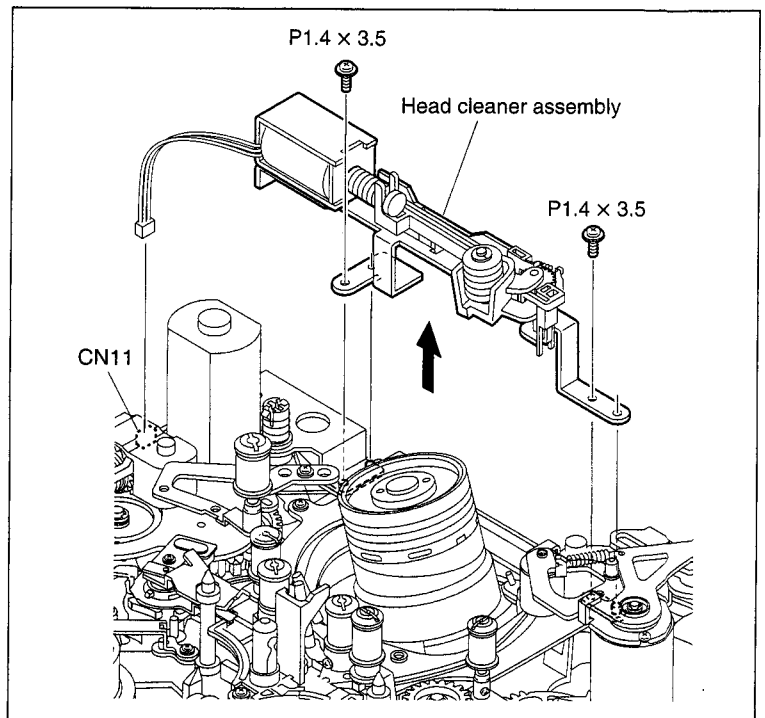

## 3. Replacing the drum assembly


- (1) Remove the three screws, and remove the drum assembly from the MD chassis.

### Note

Take care not to contact the drum assembly to the peripheral tape guides.

- (2) Clean the installation surfaces of a new drum assembly and MD chassis with a cleaning cloth moistened with cleaning fluid.
- (3) Put the five flexible card wires into the hole on the MD chassis, and align the two positioning pins on the MD chassis with the holes of the drum assembly.
- (4) While moving the drum assembly in the direction of the arrow (counterclockwise direction), tighten the three screws in the order of (a), (b), (c).

Tightening torque : 0.1 N·m { 1 kgf·cm }

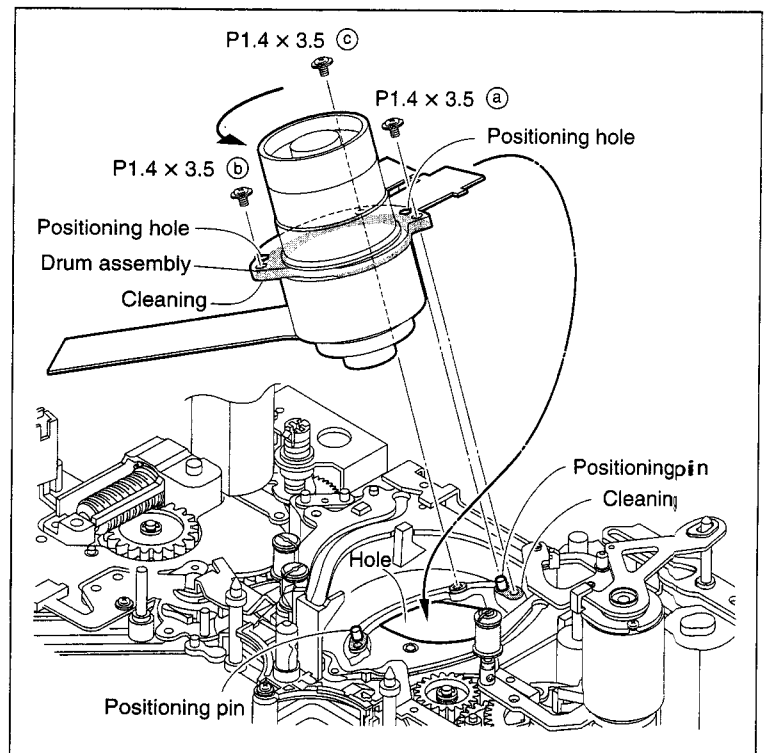


#### 4. Reattaching the head cleaner assembly

- (1) Align the positioning hole of the head cleaner assembly with the positioning pin on the MD chassis, and reattach it with the two screws. Tightening Torque : 0.1 N·m { 1 kgf·cm }
- (2) Reconnect the harness to the connector (CN11) on the DR-428 board.

##### Note

- Use care not to contact the head cleaner assembly with the tape running surface on the drum.
- Do avoid touching the HC roller assembly with bare hands.

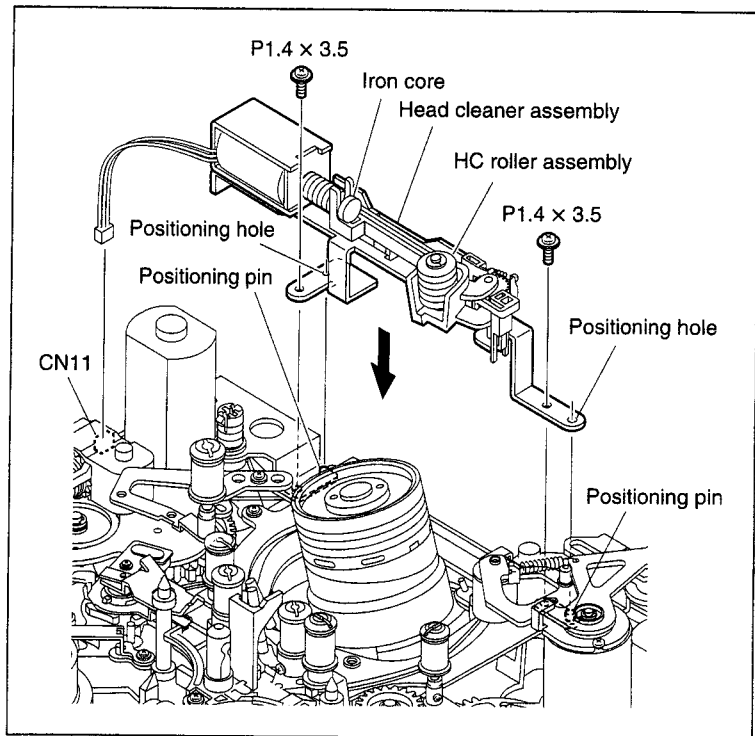

### 5. Connecting the connectors

- (1) Connect the harnesses and flexible card wires to the two connectors (CN10, CN12) on the DR-428 board of the back of the chassis.
- (2) Connect the flexible card wire to the connector (CN102) on the RP-117 board.

### 6. Cleaning the heads and tape running surface

Clean the tape running surfaces of the drum and video heads with cleaning cloth moistened with cleaning fluid.

---

### Adjustment after Replacement

#### 7. Tape path adjustment


(Refer to Section 8-2.)

#### 8. RF switching position adjustment

(Refer to Section 8-3.)

#### 9. EQ adjustment

(Refer to Section 5-3-6.)

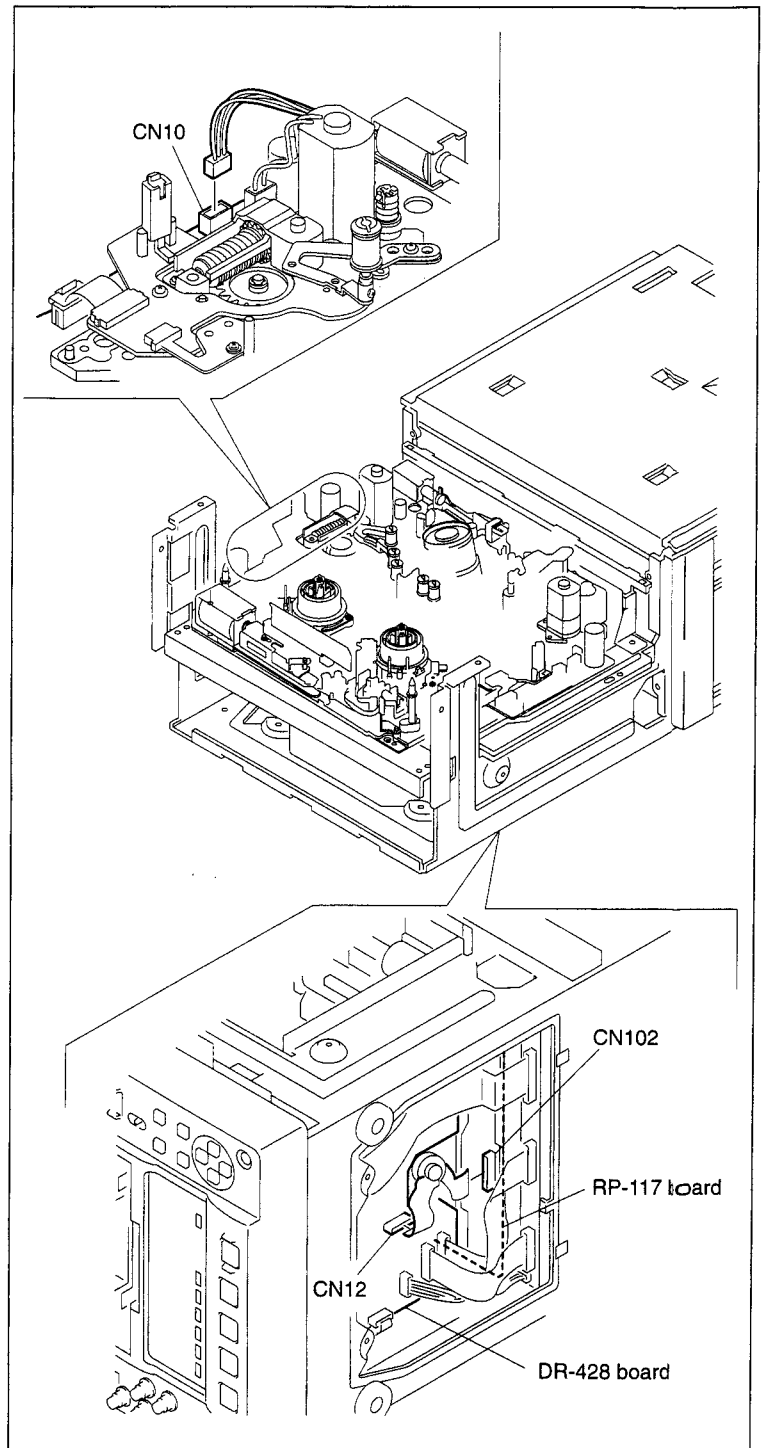

## 7-3. S/T Brake Assembly Replacement

---

### Outline

#### Replacement

Moving the S/T reel tables

Removing the L push plate (only when replacing the T-side brake assembly)

Removing the MIC assembly (only when replacing the T-side brake assembly)

Removing the reel cover

Replacing the brake assembly

Checking and adjusting the brake torque

Reattaching the reel cover

Reattaching the MIC assembly (only when replacing the T-side brake assembly)

Reattaching the L push plate (only when replacing the T-side brake assembly)

---

### Note

- Prepare a new cotter polyethylene washer when replacing the brake assembly.  
Cotter polyethylene washer (1.5) : 3-321-813-01
- Be careful not to lose the polyslider washer between the base plate and the MIC assembly.
- When replacing the T-side brake assembly, prepare a new stop washer for mounting the MIC assembly.  
Stop washer (1.5) : 3-669-465-01 × 1 (for mounting the MIC assembly)

---

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- Brake torque gauge (CCW) : J-6443-710-A
- Brake torque gauge (CW) : J-6443-720-A
- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver's bit (for M2) : J-6325-380-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.5 : J-6082-231-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01
- Tweezers



## Replacement

### 1. Moving the S/T reel tables


Turn the reel shift motor gear by a skewer to bring the S/T reel tables to the standard cassette position. (Refer to Section 7-19.)

### 2. Removing the L push plate (only when replacing the T-side brake assembly)

Remove the two screws to remove the L push plate.


### 3. Removing the MIC assembly (only when replacing the T-side brake assembly)

Remove the MIC assembly.  
(Refer to Section 7-19.)

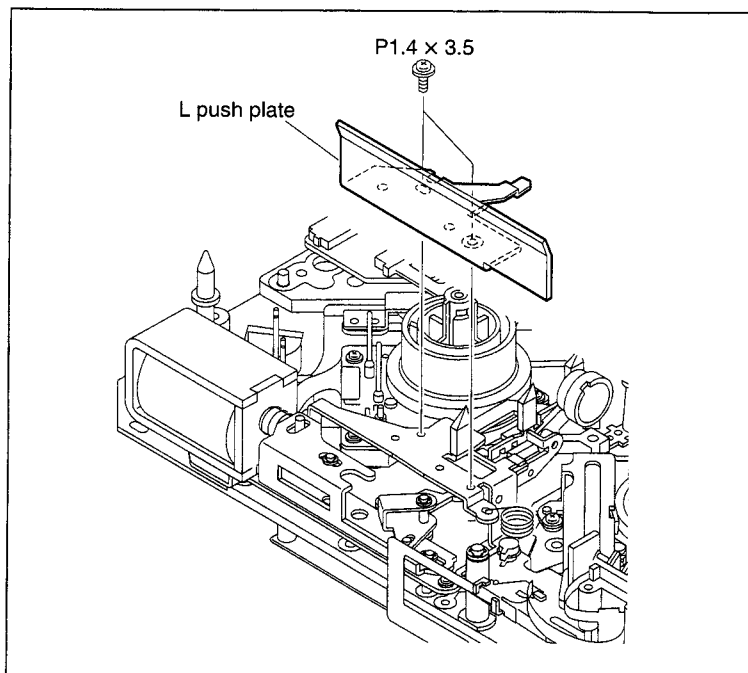

### 4. Removing the reel cover

Remove the screw, and then release the two claws to remove the reel cover S or T.

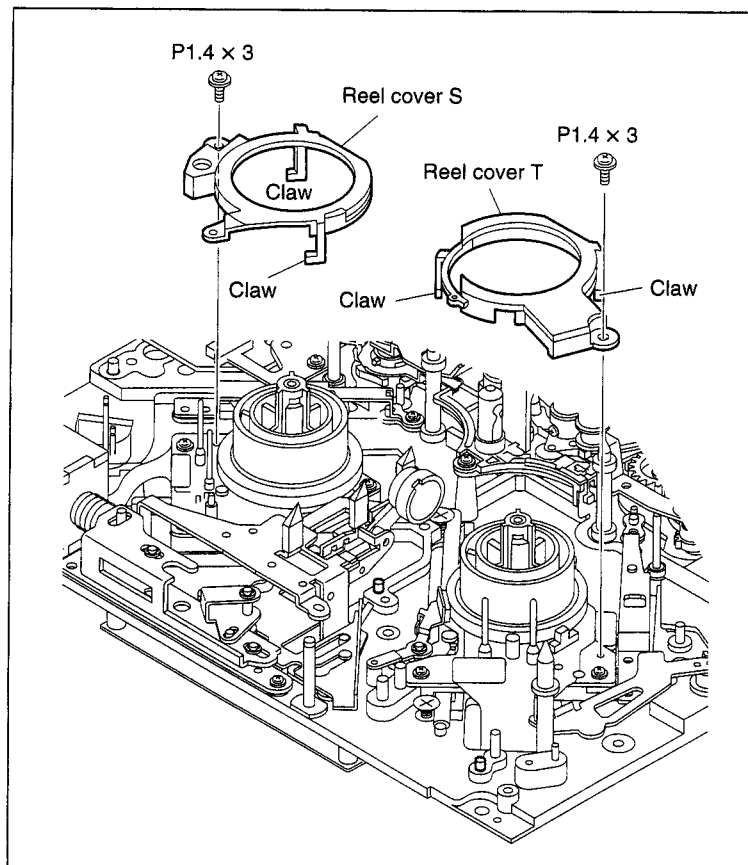

## 5. Replacing the brake assembly

- (1) Remove the cotter polyethylene washer and remove the brake assembly and the brake springs S/T.

### Note

Use care to prevent the brake spring from flying off when removing.

The polyslider washer located under the brake spring may come off together with the brake spring, therefore be careful not to lose it.


If it comes off, return it in place.

- (2) Wipe the contact surface on the reel table against the brake assembly with a cleaning cloth moistened with cleaning fluid.
- (3) Join the brake spring to a new brake assembly as shown in the figure and fit it on the reel motor shaft.

### Note

Avoid touching the brake shoe when replacing.

- (4) Attach a new cotter polyethylene washer

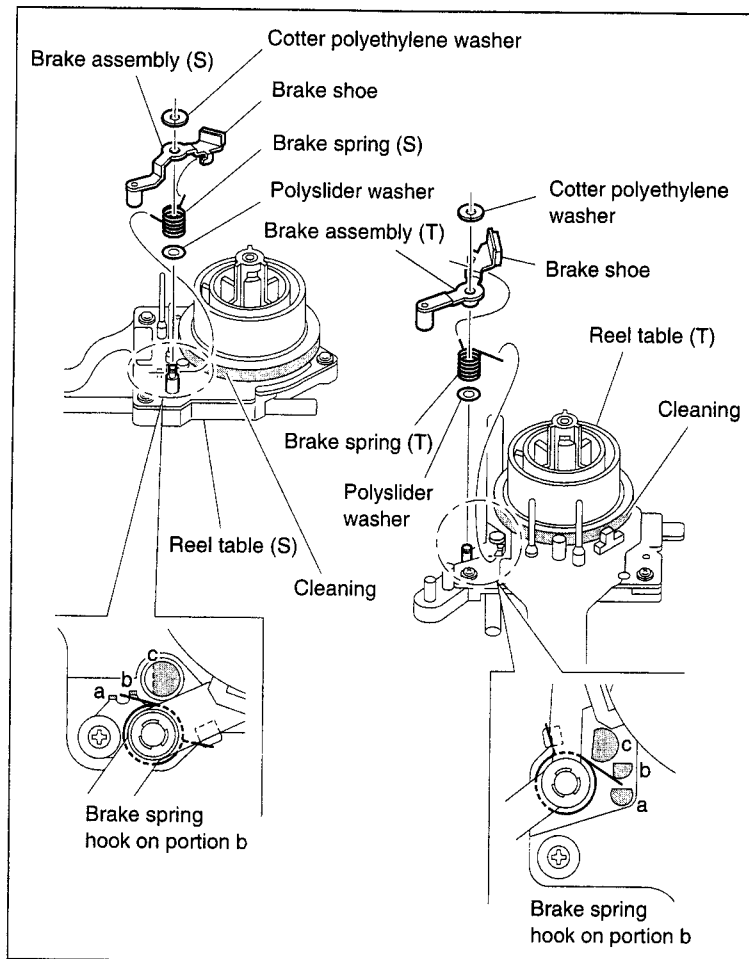

## 6. Checking and adjusting the brake torque

- (1) S reel brake torque

Check the S reel brake torque meets the specification below by turning the knob of the brake torque gauge (CW) in the A direction a turn in 1 to 3 seconds.

Tightening Torque :  $7.5 \pm 0.5 \text{ m N}\cdot\text{m}$   
 $\{75 \pm 5 \text{ gf}\cdot\text{cm}\}$


- (2) T reel brake torque

Check the T reel brake torque meets the specification below by turning the knob of the brake torque gauge (CCW) in the B direction a turn in 1 to 3 seconds.

Tightening Torque :  $7.5 \pm 0.5 \text{ m N}\cdot\text{m}$   
 $\{75 \pm 5 \text{ gf}\cdot\text{cm}\}$

- (3) Failing satisfaction of the specification, readjust by changing the position that the brake spring hooks on. (Refer to setp 6.)

- If the torque is high, hook the brake spring on the c portion.
- If the torque is low, hook the brake spring on the a portion.

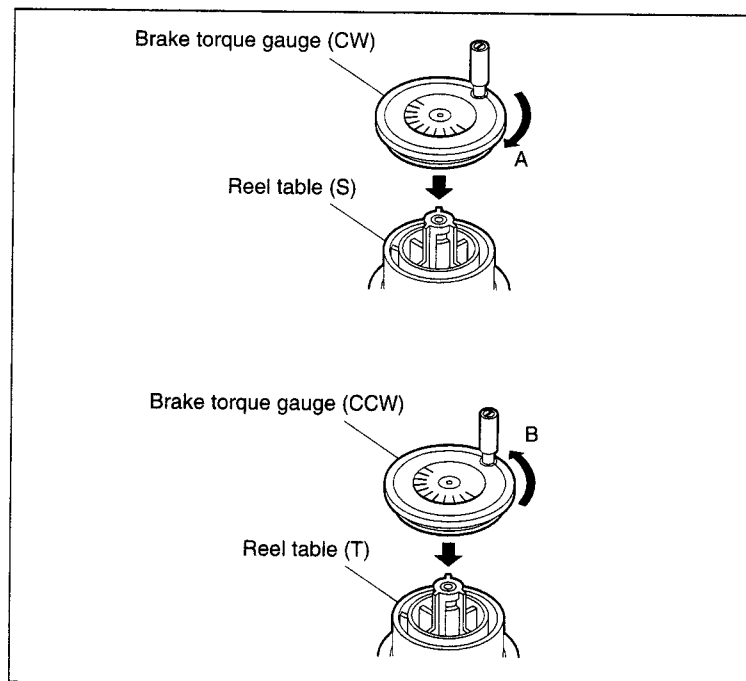


## 7. Reattaching the reel cover

- (1) Align the reference hole in the reel cover with the pin in the reel motor, and hook the two claws.
- (2) Fix the reel cover S or T with the screw.  
After fixing, apply screw locking compound.  
Tightening Torque : 0.1 N·m { 1 kgf·cm }


## 8. Reattaching the MIC assembly (only when replacing the T-side brake assembly)

Reattach the MIC assembly.  
(Refer to Section 7-19.)

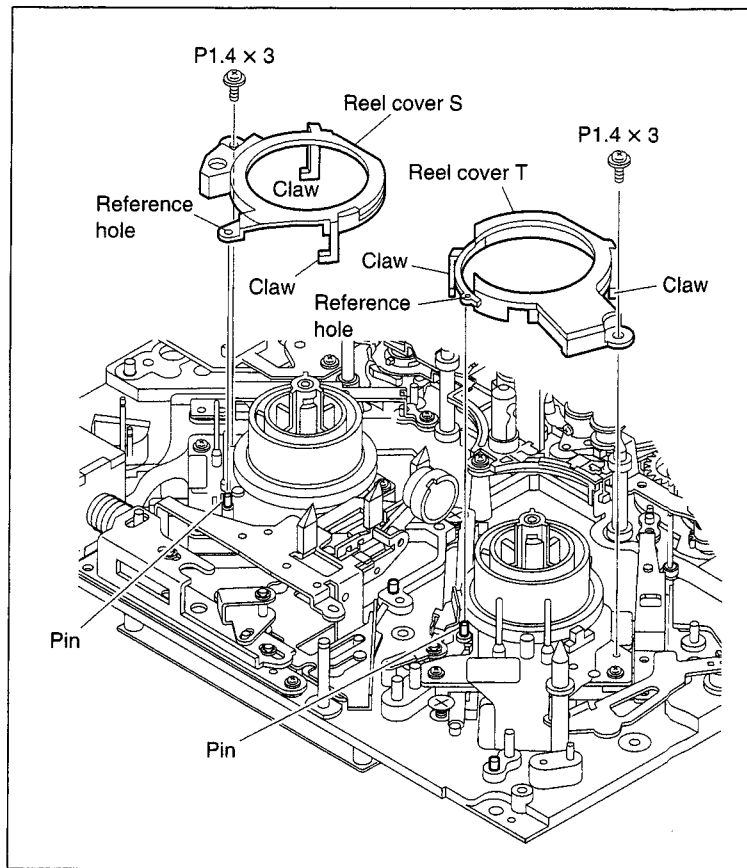

## 9. Reattaching the L push plate (only when replacing the T-side brake assembly)

Reattach the L-push plate with the two screws with the two holes in the L push plate aligned with the two protrusions on the RLR assembly.  
Tightening Torque : 0.1 N·m { 1 kgf·cm }

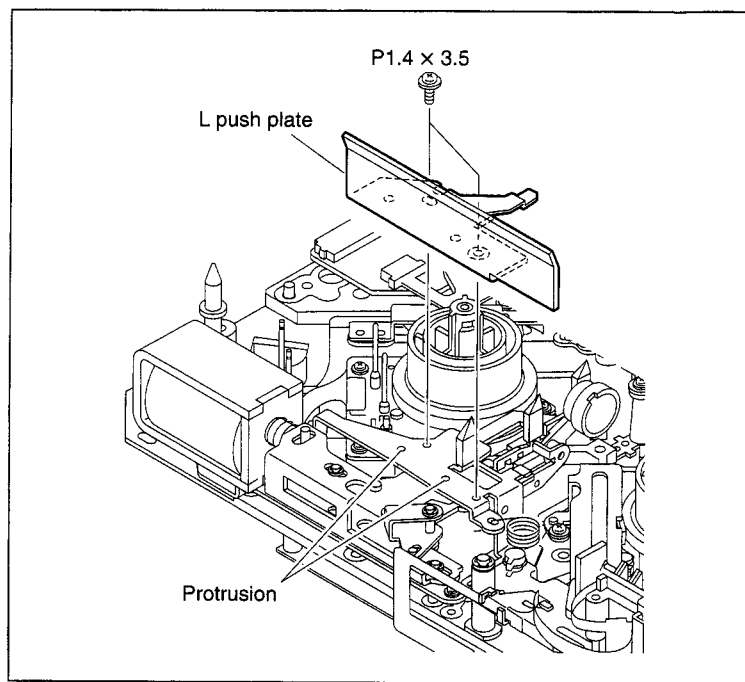

## 7-4. Brake Solenoid Replacement

---

### Outline

#### Replacement

Disconnecting the connector  
Removing the brake assembly  
Replacing the brake solenoid  
Reattaching the brake assembly  
Reconnecting the connector  
Checking the performance

---

### Note

Prepare a new stop washer when replacing the brake solenoid.  
Stop washer (1.5) : 3-669-465-01 × 1

---

### Preparation

1. After setting the unit to the L cassette position, set it to the unthreading end status.
  2. Power off the unit.
  3. Remove the top panel. (Refer to Section 3-3.)
  4. Remove the cassette compartment. (Refer to Section 3-4.)
- 

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver's bit (for M2) : J-6325-380-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.5 : J-6082-231-A
- Tweezers

## Replacement

### 1. Disconnecting the connector


Disconnect the harness from the connector (CN15) on the DR-428 board located on the back side of the MD chassis with tweezers.

#### Note

Be careful not to suffer injury at hand by chassis during the disconnection.

### 2. Removing the brake assembly

- (1) Remove the three screws fixing the brake assembly, and remove the brake assembly while slightly moving the iron core of the solenoid plunger in the direction toward pickup.
- (2) Pull out the harness of the solenoid from the square hole in the left side of the chassis with the brake assembly lifted up.

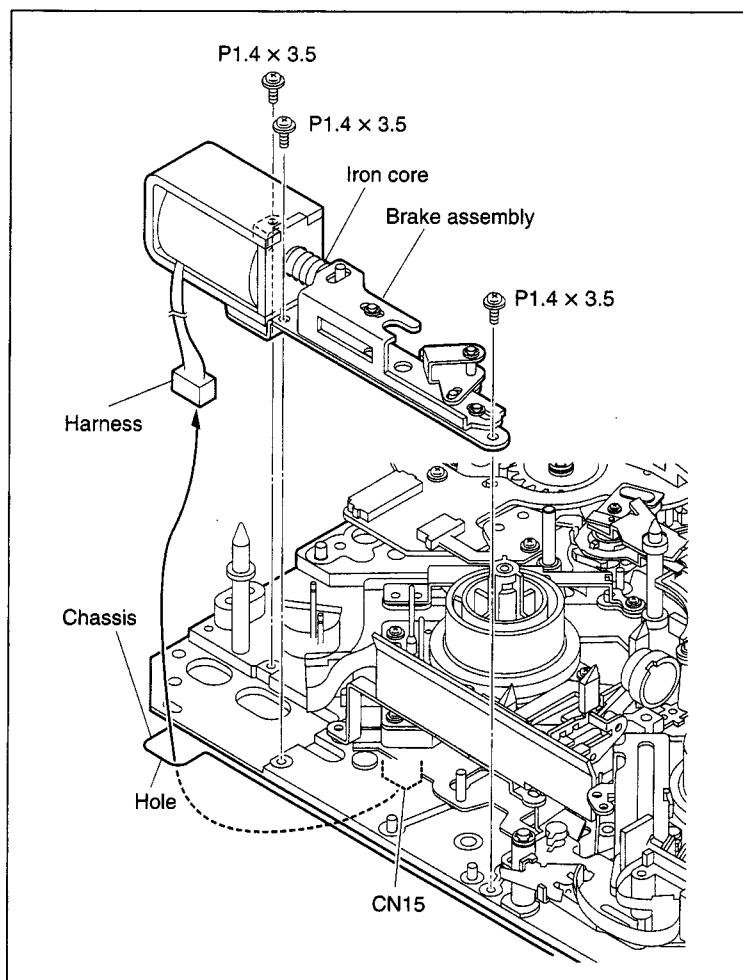


### 3. Replacing the brake solenoid

- (1) Remove the two screws and remove the solenoid from the brake base assembly.

#### Note


During this operation, the two washers come off together with the two screws, and further the compressed coil spring comes off from the iron core of the solenoid. Be careful not to lose them.

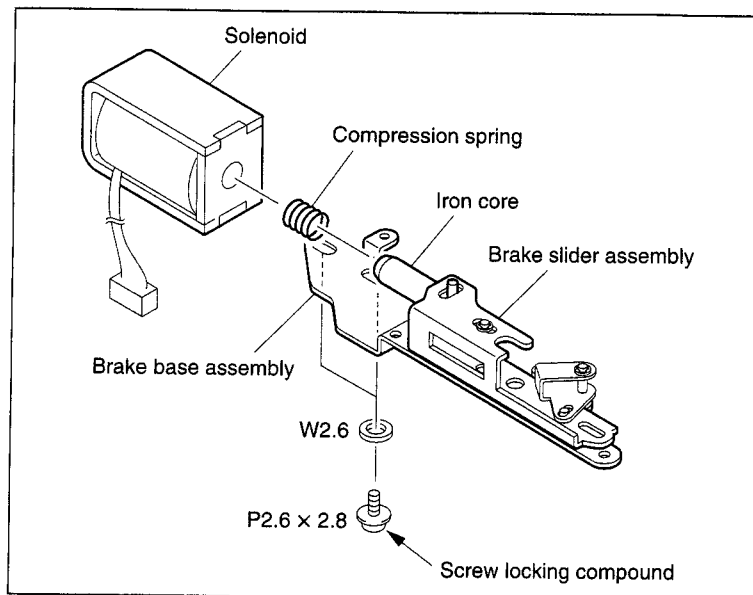

- (2) Remove the stop washer shown in the brake slider assembly figure.
- (3) Widen slightly the clearance shown in the brake slider assembly figure by a finger to remove the iron core of the solenoid.

#### Note


Applying an excessive force may cause deformation of the brake slider assembly.

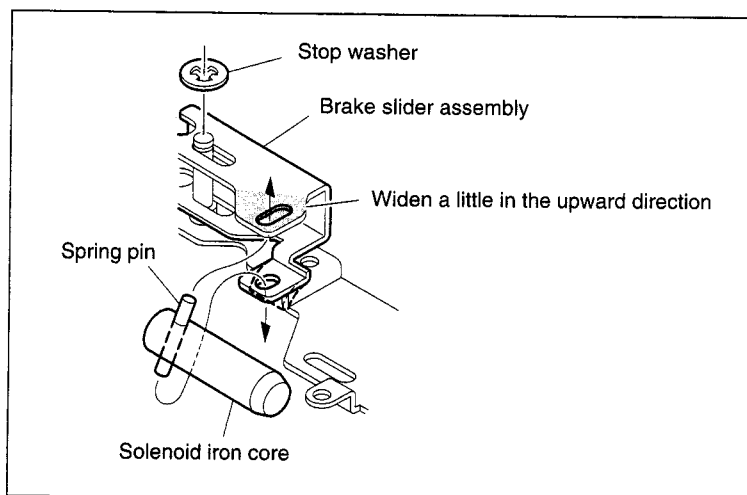

- (4) Reattach an iron core pin of a new solenoid to the brake slider assembly following the same step (3).
- (5) After fitting the compressed coil spring removed in step (1) on the iron core, insert the iron core in a new solenoid.
- (6) Fix temporally the solenoid positioning as shown in the figure to the brake base assembly with the two screws and two washers.
- (7) Ensure that the compressed coil spring is placed between the upper and lower plates of the brake slider assembly (within the double headed arrow) as shown in the figure.
- (8) Adjust the solenoid position to satisfy the specification of the clearance between the pin of the solenoid iron core and the slotted hole in the brake base assembly under the condition that the iron core is fully pulled in, and tighten securely the two screws. Then apply screw locking compound.

Tightening Torque : 0.5 N·m { 5 kgf·cm }

- (9) Reattach the brake slider assembly to the brake base assembly with a new stop washer.

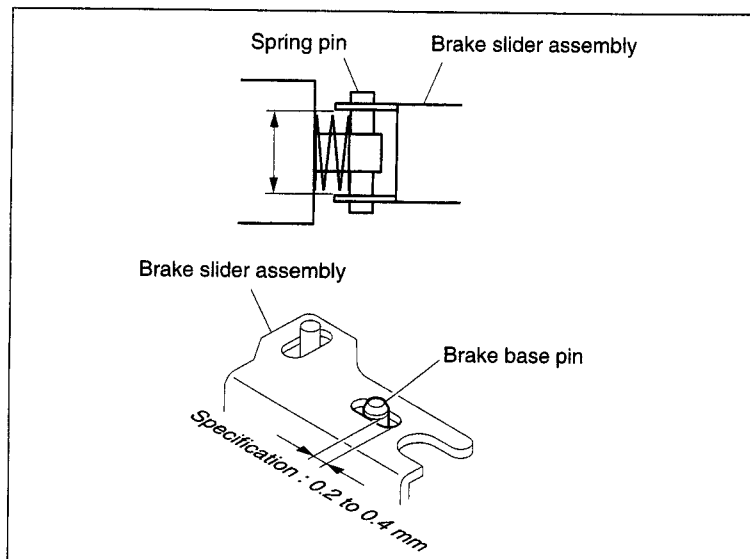

#### 4. Reattaching the brake assembly

- (1) Insert the harness of the brake assembly in a square hole on the left side of the chassis to bring it to the back side of the unit.
- (2) Fit the slotted hole shown in the brake assembly figure on the pin on the brake release plate and further more fit the hole and slotted hole in the brake base assembly on the two reference pins of the MD chassis respectively, and fix it with the three screws.


Tightening Torque : 0.1 N·m { 1 kgf·cm }

#### 5. Reconnecting the connector

- (1) Draw out the harness of the brake solenoid to bring it to the back side of the unit with tweezers.
- (2) Reconnect the harness to the connector (CN15) on the DR-428 board.

#### 6. Checking the performance

- (1) Power on the unit and press the ◀, **MENU** keys simultaneously to activate the maintenance menu.
- (2) Following the pop-up menu in the maintenance menu, enter SERVO CHECK, PLUNGER CHECK, REEL BRAKE in order and select REEL BRAKE.
- (3) Check that the brake solenoid ON/OFF switches smoothly by pressing the ▲, ▼ keys.

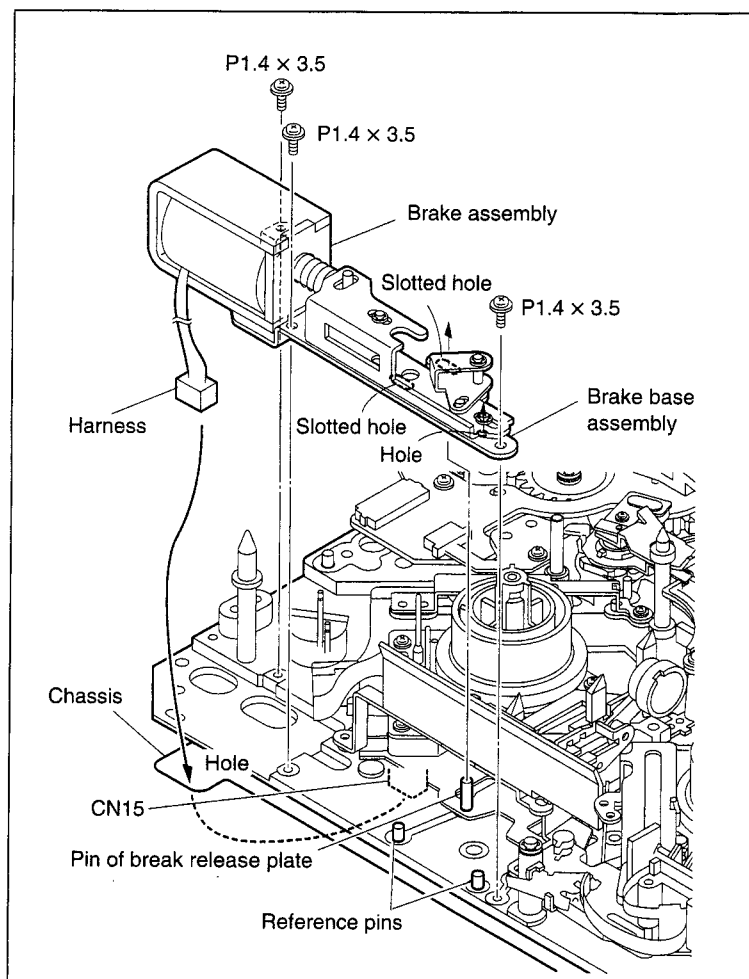

## 7-5. Pinch Roller Replacement

---

### Outline

#### Replacement

Removing the pinch limiter assembly.  
Reattaching the pinch limiter assembly.

#### Adjustment after replacement

Checking the tape path adjustment

---

### Note

- The pinch roller is a part of the pinch limiter assembly, therefore replace the pinch limiter assembly itself when the pinch roller needs to be replaced.
- Prepare a new stop washer when replacing the pinch roller assembly.  
Stop washer (1.5) : 3-669-465-01

---

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- |                                   |              |
|-----------------------------------|--------------|
| • Washer extracting fixture (A) : | J-6082-234-A |
| • Washer mounting fixture Ø1.5 :  | J-6082-231-A |
| • Cleaning cloth :                | 3-184-527-01 |
| • Cleaning fluid :                | 9-919-573-01 |
| • Grease (SG-941) :               | 7-662-001-39 |
| • Tweezers                        |              |



---

## Replacement

### 1. Removing the pinch limiter assembly


Remove the stop washer and remove the pinch limiter assembly.

#### **Note**

During this operation, if the compressed coil spring comes off together with the assembly, return the spring in place.

### 2. Reattaching the pinch limiter assembly

- (1) Wipe a pinch roller in a new pinch limiter assembly with a cleaning cloth moistened with cleaning fluid.
- (2) Wipe the shaft on the MD chassis with a cleaning cloth moistened with cleaning fluid.
- (3) Apply grease about the quarter size of a tip of a cotton swab, to two portions of the shaft marked in the figure.
- (4) Fit the hole in the pinch limiter assembly on the shaft on the MD chassis, while fitting the slotted hole in the pinch limiter assembly on the shaft on the pinch solenoid assembly, and fix it with a new stop washer (1.5).

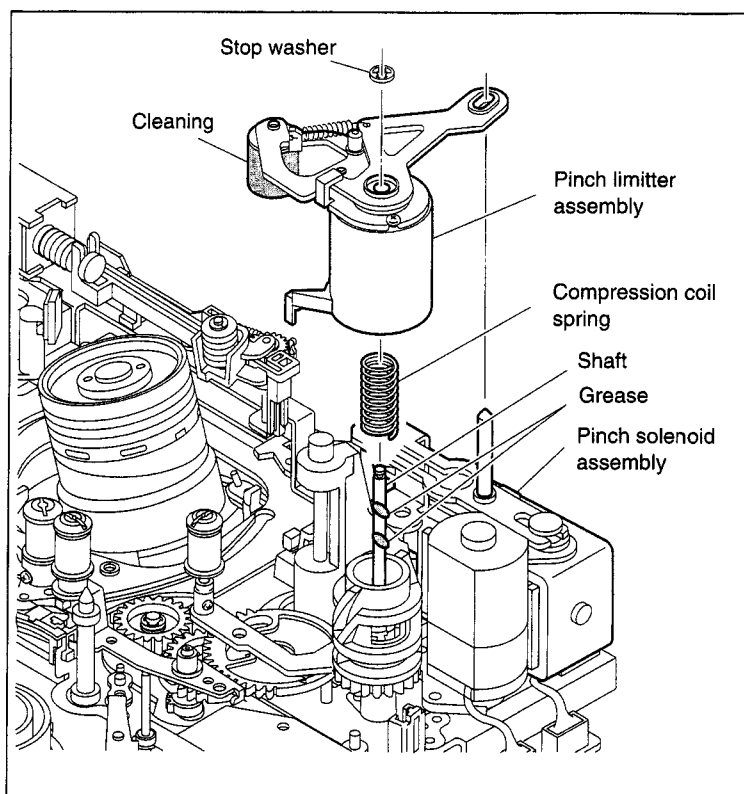

---

## Adjustment after Replacement

### 3. Checking the tape path adjustment

(Refer to Section 8-4.)

## 7-6. Elevator Cam Replacement

---

### Outline

#### Replacement

Removing the pinch limiter assembly  
Replacing the elevator cam  
Reattaching the pinch limiter assembly

#### Adjustment after replacement

Checking the tape path adjustment

---

### Note

Prepare two kinds of new stop washers when replacing the elevator cam.

Stop washer (1.5) : 3-669-465-01 × 1 (for mounting the pinch limiter assembly)

Stop washer (2.3) : 3-669-596-01 × 1 (for mounting the elevator cam)

---

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.5 : J-6082-231-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01
- Grease (SGL-941) : 7-662-001-39
- Tweezers

## Replacement

### 1. Removing the pinch limiter assembly

Remove the pinch limiter assembly.

(Refer to Section 7-5.)

### 2. Replacing the elevator cam

- (1) Lift off the compressed coil spring from the shaft on the MD chassis.
- (2) Remove the stop washer and remove the elevator cam.
- (3) Wipe the shaft on the MD chassis with a cleaning cloth moistened with cleaning fluid.
- (4) Fit the elevator cam on the shaft on the chassis with the intermittent portion of the elevator cam joined to the intermittent portion of the No.7 gear as shown in the figure.
- (5) Apply grease about the quarter size of a tip of a cotton swab, to two portions of the shaft shown in the figure.
- (6) Reattach the elevator cam with a new stop washer (2.3).
- (7) Fit the compressed coil spring on the shaft.

### 3. Reattaching the pinch limiter assembly


Reattach the pinch limiter assembly.

(Refer to Section 7-5.)

## Adjustment after Replacement

### 4. Checking the tape path adjustment.

(Refer to Section 8-4.)

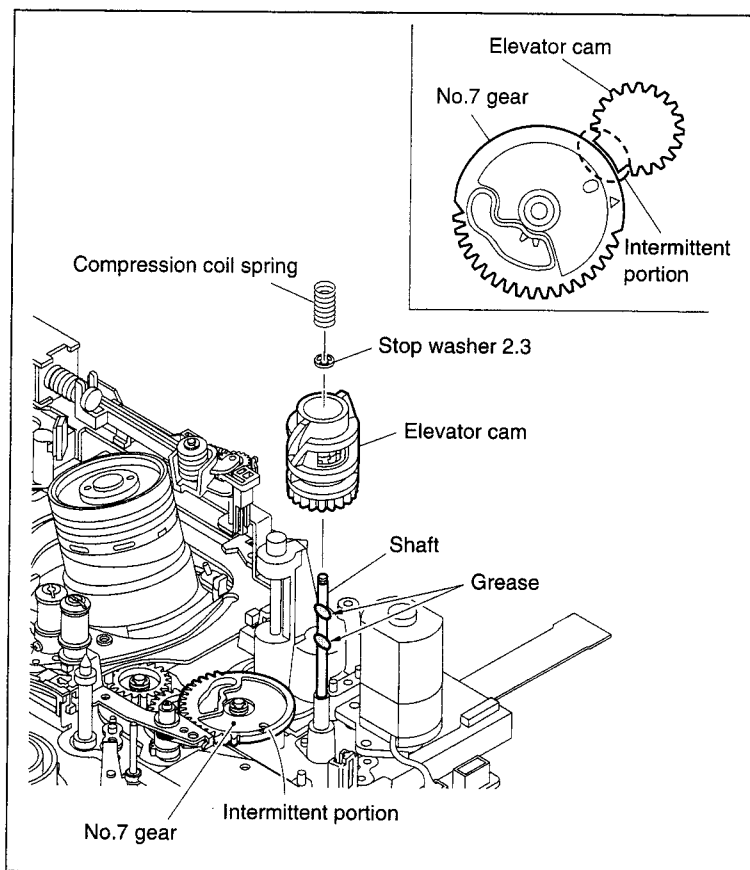

## 7-7. Pinch Solenoid Assembly Replacement

---

### Outline

#### Replacement

Removing the pinch limiter assembly.  
Disconnecting the connector.  
Replacing the pinch solenoid assembly.  
Reconnecting the connector.  
Reattaching the pinch limiter assembly.

#### Adjustment after replacement

Checking the tape path adjustment

---

### Note

Without removal/reattachment of the pinch limiter assembly, the pinch solenoid assembly cannot be replaced.

Therefore prepare a new stop washer for replacing the pinch limiter assembly.

Stop washer (1.5) : 3-669-465-01 × 1

---

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.5 : J-6082-231-A
- Tweezers

---

## Replacement

### 1. Removing the pinch limiter assembly

Remove the pinch limiter assembly.

(Refer to Section 7-5.)


### 2. Disconnecting the connectors

Disconnect the harness from the connector (CN20) on the DR-428 board with tweezers.

### 3. Replacing the pinch solenoid assembly

- (1) Remove the two screws with the pinch slider assembly drawn into the arrow direction and lift off the pinch solenoid assembly.
- (2) Align two holes in a new pinch solenoid assembly with the two positioning pins on the MD chassis respectively.
- (3) Reattach the pinch solenoid utilizing the two screws with the pinch slider assembly drawn in the arrow direction.

Tightening Torque : 0.1 N·m { 1 kgf·cm }

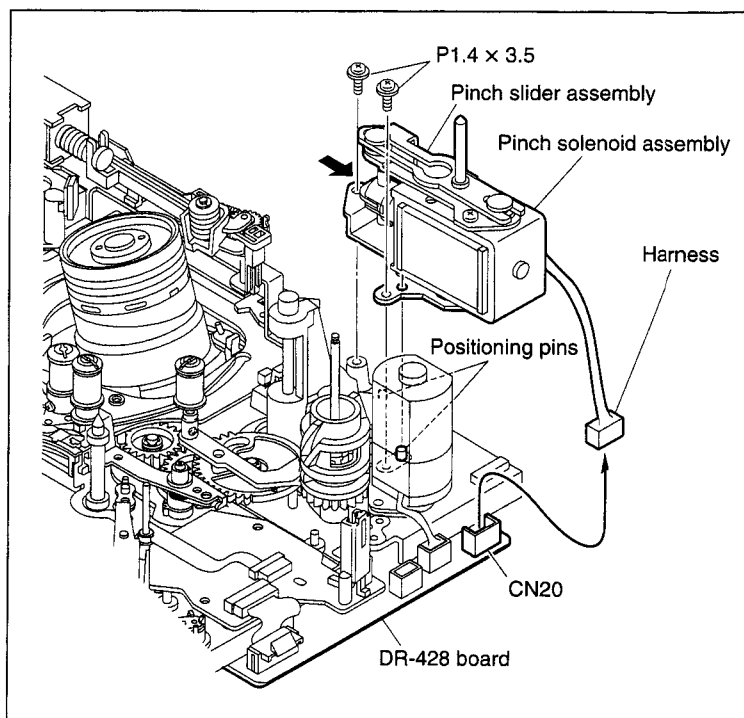

### 4. Reconnecting the connector

Reconnect the harness to the connector (CN20) on the DR-428 board with tweezers.

### 5. Reattaching the pinch limiter assembly

Reattach the pinch limiter assembly.

(Refer to Section 7-5.)

---

## Adjustment after Replacement

### 6. Checking the tape path adjustment

(Refer to Section 8-4.)

## 7-8. Reel Motor (T) Assembly Replacement

---

### Outline

#### Replacement

Disconnecting the connector  
Moving the S/T reel tables  
Removing the L push plate  
Removing the MIC assembly  
Removing the RMP (T1) retainer assembly  
Replacing the reel motor (T) assembly  
Reattaching the RMP (T1) retainer assembly  
Reattaching the MIC assembly  
Reattaching the L push plate  
Reconnecting the connector  
Checking the performance

#### Adjustment after replacement

T-REEL ONLY adjustment  
TENSION adjustment  
Tape path adjustment

---

### Note

Without removal/reattachment of the MIC assembly, the reel motor (T) assembly cannot be replaced. Prepare a new stop washer when reattaching the MIC assembly.

Stop washer (1.5) : 3-669-465-01 × 1

Use care not to lose the polyethylene washer between the base plate and the MIC assembly.

---

### Preparation

1. After setting the standard cassette position, set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

## Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver's bit (for M2) : J-6325-380-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.5 : J-6082-231-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01

## Replacement

### 1. Disconnecting the connector

Disconnect the flexible card wire from the connector (CN17) on the DR-428 board located on the back side of the MD chassis.

### 2. Moving the S/T reel tables

Turn the reel shift motor gear by a skewer and bring the S/T reel tables to the standard cassette position. (Refer to Section 7-19.)

### 3. Removing the L push plate



Remove the L push plate. (Refer to Section 7-3.)

### 4. Removing the MIC assembly

Remove the MIC assembly.  
(Refer to Section 7-19.)

### 5. Removing the RMP (T1) retainer assembly

- (1) Remove the screw (a) with the T-drawer arm assembly drawn lightly in the arrow direction.
- (2) Remove the screw (b) and remove the RMP (T1) retainer assembly.

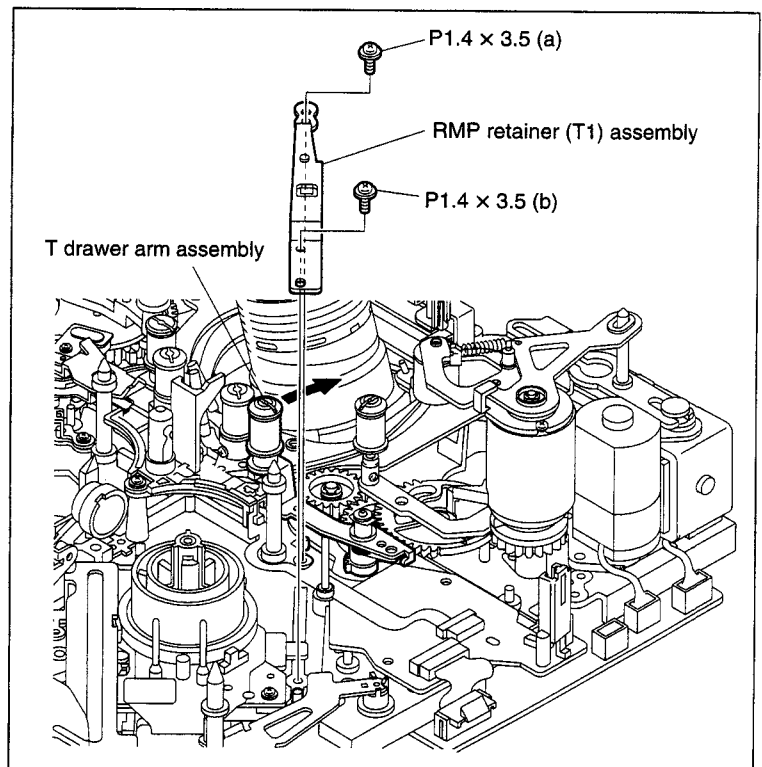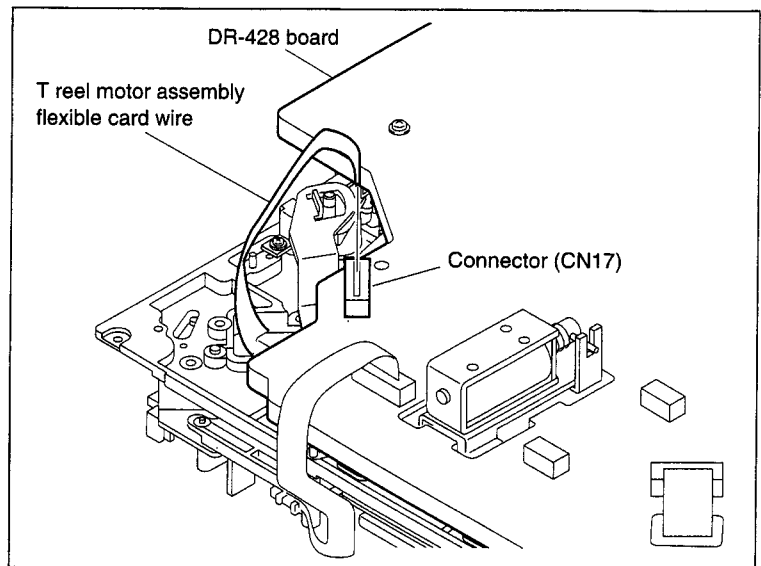

## 6. Replacing the reel motor (T) assembly


- (1) Remove the two screws (a), (b) securing the slide shaft and remove the reel motor (T) assembly.
- (2) Extract the slide shaft from the reel motor (T) assembly.
- (3) Wipe the shaded portion in the figure with a cleaning cloth moistened with cleaning fluid.
- (4) Apply grease about the quarter size of a tip of a cotton swab, to the center of the shaded portion.
- (5) Wipe the slide shaft with dry cloth such as gauze, and then insert it in a hole of a new reel motor T assembly.

### Note

Use extreme care not to scratch the shaft and hole during extracting and inserting operation.

- (6) Insert a shaft located on the back side of the reel motor (T) assembly in the slot in the RS plate assembly.
- (7) Insert the flexible card wire in the square hole in the MD chassis.
- (8) Tighten the screw (a) and next (b) to reattach the slide shaft.

Tightening Torque : 0.1 N·m { 1 kgf·cm }

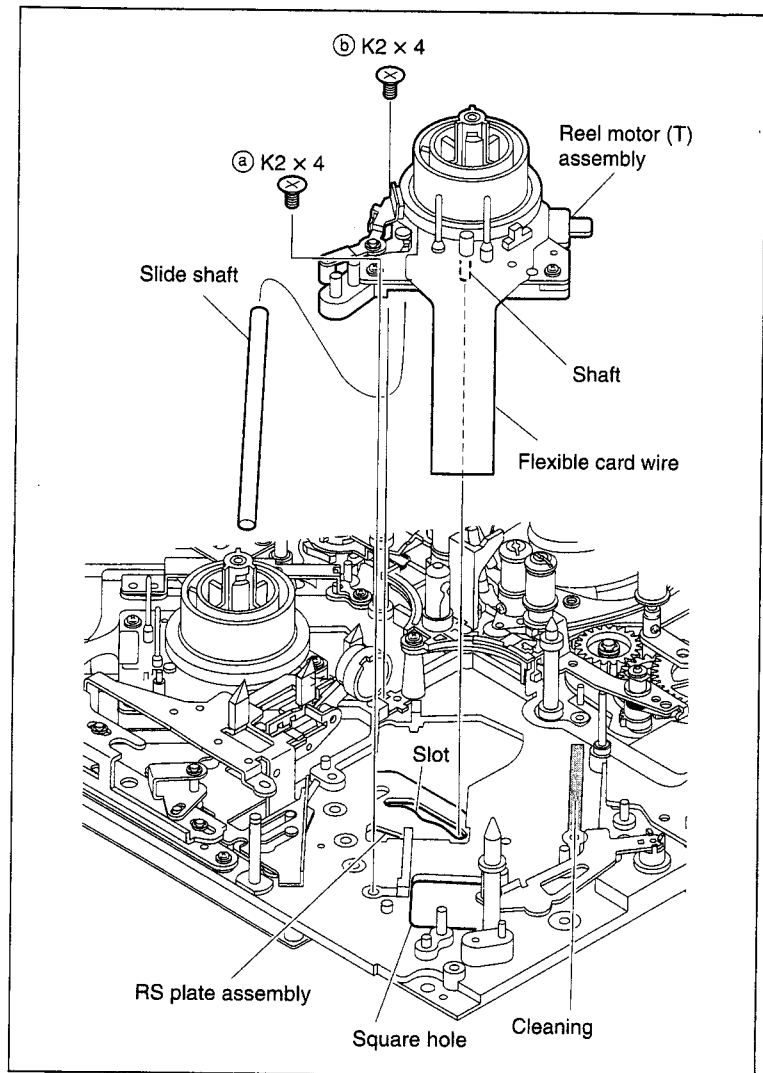



### 7. Reattaching the RMP (T1) retainer assembly

- (1) Fit the two positioning holes in the RMP (T1) retainer assembly on the two positioning pins on the MD chassis.
- (2) Tighten the two screws to fix the RMP (T1) retainer assembly while drawing lightly the T drawer arm assembly in the arrow direction.

### 8. Reattaching the MIC assembly

Reattach the MIC assembly.

(Refer to Section 7-19.)

### 9. Reattaching the L push plate

Reattach the L push plate. (Refer to Section 7-3.)

### 10. Reconnecting the connector

Reconnect the flexible card wire to the connector (CN17) on the DR-428 board located on the back side of the MD chassis.

#### Notes

- Be careful not to insert the flexible card wire obliquely.
- Do insert the flexible card wire straight and securely as far as it will go.
- Take care not to fold the flexible card wire.  
This shortens the life of the flexible card wire.

### 11. Checking the performance

Check the S/T reel tables move smoothly by turning the reel shift motor gear by a skewer.

## Adjustment after Replacement

### 12. T-REEL ONLY adjustment


(Refer to Section 5-3-4.)

### 13. TENSION adjustment

(Refer to Section 5-3-4.)

### 14. Tape path adjustment

(Refer to Section 8-2.)

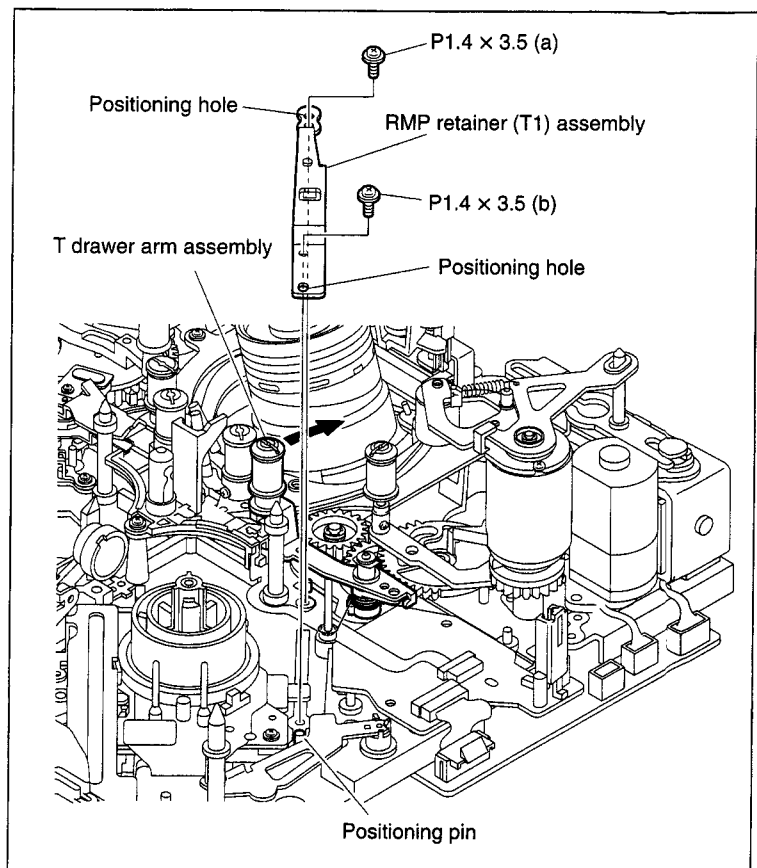

## 7-9. Reel Motor (S) Assembly Replacement

---

### Outline

#### Replacement

Disconnecting the connector

Moving the S/T reel tables

Removing the RMP (S1) retainer assembly

Replacing the reel motor (S) assembly

Reattaching the RMP (S1) retainer assembly

Reconnecting the connector

Checking the performance

#### Adjustment after replacement

S-RELL ONLY adjustment

TENSION adjustment

Tape path adjustment

---

### Preparation

1. After setting the unit to the standard cassette position, set it to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver's bit (for M2) : J-6325-380-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01


## Replacement

### 1. Disconnecting the connector

Disconnect the flexible card wire from the connector (CN14) on the DR-428 board located on the back side of the MD chassis.


### 2. Moving the S/T reel tables

Turn the reel shift motor gear by a skewer and bring the S/T reel tables to the standard cassette position. (Refer to Section 7-19.)

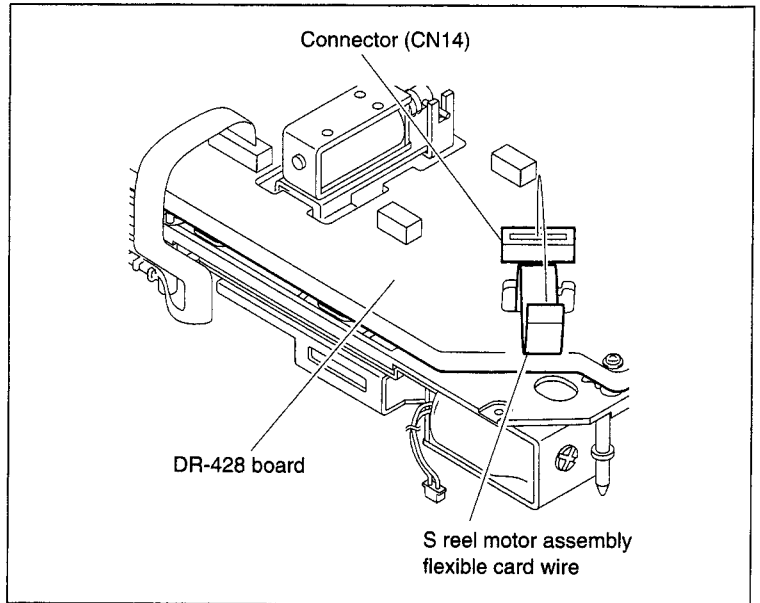

### 3. Removing the RMP (S1) retainer assembly

- (1) Remove the screw (a) with the S tension regulator arm assembly drawn lightly in the arrow direction.
- (2) Remove the screw (b), then remove the RMP (S1) retainer assembly.

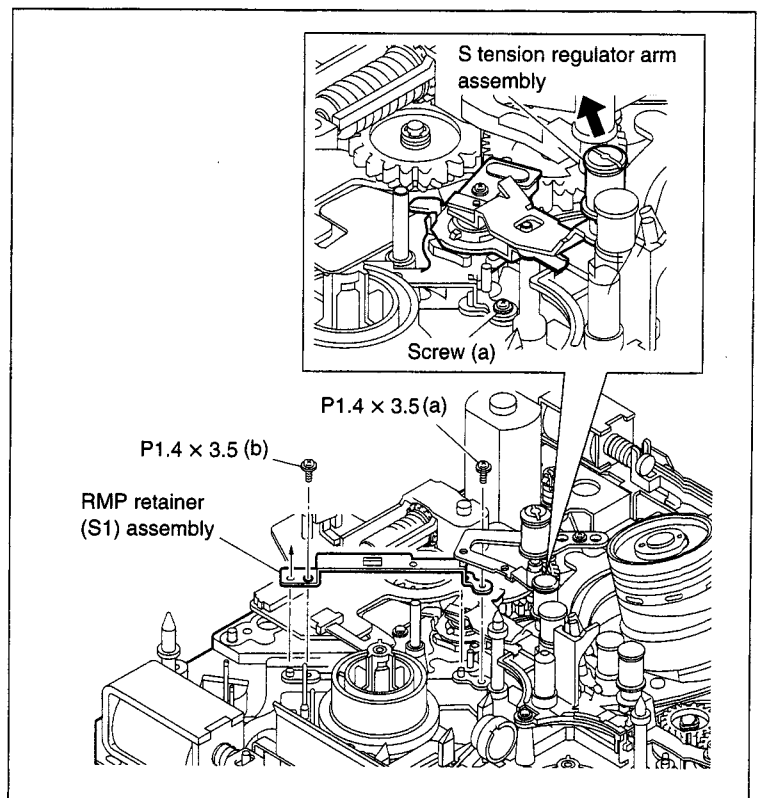

#### 4. Replacing the reel motor (S) assembly


- (1) Remove the two screws (a), (b) securing the slide shaft and remove the reel motor (S) assembly.
- (2) Extract the slide shaft from the reel motor (S) assembly.
- (3) Wipe the shaded portion in the figure with a cleaning cloth moistened with cleaning fluid.
- (4) Apply grease about the quarter size of a tip of a cotton swab, to the center of the shaded portion.
- (5) Wipe the slide shaft with dry cloth such as gauze, and then insert it in a hole of a new reel motor S assembly.

##### Note

Use extreme care not to scratch the shaft and hole during extracting and inserting operation.

- (6) Insert a shaft located on the back side of the reel motor (S) assembly in the slot in the RS plate assembly.
- (7) Insert the flexible card wire in the square hole in the MD chassis.
- (8) Tighten the screw (a) and next (b) to reattach the slide shaft.

Tightening Torque : 0.1 N·m {1 kgf·cm}

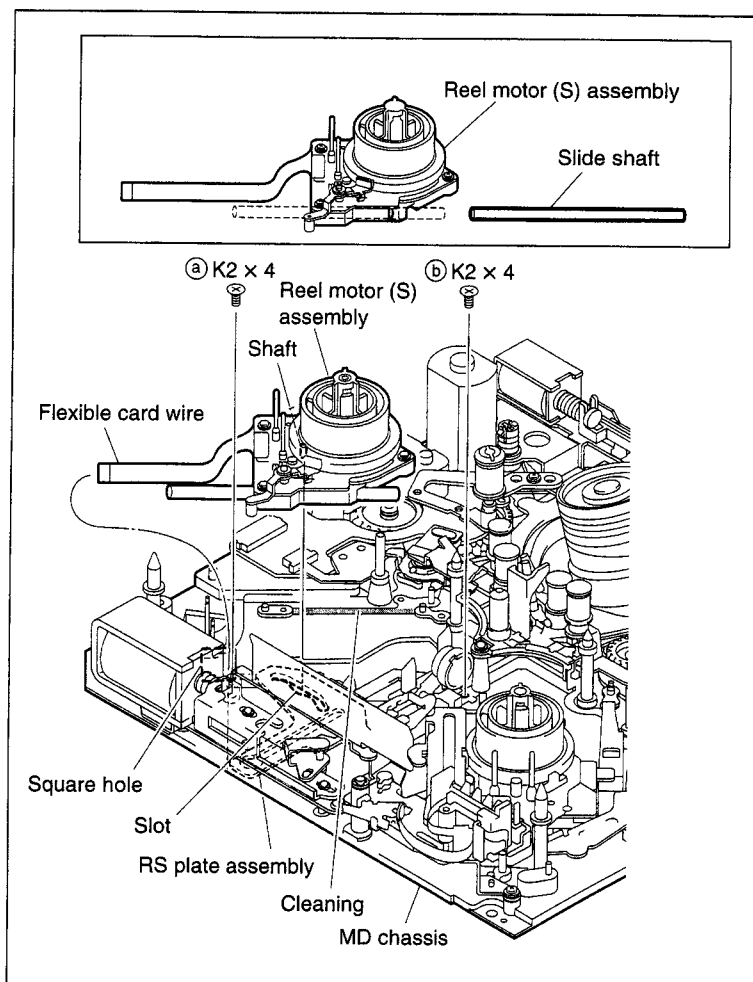

### 5. Reattaching the RMP (S1) retainer assembly

- (1) Fit the two positioning holes in the RMP (S1) retainer assembly on the two positioning pins on the MD chassis.
- (2) Tighten the two screws to fix the RMP (S1) retainer assembly while drawing lightly the S tension regulator arm assembly in the arrow direction.

### 6. Reconnecting the connector

Reconnect the flexible card wire to the connector (CN14) on the DR-428 board located on the back side of the MD chassis.

#### Notes

- Be careful not to insert the flexible card wire obliquely.
- Do insert the flexible card wire straight and securely as far as it will go.
- Take care not to fold the flexible card wire.  
This shortens the life of the flexible card wire.

### 7. Checking the performance

Check the S/T reel tables move smoothly by turning the reel shift motor gear by a skewer.

## Adjustment after Replacement

### 8. S-REEL ONLY alignment


(Refer to Section 5-3-4.)

### 9. TENSION alignment

(Refer to Section 5-3-4.)

### 10. Tape path adjustment

(Refer to Section 8-2.)

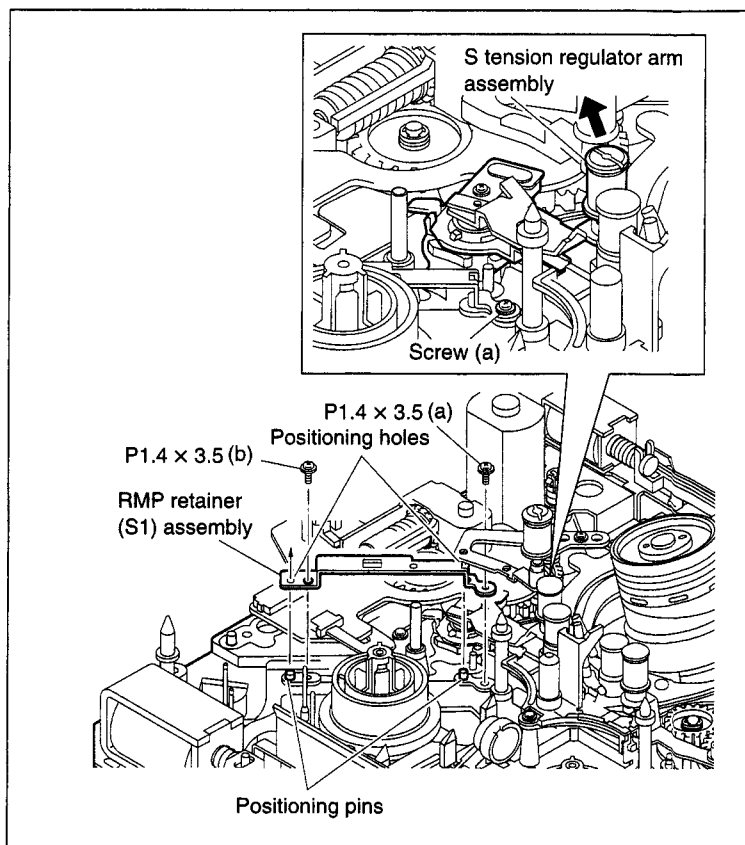

## 7-10. M Stop Solenoid Assembly Replacement

---

### Outline

#### Replacement

Removing the stopper driving plate (M) assembly

Replacing the M stop solenoid assembly

Reattaching the stopper driving plate (M) assembly

---

#### Preparation

1. Set the unit to the unthreading end status.
  2. Power off the unit.
- 


#### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver's bit (for M2) : J-6325-380-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Screw locking compound : 7-432-114-11

## Replacement


### 1. Removing the stopper driving plate (M) assembly

- (1) Disconnect the harness of the M stop solenoid assembly from the connector (CN13) on the DR-428 board.
- (2) Remove the two screws and remove the stopper driving plate (M) assembly.

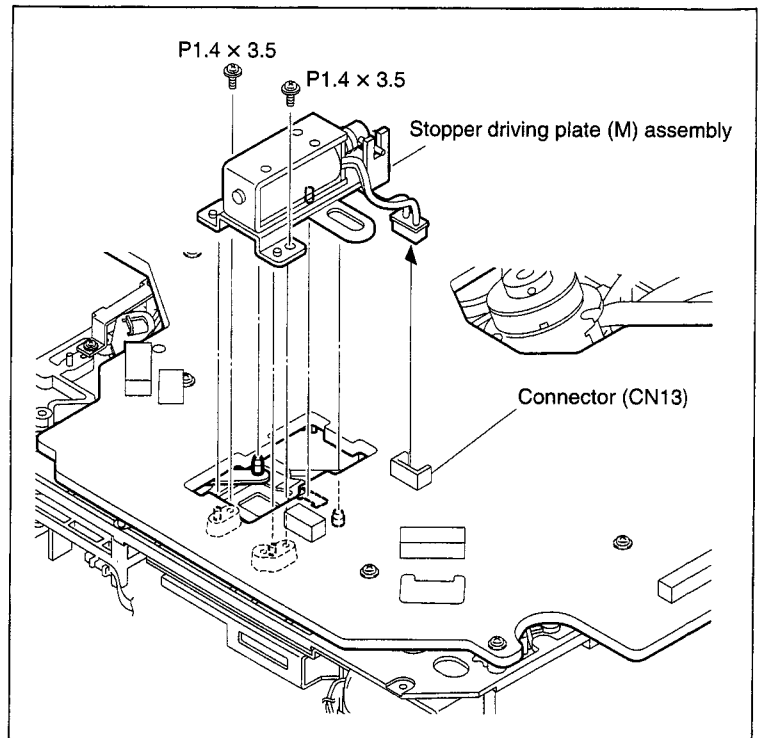

### 2. Replacing the M stop solenoid assembly


- (1) Remove the two screws to remove the stopper driving plate (M) assembly.
- (2) Remove the two screws to remove the plunger solenoid from the stroke limiter plate.
- (3) Extract the compressed coil spring from the iron core of the plunger solenoid removed in step (2) and fit the spring on a new solenoid iron core.

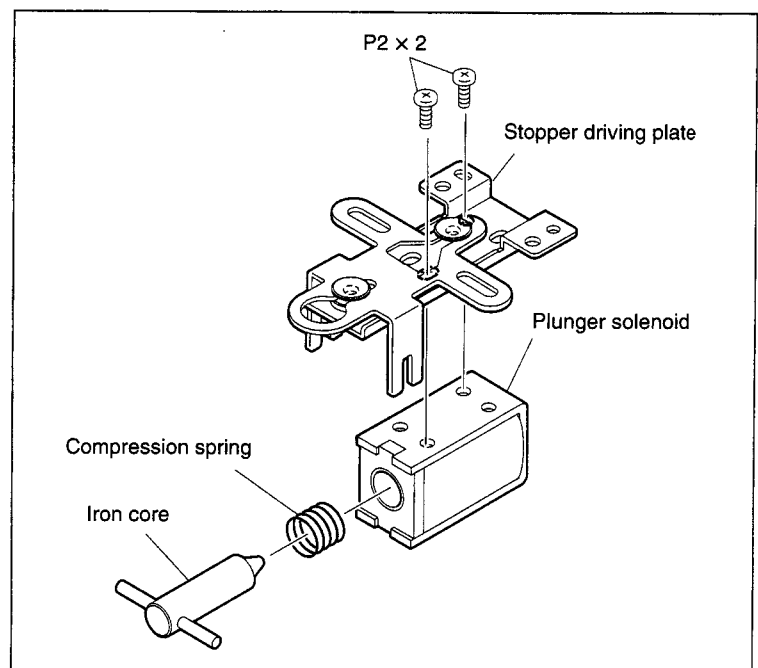


- (4) Temporally fix the new plunger solenoid to the stroke limiter plate with the two screws.
- (5) Adjust the clearance between the pin of the plunger solenoid and the stroke limiter plate as shown in the figure to meet the specification below, and tighten the two screws securely. After tightening, apply screw locking compound.

Tightening Torque :  $0.2 \text{ N}\cdot\text{m}$  {  $2 \text{ kgf}\cdot\text{cm}$  }

Specification :  $3 \pm 0.1 \text{ mm}$

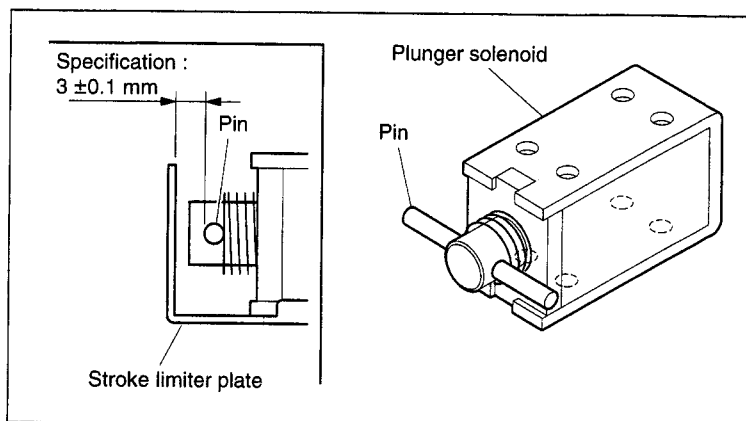

- (6) Fit the two notches of the stopper driving plate on both ends of the iron-core pin, then reattach the stopper driving plate to the plunger solenoid by the two screws.
- (7) Ensure the stopper driving plate returns to the original position after being pressed in the arrow direction and released.

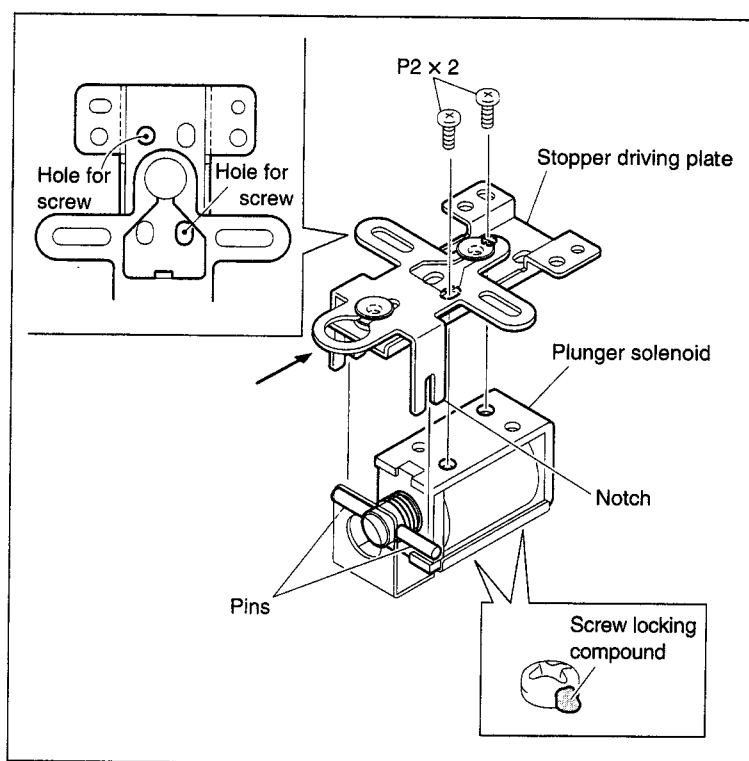




### 3. Reattaching the stopper driving plate (M) assembly

- (1) Move the shaft b on the M stopper (T) assembly and the shaft c on the M stopper (S) assembly toward the drum by a finger.
- (2) Insert the shaft located on the back side of the stopper driving plate (M) assembly in the slotted hole in the MIC drive (M) assembly. Fit the two slotted holes in the stopper driving plate (M) assembly shown in the figure on the shafts on M stopper (T) and (S) assemblies, and then fix it on the MD chassis with the two screws.

Tightening Torque :  $0.1 \text{ N}\cdot\text{m}$  {  $1 \text{ kgf}\cdot\text{cm}$  }

- (3) Ensure that the M stopper (T) and (S) assemblies and MIC drive (M) assembly move smoothly with the iron core of the solenoid drawn in the pulled-in direction.
- (4) Reconnect the harness of the M stop solenoid to the connector (CN13) on the DR-428 board.

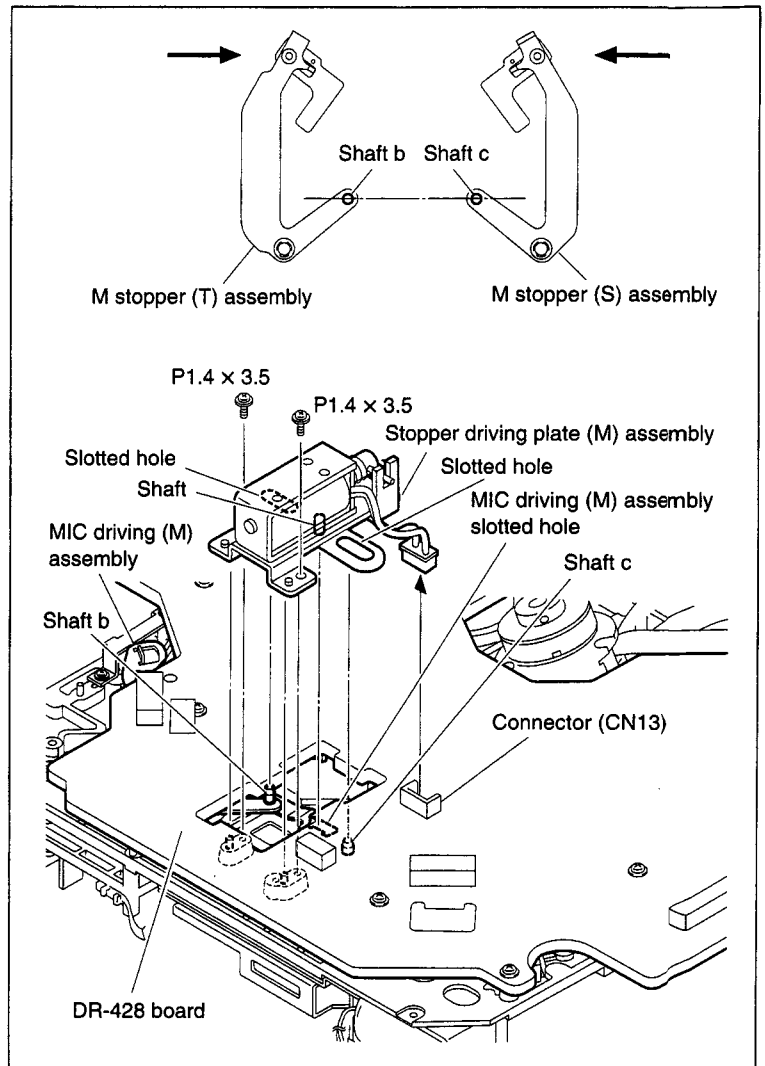

## 7-11. S Tension Regulator Assembly Replacement

---

### Outline

#### Replacement

Removing the TG1 arm assembly  
Removing the loading motor assembly  
Removing the SE-521 board  
Replacing the S tension regulator assembly  
Reattaching the SE-521 board  
Reattaching the loading motor assembly  
Reattaching the TG1 arm assembly  
Cleaning the tape guide

#### Adjustment after replacement

TENSION adjustment  
Tape path adjustment

---

### Notes

Use extreme care not to scratch the drum when replacing the S tension regulator assembly.

Never loosen the screw shown in the figure. If the screw is loosened, replace the S tension regulator with a new one.

---


### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- Torque driver's bit (for M1.4) : J-6325-110-A
- Torque driver (for 3 kgf•cm) : J-6325-400-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01
- Tweezers

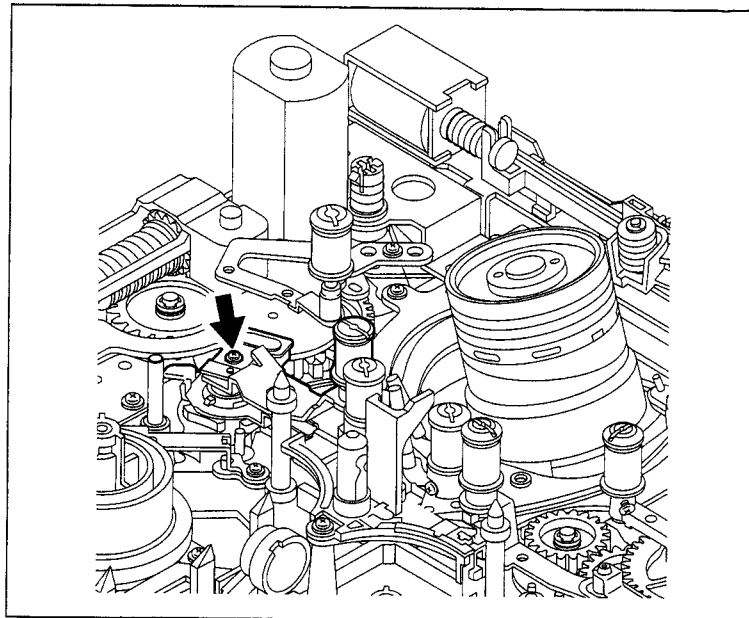

## Replacement

### 1. Removing the TG1 arm assembly

Remove the TG1 arm assembly.

(Refer to Section 7-13.)

### 2. Removing the loading motor assembly

Remove the loading motor assembly.


(Refer to Section 7-17.)

### 3. Removing the SE-521 board

- (1) Disconnect the flexible card wire from the connector (CN3) on the SE-521 board.
- (2) Disconnect the flexible card wire from the connector (CN4) on the SE-521 board.
- (3) Remove the screw and remove the SE-521 board.


#### Note

Use care about the claw of the worm holder.

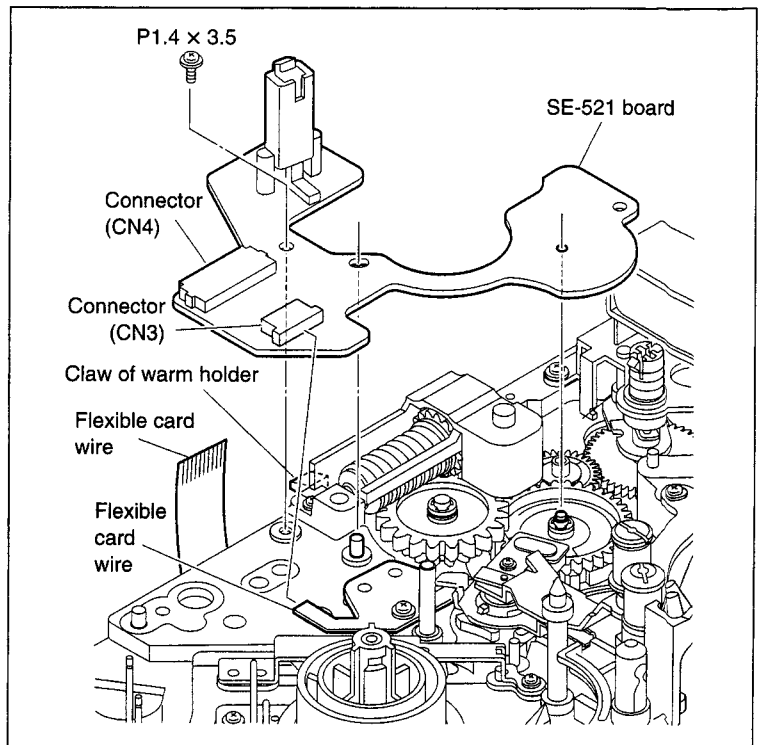

### 4. Replacing the S tension regulator assembly

- (1) Remove the S tension regulator assembly by removing the two screws.
- (2) Turn the manual eject cover clockwise until No.3 gear comes to the position shown in the figure.
- (3) Engage a gear on a new S tension regulator assembly with No.3 gear as shown in the figure, and align the notch of the S tension regulator with the positioning pin on the chassis, then attach the new assembly to the chassis with the screw (a).
- (4) Turn the manual eject cover counterclockwise to bring to the unthreading end position.
- (5) Reattach the S tension regulator assembly to the MD chassis with the screw (b).
- (6) Turn the manual eject cover clockwise to enter the threading condition. At this operation, check the two points below.  
The spring of the S tension regulator assembly shown in the figure do not contact the post of No.3 gear.  
The column pushes the spring under unthreading end status.  
Unless satisfy these conditions, perform the step (2) and after.
- (7) Turn the manual eject cover counterclockwise to bring to the unthreading end position.

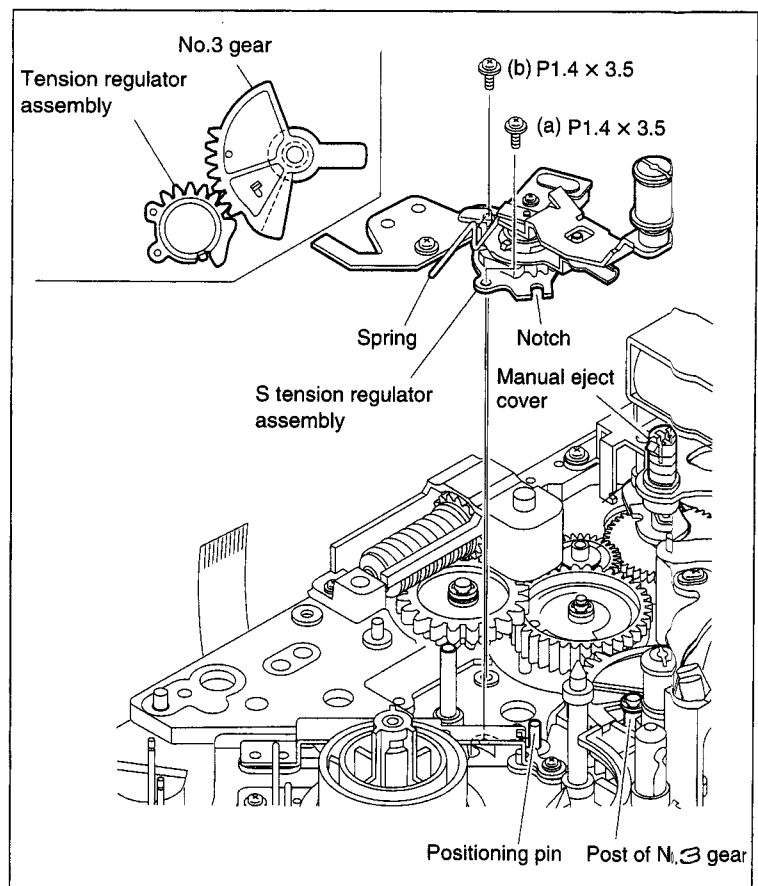

### 5. Reattaching the SE-521 board

- (1) Fit the hole and slotted hole on the SE-521 board on the two shafts on the MD chassis respectively and fix it with the screw.

#### Notes

- At this operation, be careful not to pinch the tip of the flexible card wire of the S tension regulator assembly between the SE-521 board and the chassis.
  - Insert the SE-521 board under the claw of the worm holder.
- (2) Reconnect the flexible card wire to the connector (CN4) on the SE-521 board.
  - (3) Reconnect the flexible card wire of the S tension regulator assembly to the connector (CN3) on the SE-521 board.

### 6. Reattaching the loading motor assembly

Reattach the loading motor assembly.  
(Refer to Section 7-17.)

### 7. Reattaching the TG1 arm assembly

Reattach the TG1 arm assembly.  
(Refer to Section 7-13.)

### 8. Cleaning the tape guide

Wipe the tape guides of the S tension regulator and the TG1 arm assemblies with a cleaning cloth moistened with cleaning fluid.

---


## Adjustment after Replacement

### 9. TENSION adjustment

(Refer to Section 5-3-4.)

### 10. Tape path adjustment

(Refer to Section 8-2.)

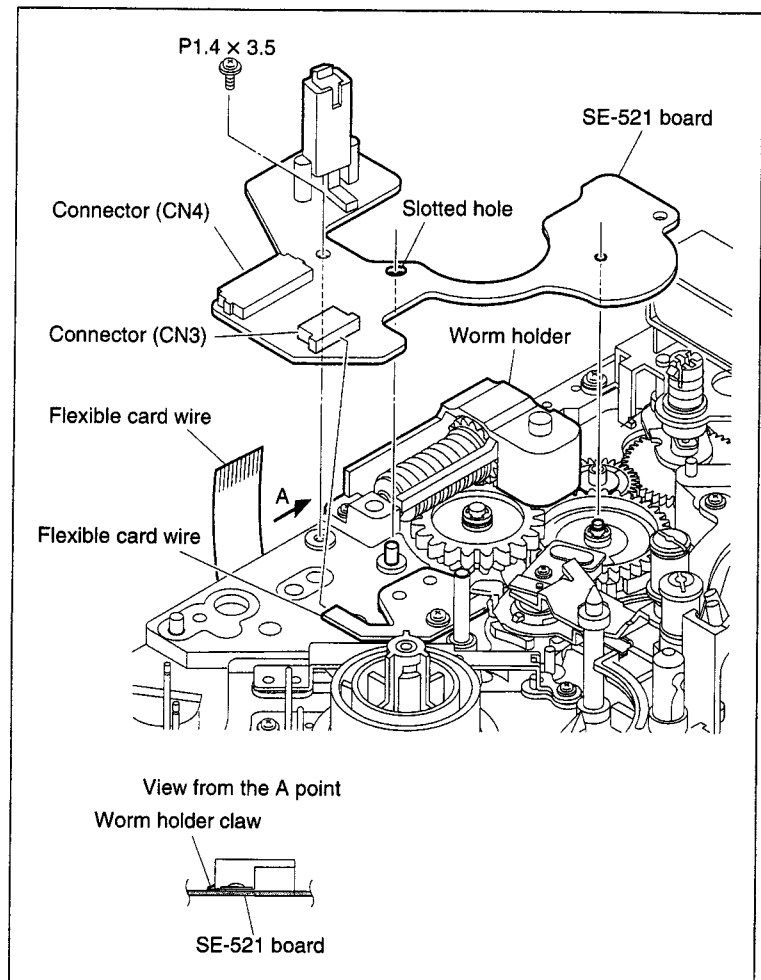

## 7-12. T Drawer Arm Assembly Replacement

---

### Outline

#### Replacement

Removing the T drawer arm assembly  
Checking the mounting position of the T gear  
Reattaching the T drawer arm assembly  
Cleaning the tape guide

#### Adjustment after replacement

Checking the tape path adjustment

---

### Note

Use extreme care not to scratch the drum when replacing the T drawer arm assembly.

---

### Preparation

1. Let the unit into the unthreading position.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---


### Tools

- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01
- Tweezers

## Replacement

### 1. Removing the T drawer arm assembly

- (1) Remove the stop washer from the shaft on the MD chassis and remove the T drawer arm assembly.
- (2) Remove the portion "a" of the T spring shown in the figure from the notch in the T drawer arm assembly with tweezers.
- (3) Remove the T drawer arm assembly.

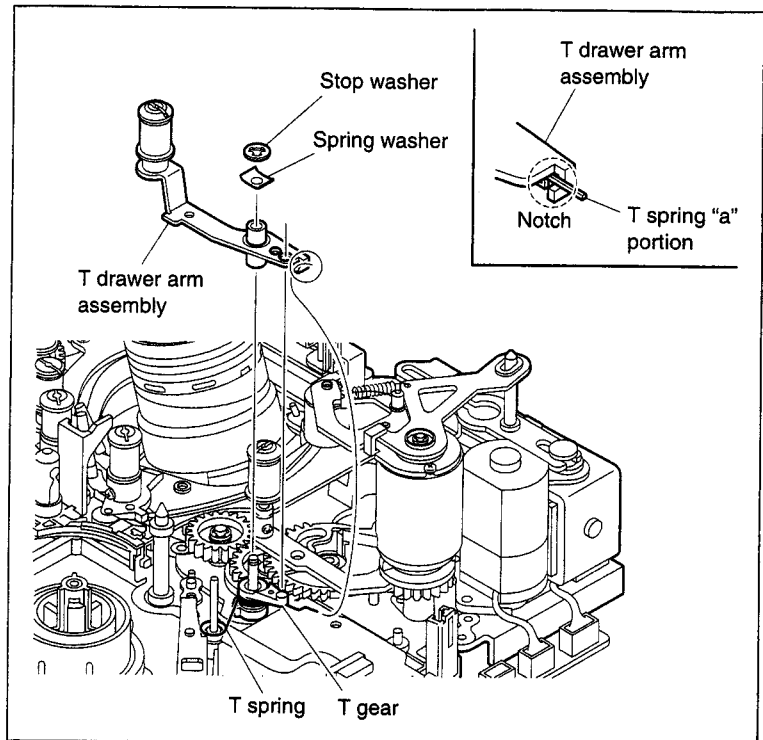

### 2. Checking the mounting position of the T gear

Check that the engagement between the T gear and No. 6 gear is in the position shown in the figure.

### 3. Reattaching the T drawer arm assembly

- (1) Apply grease of 1/3 size of a rice grain to the shaft on the MD chassis.
- (2) Fit a new T drawer arm assembly on the shaft and fit the hole in the T drawer arm assembly on the protrusion on the T gear.
- (3) Hook again the portion "a" of the T spring unhooked in step 1- (2) on the notch in the T drawer arm assembly with tweezers.
- (4) Fit the spring washer on the shaft on the MD chassis and fix it with the stop washer.


### 4. Cleaning the tape guide

Wipe the tape guide on the T drawer arm assembly with a cleaning cloth moistened with cleaning fluid.

## Adjustment after Cleaning

### 5. Checking the tape path adjustment

(Refer to Section 8-4.)

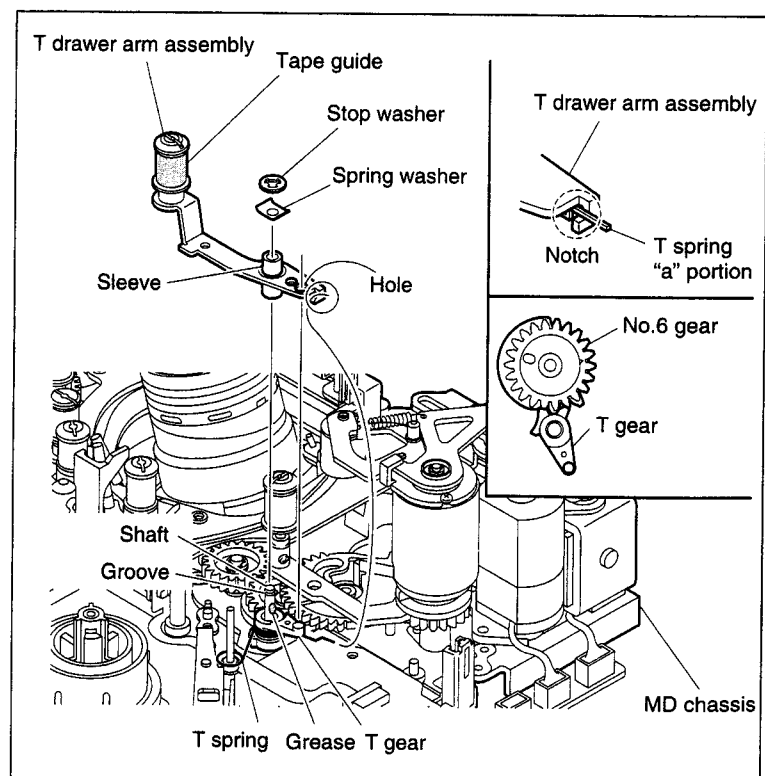

## 7-13. TG1 Arm Assembly Replacement

---

### Outline

#### Replacement

Replacing the TG1 arm assembly

Cleaning the tape guide

#### Adjustment after replacement

TENSION adjustment

Checking the tape path adjustment

---

### Note

Do avoid touching with bare hands to the tape cleaner a part of in TG1 arm assembly. Sharpness of the edge on the tape cleaner may cause a hand cut, therefore use extreme care when replacing the TG1 arm assembly.

---

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01

---

## Replacement

### 1. Replacing the TG1 arm assembly

- (1) Remove the screw and remove the TG1 arm assembly from the MD chassis.
- (2) Fit two holes in a new TG1 arm assembly on the two pins on the MD chassis respectively and fix the assembly with the screw.

Tightening Torque : 0.1 N•m {1 kgf•cm}

### 2. Cleaning the tape guide

Wipe the tape guide on the TG1 arm assembly with a cleaning cloth moistened with cleaning fluid.

---


## Adjustment after Replacement

### 3. TENSION adjustment

(Refer to Section 5-3-4.)

### 4. Checking the tape path adjustment

(Refer to Section 8-4.)

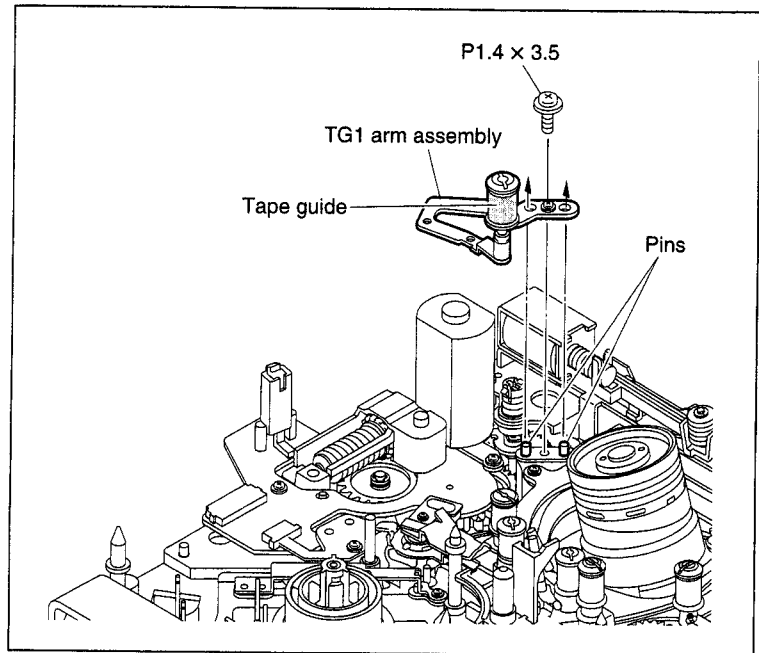



## 7-14. TG8 Arm Assembly Replacement

---

### Outline

#### Replacement

Replacing the TG8 arm assembly

Cleaning the tape guide

#### Adjustment after replacement

Checking the tape path adjustment

---

### Preparation

1. Set the unit to the unthreading end status.
  2. Power off the unit.
  3. Remove the top panel. (Refer to Section 3-3.)
  4. Remove the cassette compartment. (Refer to Section 3-4.)
- 

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.5 : J-6082-231-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01
- Tweezers

---

## Replacement

### 1. Replacing the TG8 arm assembly

- (1) Insert a torque screwdriver through the square hole of the pinch limiter assembly to access the screw securing TG8 arm assembly. Remove the screw to remove the TG8 arm assembly.
- (2) Fit a hole and a slotted hole in a new TG8 arm assembly on the two pins on the MD chassis and fix it with the screw.  
Tightening Torque : 0.1 N•m { 1 kgf•cm }

### 2. Cleaning the tape guide


Wipe the tape guide on the TG8 arm assembly with a cleaning cloth moistened with cleaning fluid.

---

## Adjustment after Replacement

### 3. Adjustment after replacement

Checking the tape path adjustment  
(Refer to Section 8-4.)

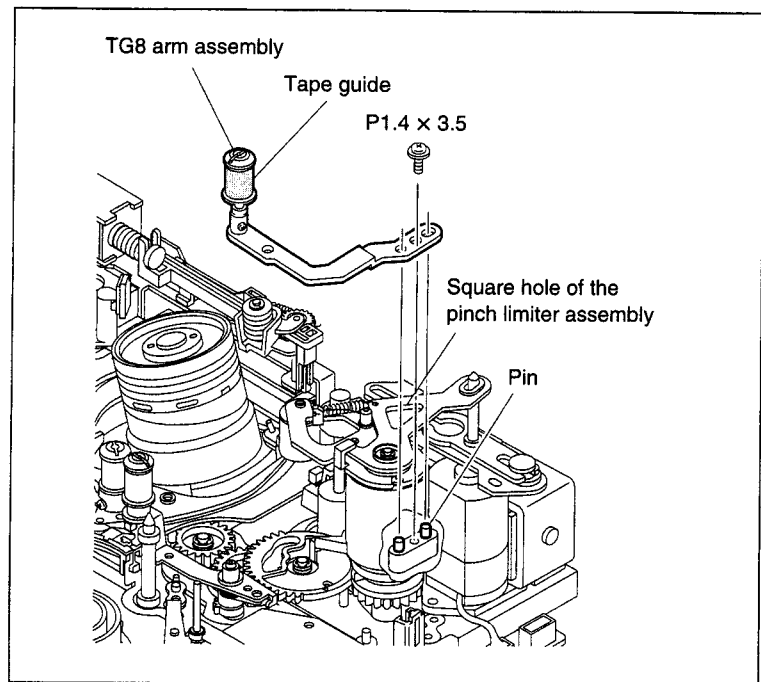

## 7-15. Rail Assembly Replacement

---

### Outline

#### Replacement

Moving the S/T reel tables  
Removing the S tension regulator assembly  
Removing the T drawer arm assembly  
Removing the RMP retainer (T1) assembly  
Removing the head cleaner assembly  
Removing the rail assembly  
Reattaching the rail assembly  
Reattaching the head cleaner assembly  
Reattaching the RMP retainer (T1) assembly  
Reattaching the T drawer arm assembly  
Reattaching the S tension regulator assembly  
Checking the threading/unthreading performance  
Cleaning the tape guide

#### Adjustment after replacement

TENSION adjustment  
Tape path adjustment

---

### Note

Use extreme care not to scratch the drum and the tape guide when replacing the rail assembly.

---

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01
- Tweezers

## Replacement

### 1. Moving the S/T reel tables

Bring the S/T reel tables to the L cassette position (the most front side) by turning the reel shift motor gear in the arrow direction by a skewer.

#### Note

This provides easy operation of succeeding tasks.

### 2. Removing the S tension regulator assembly

Remove the S tension regulator assembly.  
(Refer to Section 7-11.)

### 3. Removing the T drawer arm assembly

Remove the T drawer arm assembly.  
(Refer to Section 7-12.)

### 4. Removing the RMP retainer (T1) assembly

Remove the two screws and remove the RMP retainer (T1) assembly.

### 5. Removing the head cleaner



Remove the head cleaner. (Refer to Section 7-21.)

### 6. Removing the rail assembly


- (1) Disconnect the flexible card wire from the connector (CN2) on the SE-522 board.

#### Note

Use extreme care not to fold and not to scratch the flexible card wire when disconnecting.

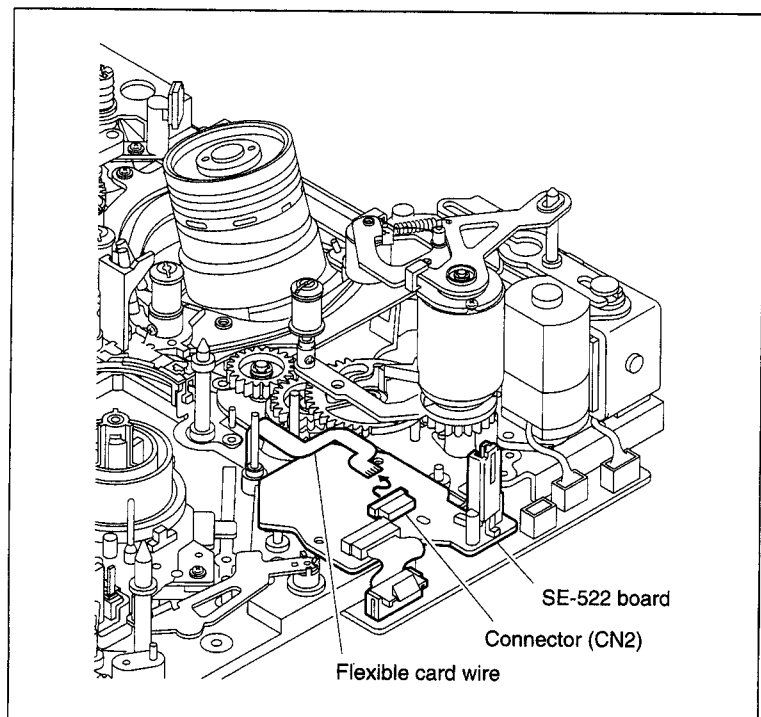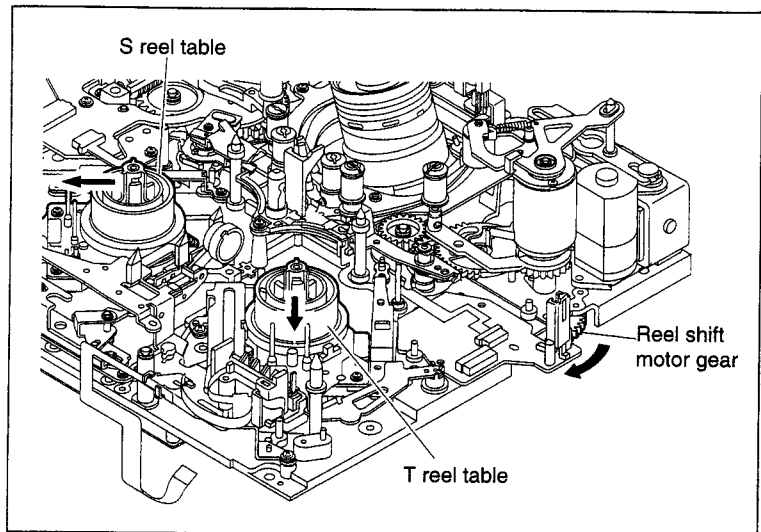


- (2) Turn the manual eject cover clockwise and align the two phase determining holes in the mode gear assembly and in No.3 gear.

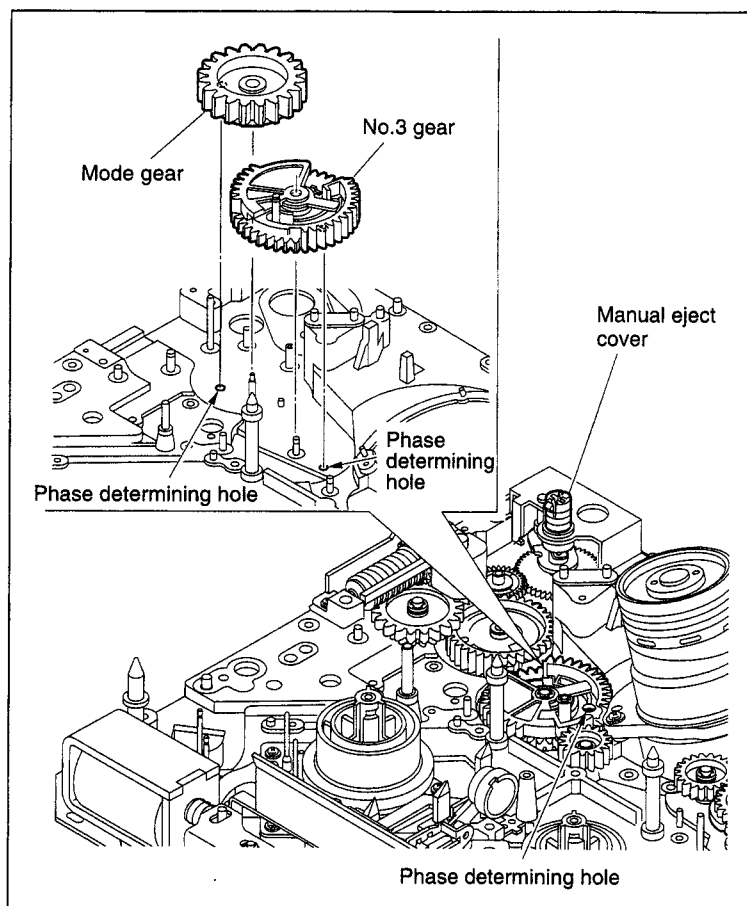


- (3) Remove the three screws and remove the rail assembly.

**Note**


Use extreme care not to scratch the drum and the tape guide when removing. Also great care should be taken; not to fold and not to scratch the flexible card wire of the LED holder assembly when disconnecting.

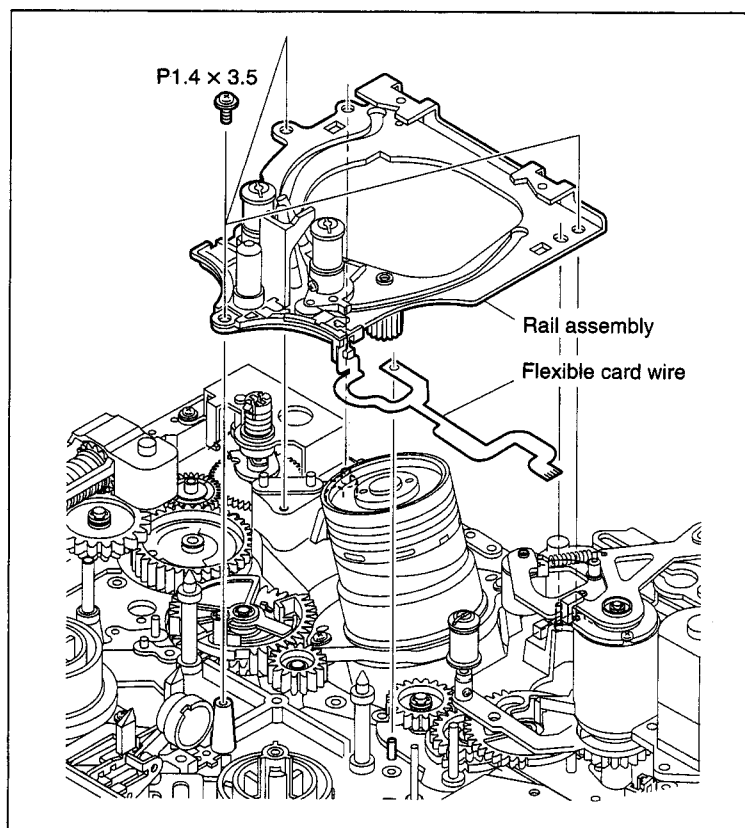

- (4) Bring both shuttle (R) and shuttle (L) assemblies to the threading position shown in the figure, by turning the gear on the back side of the rail assembly by a finger

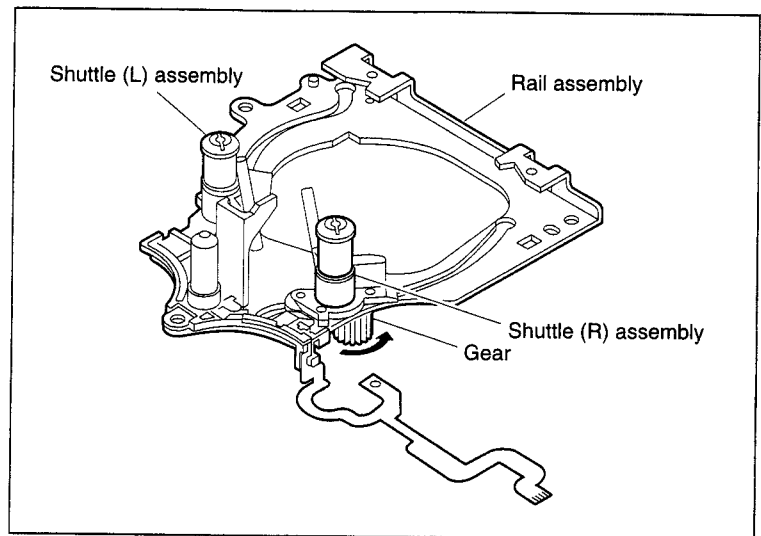


- (5) Unlock each two claws located on the left, right and middle side of the LED holder assembly with tweezers, and remove the LED holder assembly from the rail assembly.

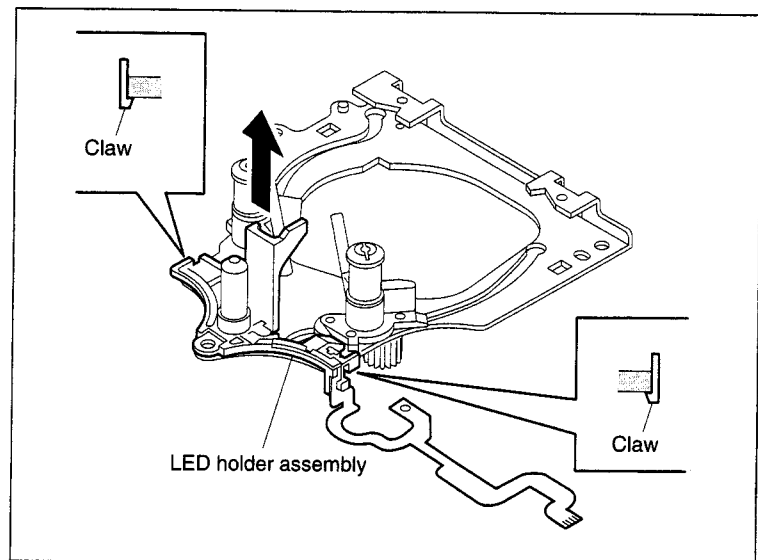


## 7. Reattaching the rail assembly

- (1) Reattach a new rail assembly to the LED holder assembly.
- (2) Ensure that the two phase determining holes in the mode gear assembly and in No.3 gear, which are already aligned in step 7- (2), are respectively aligned with the two holes in the MD chassis underneath each gear.
- (3) Adjust the two phases determining holes in No.6 and No.7 gears to align respectively with the two holes in the MD chassis underneath each gear by turning No.7 gear by a finger.

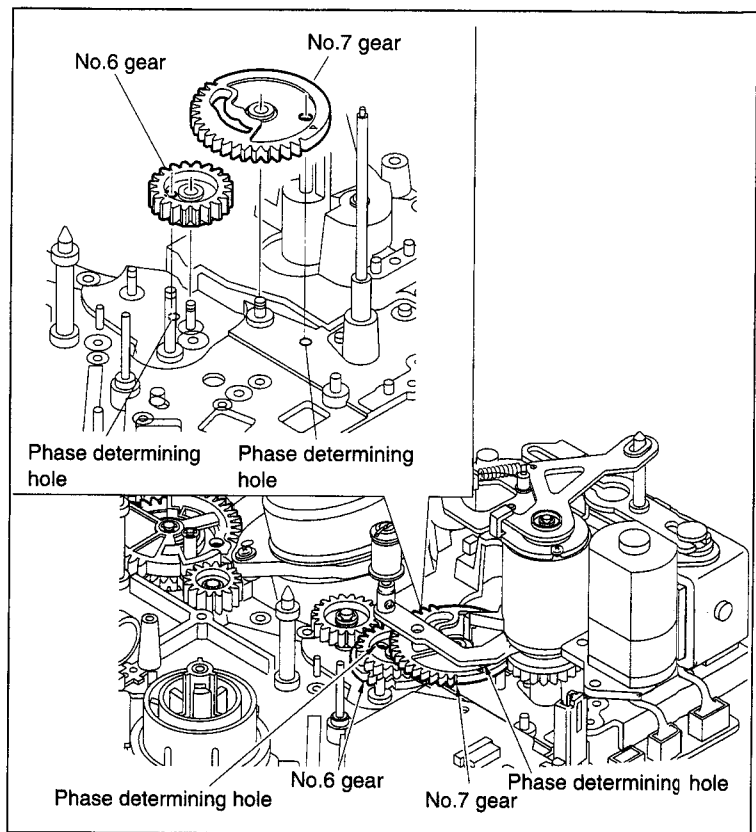

- (4) Turn the gear on the back side of the rail assembly until the shuttle (R) and shuttle (L) assemblies push the LED holder assembly as far as it will go, and align the positioning hole of the shuttle (L) assembly with the positioning hole of the rail assembly.

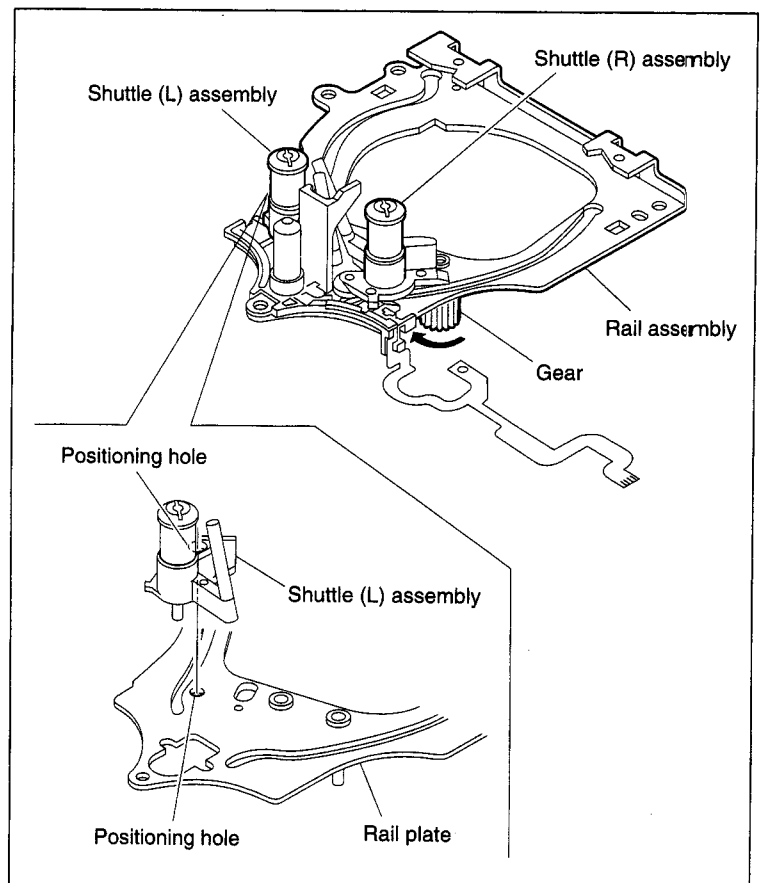

- (5) Keeping the state in step (4) and further more holding the gear phase between S side and T side, fit the hole and slotted hole in the rail assembly on the two pins on the MD chassis respectively.
- (6) Fit the hole in the flexible card wire of LED holder assembly on the pin on the MD chassis.
- (7) Fix the rail assembly with the three screws. Tightening Torque : 0.1 N·m { 1 kgf·cm }
- (8) Reconnect the flexible card wire to the connector (CN2) on the SE-522 board.

#### 8. Reattaching the head cleaner

Reattach the head cleaner. (Refer to Section 7-21.)

#### 9. Reattaching the RMP retainer (T1) assembly

Fit the hole and slotted hole in the RMP retainer (T1) assembly on the pins on the MD chassis respectively, then fix it with the two screws.

#### 10. Reattaching the T drawer arm assembly

Reattach the T drawer arm assembly. (Refer to Section 7-12.)

#### 11. Reattaching the S tension regulator assembly

Reattach the S tension regulator assembly. (Refer to Section 7-11.)

#### 12. Checking the threading/unthreading performance

Check the threading/unthreading is performed smoothly by turning the manual eject cover.

#### 13. Cleaning the tape guide

Wipe the tape guides placed in followings with a cleaning cloth moistened with cleaning fluid.

- T drawer arm assembly
- S tension regulator assembly
- Shuttle (R) assembly
- Shuttle (L) assembly


### Adjustment after Replacement

#### 14. TENSION adjustment

(Refer to Section 5-3-4.)

#### 15. Tape path adjustment

(Refer to Section 8-2.)

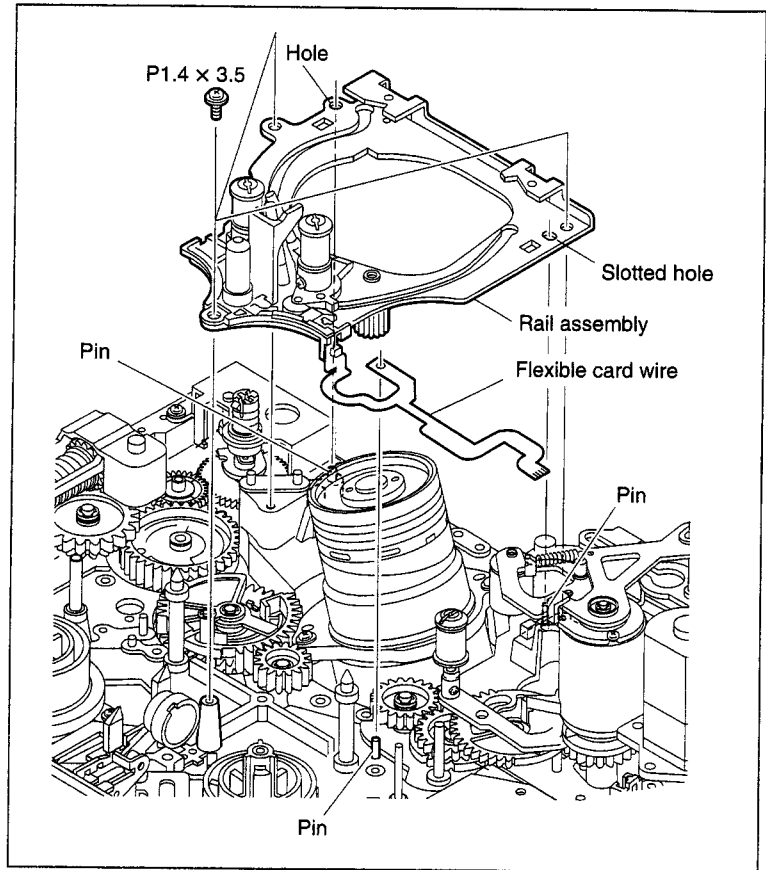



## 7-16. Capstan Motor Replacement

---

### Outline

#### Replacement

Removing the DR-428 board

Replacing the capstan motor

Reattaching the DR-428 board

Cleaning the capstan shaft

#### Adjustment after replacement

CAPSTAN ONLY adjustment

Checking the tape path adjustment

---

### Preparation

1. Set the unit in to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the bottom panel. (Refer to Section 3-3.)
5. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01

---

## Replacement

### 1. Removing the DR-428 board

(Refer to Section 3-7.)

### 2. Replacing the capstan motor

- (1) While supporting the capstan motor by hand from the back side of the MD chassis, remove the two screws in the upper side of the chassis to remove the capstan motor.
- (2) Wipe the mounting surfaces of a new capstan motor and the MD chassis with a cleaning cloth moistened with cleaning fluid.
- (3) Insert the new capstan motor into the hole in the MD chassis positioning as shown in the figure and fix it with the two screws.

Tightening torque : 0.1 N·m { 1 kgf·cm }

#### Note

Use care not to scratch the capstan motor pivot when inserting the capstan motor.


- (4) Reconnect the flexible card wire of the capstan motor on the back side of the unit to the connector (CN18) on the DR-428 board.

### 3. Reattaching the DR-428 board

(Refer to Section 3-7.)

### 4. Cleaning the Capstan shaft

Wipe the capstan shaft with a cleaning cloth moistened with cleaning fluid.

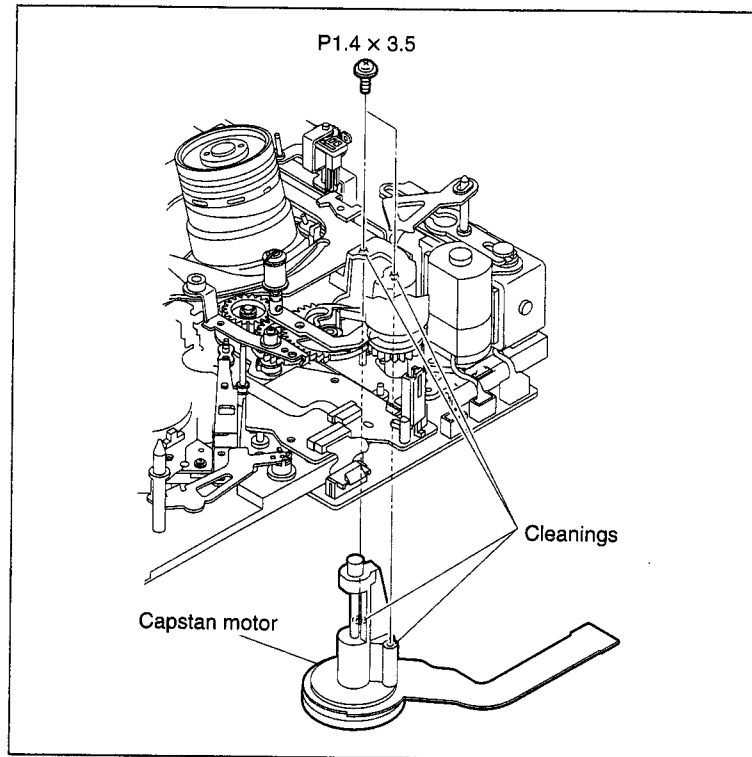

---

## Adjustment after Replacement

### 5. CAPSTAN ONLY adjustment

(Refer to Section 5-3-4.)

### 6. Checking the tape path adjustment

(Refer to Section 8-4.)

## 7-17. Loading Motor Replacement

### Outline

#### Replacement

Disconnecting the connector  
Replacing the loading motor assembly  
Reconnecting the connector

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Tweezers

### Replacement

#### 1. Disconnecting the connector

Disconnect the harness from the connector (CN10) on the DR-428 board with tweezers.


#### 2. Replacing the loading motor assembly

- (1) Remove the two screws to remove the loading motor assembly.
- (2) Align a positioning hole in a new loading motor with the positioning pin on the MD chassis and engage the motor gear with the FG gear.
- (3) Fix the loading motor assembly with the two screws.

Tightening Torque : 0.1 N•m { 1 kgf•cm }

#### 3. Reconnecting the connector

Reconnect the harness to the connector (CN10) on the DR-428 board with tweezers.

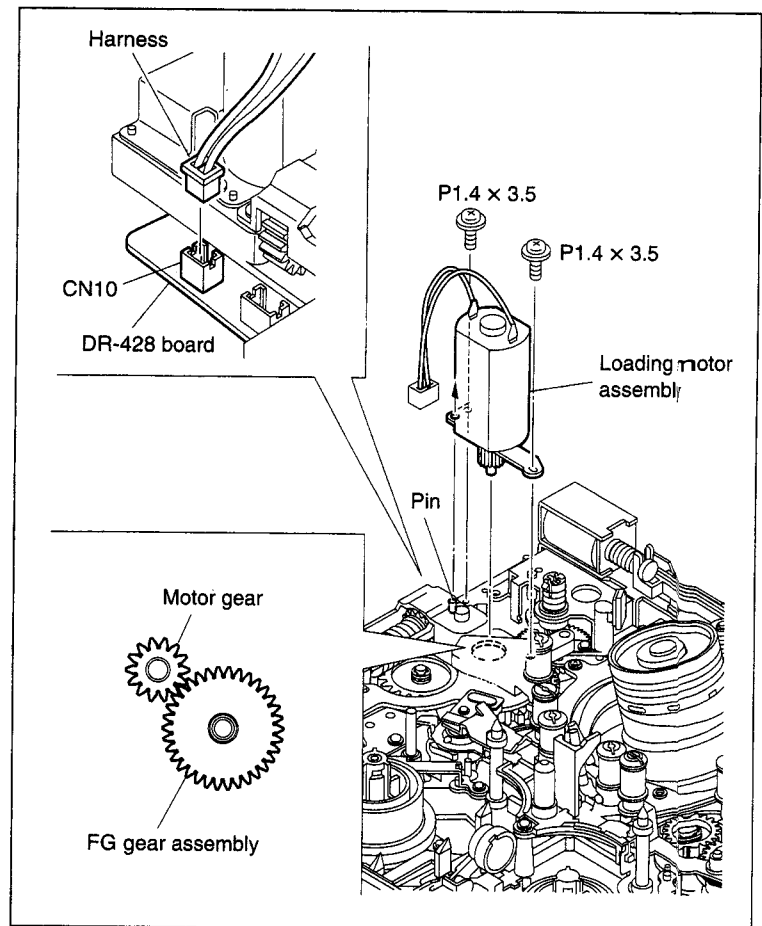

## 7-18. Reel Shift Motor Assembly Replacement

---

### Outline

#### Replacement

Removing the pinch limiter assembly  
Removing the pinch solenoid assembly  
Replacing the reel shift motor assembly  
Reattaching the pinch solenoid assembly  
Reattaching the pinch limiter assembly

---

### Note

Prepare a new stop washer when replacing the reel shift motor assembly.  
Stop washer (1.5) : 3-669-465-01 × 1 (for mounting the pinch limiter assembly)

---

### Preparation

1. Set the unit to the unthreading end status.
  2. Power off the unit.
  3. Remove the top panel. (Refer to Section 3-3)
  4. Remove the cassette compartment. (Refer to Section 3-4)
- 

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.5 : J-6082-231-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01
- Tweezers

## Replacement

### 1. Removing the pinch limiter assembly

Remove the pinch limiter assembly.

(Refer to Section 7-5.)

### 2. Removing the pinch solenoid assembly

Remove the pinch solenoid assembly.

(Refer to Section 7-7.)

### 3. Replacing the reel shift motor assembly

- (1) Disconnect the harness of the reel shift motor assembly from the connector (CN21) on the DR-428 board with tweezers.
- (2) Remove the screw to remove the reel shift motor assembly.
- (3) Fit two holes in a new reel shift motor assembly shown in the figure on the two pins on the MD chassis and engage it with the gear A.
- (4) Reattach the reel shift motor assembly with the screw.

Tightening Torque : 0.1 N·m { 1 kgf·cm }

- (5) Reconnect the harness of the reel shift motor to the connector (CN21) on the DR-428 board.

### 4. Reattaching the pinch solenoid assembly


Reattach the pinch solenoid assembly.

(Refer to Section 7-7.)

### 5. Reattaching the pinch limiter assembly

Reattach the pinch limiter assembly.

(Refer to Section 7-5.)

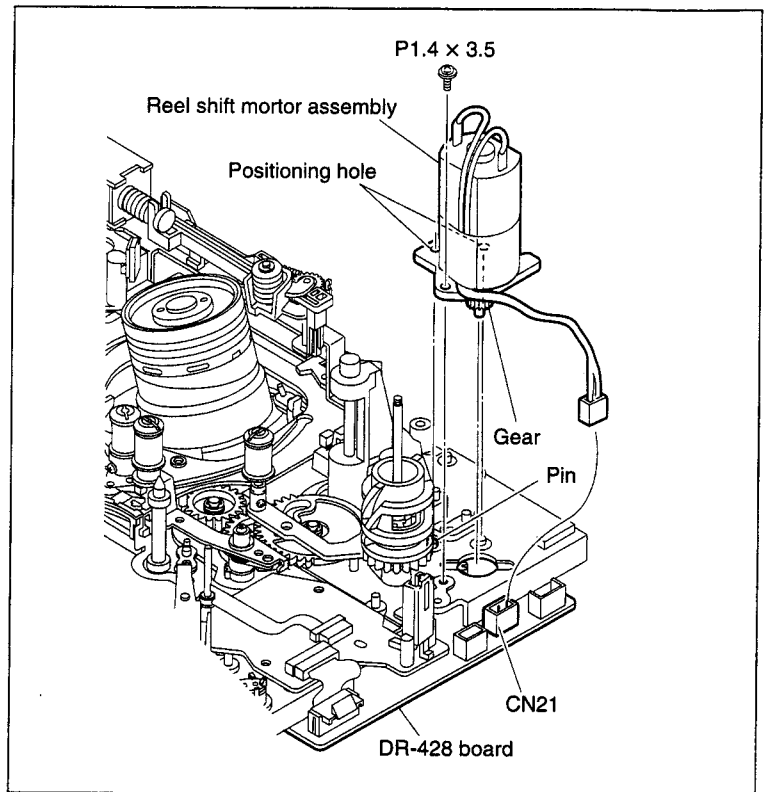

## 7-19. MIC Assembly Replacement

---

### Outline

#### Replacement

Disconnecting the flexible card wire  
Moving the S/T reel tables  
Removing the L push plate  
Removing the MIC spring  
Replacing the MIC assembly  
Moving the S/T reel tables  
Reattaching the MIC spring  
Reattaching the L push plate  
Reconnecting the flexible card wire

---

### Note

Prepare a new stop washer when replacing the MIC assembly.  
Stop washer (1.5) : 3-699-465-01  
Do avoid touching the terminal on the MIC holder and wiping it with cleaning fluid.  
When need cleaning, wipe it carefully with a soft dry cloth.  
Use care not to lose a poly-slider washer between the base plate and the MIC assembly.

---

### Preparation

1. Set the unit to the unthreading end status.
  2. Power off the unit.
  3. Remove the top panel. (Refer to Section 3-3.)
  4. Remove the cassette compartment. (Refer to Section 3-4.)
- 


### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.5 : J-6082-231-A
- Tweezers

## Replacement


### 1. Disconnecting the flexible card wire

Disconnect the flexible card wire from the connector (CN16) on the DR-428 board located on the back side of the MD chassis.

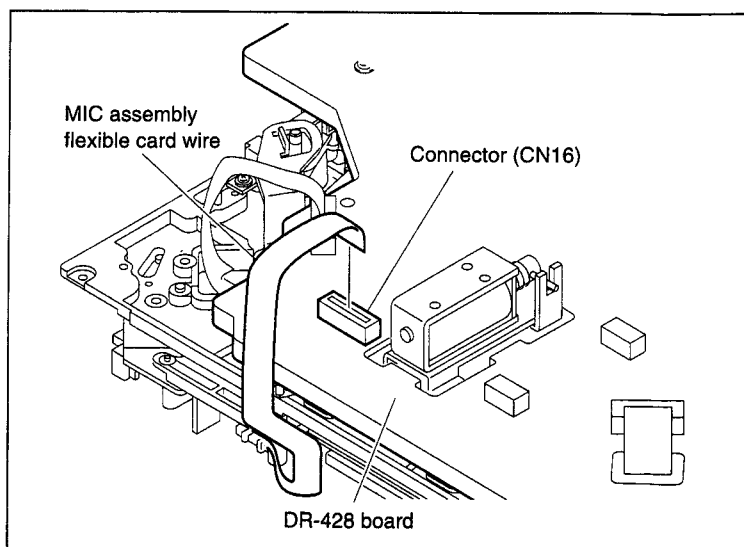

### 2. Moving the S/T reel tables

Turn the reel shift motor gear in the arrow direction by a skewer and bring the S/T reel tables to the standard cassette position (the most front side).

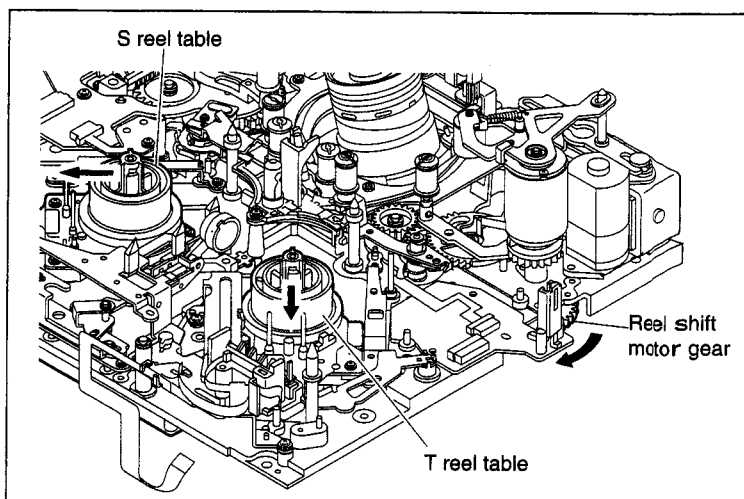


### 3. Removing the L push plate

Remove the L push plate. (Refer to Section 7-3.)

### 4. Removing the MIC spring

Unhook the hooks on the both ends of the MIC spring which hold the MIC arm and the RLR assemblies.

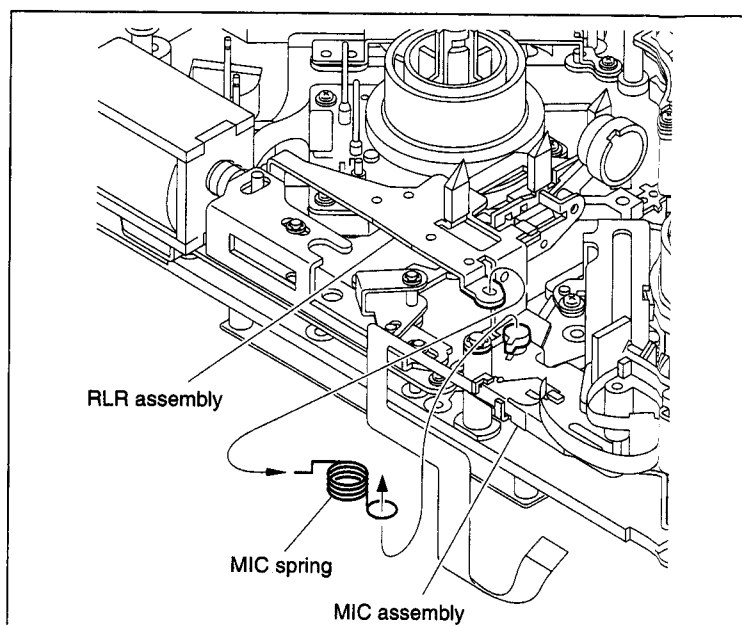

## 5. Replacing the MIC assembly


- (1) Remove the stop washer and the two screws which secure the MIC assembly to the MD chassis, and remove the MIC assembly.
- (2) Insert a tip of the flexible card wire of a new MIC assembly between the chassis and the front MD chassis to bring it to the back side of the unit.

### Note

Use great care not to fold and scratch the flexible card wire during this operation.

- (3) Fit the boss of the MIC arm on the shaft of the MD chassis and also fit the recess on the reel plate shaft.
- Fit the two guide holes in the MIC assembly on the pins on the MD chassis, and fix the assembly with the two screws and a new stop washer.


Tightening Torque : 0.1 N·m {1 kgf·cm}

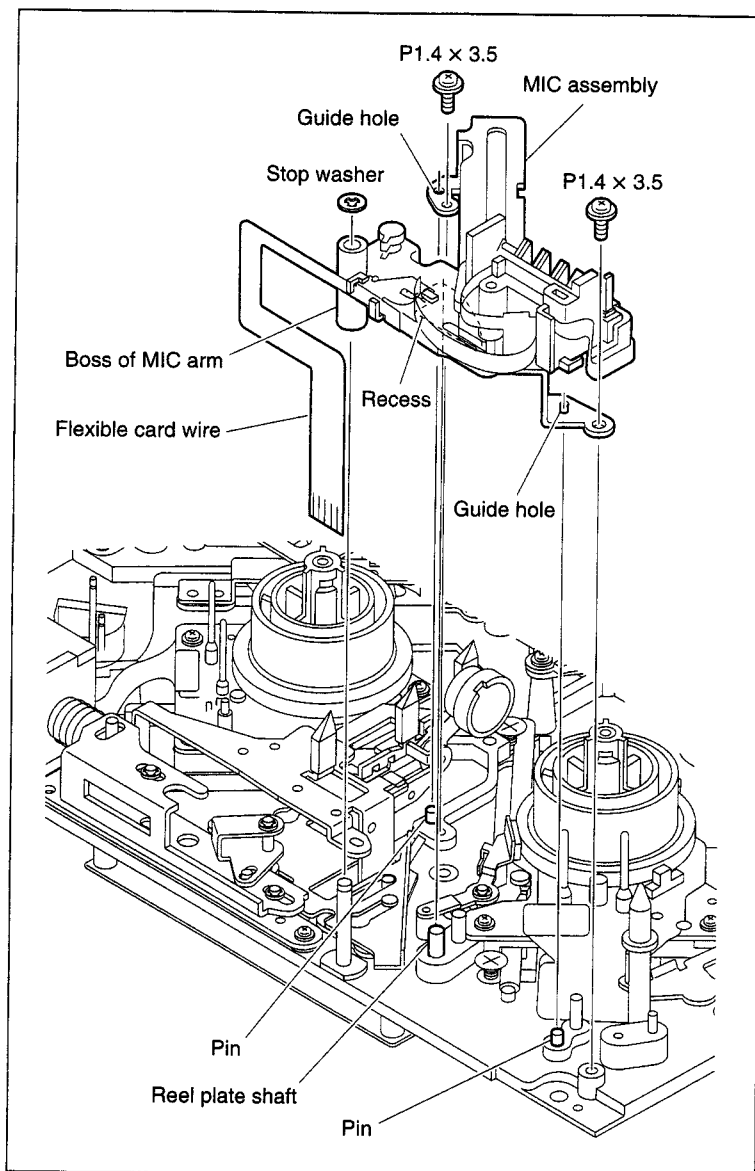



#### 6. Moving the S/T reel tables

Turn the reel shift motor gear in the arrow direction by a skewer and bring the S/T reel tables to the S-cassette position (the drum side). Confirm that the S/T reel tables and the MIC assembly shift smoothly.

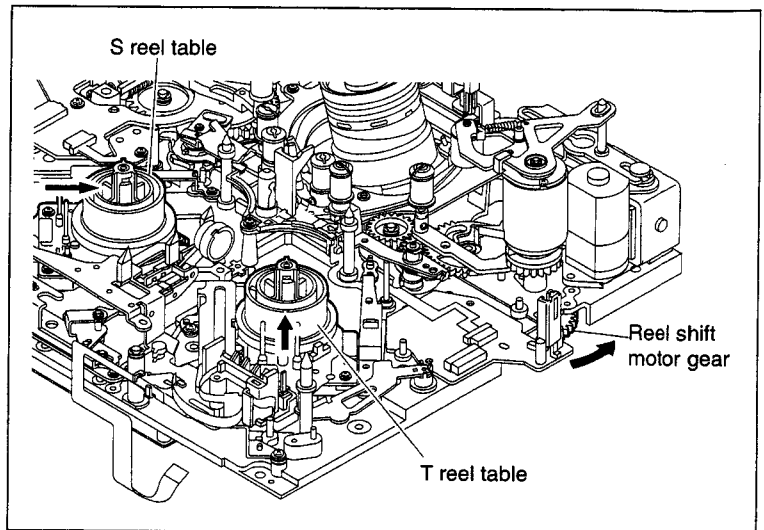

#### 7. Reattaching the MIC spring

Reattach the MIC spring removed in step 5 to the MIC arm and RLR assemblies.

#### 8. Reattaching the L push plate


Reattach the L push plate. (Refer to Section 7-3.)

#### 9. Reconnecting the flexible card wire

Reconnect the flexible card wire to the connector (CN16) on the DR-428 board located on the back side of the MD chassis.

#### 10. Reattaching the MD assembly

Reattach the MD assembly.  
(Refer to Section 3-5.)

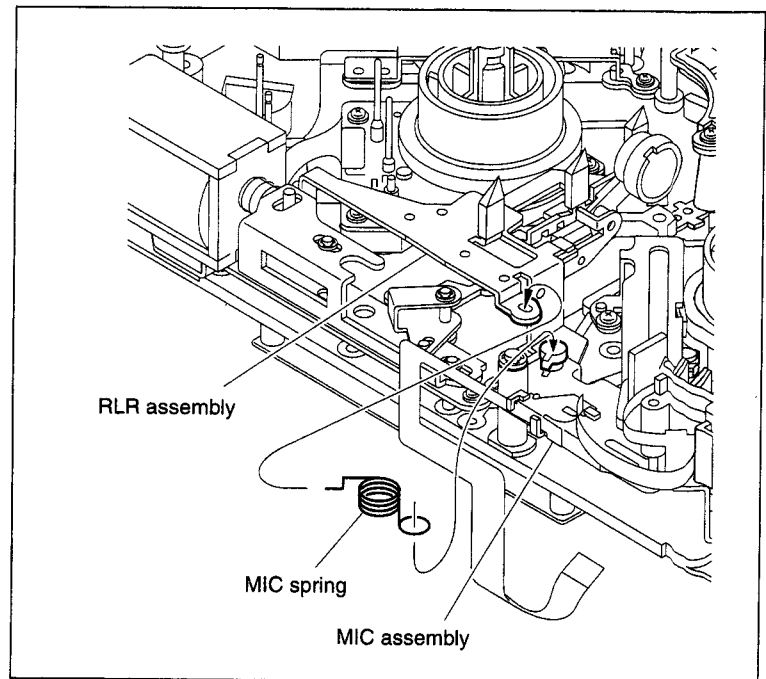

## 7-20. MIC Holder Assembly Replacement

---

### Outline

#### Replacement

Removing the MIC assembly

Replacing the MIC holder assembly

Reattaching the MIC assembly

---

### Note

Prepare new stop washers when replacing the MIC holder.

Stop washer (1.2) : 3-559-408-11 × 2 (for mounting the MIC holder assembly)

Stop washer (1.5) : 3-669-465-01 × 1 (for mounting the MIC assembly)

Do avoid touching the terminal on the MIC holder and wiping it with cleaning fluid.

When need cleaning, wipe it carefully with a soft dry cloth.

Use care not to lose a poly-slider washer between the base plate and the MIC assembly.

---

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)

---

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf·cm) : J-6325-400-A
- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.5 : J-6082-231-A
- Washer mounting fixture Ø1.2 : J-6082-232-A
- Tweezers

## Replacement

### 1. Removing the MIC assembly


Remove the MIC assembly.  
(Refer to Section 7-19.)

### 2. Replacing the MIC holder subassembly

- (1) Remove the portion A shown of the flexible card wire from the MIC arm assembly as shown in the figure.
- (2) Remove the two stop washers from the back side of the MIC assembly and remove the MIC holder assembly.
- (3) Fix a new MIC holder assembly to the MIC assembly with two new stop washers (1.2).

#### Note

Use great care not to fold and not to scratch the flexible card wire when reattaching.

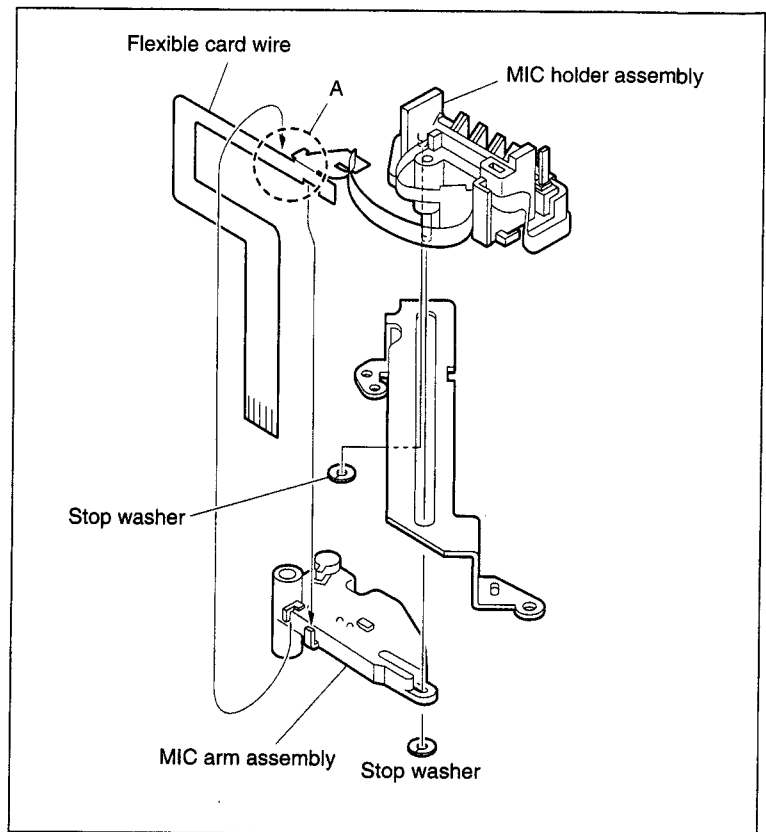


- (4) Fix the flexible card wire to the MIC arm assembly as shown in the figure.
- (5) Insert a tip of the flexible card wire of the MIC assembly between the chassis and the front MD chassis to bring it to the back side of the unit.

#### Note

Use extreme care not to fold and not to scratch the flexible card wire at this operation.

### 3. Reattaching the MIC assembly

Reattach the MIC assembly.  
(Refer to Section 7-19.)

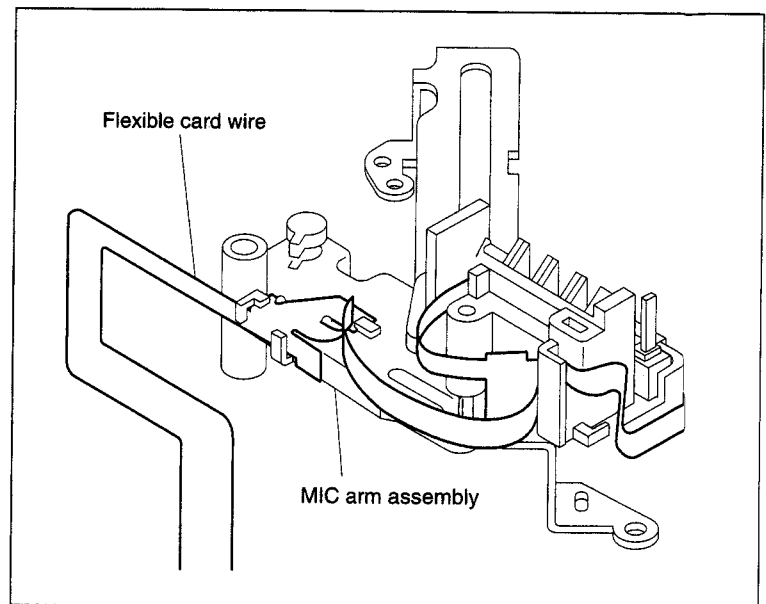

## 7-21. HC Roller Assembly Replacement

---

### Outline

#### Replacement

Disconnecting the connector  
Removing the head cleaner assembly  
Replacing the HC roller assembly  
Reattaching the head cleaner assembly  
Checking the performance of the head cleaner assembly  
Reconnecting the connector

---

### Note

Prepare a new stop washer when replacing the HC roller assembly.

Stop washer (0.8) : 3-315-414-31 × 1

Bare-handed touch to the HC roller assembly is prohibited. Do put on cloth gloves before replacing.

---

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)

---

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Washer extracting fixture (A) : J-6082-234-A
- Washer mounting fixture Ø1.8 : J-6082-233-A


## Replacement

### 1. Disconnecting the connector

Disconnect the harness from the connector (CN11) on the DR-428 board with tweezers.

### 2. Removing the head cleaner assembly

Remove the two screws and pull off the head cleaner assembly in the arrow direction.

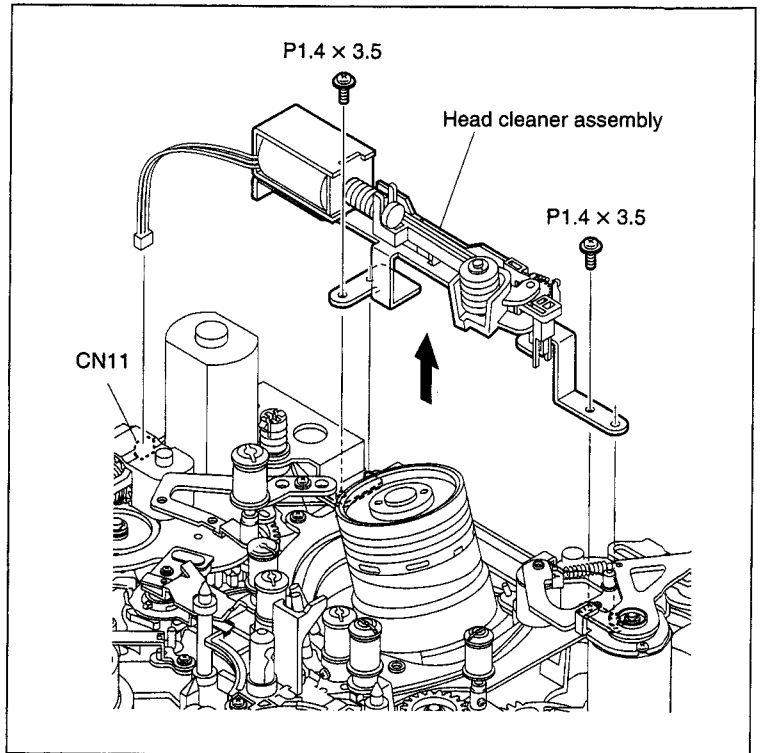

### 3. Replacing the HC roller assembly


- (1) Remove the stop washer to remove the HC roller assembly.
- (2) Attach a new HC roller assembly with a new stop washer.

#### **Note**

Avoid bare-handed touch to the HC roller assembly.

In addition, do not give an excessive force to it at removal and reattachment, it may cause deformation.


Operation supporting the back side of the HC roller assembly by fingers is required.

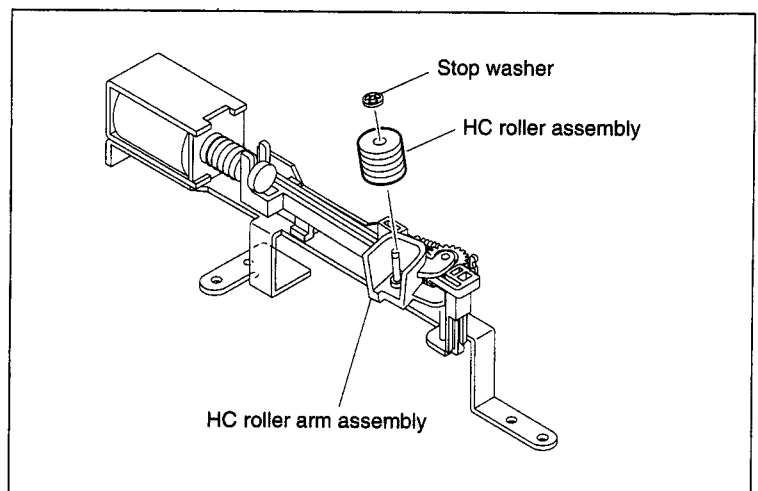

#### 4. Reattaching the head cleaner assembly

Align the two positioning holes in the head cleaner assembly with the two positioning pins on the MD chassis and fix the assembly with the two screws.

Tightening torque :  $0.1 \text{ N}\cdot\text{m}$  {  $1 \text{ kgf}\cdot\text{cm}$  }

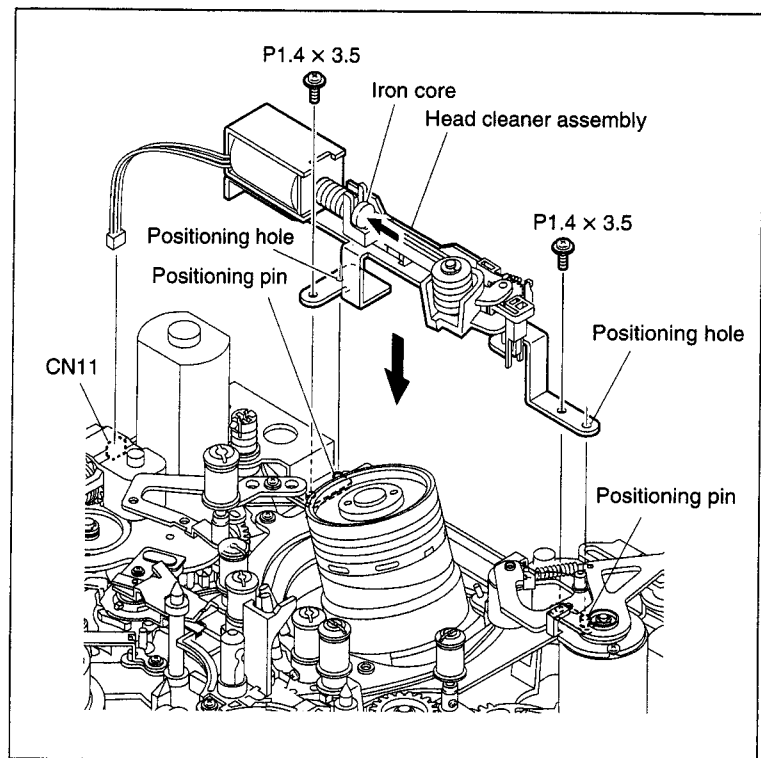


#### 5. Checking the performance of the head cleaner assembly

Check that the HC roller assembly contacts the drum assembly in parallel when the solenoid's iron core of the head cleaner assembly is in the pull-in state by being pressed in the arrow direction.

#### 6. Reconnecting the connector

Reconnect the harness to the connector (CN11) on the DR-428 board.

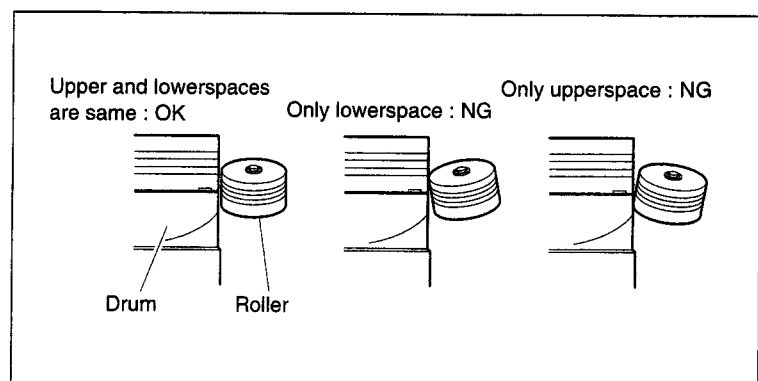

## 7-22. Head Cleaner Solenoid Replacement

---

### Outline

#### Replacement

Removing the head cleaner assembly

Replacing the head cleaner solenoid

Reattaching the head cleaner assembly

Checking the performance of the head cleaner assembly

---

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)

---

### Tools

- Torque screwdriver's bit (for M1.4) : J-6325-110-A
- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A

## Replacement

### 1. Removing the head cleaner assembly

Remove the head cleaner assembly.

(Refer to Section 7-21.)

### 2. Replacing the head cleaner solenoid

- (1) Remove the two screws on the back side of the head cleaner assembly.
- (2) Remove the solenoid with the spring on it.
- (3) Remove the compression coil spring from the solenoid.
- (4) Fit the compression coil spring on a new solenoid's iron core.
- (5) Pull out the iron core until a recess comes in sight, then fix the solenoid to the head cleaner assembly.
- (6) Align the two holes in the solenoid with the two slotted holes in the HC base assembly and fix temporarily with the two screws.

#### Note

Tighten the screws just enough to move the head cleaner solenoid.

- (7) Adjust the solenoid position to meet the specification of the clearance between the slit portion of the head cleaner base assembly and the tip of the HC slider under the condition that the iron core comes to the pull-in state by being pressed in the arrow direction, then tighten the two screws.

Tightening torque : 0.2 N·m { 2 kgf·cm }



### 3. Reattaching the head cleaner assembly

Reattach the head cleaner assembly.

(Refer to Section 7-21.)

### 4. Checking the performance of the head cleaner assembly

Check the performance of the head cleaner assembly. (Refer to Section 7-21.)

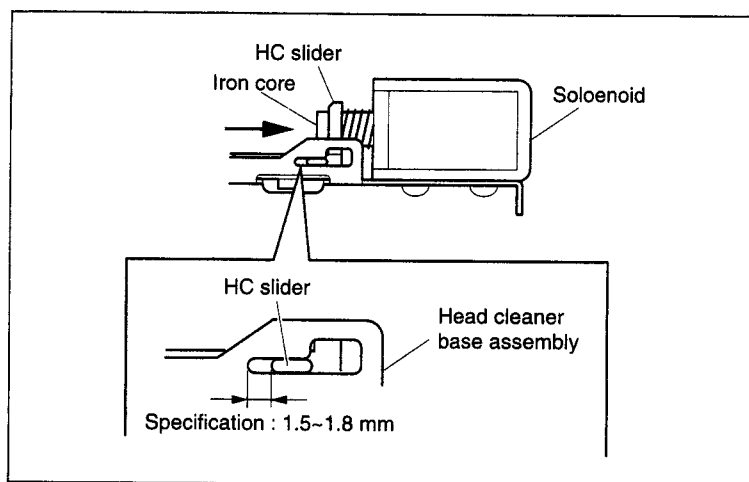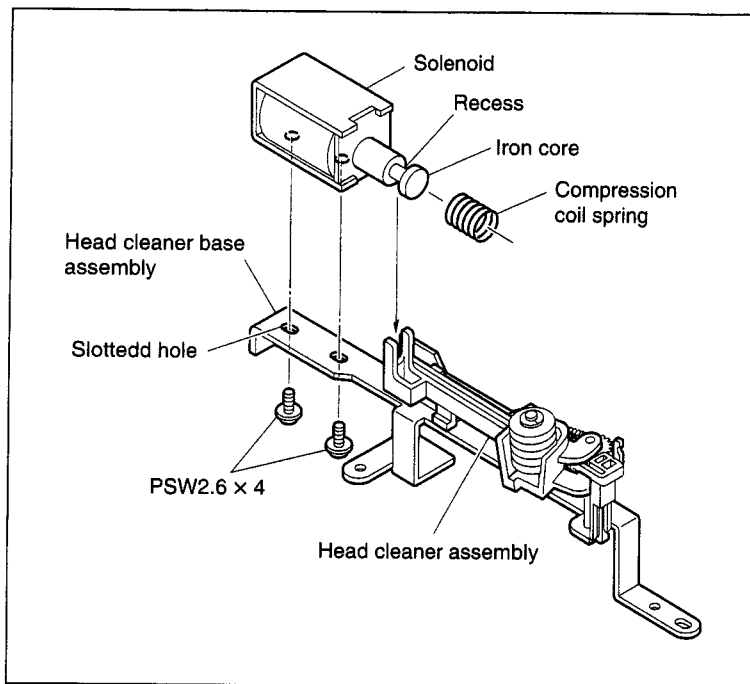



## 7-23. Cassette Compartment Motor Replacement

### Outline

#### Replacement

Removing the motor gear assembly

Replacing the motor assembly

Reattaching the motor gear assembly

### Preparation

1. Set the unit to the unthreading end status.
2. Power off the unit.
3. Remove the top panel. (Refer to Section 3-3.)
4. Remove the cassette compartment. (Refer to Section 3-4.)


### Tools

- Torque screwdriver (for 3 kgf•cm) : J-6325-400-A
- Torque screwdriver's bit (for M2) : J-6325-380-A
- Grease (SGL-941) : 7-662-001-39
- Tweezers

### Replacement

#### 1. Removing the motor gear assembly

- (1) Remove the harness of the motor gear from the connector (CN3) on the CC-83 board in the cassette compartment.
- (2) Remove the motor gear assembly from the cassette compartment by removing the two screws.

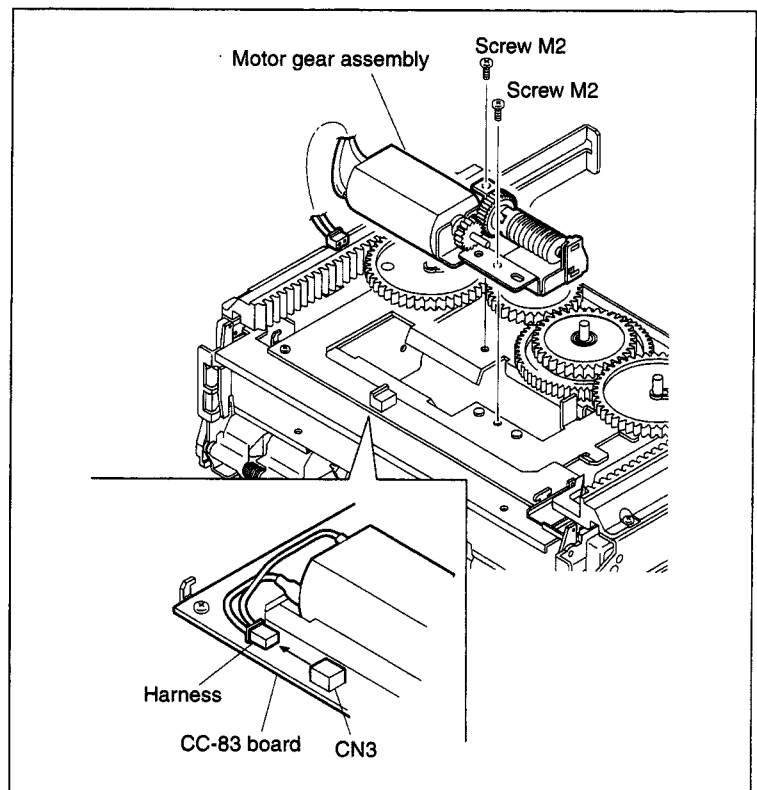

## 2. Replacing the motor assembly

- (1) Release the upper and lower claws of the pivot bracket to remove the pivot bracket.

### Note

Be careful not to lose the worm gear, which also comes off at this operation.


- (2) Remove the gear B from the shaft of the motor bracket assembly.
- (3) Remove the two screws to remove the motor assembly from the motor bracket.
- (4) Fix a new motor assembly to the motor bracket positioning as shown in the figure with the two screws.

### Note

Be reminded a new motor assembly has the gear A on its shaft.


Tightening torque :  $0.2 \text{ N}\cdot\text{m}$  {  $2 \text{ kgf}\cdot\text{cm}$  }

- (5) Reattach the gear B to the shaft of the motor bracket assembly.
- (6) Make a coupling between the worm gear and the gear B and insert the pivot bracket shaft from another side of the worm gear.
- (7) Fix the upper and lower claws to the motor bracket.

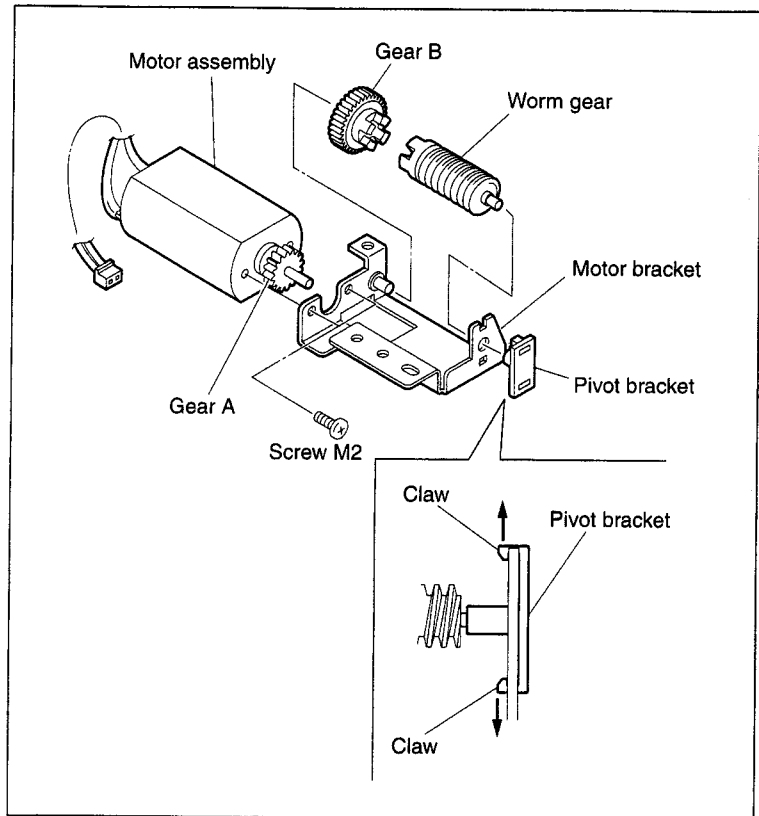

## 3. Reattaching the motor gear assembly

- (1) Bend the two terminals in the motor gear assembly to meet the specification of their bent angle shown in the figure.
- (2) With the worm gear in the motor gear assembly engaged with the worm wheel, insert the two protrusions of the motor gear assembly into the holes in the cassette compartment and fix with two screws.
- (3) Align the hole in the drive gear (L) assembly with the hole in the cassette compartment by turning the gear B of the motor gear assembly by a finger.
- (4) Apply a grain of grease on the worm gear in the motor gear assembly.
- (5) Reconnect the harness of the motor gear assembly to the connector (CN3) on the CC-83 board.

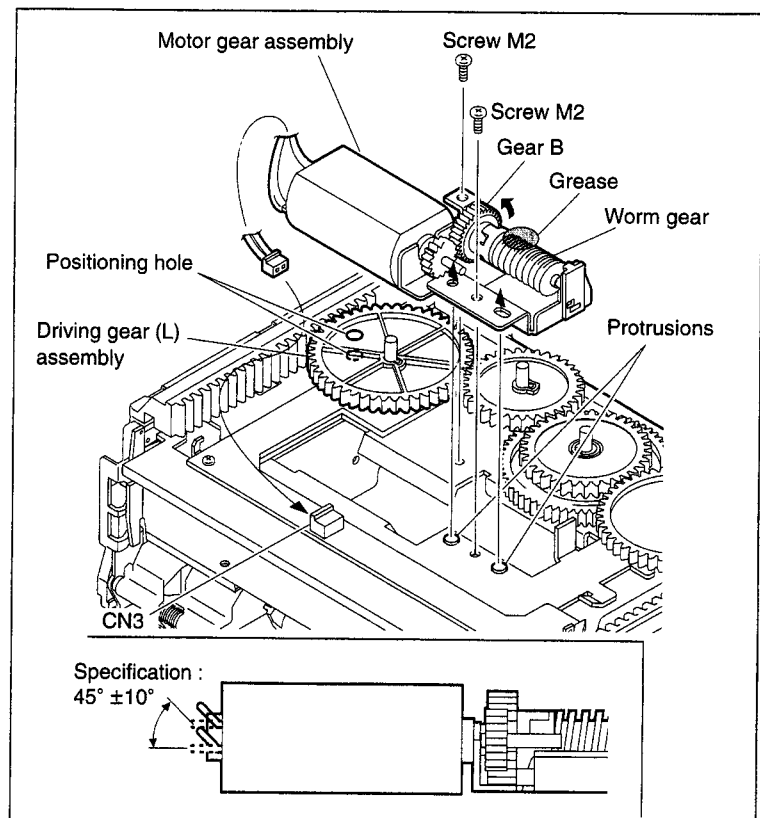

## Section 8

### Tape Path Alignment

Tape path adjustment is very important adjustment to run tape under the optimum conditions for tape.

If this adjustment is not performed correctly, tape may be damaged.

Perform this adjustment with utmost attention.

Perform this adjustment after the cassette compartment assembly is removed from VTR.

#### 8-1. General Information for Tape Path Adjustment

##### Tools

##### 1. Alignment tape

The following alignment tapes are necessary for tape path adjustment.

- XH2-1AST (Standard cassette) : 8-967-999-02
- XH5-1A2 (Mini cassette) : 8-967-999-22 (NTSC)
- XH5-1AP2 (Mini cassette) : 8-967-999-26 (PAL)

##### 2. Tape guide adjustment driver

The following tape guide adjustment driver which is available as the Sony service tool is necessary for height adjustment of tape guide.

- Tape guide adjustment driver : J-6082-362-A


##### 3. Tape path adjustment tool

Use the following tape path adjustment tool to perform the tape path adjustment.

- Tape path adjustment board, DJ-461 : J-6444-610-B
- Tape path tool connection cable, DJ-472 : J-6444-720-A
- Tape path tool power supply cable, DJ-500 : J-6445-000-A

##### 4. The required tools in addition to the above listed tools.

- DC regulated power supply
- Oscilloscope (Tektronix 2445B or equivalent)
- Small mirror for adjustment : J-6080-029-A
- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01
- REMOTE CONTROL UNIT (SVRM-100A, DSRM-10 or equivalent)

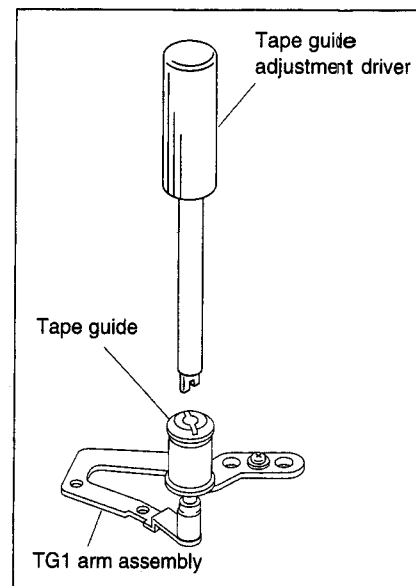

##### Preparation of Tape Path Adjustment

##### 1. Cassette compartment assembly

It is not necessary to remove the cassette compartment assembly during tape path adjustment.

##### 2. Cleaning the tape running surface

Clean the tape running surface of tape guides, head drum and video heads using the cleaning cloth moistened with cleaning fluid.

- Cleaning cloth : 3-184-527-01
- Cleaning fluid : 9-919-573-01

### 3. Information to use the tracking alignment tape (XH2-1AST)


Check the following items before entering the tracking adjustment mode.

- How to enter the maintenance menu, refer to Section 5-2-2.
- How to exit the maintenance menu, refer to Section 5-2-3.




### 4. Connecting the tape path adjustment tool


To adjust the tape path, use the tape path adjustment board (DJ-461), tape path tool connection cable (DJ-472), tape path tool power supply cable (DJ-500), and DC regulated power supply.

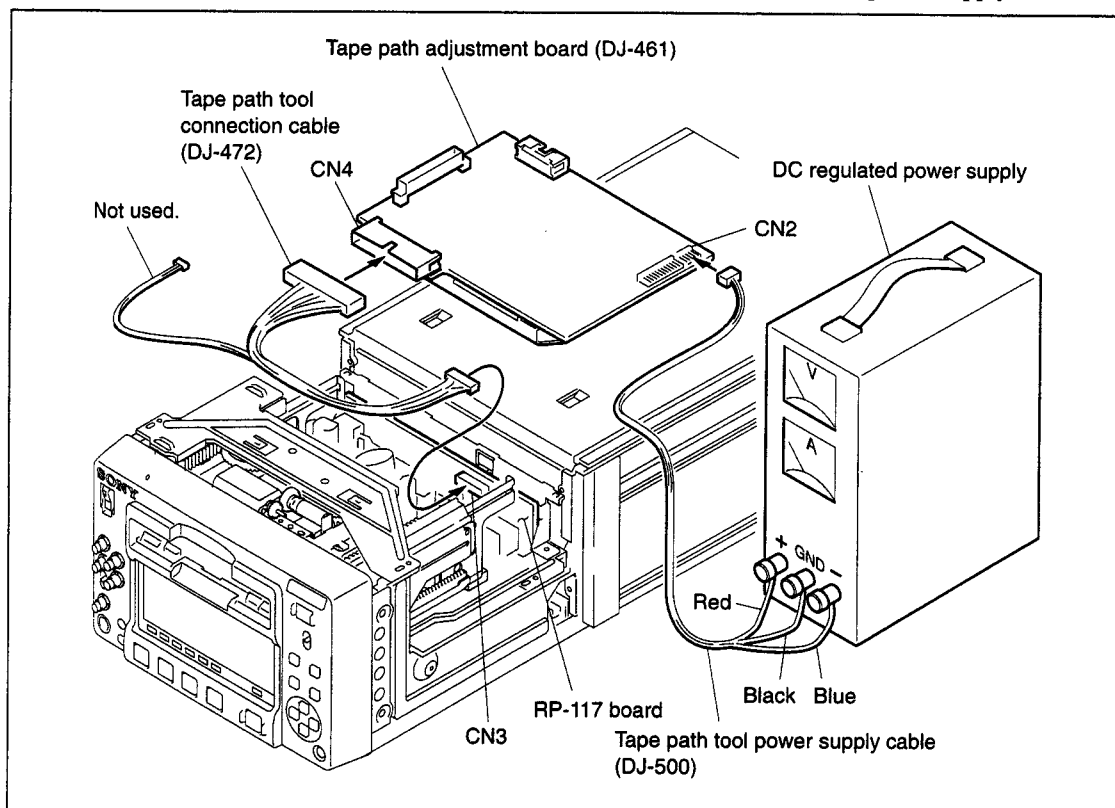

- (1) Set the output of the DC regulated power supply to +12 Vdc/-12 Vdc.
- (2) Insert the connector of the tape path tool connection cable (DJ-472) into the connector (CN4) of the path adjustment board (DJ-461).
- (3) Insert another connector of the tape path tool connection cable (DJ-472) into CN3 on the RP-117 board.
- (4) Insert the connector of the tape path tool connection cable (DJ-500) into the connector (CN2) of the tape path adjustment board (DJ-461).
- (5) Connect the tape path tool power supply cable (DJ-500) to the DC regulated power supply.





## 5. Operating procedures of tracking adjustment

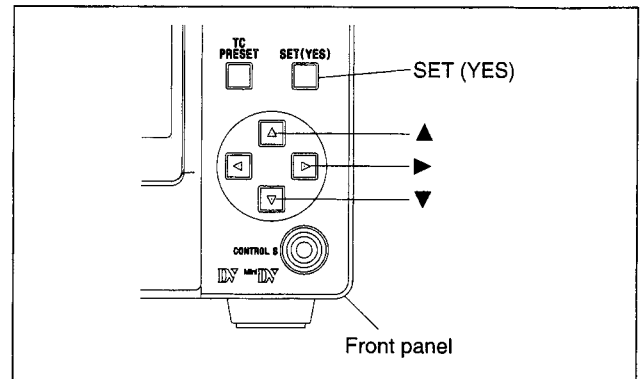
Use the keys of , ,  and **SET (YES)** on the front panel to perform the tracking adjustment.



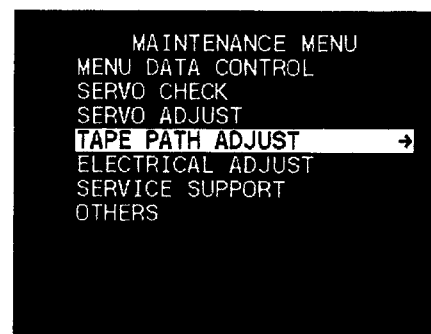


- (1) Enter the maintenance menu.
- (2) Move the cursor to "TAPE PATH ADJUST" which is displayed with a white background using the ,  keys.

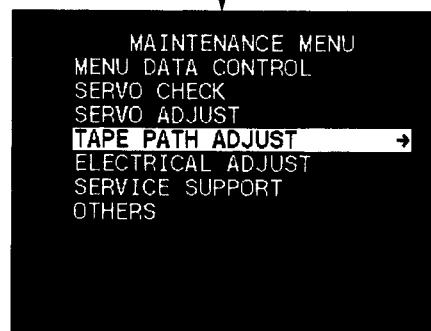


- (3) Press the  key.  
This selects "TAPE PATH ADJUST" and menu of the lower level directory appears.



- (4) Move the cursor to "TRACKING ADJUST" which is displayed with a white background using the ,  keys.

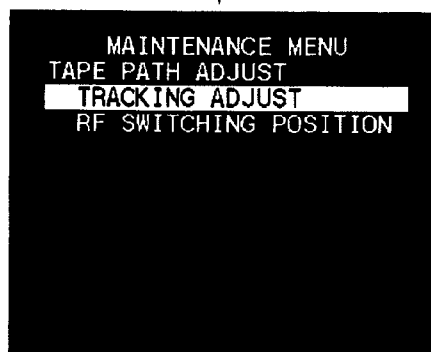


(5) Press the  key to show the "START OK?" display.


- (6) Press the **SET (YES)** key.
- (7) Display the "TRACKING ADJUST" on the screen.  
The adjustments that are described in sections 8-2, 8-4 to 8-8 are performed under this mode.

**Note**


This unit does not have the tracking shift function. Instead of having the tracking shift function, the tracking alignment tape XH2-1AST has already been recorded in the factory so that the servo is locked at 50 % off-track automatically.

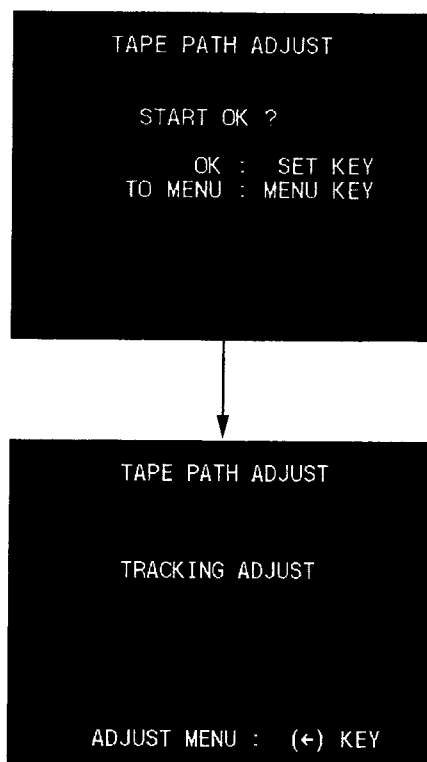


## 6. Tape guide locations

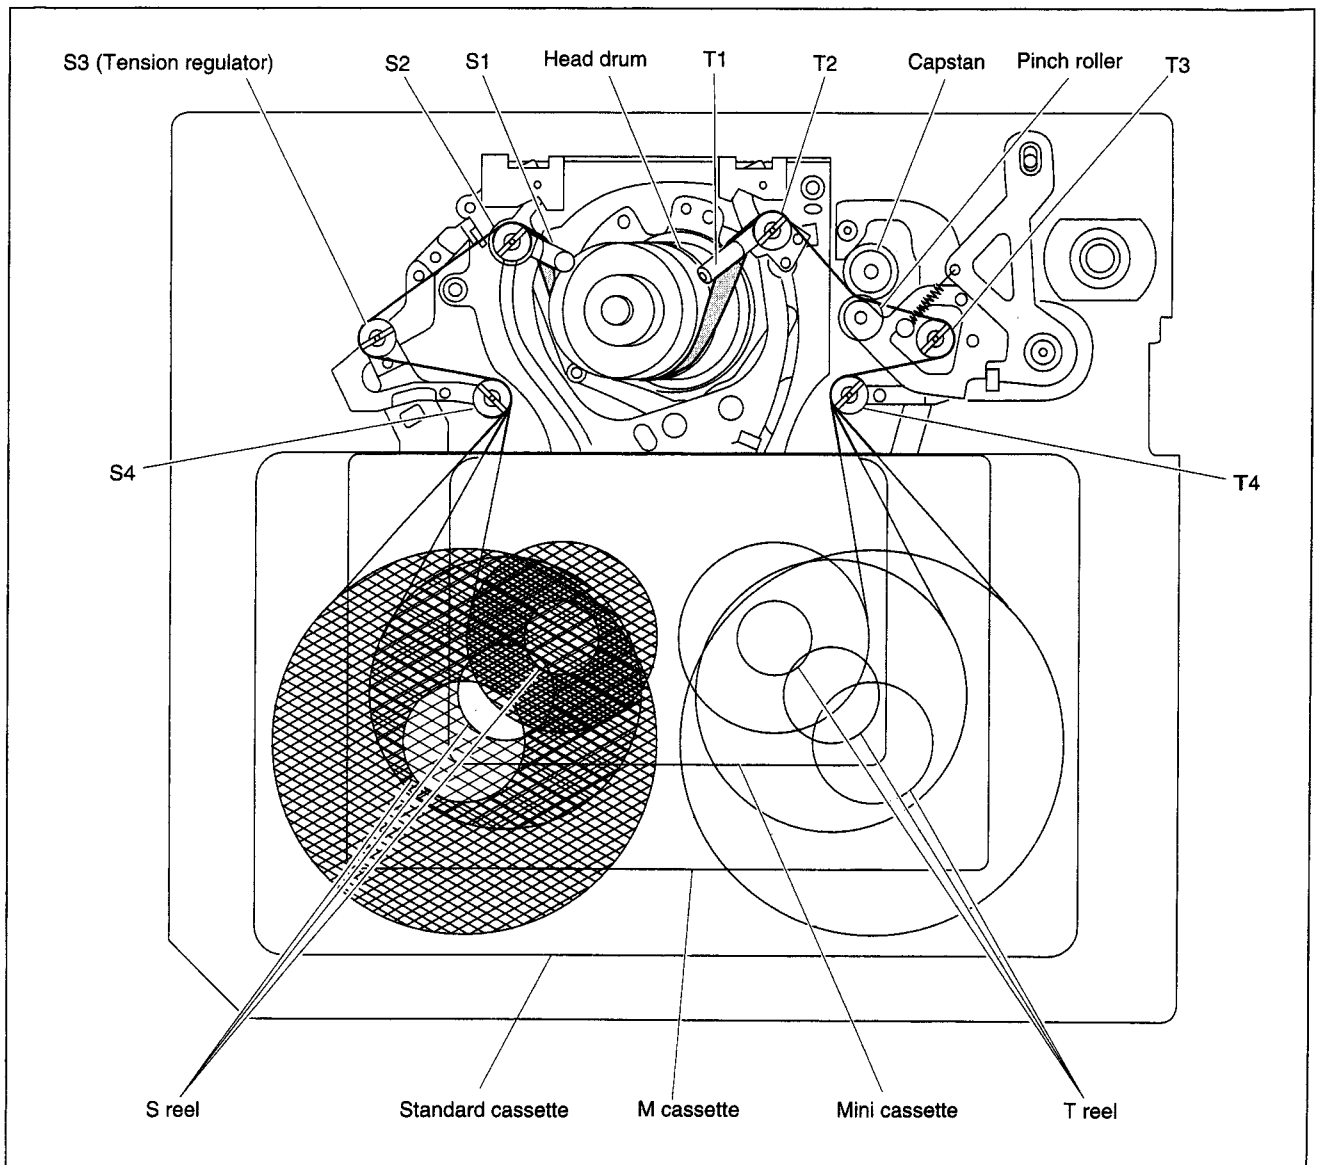

## 7. Tape running condition

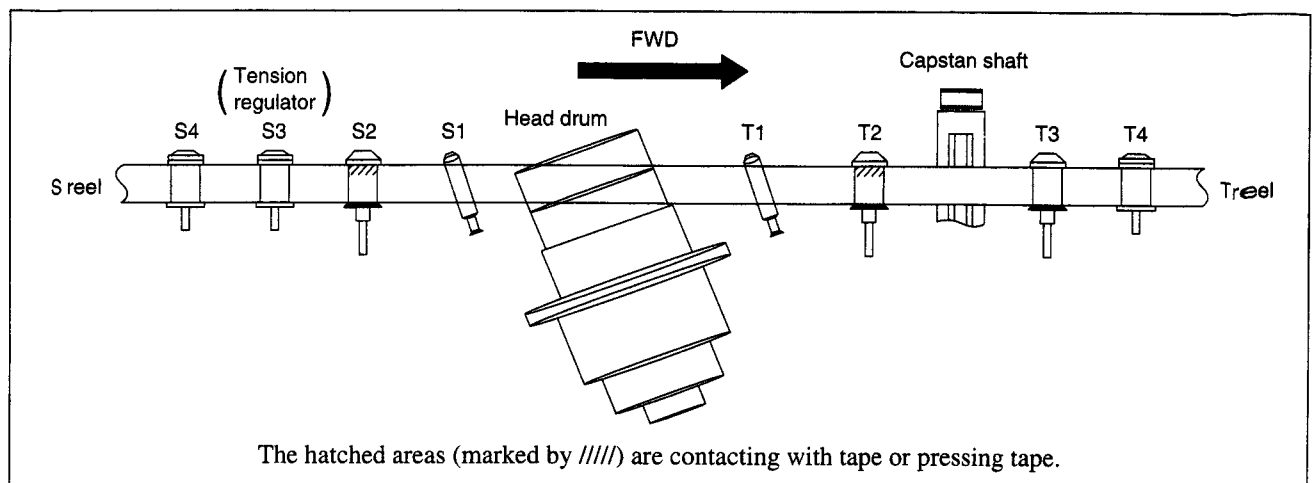


## 8. Switch setting of the tape path adjustment board (DJ-461)

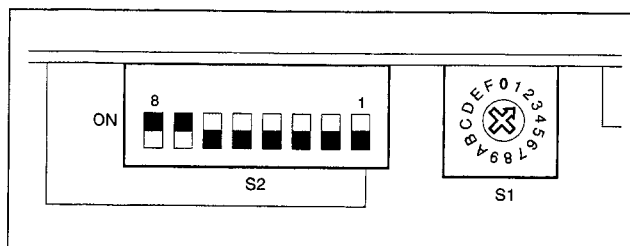

SW	Bit	Setting	Function
S1	—	2	Select the R/P head.
S2	1	OFF	
	2	OFF	
	3	OFF	
	4	OFF	
	5	OFF	
	6	OFF	
	7	ON	
	8	ON	Activate the switch setting of DJ-461

## 9. Measuring points/signal for adjustment

Signal name	Board	Measuring point
RF output (signal after envelope detection)	DJ-461	TP2
Switching pulse output	DJ-461	TP3
GND	DJ-461	E1
	DJ-461	E2

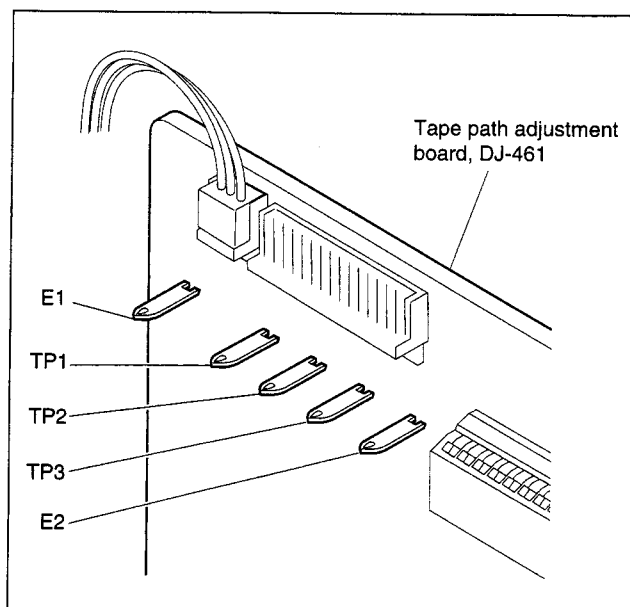

### Note

HEAD	S1	SWITCHING
R/P E*1	[2]	H
R/P O	[2]	L

\*1 : The head that is used for tape path adjustment when switches S2-7 and S2-8 on the path adjustment board (DJ-461) are ON.



## 8-2. Tape Path Adjustment

To perform the tracking adjustment using the alignment tape (XH2-1AST), refer the following items.

- For the procedure to enter the maintenance menu, refer to Section 5-2-2.
- For the procedure to exit the maintenance menu, refer to Section 5-2-3.
- For the operating procedure of the maintenance menu during the tracking adjustment, refer to Section 8-1.

### Tools



- Alignment tape, XH2-1AST : 8-967-999-02
- Tape path adjustment board, DJ-461 : J-6444-610-B
- Tape path tool connection cable, DJ-472 : J-6444-720-A
- Tape path tool power supply cable, DJ-500 : J-6445-000-A
- DC regulated power supply
- Dual trace oscilloscope

### Check Procedure

1. Connect the oscilloscope as follows :  
CH-1 : TP2 / DJ-461  
CH-2 : TP3 / DJ-461  
TRIG : CH-2
2. Insert the alignment tape XH2-1AST on the VTR.
3. Put the unit into PLAY mode.
4. Adjust the variable VOLTS/DIV control of the oscilloscope so that the maximum amplitude of the RF waveform becomes the three DIVISIONs on the oscilloscope.
5. Adjust the RF waveform until it satisfies the specification by changing the height of the S2 and T2 guides.
  - When the RF waveform at the entrance side forms the shape of the solid line shown in Fig.1, turn the guide S2 clockwise to obtain the flat waveform.

#### Note


This adjustment must end with the clockwise rotation of the guide S2.

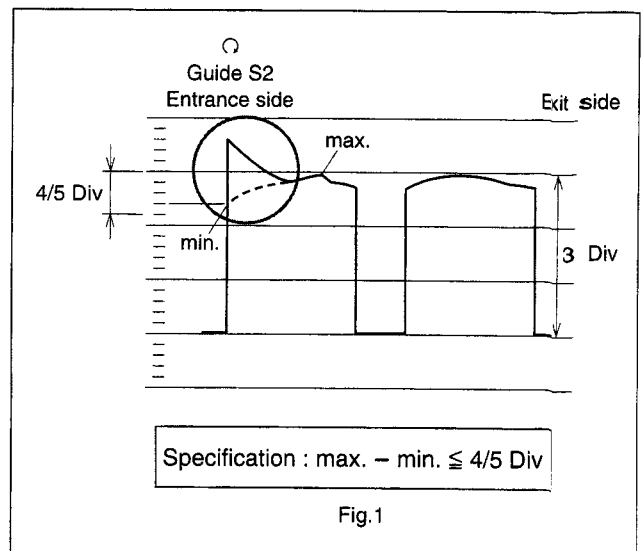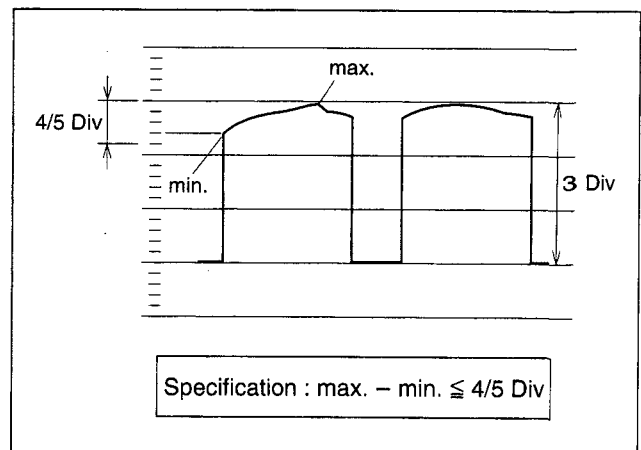

- When the RF waveform at the entrance side forms the shape of the solid line shown in Fig.2, turn the guide S2 counterclockwise to waveform as shown by the solid line in Fig.1. Then turn the guide S2 clockwise to obtain the desired waveform.

**Note**


This adjustment must end with the clockwise rotation of the guide S2.

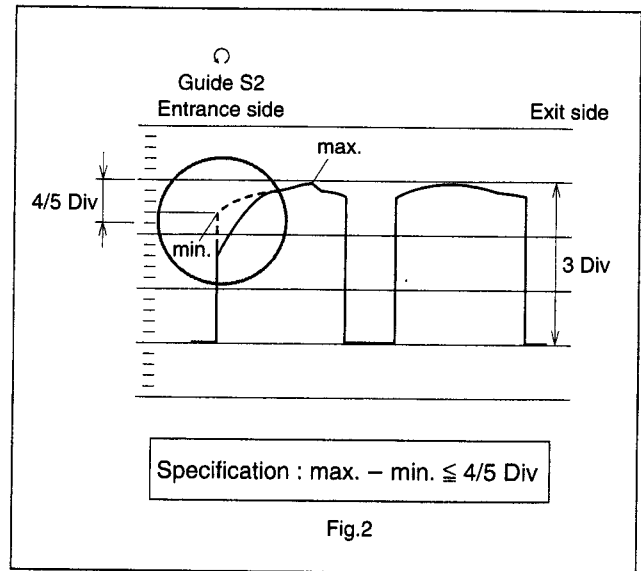

- When the RF waveform at the exit side forms the shape of the solid line shown in Fig.3, turn the guide T2 clockwise to obtain the flat waveform.

**Note**

This adjustment must end with the clockwise rotation of the guide T2.

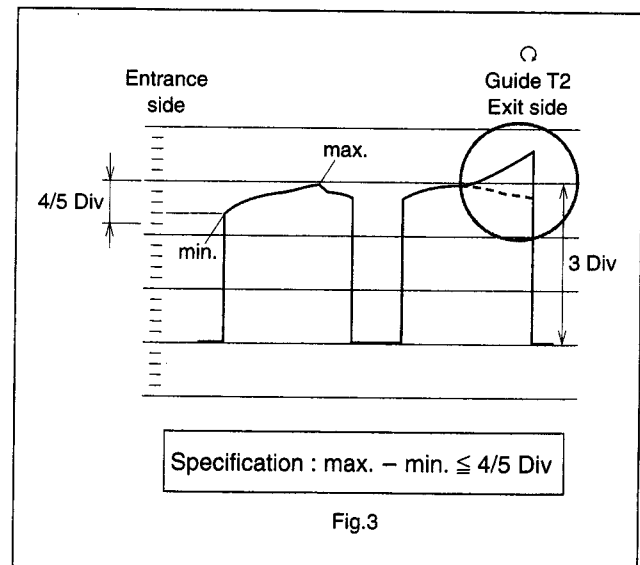



### 8-3. RF Switching Position Adjustment

Be sure to perform the RF switching position adjustment whenever the tape path adjustment (refer to Section 8-2) is performed.

Perform this adjustment in the AUTO mode.




To perform the RF switching position adjustment using the alignment tape (XH5-1A2 for NTSC or XH5-1AP2 for PAL), refer the following items.


- For the procedure to enter the maintenance menu, refer to Section 5-2-2.
- For the procedure to exit the maintenance menu, refer to Section 5-2-3.



#### Tools


Alignment tape, XH5-1A2 : 8-967-999-22 (for NTSC)  
XH5-1AP2 : 8-967-999-26 (for PAL)


#### Adjustment procedure RF switching position adjustment using the [AUTO adjustment]

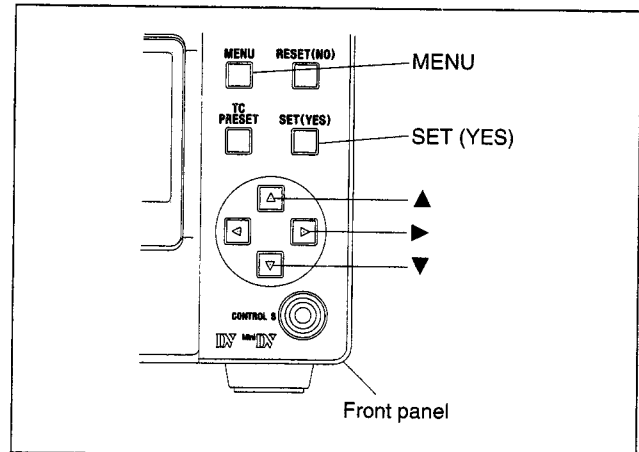
Use the keys of , ,  and **SET (YES)** on the front panel to perform the tracking adjustment.



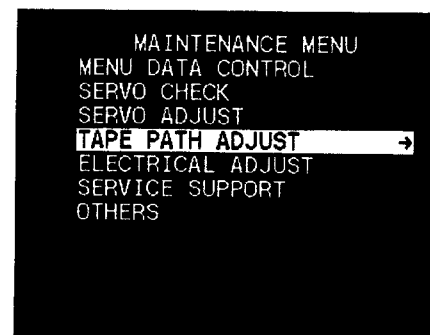


1. Enter the maintenance menu.
2. Move the cursor to "TAPE PATH ADJUST" which is displayed with a white background using the ,  keys.

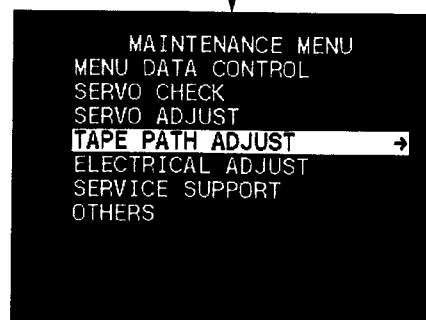

3. Press the  key.  
"TAPE PATH ADJUST" is selected and its lower layer submenu appears.




4. Move the cursor to "RF SWITCHING POSITION" which is displayed with a white background using the ,  keys.

5. Select "START OK?" by pressing the  key.

6. Press the **SET (YES)** key.

7. Playback the alignment tape XH5-1A2 for NTSC or XH5-1AP2 for PAL. (display ②)  
Then the unit starts the RF switching position automatic adjustment. (display ③)

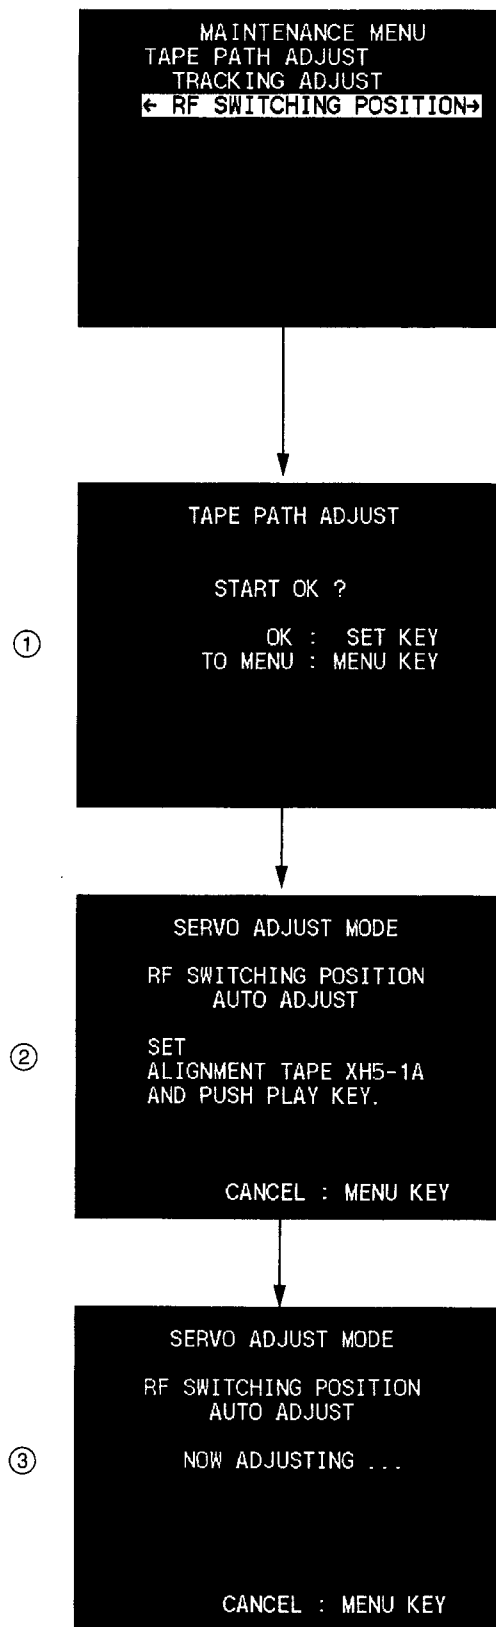


8. When the adjustment is completed, the display ⑤ "COMPLETE" appears and alignment tape is automatically ejected.

**Note**

When the "ADJUST INCOMPLETE" appears on the monitor screen, check that the alignment tape which is played back is XH5-1A2 for NTSC, or XH5-1AP2 for PAL.

9. Upon completion of adjustment the alignment tape is ejected automatically.
10. Press the **MENU** key to return to the maintenance menu.

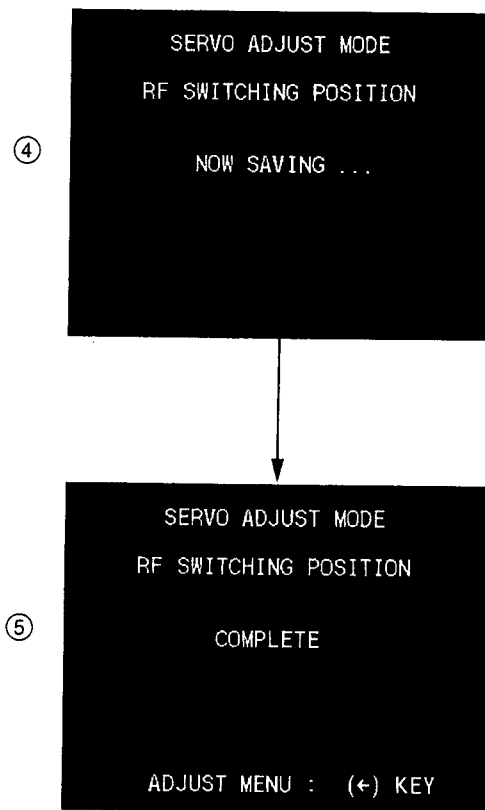

## 8-4. Tape Path Adjustment Confirmation

When Section 8-2, "Tape Path Adjustment" is completed, be sure to perform Section 8-3. "RF Switching Position Adjustment".

To perform tracking adjustment using the alignment tape (XH2-1AST), refer to the following items.



- For the procedure to enter the maintenance menu, refer to Section 5-2-2.
- For the procedure to exit the maintenance menu, refer to Section 5-2-3.
- For the operating procedure of the maintenance menu during the tracking adjustment, refer to Section 8-1.

### Tools

- Alignment tape, XH2-1AST : 8-967-999-02
- Tape path adjustment board, DJ-461 : J-6444-610-B
- Tape path tool connection cable, DJ-472 : J-6444-720-A
- Tape path tool power supply cable, DJ-500 : J-6445-000-A
- DC regulated power supply
- Dual trace oscilloscope

### Check Procedure

1. Connect the oscilloscope as follows :  
CH-1 : TP2/DJ-461  
CH-2 : TP3/DJ-461  
TRIG : CH-2
2. Insert the alignment tape XH2-1AST on the VTR.
3. Put the unit into PLAY mode.
4. Adjust the variable VOLTS/DIV control of the oscilloscope so that the maximum amplitude of the RF waveform becomes the three DIVISIONs on the oscilloscope.
5. Measure the minimum amplitude of the RF waveform, and confirm that the amplitude difference between the maximum and the minimum of the RF waveform satisfies the specification.
6. Confirm that fluctuation of the RF waveform satisfies the specification.

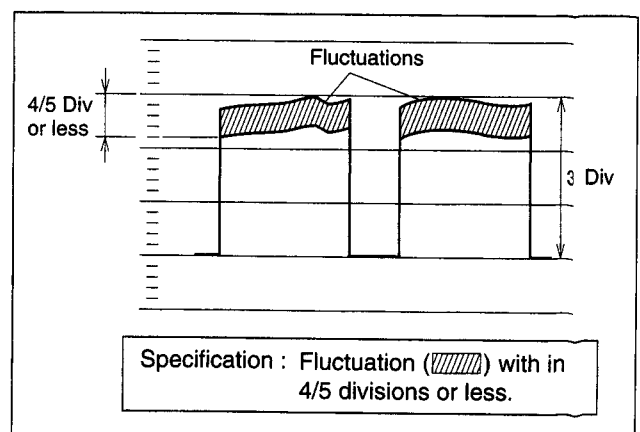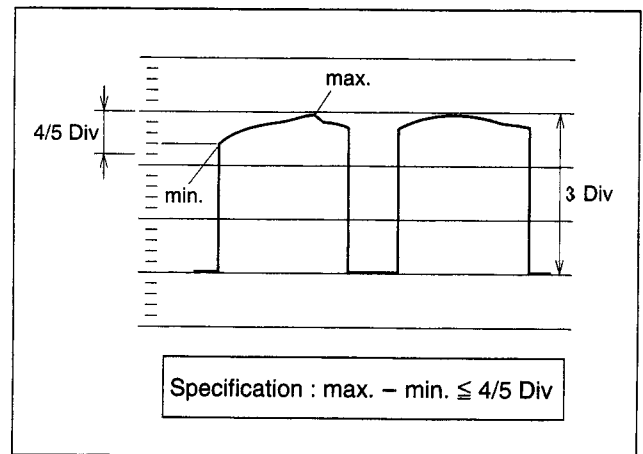

## 8-5. Search Forward (×5) Waveform Check

### Basic Knowledge

To perform tracking adjustment using the alignment tape (XH2-1AST), refer to the following items.



- For the procedure to enter the maintenance menu, refer to Section 5-2-2.
- For the procedure to exit the maintenance menu, refer to Section 5-2-3.
- For the operating procedure of the maintenance menu during the tracking adjustment, refer to Section 8-1.

### Tools

- Alignment tape, XH2-1AST : 8-967-999-02
- Tape path adjustment board, DJ-461 : J-6444-610-B
- Tape path tool connection cable, DJ-472 : J-6444-720-A
- Tape path tool power supply cable, DJ-500 : J-6445-000-A
- DC regulated power supply
- Dual trace oscilloscope
- REMOTE CONTROL UNIT

### Check Procedure

1. Connect the oscilloscope as follows :  
CH-1 : TP2/DJ-461  
CH-2 : TP3/DJ-461  
TRIG : CH-2
2. Insert the alignment tape XH2-1AST on the VTR.
3. Set the JOG dial on the remote control unit search FORWARD to the × 5 position.
4. Adjust the variable VOLTS/DIV control of the oscilloscope so that the maximum amplitude of the RF waveform becomes the three DIVISIONs on the oscilloscope.
5. Confirm that the RF waveform should be almost the same amplitude with constant intervals as shown in Fig.1.
6. Confirm that the RF waveform raises up within two seconds at the specified amplitude when the mode is changed from search FORWARD (× 5) to PLAY.

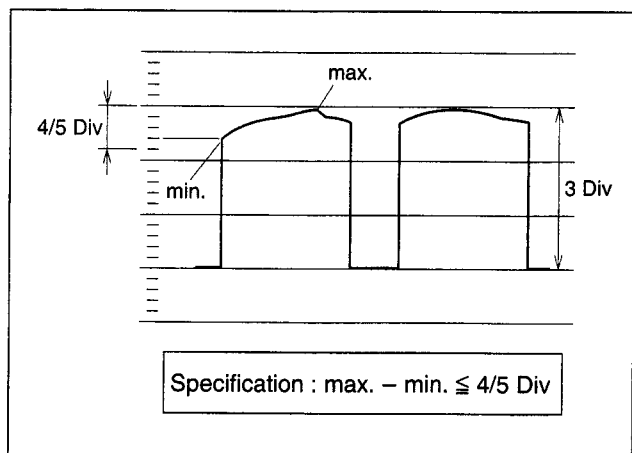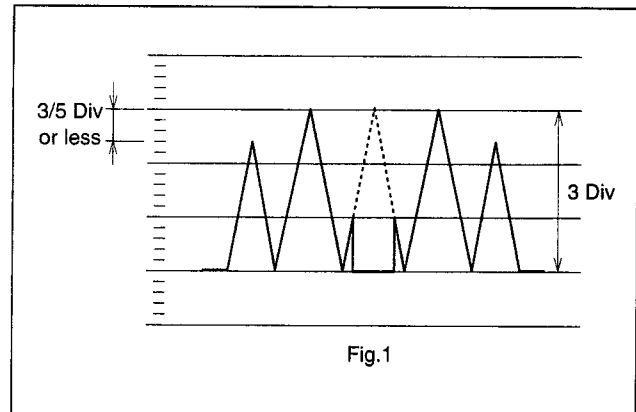



## 8-6. Search Reverse (×5) Waveform Check

### Basic Knowledge

To perform tracking adjustment using the alignment tape (XH2-1AST), refer to the following items.



- For the procedure to enter the maintenance menu, refer to Section 5-2-2.
- For the procedure to exit the maintenance menu, refer to Section 5-2-3.
- For the operating procedure of the maintenance menu during the tracking adjustment, refer to Section 8-1.

### Tools

- Alignment tape, XH2-1AST : 8-967-999-02
- Tape path adjustment board, DJ-461 : J-6444-610-B
- Tape path tool connection cable, DJ-472 : J-6444-720-A
- Tape path tool power supply cable, DJ-500 : J-6445-000-A
- DC regulated power supply
- Dual trace oscilloscope
- REMOTE CONTROL UNIT

### Check Procedure

1. Connect the oscilloscope as follows :  
CH-1 : TP2/DJ-461  
CH-2 : TP3/DJ-461  
TRIG : CH-2
2. Insert the alignment tape XH2-1AST on the VTR.
3. Set the JOG dial on the remote control unit search REVERSE to the × 5 position.
4. Adjust the variable VOLTS/DIV control of the oscilloscope so that the maximum amplitude of the RF waveform becomes the three DIVISIONs on the oscilloscope.
5. Confirm that the RF waveform should be almost the same amplitude with constant intervals as shown in Fig.1.
6. Confirm that the RF waveform raises up within two seconds at the specified amplitude when the mode is changed from search REVERSE (× 5) to PLAY.

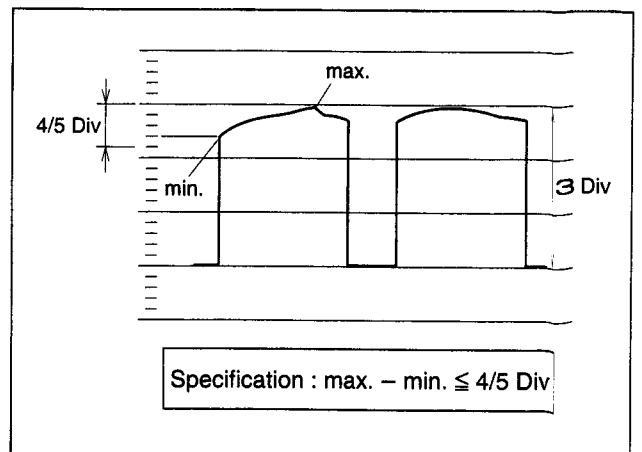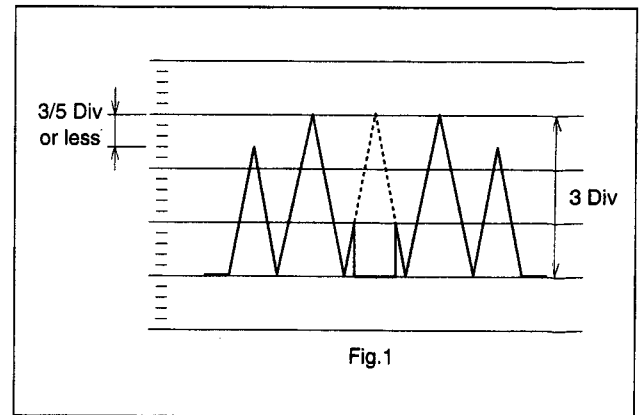

## 8-7. RF Waveform Raiseup Check

To perform tracking adjustment using the alignment tape (XH2-1AST), refer to the following items.


- For the procedure to enter the maintenance menu, refer to Section 5-2-2.
- For the procedure to exit the maintenance menu, refer to Section 5-2-3.
- For the operating procedure of the maintenance menu during the tracking adjustment, refer to Section 8-1.

### Tools

- Alignment tape, XH2-1AST : 8-967-999-02
- Tape path adjustment board, DJ-461 : J-6444-610-B
- Tape path tool connection cable, DJ-472 : J-6444-720-A
- Tape path tool power supply cable, DJ-500 : J-6445-000-A
- DC regulated power supply
- Dual trace oscilloscope

### Check Procedure

1. Connect the oscilloscope as follows :  
CH-1 : TP2 / DJ-461  
CH-2 : TP3 / DJ-461  
TRIG : CH-2
2. Insert the alignment tape XH2-1AST on the VTR.
3. Confirm that the RF waveform raises up within two seconds at the specified amplitude when the mode is changed from EJECT → PLAY → EJECT → PLAY repeatedly.
4. Confirm that the RF waveform raises up within two seconds at the specified amplitude when the mode is changed from FF → PLAY and from REW → PLAY.

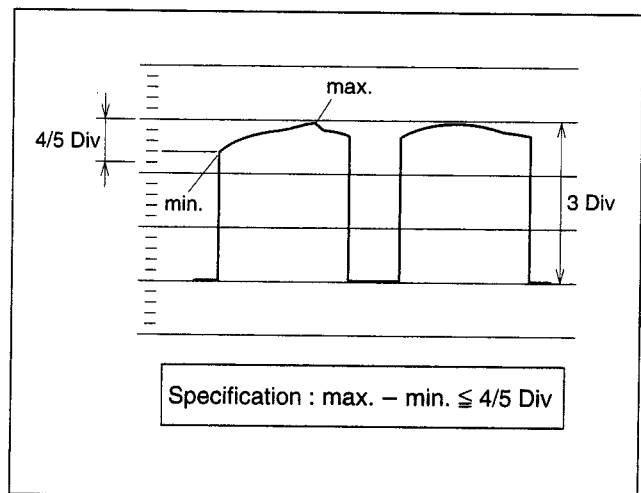

## 8-8. Tape Curl Check at Tape Guide


### Tools

- Alignment tape, XH2-1AST : 8-967-999-02
- Dental mirror : J-6080-029-A

### Check Procedure


Confirm that tape runs at each tape guide as specified by the following figure when the unit put into the modes of PLAY, FF and REW respectively.

### Tape running condition

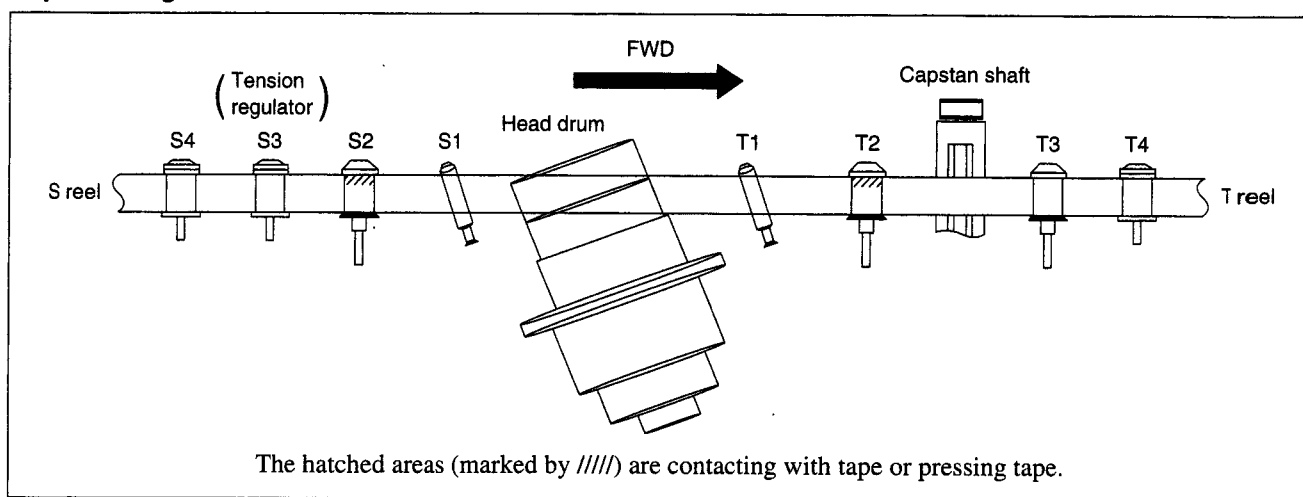

### Tape running condition

Tape guide	A (Contact with upper flange)	B (Runs in the center)	C (Contact with lower flange)	D (Curled)	E (Folded)	F (Dropped)
S4	○	○	○	×	×	×
S3	○	○	○	×	×	×
S2	○	×	×	×	×	×
T2	○	×	×	×	×	×
T3	○	○	○	×	×	×
T4	○	○	○	×	×	×

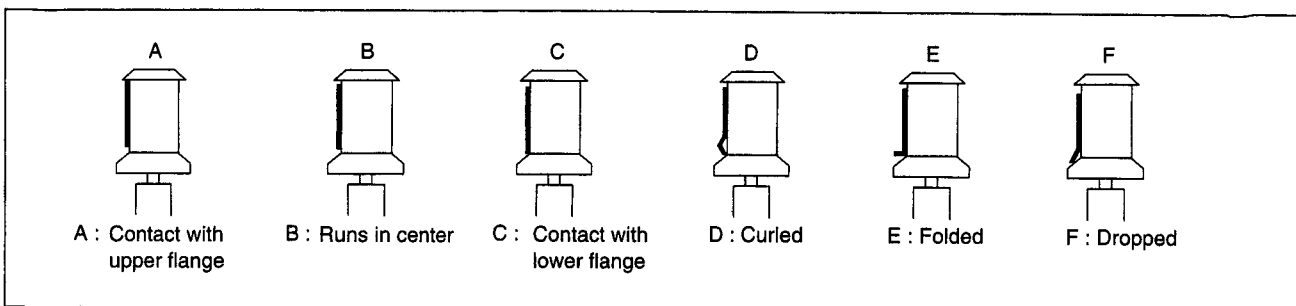



## Section 9

### Adjustment When Replacing Board

#### 9-1. Adjustment/Check Items When Replacing Board

No adjustment is required for the board other than below.

Board name	Setting/Adj. after replacement (Reference Section)	Contents
DR-428 board	5. Maintenance Menu	5-3-4. Servo Adjust S/T REEL & CAPSTAN Adjustment TENTION Adjustment
		5-3-5. Tape Path Adjust TRACKING ADJUST Adjustment RF SWITCHING POSITION Adjustment
	6-2. Hours Meter	Reset the Hours Meter
	Operating Instructions Chapter 4. Menu	Resetting of Setup Menu Data
SSS-10 board	5. Maintenance Menu	5-3-1. Menu Data Control MENU/SW DATA SAVE/LOAD
		5-3-4. Servo Adjust S/T REEL & CAPSTAN Adjustment TENTION Adjustment
RP-117 board	5. Maintenance Menu	5-3-6. Electrical Adjust PLL F0 Adjustment EQ (DVCAM) Adjustment EQ (DV) Adjustment EQ (DVCPRO) Adjustment



## Section 10

### Electrical Alignment

#### 10-1. Electrical Alignment Overview

##### 10-1-1. List of Adjustment Parts

###### AVP-3/3P

RV101	PB COMPOSITE Y/C Delay .....	10-17
RV102	PB COMPOSITE C/C Delay .....	10-16
RV103	PB COMPONENT Y/B-Y Delay .....	10-18
RV104	COMPONENT B-Y OUT Level .....	10-7
RV105	PB COMPONENT Y/R-Y Delay .....	10-18
RV106	COMPONENT R-Y OUT Level .....	10-8
RV200	ENC R-Y Level .....	10-14
RV201	ENC B-Y Level .....	10-14
RV202	ENC V SC Leak .....	10-10
RV203	ENC U SC Leak .....	10-10
RV204	PB Burst Level .....	10-15
RV300	COMPONENT Y OUT Level .....	10-7
RV303	PB S VIDEO Chroma Level .....	10-16
RV304	VIDEO OUT 1 Video/Sync Level .....	10-11
RV305	VIDEO OUT 3 Y Level .....	10-12
RV306	VIDEO OUT SYNC LEVEL .....	10-11
RV307	COMPONENT/S-Y Sync Level .....	10-7
RV401	U/V OFF SET .....	10-13
RV402	PB INT SCH Phase .....	10-19
RV500	HCK Frequency .....	10-6
RV501	INT SC Frequency .....	10-6
RV601	CH-1 OUTPUT Level .....	10-4
RV602	CH-2 OUTPUT Level .....	10-4

###### SDI-58 (DSBK-1501)

RV101	SDI/SDTI IN FREE RUN .....	10-31
RV501	SDI/SDTI OUT FREE RUN .....	10-31

\* : The items with asterisk (\*) require check only, and are not used normally.

###### DDE-15/15P (DSBK-1504/1504P)

CT500	SPCK Error .....	10-20
RV100	REC A/D Y Level .....	10-24
RV101*	REC S VIDEO Chroma Level .....	10-27
RV200	REC COMPOSITE Y Level .....	10-25
RV201	REC COMPOSITE Chroma Level .....	10-26
RV202	REC COMPOSITE Chroma Level .....	10-26
RV300	COMPOSITE 4Fsc PLL DC .....	10-21
RV400	REC Y Level .....	10-22
RV401	REC COMPONENT B-Y Level .....	10-23
RV402	REC COMPONENT R-Y Level .....	10-23
RV403	REC Y Clamp Level .....	10-22
RV404	REC COMPOSITE Y/B-Y Delay .....	10-28
RV405	REC S VIDEO Y/B-Y Delay .....	10-30
RV406	REC COMPONENT Y/B-Y Delay .....	10-29
RV407	REC COMPOSITE Y/R-Y Delay .....	10-28
RV408	REC S VIDEO Y/R-Y Delay .....	10-30
RV409	REC COMPONENT Y/R-Y Delay .....	10-29
RV700	CH-1 EE Level .....	10-4
RV701	CH-2 EE Level .....	10-4

## 10-1-2. Measuring Equipment and Tools

Type of measuring equipment	Equivalent	Remarks
Oscilloscope	Tektronix 2445	150 MHz or more
Video signal generator	TSG-130A (Op.03)	for NTSC
	TSG-131A (Op.03)	for PAL
Waveform monitor	Tektronix 1760 Op. SC/1765 Op. SC	
Audio signal generator	HP339A	
Audio level meter	HP3400A/MeguroMN-446	
Frequency counter	Advantest TR5821	
Extension board	DJ-495 (J-6444-950-A)	
Blank tape	DVM30ME, DVM30NME	On the market

## 10-1-3. Reference Tape for Alignment

### XH5-1A2 (8-967-999-22) (for NTSC)

Recording contents are followings.

VIDEO	TIME CODE (h) (m) (s)	REC (s)	AUDIO	
Black Burst	23 : 59 : 00	60	No Signal	
75 % Full Color Bars	00 : 00	60	1 kHz	
60 % Multi Burst	01 : 00	60	20 Hz	
Bowtie with Mod 12.5T	02 : 00	30	14.5 kHz	
Shallow Ramp	02 : 30	30	10 kHz	
	03 : 00	30	No Signal	
Cross Hatch (index)	03 : 30	30	1 kHz 0 dBFS	
Line 17	04 : 00	40	1 ch	1 kHz
75 % Full Color Bars	04 : 40	40	2 ch	
Quad Phase	05 : 20	40	3 ch	
	06 : 00	40	4 ch	
Black Burst	06 : 40	5	No Signal	
	06 : 45	5		
60 % Multi Burst (for Composite)	06 : 50	60	1 kHz	
Mod 12.5T	07 : 50	30	20 Hz	
Shallow Ramp (B-Y/R-Y OFF)	08 : 20	30	20 kHz	
	08 : 50	30	10 kHz	
Cross Hatch (index)	09 : 20	30	1 kHz 0 dBFS	
Chroma Noise	09 : 50	30	1 kHz	
Line 17	10 : 20	30		
75 % Full Color Bars	10 : 50	180		
60 % Multi Burst	13 : 50	60		
Mod 12.5T	14 : 50	30		
Shallow Ramp	15 : 20	60		
75 % Full Color Bars	16 : 20	100		
75 % Full Color Bars (R-Y OFF)	18 : 00	180		
75 % Full Color Bars (B-Y OFF)	21 : 00	180		
Blanking Marker	24 : 00	180		
Line 17 (R-Y OFF)	27 : 00	180		
Line 17 (B-Y OFF)	30 : 00	180		

\* Audio levels are -20 dBFS (Reference), except 1 kHz 0 dBFS part.



**XH5-1AP2 (8-967-999-26) (for PAL)**

Recording contents are followings.

VIDEO	TIME CODE (h) (m) (s)	REC (s)	AUDIO		
Black Burst	23 : 59 : 00	60	No Signal	32 kHz 4 ch	
100 % Full Color Bars	00 : 00	60	1 kHz		
60 % Multi Burst	01 : 00	60	20 Hz		
Bowtie with Mod 10T	02 : 00	30	14.5 kHz		
Shallow Ramp	02 : 30	30	10 kHz		
	03 : 00	30	No Signal		
Cross Hatch (index)	03 : 30	30	1 kHz 0 dBFS		
Line 17	04 : 00	40	1 ch		1 kHz
100 % Full Color Bars	04 : 40	40	2 ch		
Quad Phase	05 : 20	40	3 ch		
	06 : 00	40	4 ch		
Black Burst	06 : 40	5	No Signal	48 kHz 2 ch	
	06 : 45	5			
60 % Multi Burst (for Composite)	06 : 50	60	1 kHz		
Mod 10T	07 : 50	30	20 Hz		
Shallow Ramp (B-Y/R-Y OFF)	08 : 20	30	20 kHz		
	08 : 50	30	10 kHz		
Cross Hatch (index)	09 : 20	30	1 kHz 0 dBFS		
Chroma Noise	09 : 50	30	1 kHz		
Line 17	10 : 20	30			
100 % Full Color Bars	10 : 50	180			
60 % Multi Burst	13 : 50	60			
Mod 10T	14 : 50	30			
Shallow Ramp	15 : 20	60			
100 % Full Color Bars	16 : 20	100			
100 % Full Color Bars (R-Y OFF)	18 : 00	180			
100 % Full Color Bars (B-Y OFF)	21 : 00	180			
Blanking Marker	24 : 00	180			
Line 17 (R-Y OFF)	27 : 00	180			
Line 17 (B-Y OFF)	30 : 00	180			

\* Audio levels are -18 dBFS (Reference), except 1 kHz 0 dBFS part.



## 10-3. Video Adjustment

### Setting the Switches and SETUP MENU

This setting should be fixed in position unless otherwise specified.

#### For NTSC

##### Switch

LOCAL/REMOTE ; LOCAL

##### SETUP MENU

CHARA.DISPLAY	; ON	PROCESS CONTROL	} ; LOCAL
		VIDEO GAIN	
SETUP REMOVE	; OFF	CHROMA GAIN	} ; PRESET
SETUP ADD	; OFF	CHROMA PHASE	
		SETUP LEVEL	

#### For PAL

##### Switch

LOCAL/REMOTE ; LOCAL


##### SETUP MENU

CHARA.DISPLAY	; ON	VIDEO GAIN	} ; PRESET
		CHROMA GAIN	
PROCESS CONTROL	; LOCAL	CHROMA PHASE	
		BLACK LEVEL	


### Connection

Connect some equipment as following unless otherwise specified.

#### (Connection 1)

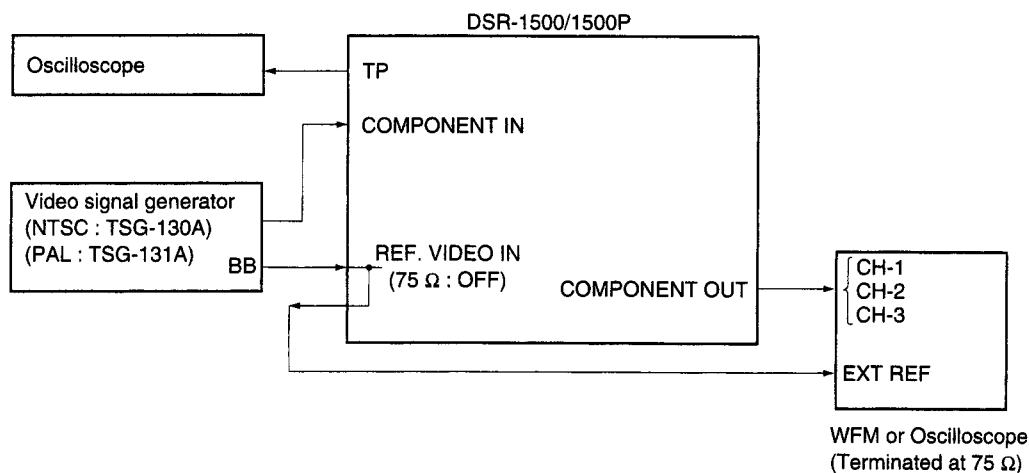

#### (Connection 2)

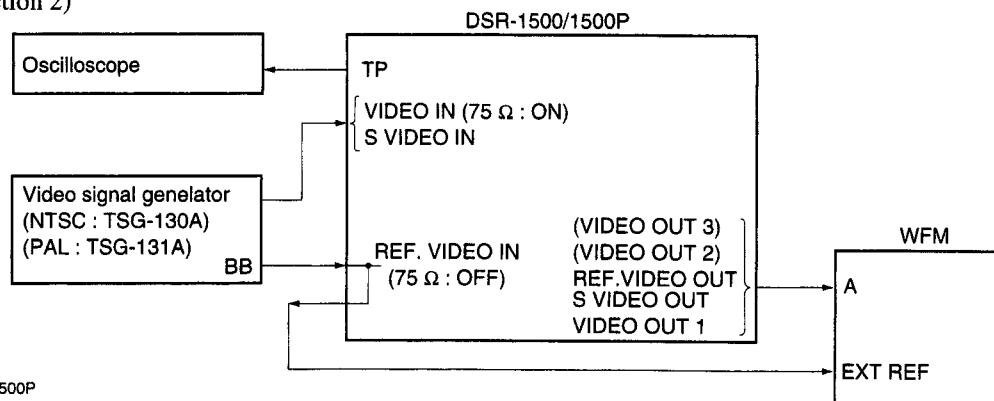


### 10-3-1. INT SC Frequency Adjustment

Conditions for adjustment	Specification	Adjustment
Oscilloscope or voltmeter • STOP mode  Connection 1	① Measure the voltage (Vo) at the TP504/ AVP-3/3P (E-1). ② Measure the voltage at the TP502/ AVP-3/3P (E-1).  Spec. : $V = V_o \pm 0.1 \text{ Vdc}$	●RV501/AVP-3/3P (E-1)


### 10-3-2. HCK Frequency Adjustment

(Connection)

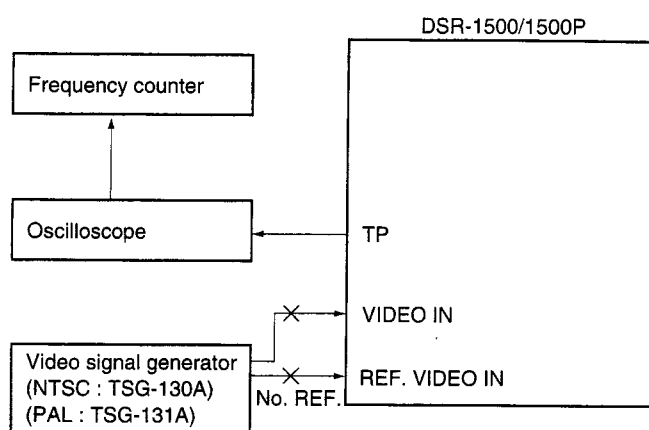


Conditions for adjustment	Specification	Adjustment
Frequency counter • STOP mode • REF. VIDEO IN ; No signal • VIDEO IN Select ; Composite • VIDEO IN ; No signal	TP500/AVP-3/3P (E-1)  Spec. : $f = 13,500,000 \pm 35 \text{ Hz}$	●RV500/AVP-3/3P (E-1)


### 10-3-3. COMPONENT Y OUT Level Adjustment

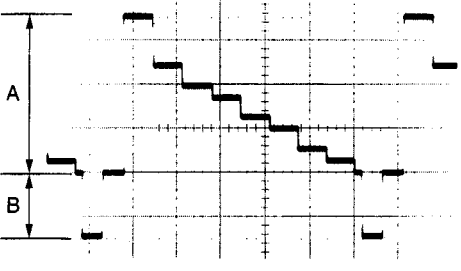Conditions for adjustment	Specification	Adjustment
<p>[For NTSC] WFM or Oscilloscope</p> <ul style="list-style-type: none"> <li>• MENU SETUP ADD ; ON</li> <li>• PB mode</li> <li>75 % Color bars/XH5-1A2</li> <li>• VIDEO OUT select/MENU ; Y-R, B</li> </ul> <p>[For PAL] WFM or Oscilloscope</p> <ul style="list-style-type: none"> <li>• PB mode</li> <li>100 % Color bars/XH5-1AP2</li> </ul> <p>Connection 1</p>	<p>COMPONENT Y OUT (75 <math>\Omega</math> terminated)</p> <p>(A) Y/S-Y Level (B) Y/S-Y SYNC</p> <p>TRIG : REF. VIDEO</p>  <p>Spec. :</p> <p>[For NTSC] A = <math>0.714 \pm 0.007</math> V (100 <math>\pm 1</math> IRE) B = <math>0.286 \pm 0.003</math> V (40 <math>\pm 0.5</math> IRE)</p> <p>[For PAL] A = <math>0.700 \pm 0.007</math> V B = <math>0.300 \pm 0.003</math> V</p>	<p>RV300/AVP-3/3P (B-3) RV307/AVP-3/3P (B-2)</p>


### 10-3-4. COMPONENT B-Y OUT Level Adjustment

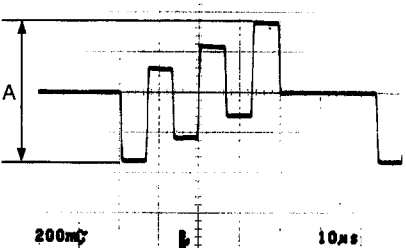Conditions for adjustment	Specification	Adjustment
<p>[For NTSC] WFM or Oscilloscope</p> <ul style="list-style-type: none"> <li>• MENU SETUP ADD ; ON</li> <li>• PB mode</li> <li>75 % Color bars/XH5-1A2</li> <li>• VIDEO OUT select/MENU ; Y-R, B</li> </ul> <p>[For PAL] WFM or Oscilloscope</p> <ul style="list-style-type: none"> <li>• PB mode</li> <li>100 % Color bars/XH5-1AP2</li> </ul> <p>Connection 1</p>	<p>COMPONENT B-Y OUT (75 <math>\Omega</math> terminated)</p> <p>TRIG : REF. VIDEO</p>  <p>Spec. :</p> <p>[For NTSC] A = <math>0.700 \pm 0.007</math> V (98 <math>\pm 1</math> IRE)</p> <p>[For PAL] A = <math>0.700 \pm 0.070</math> V</p>	<p>RV104/AVP-3/3P (D-4)</p>


### 10-3-5. COMPONENT R-Y OUT Level Adjustment

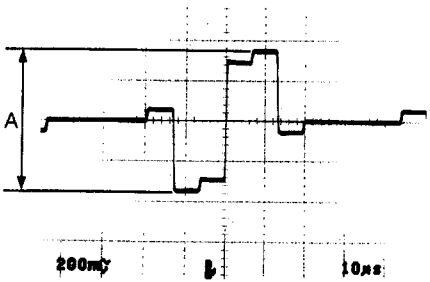Conditions for adjustment	Specification	Adjustment
[For NTSC] WFM or Oscilloscope • MENU SETUP ADD ; ON • PB mode 75 % Color bars/XH5-1A2 • VIDEO OUT select/MENU ; Y-R, B  [For PAL] WFM or Oscilloscope • PB mode 100 % Color bars/XH5-1AP2  Connection 1	COMPONENT R-Y OUT (75 $\Omega$ terminated)  TRIG : REF. VIDEO    Spec. : [For NTSC] $A = 0.700 \pm 0.007 \text{ V p-p (98} \pm 1 \text{ IRE)}$ [For PAL] $A = 0.700 \pm 0.007 \text{ V p-p}$	●RV106/AVP-3/3P (D-5)

### 10-3-6. SETUP OFF Chroma Level Check (NTSC only)



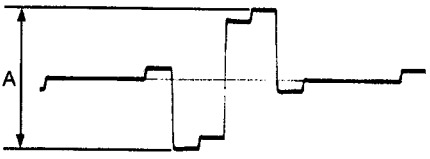
Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope • PB mode 75 % Color bars/XH5-1A2 • VIDEO OUT select/MENU ; Y-R, B  <b>Note</b> Check that MENU SETUP ADD ; OFF  Connection 1	COMPONENT R-Y OUT (75 $\Omega$ terminated)  TRIG : REF. VIDEO    Spec. : $A = 0.757 \pm 0.007 \text{ V p-p (106} \pm 1 \text{ IRE)}$	

### 10-3-7. S VIDEO OUT Y Level Check

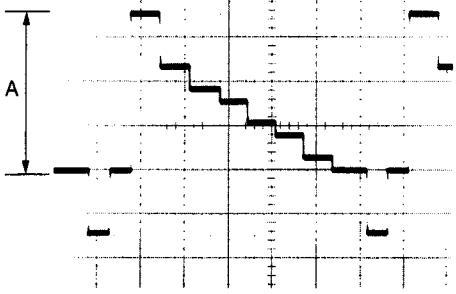Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope • PB mode 75 % Color bars/XH5-1A2 (for NTSC) 100 % Color bars/XH5-1AP2 (for PAL) • VIDEO OUT select/MENU ; S-VIDEO	S VIDEO (Y) OUT (75 $\Omega$ terminated)  TRIG : REF. VIDEO    Spec. : [For NTSC] $A = 0.714 \pm 0.007 \text{ V (} 100 \pm 1 \text{ IRE)}$ [For PAL] $A = 0.700 \pm 0.007 \text{ V}$	


Connection 2

### 10-3-8. ENC SC Leak Adjustment

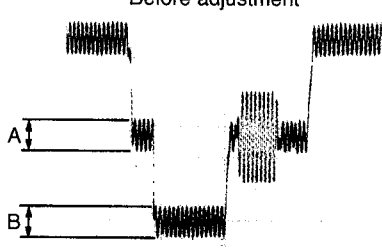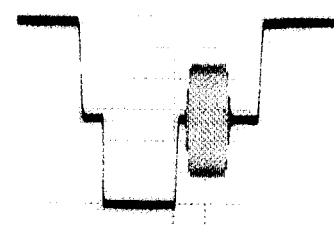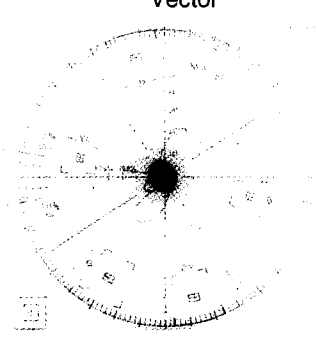
Conditions for adjustment	Specification	Adjustment
<b>Step 1</b> <ul style="list-style-type: none"> <li>• PB mode</li> <li>75 % Color bars/XH5-1A2 (for NTSC)</li> <li>100 % Color bars/XH5-1AP2 (for PAL)</li> <li>• Set the time axis of the WFM to magnification mode</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul>	<p>VIDEO OUT 1 (75 <math>\Omega</math> terminated)</p> <p>(A) V SC Leak (B) U SC Leak</p> <p>TRIG : REF. VIDEO</p> <p>WFM</p> <p>Before adjustment</p>  <p>(Spec. Adjust the A and B alternately.)</p> <p>↓</p> <p>After adjustment</p>  <p>Spec. : A, B <math>\leq</math> 0.007 V (1 IRE)</p>	<p>●RV202/AVP-3/3P (C-5)</p> <p>●RV203/AVP-3/3P (C-5)</p>
<b>Step 2 (Check)</b> <ul style="list-style-type: none"> <li>• PB mode</li> <li>75 % Color bars/XH5-1A2 (for NTSC)</li> <li>100 % Color bars/XH5-1AP2 (for PAL)</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul>	<p>VIDEO OUT 1 (75 <math>\Omega</math> terminated)</p> <p>TRIG : REF. VIDEO</p> <p>Vector</p>  <p>Spec. : Maximum the gain of the Vector and check the dot is at center.</p>	




### 10-3-9. VIDEO OUT 1 Video/Sync Level Adjustment

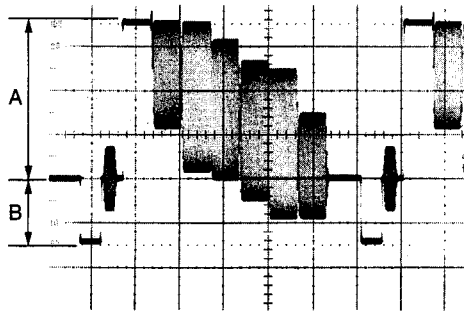Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope <ul style="list-style-type: none"> <li>• PB mode</li> <li>75 % Color bars/XH5-1A2 (for NTSC)</li> <li>100 % Color bars/XH5-1AP2 (for PAL)</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul>	<p>VIDEO OUT 1 (75 <math>\Omega</math> terminated)</p> <p>(A) Video Level (B) Sync Level</p> <p>TRIG : REF. VIDEO</p>  <p>Spec. : [For NTSC] A = <math>0.714 \pm 0.007</math> V (100 <math>\pm 1</math> IRE) B = <math>0.286 \pm 0.003</math> V (40 <math>\pm 0.5</math> IRE) [For PAL] A = <math>0.700 \pm 0.007</math> V B = <math>0.300 \pm 0.003</math> V</p>	<ul style="list-style-type: none"> <li>●RV304/AVP-3/3P (B-3)</li> <li>●RV306/AVP-3/3P (B-3)</li> </ul>
Connection 2		

### 10-3-10. VIDEO OUT 2 Video Level Check


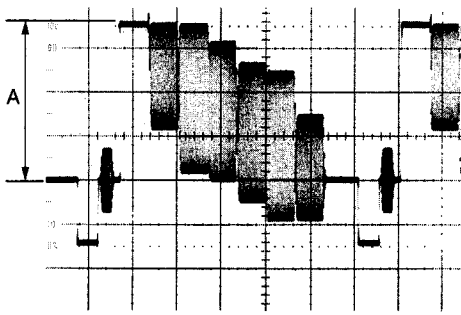
Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope <ul style="list-style-type: none"> <li>• PB mode</li> <li>75 % Color bars/XH5-1A2 (for NTSC)</li> <li>100 % Color bars/XH5-1AP2 (for PAL)</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul>	<p>VIDEO OUT 2 (75 <math>\Omega</math> terminated)</p> <p>TRIG : REF. VIDEO</p>  <p>Spec. : [For NTSC] A = <math>0.714 \pm 0.007</math> V (100 <math>\pm 1</math> IRE) [For PAL] A = <math>0.700 \pm 0.007</math> V</p>	
Connection 2		

### 10-3-11. VIDEO OUT 3 Y Level Adjustment

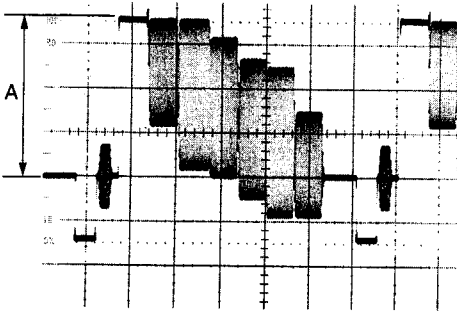Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope • PB mode 75 % Color bars/XH5-1A2 (for NTSC) 100 % Color bars/XH5-1AP2 (for PAL) • VIDEO OUT select/MENU ; COMPOSITE	VIDEO OUT 3 (75 $\Omega$ terminated)  TRIG : REF. VIDEO    Spec. : [For NTSC] $A = 0.714 \pm 0.007 \text{ V (100} \pm 1 \text{ IRE)}$ [For PAL] $A = 0.700 \pm 0.007 \text{ V}$	●RV305/AVP-3/3P (B-4)



Connection 2

### 10-3-12. U-V Axis (B-Y, R-Y) Phase Adjustment

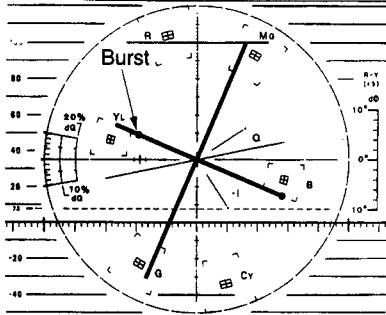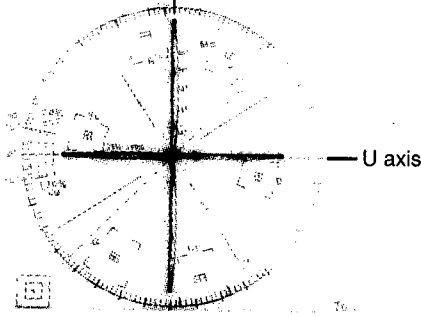
Conditions for adjustment	Specification	Adjustment
<ul style="list-style-type: none"> <li>• PB mode</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul> <p>[Flow]</p> <p>(A) Burst preset</p> <ul style="list-style-type: none"> <li>• PB mode</li> </ul> <p>Quad Phase/XH5-1A2 or XH5-1AP2 (05:20-06:00)</p> <p>(B) V-axis phase adjustment</p> <ul style="list-style-type: none"> <li>• PB mode</li> </ul> <p>Quad Phase/XH5-1A2 or XH5-1AP2 (05:20-06:00)</p>	<p>VIDEO OUT 1 (75 <math>\Omega</math> terminated)</p> <p>(A) Burst preset</p> <p>(B) V-axis (U/V OFFSET)</p> <p>TRIG : REF. VIDEO</p> <p>Vector</p> <p>(Before adjustment)</p>  <p style="text-align: center;">↓</p> <p>(After adjustment)</p>  <p>Spec. : (A) Set the dot of the burst in the right position on the scale. (B) Set the dots of the R-Y on the V axis of the vector. <math>C = 0 \pm 0.5^\circ</math></p>	<ul style="list-style-type: none"> <li>● PHASE control/Vector</li> <li>● RV401/AVP-3/3P (D-2)</li> </ul>

Connection 2


### 10-3-13. PB VIDEO OUT 1 Chroma/Burst Level Adjustment

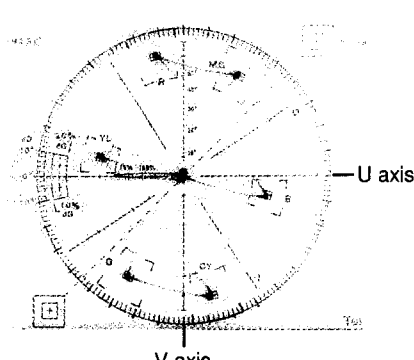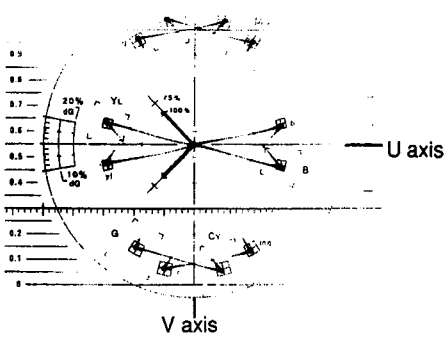Conditions for adjustment	Specification	Adjustment
<p>WFM or Oscilloscope</p> <ul style="list-style-type: none"> <li>• PB mode</li> <li>75 % Color bars/XH5-1A2 (for NTSC)</li> <li>100 % Color bars/XH5-1AP2 (for PAL)</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul> <p><b>Note</b> The "Setup ON/OFF" setting of the DSR-1500/1500P and that a vectorscope must have been set to the same position beforehand.</p>	<p>VIDEO OUT 1 (75 <math>\Omega</math> terminated) Step 1 Chroma Level</p> <p>(A) Burst preset</p> <p>(B) ENC R-Y LEVEL ENC B-Y LEVEL</p> <p>TRIG : REF. VIDEO</p> <p>Vector (for NTSC)</p>  <p>Vector (for PAL)</p>  <p>Spec. : (A) Set the dot of the burst in the right position on the scale. (B) All dots should be inside the "田" mark on the vector.</p>	<ul style="list-style-type: none"> <li>● PHASE control/Vector</li> <li>● RV200/AVP-3/3P (C-5)</li> <li>● RV201/AVP-3/3P (C-5)</li> </ul>

Connection 2

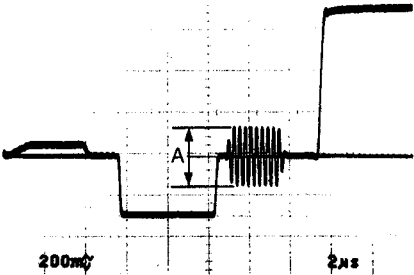
Conditions for adjustment	Specification	Adjustment
<p>WFM or Oscilloscope</p> <ul style="list-style-type: none"> <li>• PB mode</li> <li>75 % Color bars/XH5-1A2 (for NTSC)</li> <li>100 % Color bars/XH5-1AP2 (for PAL)</li> </ul> <p><b>Note</b></p> <p>The "Setup ON/OFF" setting of the DSR-1500/1500P and that a vectorscope must have been set to the same position beforehand.</p> <p>Connection 2</p>	<p>Step 2 Burst Level</p> <p>TRIG : REF. VIDEO</p>  <p>Spec. :</p> <p>[For NTSC]</p> <p><math>A = 0.286 \pm 0.003 \text{ V (} 40 \pm 0.5 \text{ IRE)}</math></p> <p>[For PAL]</p> <p><math>A = 0.300 \pm 0.003 \text{ V}</math></p>	<p>RV204/AVP-3/3P (C-4)</p>

### 10-3-14. PB S VIDEO Chroma Level Adjustment

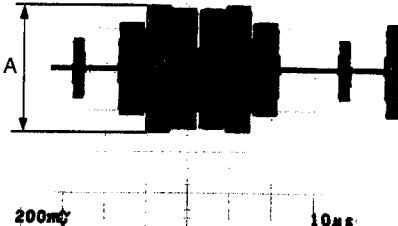Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope • MENU SETUP ADD ; ON • PB mode 75 % Color bars/XH5-1A2 (for NTSC) 100 % Color bars/XH5-1AP2 (for PAL) • VIDEO OUT select/MENU ; S VIDEO	S VIDEO (C) OUT (75 $\Omega$ terminated)  TRIG : REF. VIDEO    Spec. : [For NTSC] $A = 0.627 \pm 0.007 \text{ V p-p (87.7} \pm 1 \text{ IRE)}$ [For PAL] $A = 0.885 \pm 0.006 \text{ V p-p}$	●RV303/AVP-3/3P (B-3)



Connection 2

### 10-3-15. PB COMPOSITE C/C Delay Adjustment

Conditions for adjustment	Specification	Adjustment
Oscilloscope mode : INV + ADD • PB mode Bowtie/XH5-1A2 or XH5-1AP2 (02:00-02:30) • VIDEO OUT select/MENU ; COMPOSITE	CH-1/Oscilloscope TP101/AVP-3/3P (D-5) CH-2/Oscilloscope TP102/AVP-3/3P (D-5)    Spec. : A = Minimize	●RV102/AVP-3/3P (G-4)


Connection 2

# 10-3-16. PB COMPOSITE Y/C Delay Adjustment

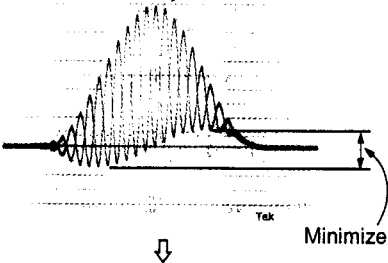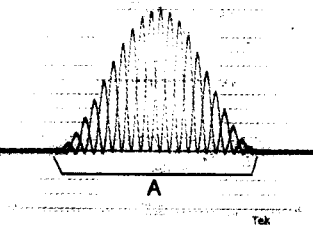Conditions for adjustment	Specification	Adjustment
<ul style="list-style-type: none"> <li>• PB mode Mod 12.5T/XH5-1A2 (07:50-08:20) or Mode 10T/XH-5-1AP2 (07:50-08:20)</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul>	<p>VIDEO OUT 1 (75 <math>\Omega</math> terminated)</p> <p>TRIG : INT/WFM</p> <p>WFM</p> <p>12.5T portion (for NTSC) 10T portion (for PAL)</p> <p>Before adjustment</p>  <p>↓</p> <p>After adjustment</p>  <p>A</p> <p>Spec. : Adjust until the portion "A" becomes flat.</p>	<p>RV101/AVP-3/3P (F-4)</p>

Connection 2

### 10-3-17. PB COMPONENT Y/C Delay Adjustment

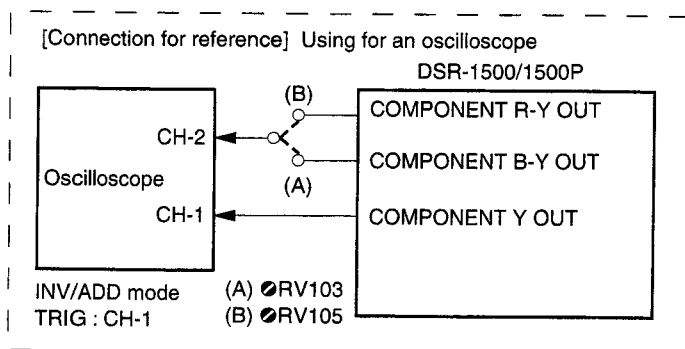


Conditions for adjustment	Specification	Adjustment
<ul style="list-style-type: none"> <li>• PB mode</li> <li>Bowtie/XH5-1A2 or XH5-1AP2 (02:00-02:30)</li> <li>• VIDEO OUT select/MENU ; Y-R, B</li> </ul>	<p>COMPONENT OUT (75 <math>\Omega</math> terminated)</p> <p>(A) B-Y Delay (B) R-Y Delay</p> <p>TRIG : INT/WFM</p> <p>Bowtie mode</p> <p>CH-1/CH-2 (A) 0 ns CH-1/CH-3 (B) 0 ns</p> <p>-20 ns +20 ns -20 ns +20 ns</p> <p>Spec. : Set the each Bowtie dip point of (A) and (B) on the center marker. <math>0 \pm 20</math> ns</p>	<p>●RV103/AVP-3/3P (D-4) ●RV105/AVP-3/3P (D-5)</p>

Connection 1




### 10-3-18. PB INT SCH Phase Adjustment

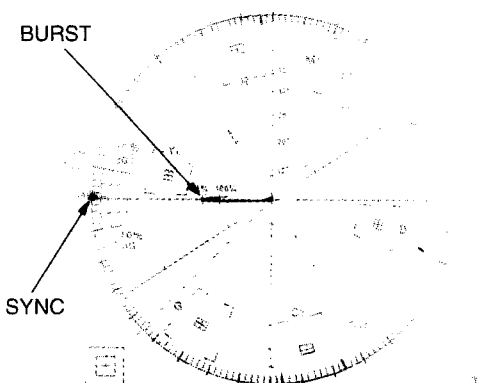
Conditions for adjustment	Specification	Adjustment
<ul style="list-style-type: none"> <li>• PB mode</li> <li>75 % Color bars/XH5-1A2 (for NTSC)</li> <li>100 % Color bars/XH5-1AP2 (for PAL)</li> <li>• REF. VIDEO INPUT ; No signal</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul>	<p>VIDEO OUT 1 (75 <math>\Omega</math> terminated)</p> <p>(A) Burst Preset</p> <p>(B) INT SC</p> <p>TRIG : INT/WFM</p> <p>SCH mode</p>  <p>Spec. : (A) Set the dot of the burst in the right position on the scale.</p> <p>(B) The SYNC should be in the same phase as the burst (SCH = 0 °).</p>	<ul style="list-style-type: none"> <li>● PHASE control/Vector</li> <li>● RV402/AVP-3/3P (D-2)</li> </ul>

Connection 2



## 10-3-19. SPCK Error Adjustment

(Connection)

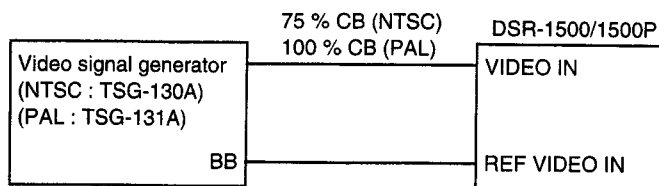

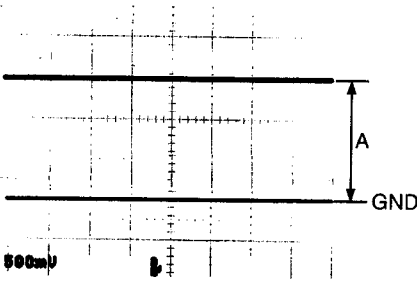
Conditions for adjustment	Specification	Adjustment
Oscilloscope • EE mode • VIDEO IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL)	TP500/DDE-15/15P (F-4)  Spec. : $A = 1.5 \pm 0.1 \text{ V dc}$	●CT500/DDE-15/15P (F-4)

# 10-3-20. COMPOSITE 4Fsc PLL DC Check/Adjustment

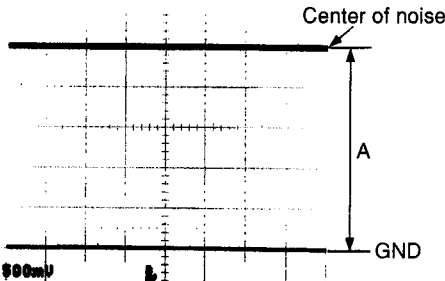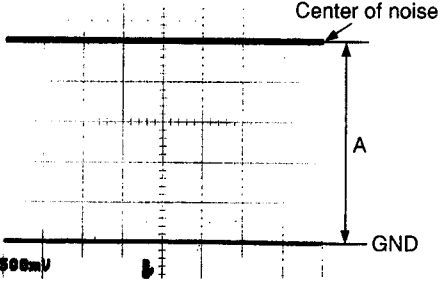Conditions for adjustment	Specification	Adjustment
Oscilloscope <ul style="list-style-type: none"> <li>• EE mode</li> <li>• VIDEO IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL)</li> <li>• VIDEO IN select/MENU ; COMPOSITE</li> </ul>	[Check] TP304/DDE-15/15P (F-5)  Spec. : $A = 2.5 \pm 0.5 \text{ V dc}$	
	[Adjustment] TP303/DDE-15/15P (F-5)  Spec. : $A = 2.5 \pm 0.5 \text{ V dc}$	RV300/DDE-15/15P (F-5)


Connection 1

### 10-3-21. REC Y Clamp Level Adjustment

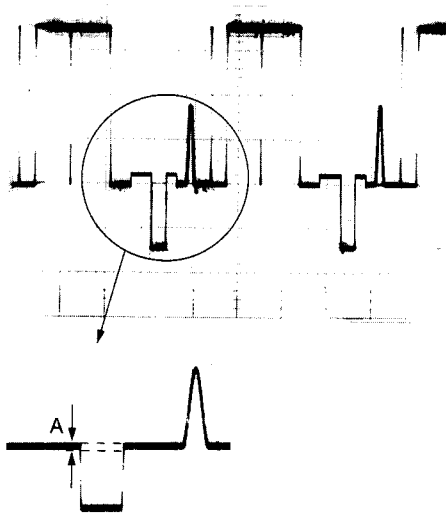Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope <ul style="list-style-type: none"> <li>• EE mode</li> <li>• COMPONENT IN ; Pluse &amp; Bar</li> <li>• VIDEO OUT select/MENU ; Y-R, B</li> </ul> <div style="border: 1px solid black; padding: 2px; margin-top: 10px;"> <b>Note</b>            Check that only NTSC MENU SETUP REMOVE ; OFF, SETUP ADD ; OFF         </div>	COMPONENT Y OUT (75 $\Omega$ terminated)    Spec. : A = Minimize the level difference A at setup.	●RV403/DDE-15/15P (E-1)


Connection 1

### 10-3-22. REC Y Level Adjustment

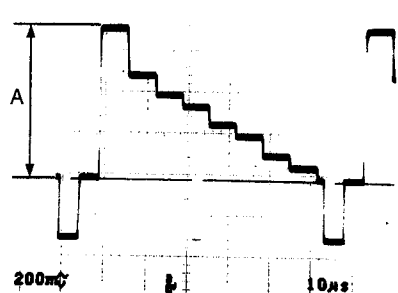Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope <ul style="list-style-type: none"> <li>• EE mode</li> <li>• COMPONENT IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL)</li> <li>• VIDEO OUT select/MENU ; Y-R, B</li> </ul>	COMPONENT Y OUT (75 $\Omega$ terminated)  TRIG : REF. VIDEO    Spec. : [For NTSC] $A = 0.714 \pm 0.007 \text{ V (100} \pm 1 \text{ IRE)}$ [For PAL] $A = 0.700 \pm 0.007 \text{ V}$	●RV400/DDE-15/15P (D-1)


Connection 1

### 10-3-23. REC COMPONENT R-Y Level Adjustment

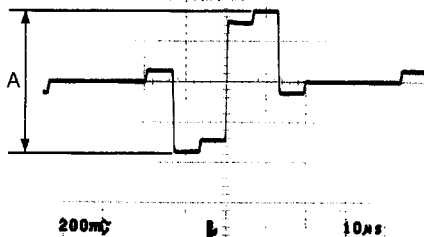Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope • EE mode • COMPONENT IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL) • VIDEO OUT select/MENU ; Y-R, B	COMPONENT R-Y OUT (75 $\Omega$ terminated) TRIG : REF. VIDEO  Spec. : [For NTSC] $A = 0.700 \pm 0.007$ V p-p (98 $\pm$ 1 IRE) [For PAL] $A = 0.700 \pm 0.007$ V p-p	●RV402/DDE-15/15P (D-3)

Connection 1


### 10-3-24. REC COMPONENT B-Y Level Adjustment

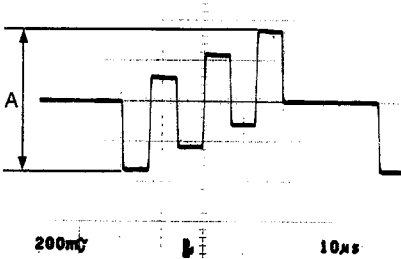Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope • EE mode • COMPONENT IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL) • VIDEO OUT select/MENU ; Y-R, B	COMPONENT B-Y OUT (75 $\Omega$ terminated) TRIG : REF. VIDEO  Spec. : [For NTSC] $A = 0.700 \pm 0.007$ V p-p (98 $\pm$ 1 IRE) [For PAL] $A = 0.700 \pm 0.007$ V p-p	●RV401/DDE-15/15P (D-2)

Connection 1


## 10-3-25. REC A/D Y Level Adjustment

(Connection)


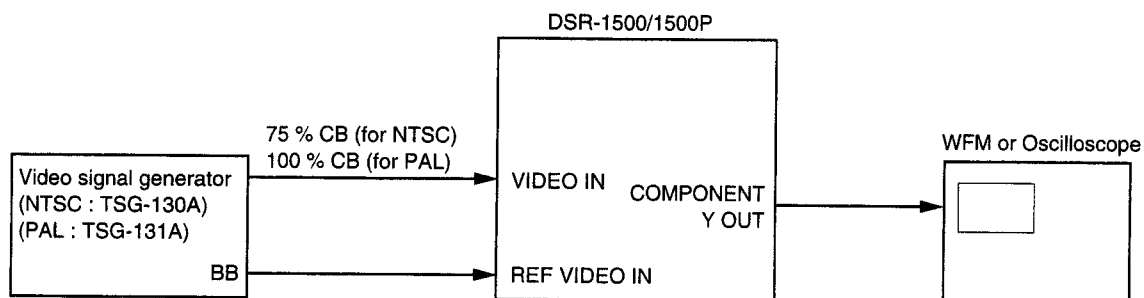


Conditions for adjustment	Specification	Adjustment
<b>WFM or Oscilloscope</b> <ul style="list-style-type: none"> <li>• EE mode</li> <li>• VIDEO IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL)</li> <li>• VIDEO IN select/MENU ; COMPOSITE</li> <li>• S400-1/SSS-10 (D-1) ; ON</li> <li>• S200/DDE-15/15P (A-5) ; ON</li> <li>• VIDEO OUT select/MENU ; Y-R, B</li> </ul> <p>• After Adjustment, S400-1, S200 ; OFF</p>	<p>COMPONENT Y OUT (75 <math>\Omega</math> terminated)</p> <p>TRIG : REF. VIDEO</p> <p>Spec. :</p> <p>[For NTSC]  <math>A = 0 \pm 0.007 \text{ V (} 0 \pm 1 \text{ IRE)}</math></p> <p>[For PAL]  <math>A = 0 \pm 0.007 \text{ V}</math></p>	<p>RV100/DDE-15/15P (B-3)</p>

### 10-3-26. REC COMPOSITE Y Level Adjustment

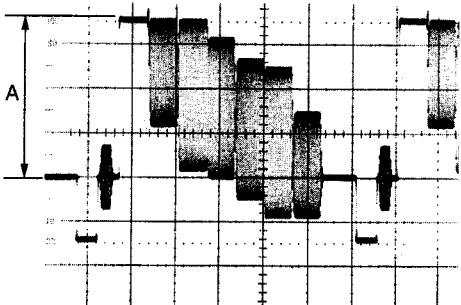Conditions for adjustment	Specification	Adjustment
WFM or Oscilloscope <ul style="list-style-type: none"> <li>• EE mode</li> <li>• VIDEO IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL)</li> <li>• VIDEO IN select/MENU ; COMPOSITE</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul> Connection 2	VIDEO OUT 1 (75 $\Omega$ terminated) TRIG : REF. VIDEO  Spec. : [For NTSC] $A = 0.714 \pm 0.007 \text{ V (100} \pm 1 \text{ IRE)}$ [For PAL] $A = 0.700 \pm 0.007 \text{ V}$	●RV200/DDE-15/15P (C-3)



# 10-3-27. REC COMPOSITE Chroma Level Adjustment

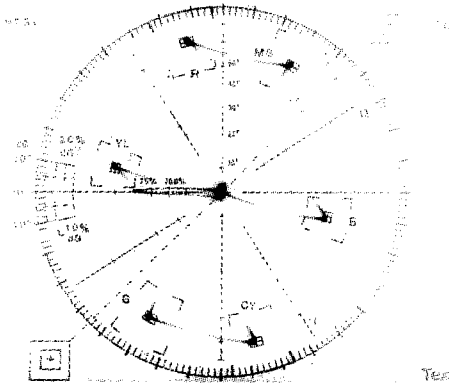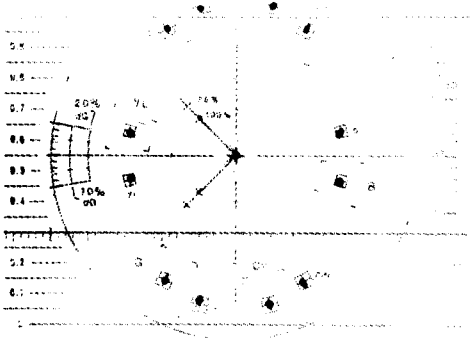Conditions for adjustment	Specification	Adjustment
<ul style="list-style-type: none"> <li>• EE mode</li> <li>• VIDEO IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL)</li> <li>• VIDEO IN select/MENU ; COMPOSITE</li> <li>• VIDEO OUT select/MENU ; COMPOSITE</li> </ul> <p><b>Note</b> The "Setup ON/OFF" setting of the DSR-1500/1500P and that a vectorscope must have been set to the same position beforehand.</p>	<p>VIDEO OUT 1 (75 <math>\Omega</math> terminated)</p> <p>(A) Burst (B) Composite Chroma Level</p> <p>TRIG : REF. VIDEO</p> <p>Vector (for NTSC)</p>  <p>Vector (for PAL)</p>  <p>Spec. : (A) Set the dot of the burst in the right position on the scale. (B) All dots should be inside the "田" mark on the vector.</p>	<ul style="list-style-type: none"> <li>● PHASE control/Vector</li> <li>● RV201/DDE-15/15P (C-3)</li> <li>● RV202/DDE-15/15P (C-4)</li> </ul>

Connection 2




# 10-3-28. REC S VIDEO Chroma Level Check

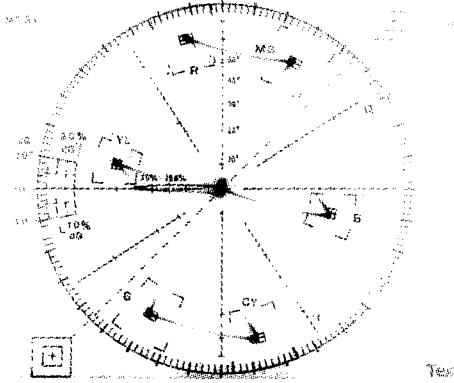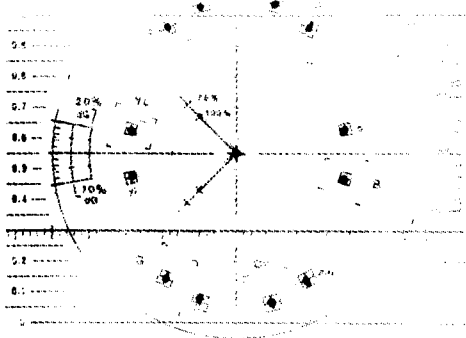Conditions for adjustment	Specification	Adjustment
<ul style="list-style-type: none"> <li>• EE mode</li> <li>• S VIDEO IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL)</li> <li>• VIDEO IN select/MENU ; S VIDEO</li> <li>• VIDEO OUT select/MENU ; S VIDEO</li> </ul> <p><b>Note</b> The "Setup ON/OFF" setting of the DSR-1500/1500P and that a vectorscope must have been set to the same position beforehand.</p>	<p>S VIDEO (C) OUT (75 <math>\Omega</math> terminated)</p> <p>(A) Burst (B) S-C Level</p> <p>TRIG : REF. VIDEO</p> <p>Vector (for NTSC)</p>  <p>Vector (for PAL)</p>  <p>Spec. : (A) The dot indicating the burst signal should be positioned at the specified spot on the vectorscope scale. (B) All dots should be positioned inside the "田" mark on the vector.</p> <p>If the signal does not satisfy the specifications, adjust RV101/DDE-15/15P (A-2).</p>	<p>● PHASE control/Vector ● RV101/DDE-15/15P (A-2)</p>

Connection 2


### 10-3-29. REC COMPOSITE Y/C Delay Adjustment

(Connection)

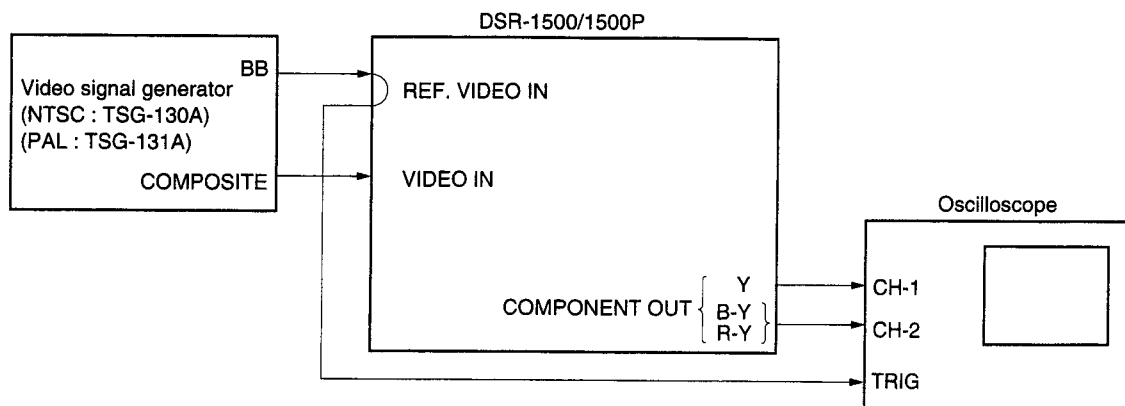

Conditions for adjustment	Specification	Adjustment
<ul style="list-style-type: none"> <li>• EE mode</li> <li>• VIDEO IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL)</li> <li>• VIDEO IN select/MENU ; COMPOSITE</li> <li>• VIDEO OUT select/MENU ; Y-R, B</li> </ul>	<p>COMPONENT OUT (75 <math>\Omega</math> terminated)</p> <p>B-Y</p> <p>200mV 200mV 10<math>\mu</math>s</p> <p>A portion</p> <p>R-Y</p> <p>200mV 200mV 10<math>\mu</math>s</p> <p>A portion</p> <p>(Detail of A portion)</p> <p>LINES DLY 35.50<math>\mu</math>s</p> <p>Y</p> <p>50% Level point</p> <p>B-Y</p> <p>R-Y</p> <p>20mV 100mV 50ns</p> <p>Spec. : 0 <math>\pm</math> 20 ns</p>	<p>B-Y : <math>\odot</math>RV404/DDE-15/15P (D-2)</p> <p>R-Y : <math>\odot</math>RV407/DDE-15/15P (D-2)</p>

### 10-3-30. REC COMPONENT Y/C Delay Adjustment

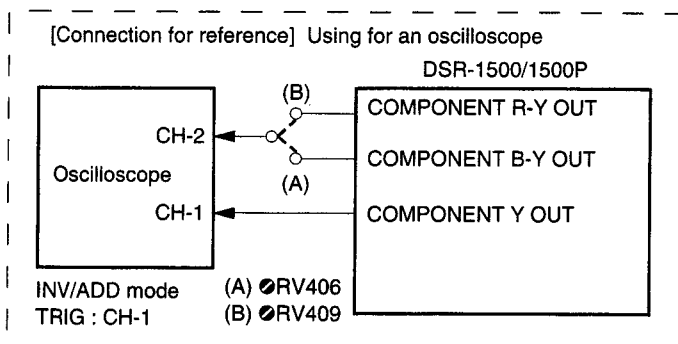


Conditions for adjustment	Specification	Adjustment
<ul style="list-style-type: none"> <li>• EE mode</li> <li>• COMPONENT IN ; Bowtie</li> <li>• VIDEO OUT select/MENU ; Y-R, B</li> </ul>	<p>COMPONENT OUT (75 <math>\Omega</math> terminated)</p> <p>(A) B-Y Delay (B) R-Y Delay</p> <p>TRIG : INT/WFM</p> <p>Bowtie mode</p> <p>CH-1/CH-2 (A) 0 ns CH-1/CH-3 (B) 0 ns</p> <p>-20 ns +20 ns -20 ns +20 ns</p> <p>Spec. : Set the each Bowtie dip point of (A) and (B) on the center marker. 0 <math>\pm</math> 20 ns</p>	<p>RV406/DDE-15/15P (D-2) RV409/DDE-15/15P (D-2)</p>

Connection 1

# 10-3-31. REC S VIDEO Y/C Delay Adjustment

(Connection)

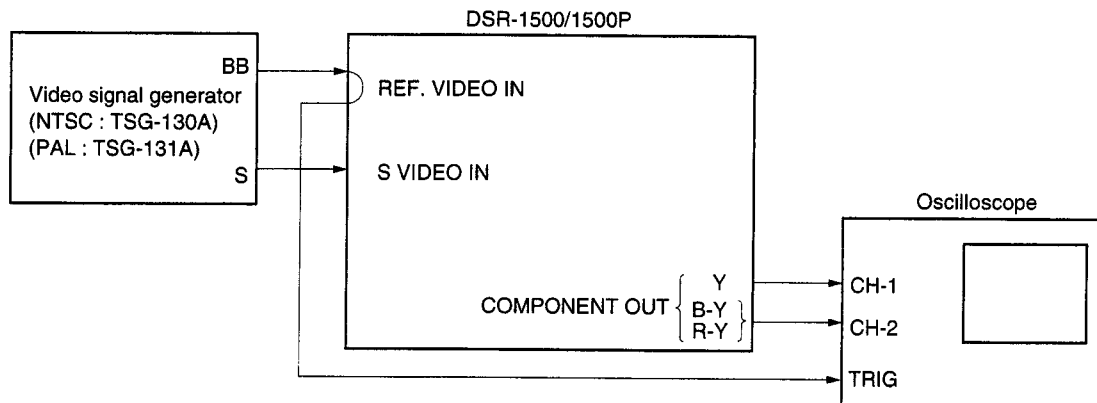


Conditions for adjustment	Specification	Adjustment
<ul style="list-style-type: none"> <li>• EE mode</li> <li>• S VIDEO IN ; 75 % Color bars (for NTSC) 100 % Color bars (for PAL)</li> <li>• VIDEO IN select/MENU ; S VIDEO</li> <li>• VIDEO OUT select/MENU ; Y-R, B</li> </ul>	<p>COMPONENT OUT (75 <math>\Omega</math> terminated)</p> <p>B-Y</p> <p>A portion</p> <p>R-Y</p> <p>A portion</p> <p>(Detail of A portion)</p> <p>Spec. : 0 <math>\pm</math> 20 ns</p>	<p>B-Y : <math>\odot</math>RV405/DDE-15/15P (D-2)</p> <p>R-Y : <math>\odot</math>RV408/DDE-15/15P (D-2)</p>

## 10-4. SDI/SDTI

### 10-4-1. Free Run Adjustment


(Connection)

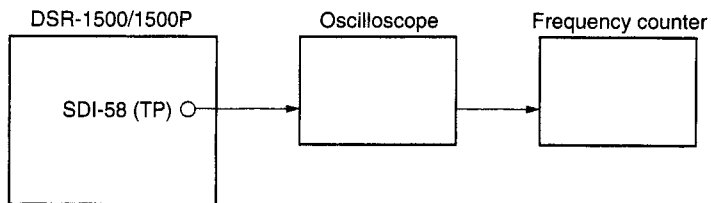


Conditions for adjustment	Specification	Adjustment
<b>Step 1</b> <ul style="list-style-type: none"> <li>• E-E mode</li> <li>• Connect jumper wire between TP101/SDI-58 (A-7) and E101/SDI-58 (A-7).</li> <li>• After adjustment, remove jumper wire.</li> </ul>	TP102/SDI-58 (B-7)  Spec. : 27.0 ±0.1 MHz	●RV101/SDI-58 (A-7)
<b>Step 2</b> <ul style="list-style-type: none"> <li>• E-E mode</li> <li>• Connect jumper wire between TP502/SDI-58 (E-2) and E101/SDI-58 (A-7).</li> <li>• After adjustment, remove jumper wire.</li> </ul>	TP501/SDI-58 (A-5)  Spec. : 27.0 ±0.1 MHz	●RV501/SDI-58 (B-7)

## 10-5. Adjustment Related Parts Layout Diagram


AVP-3/3P board (A side)

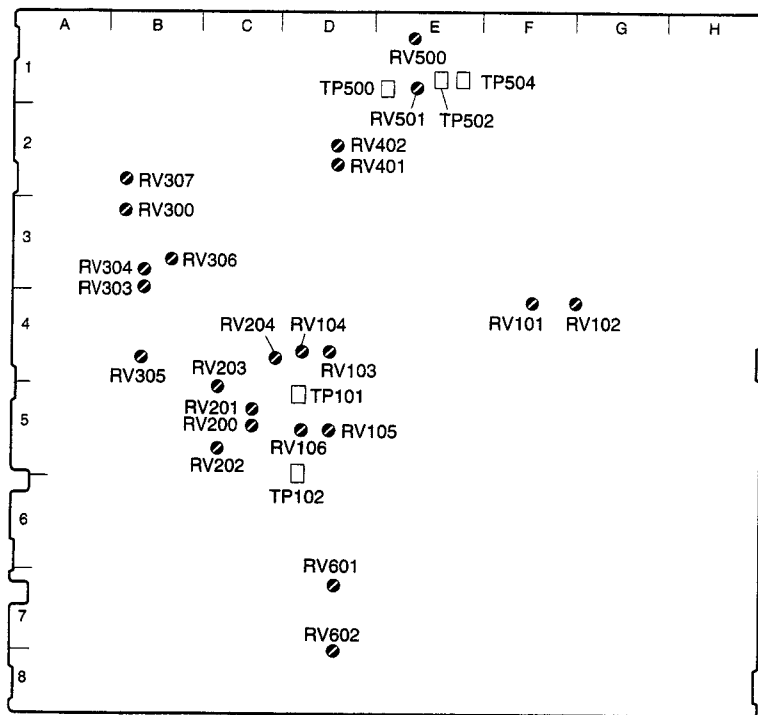


DDE-15/15P board (A side)

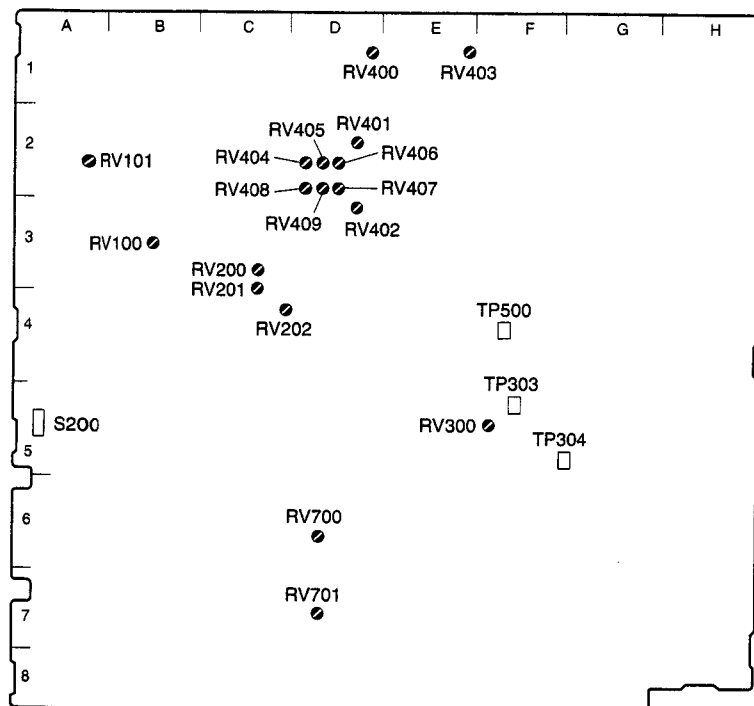

### SDI-58 board (A side)

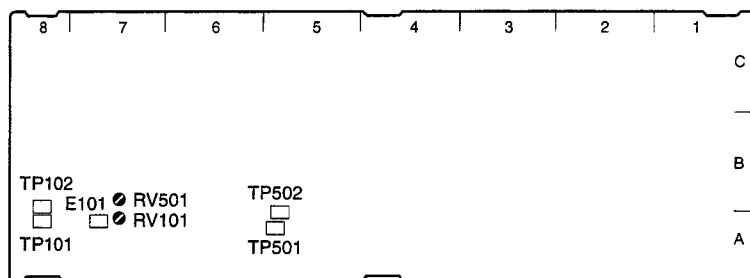

### SSS-10 (A side)

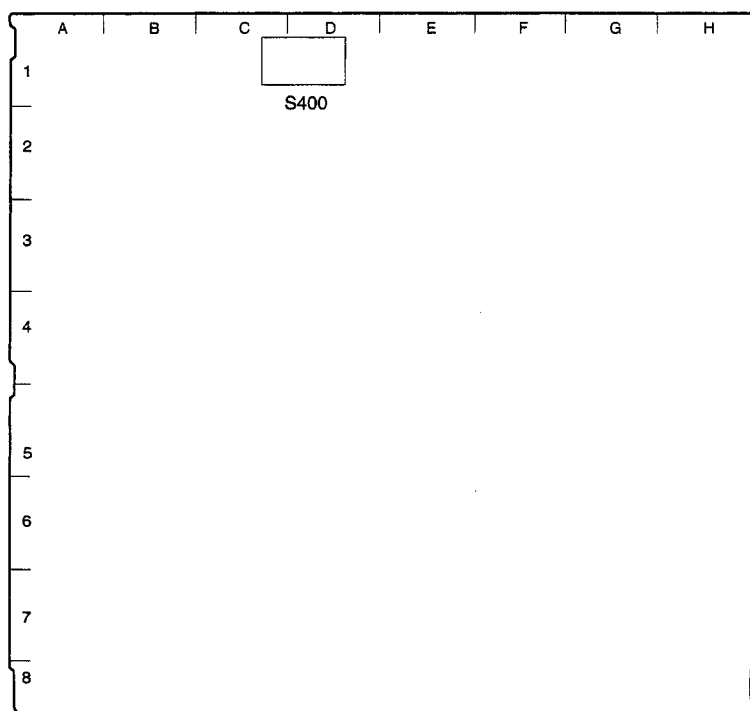





## SAFETY CHECK-OUT


After correcting the original service problem, perform the following safety checks before releasing the set to the customer :

Check the metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA. Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

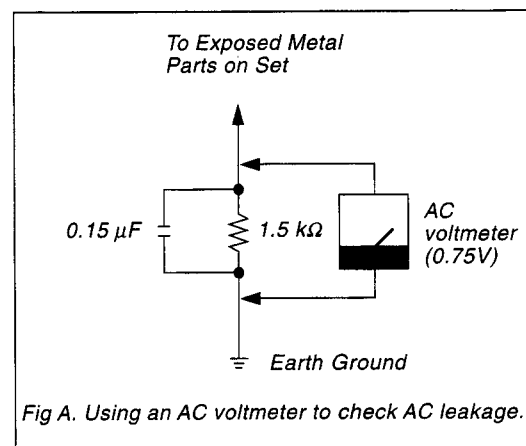

DSR-1500 (UC)  
DSR-1500P (CE) E  
9-955-245-11

**Sony Corporation**  
Communication System Solutions Network Company  
Printed by: Schaltungsdienst Lange, Berlin (GERMANY)

2000. 10 16  
©2000